

Tabla de Contenido

1. MMU3 Assembled Core One Introduction	5
Paso 1 - Introduction	6
Paso 2 - Disclaimer	6
Paso 3 - Tools required	7
Paso 4 - Labels guide	7
Paso 5 - We are here for you!	8
Paso 6 - Pro tip: inserting the nuts	8
Paso 7 - Prepare your desk	9
7. Montaje Porta bobinas	10
Paso 1 - Two Spoolholder types	11
Paso 2 - Vacuum formed holder parts preparation	11
Paso 3 - Foam pads installation	12
Paso 4 - Rods, Bearings parts preparation	12
Paso 5 - Rods and bearings assembly	13
Paso 6 - Finishing up the Spoolholders (vac. form.)	13
Paso 7 - Injection molded spoolholder: parts preparation	14
Paso 8 - Injection molded holder parts preparation	14
Paso 9 - Montaje de la base (parte 1)	14
Paso 10 - Montaje de la base (parte 2)	15
Paso 11 - Instalación de las almohadillas de espuma (parte 1)	15
Paso 12 - Instalación de las almohadillas de espuma (parte 2)	16
Paso 13 - PTFE holder assembly	16
Paso 14 - Finishing up the Spoolholders (inj. mol.)	17
Paso 15 - Joining the Spoolholder Guides	17
Paso 16 - Buffer Types	18
8. Montaje Buffer CORE One	19
Paso 1 - Herramientas necesarias para este capítulo	20
Paso 2 - Buffer Plates Preparation	20
Paso 3 - Plates Peeling	21
Paso 4 - Segmenter Nuts	21
Paso 5 - Plates Installation	22
Paso 6 - Plate Holder Installation	22
Paso 7 - Segmenter Screws	23
Paso 8 - Plate Holder L & R Preparation	23
Paso 9 - Magnet Installation	24
Paso 10 - Plate Holder L & R Installation	24
Paso 11 - Buffer segment preparation	25
Paso 12 - Segment assembly (part 1)	25
Paso 13 - Segment assembly (part 2)	26
Paso 14 - Segment assembly (part 3)	26
Paso 15 - Collets: parts preparation	27
Paso 16 - Collet installation	27
Paso 17 - Cartridge installation	28
Paso 18 - Preparación de las piezas de los tubos PTFE	28
Paso 19 - PTFE tubes installation	29
9D. CORE One Nextruder mod	30
Paso 1 - Introduction	31
Paso 2 - Spare parts bag	31
Paso 3 - Tools Necessary	32
Paso 4 - Prusa Nozzle Info	32

Paso 5 - Top Cover Removal	33
Paso 6 - Heatbed Protection	33
Paso 7 - PTFE Holder Preparation	34
Paso 8 - PTFE Tube Removal	34
Paso 9 - PTFE Holder Installation	35
Paso 10 - Nextruder disassembly (part 1)	35
Paso 11 - Nextruder disassembly (part 2)	36
Paso 12 - Nextruder disassembly (part 3)	36
Paso 13 - Nextruder disassembly (part 4)	37
Paso 14 - Idler disassembly	37
Paso 15 - New Idler parts preparation	38
Paso 16 - New Idler assembly	38
Paso 17 - Swivel disassembly	39
Paso 18 - Idler nut FS parts preparation	39
Paso 19 - Idler nut FS assembly	40
Paso 20 - New Swivel Preparation	40
Paso 21 - New Swivel Assembly 1	41
Paso 22 - New Swivel Assembly 2	41
Paso 23 - Tension screws parts preparation	42
Paso 24 - Tension screws assembly	42
Paso 25 - Gearbox disassembly	43
Paso 26 - Main Plate Preparation	43
Paso 27 - Main Plate Assembly	44
Paso 28 - MMU Nextruder Preparation	44
Paso 29 - MMU Nextruder Assembly 1	45
Paso 30 - MMU Nextruder Assembly 2	45
Paso 31 - MMU Nextruder Assembly 3	46
Paso 32 - Gearbox Assembly Preparation	46
Paso 33 - Gearbox Assembly 1	47
Paso 34 - Gearbox Assembly 2	47
Paso 35 - Gearbox Assembly 3	48
Paso 36 - Nextruder Side Cover Preparation	48
Paso 37 - Nextruder Side Cover Installation	49
10D. CORE One Setup and Calibration	50
Paso 1 - Top Cover	51
Paso 2 - Core One MMU3 Types	51
Paso 3 - (LITE) MMU Holder Preparation	52
Paso 4 - (LITE) M3nS Installation	52
Paso 5 - (LITE) MMU Holder Installation 1	53
Paso 6 - (LITE) MMU Holder Installation 2	53
Paso 7 - (LITE) MMU Placement 1	54
Paso 8 - (LITE) MMU Placement 2	54
Paso 9 - (ENC) Top Cover Preparation	55
Paso 10 - (ENC) Top Cover Assembly 1	55
Paso 11 - (ENC) Top Cover Assembly 2	56
Paso 12 - (ENC) Top Cover Assembly 3	56
Paso 13 - (ENC) MMU Holder Preparation	57
Paso 14 - (ENC) M3nS Installation	57
Paso 15 - (ENC) MMU Holders Installation	58
Paso 16 - (ENC) Metal Holder Preparation	58
Paso 17 - (ENC) Metal Holder Assembly	59
Paso 18 - (ENC) Unit Assembly	59
Paso 19 - (ENC) MMU Placement Preparation	60
Paso 20 - (ENC) MMU Assembly Placement	60

Paso 21 - Extracción Cubierta Trasera 1	61
Paso 22 - Back Cover Removal 2	61
Paso 23 - MMU Cable Connection	62
Paso 24 - Back Cover Installation 1	62
Paso 25 - Back Cover Installation 2	63
Paso 26 - Software Download	63
Paso 27 - PrusaSlicer setup for MMU3	64
Paso 28 - Firmware files download	64
Paso 29 - Firmware Upgrade: Printer	65
Paso 30 - Encendido de la MMU	66
Paso 31 - MMU3 Firmware flashing (part 1)	67
Paso 32 - MMU3 Firmware flashing (part 2)	67
Paso 33 - Gears calibration	68
Paso 34 - Gearbox Alignment	68
Paso 35 - MMU Filament sensor calibration	69
Paso 36 - Footer Status Bar	69
Paso 37 - SuperFINDA sensor calibration info	70
Paso 38 - SuperFINDA calibration	71
Paso 39 - Error code details (Part 1)	72
Paso 40 - Detalles del código de error (Parte 2)	73
Paso 41 - MMU-to-Extruder PTFE tube parts preparation	74
Paso 42 - MMU-to-Extruder PTFE tube 1	74
Paso 43 - Fitting Cover. (ENC)	75
Paso 44 - MMU-to-Extruder PTFE tube 2	75
Paso 45 - PTFE Length Calibration	76
Paso 46 - (ENC) Top Cover Installation	76
Paso 47 - Buffer Attachment	77
Paso 48 - PTFE tubes connection	77
Paso 49 - Spoolholders setup	78
11. Primer comienzo	79
Paso 1 - Filament preparation	80
Paso 2 - Suggested filament layout	81
Paso 3 - Loading a filament through the buffer	81
Paso 4 - Preloading a filament to MMU	82
Paso 5 - Closing the buffer	82
Paso 6 - Pro tip: Loading using the buttons.	83
Paso 7 - Test de Carga (parte 1)	84
Paso 8 - Test de Carga (parte 2)	84
Paso 9 - Calibración del eje Z y de la primera capa (opcional)	85
Paso 10 - Printing a test object	85
Paso 11 - Mapeado de cabezales (CORE/ MK3.5 / MK4S)	86
Paso 12 - Printable 3D models	86
Paso 13 - Print & Follow the Handbook.	87
Paso 14 - Preparación del código G / preparación de modelos personalizados.	88
Paso 15 - Creando tus propios modelos 3D Multi material	88
Paso 16 - MMU Single material operation	89
Paso 17 - Date un capricho	89

1. MMU3 Assembled Core One Introduction



PASO 1 Introduction




- Welcome to the **MMU3 installation** guide.

 This guide focuses on installing the new **Assembled MMU3** unit onto your **CORE One** printer. However, note that the MMU3 is also compatible with other printer models.

 For more info, visit the [MMU3 Compatibility](#) article.

PASO 2 Disclaimer

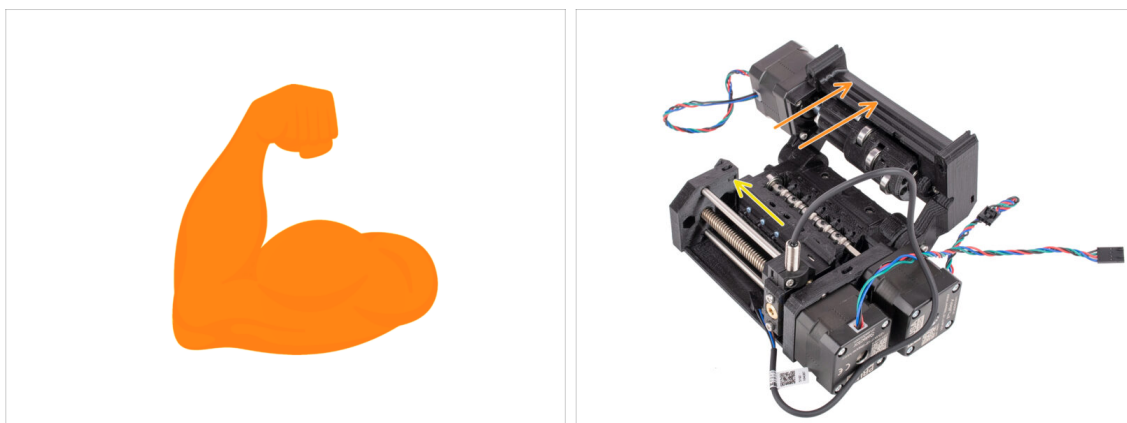

-  **Make sure your printer** is fully assembled and **works perfectly** before you proceed to attach the MMU3 onto it. Make a few single material prints. If it has any issues, fix the issues first. Diagnosing printer issues can be harder with the MMU attached.
-  As you embark upon the assembly process, we cannot stress enough the importance of carefully following each and every step.

PASO 3 Tools required



● The **tools needed** for the MMU3 Kit assembly are available as an **optional bundle**.

- 2.5mm Allen key
- T8 / T10 Torx key
- T10 Torx Screwdriver




For some steps, we recommend having the following extras:
- Flush cutters

PASO 4 Labels guide




- All the boxes and bags containing the parts for the build are labeled.
- Most of the part drawings on the labels are scaled 1:1 and can be used to identify a part.
- You can download and 2D print a Prusa Cheatsheet with the 1:1 scaled fastener drawings. help.prusa3d.com/cheatsheet. Print it at 100 %, don't rescale it, otherwise, it won't work.

PASO 5 We are here for you!

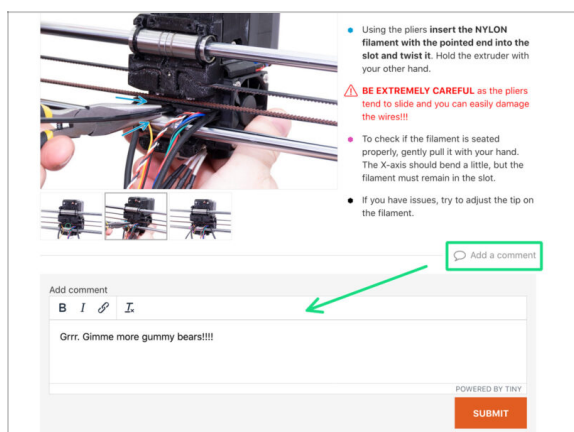

- 🛠 Lost in the instructions, missing screw or cracked printed part? **Let us know!**
- 🛠 You can contact us using following channels:
 - 🛠 Using our **24/7 live chat**
 - 🛠 Or by writing an email to **info@prusa3d.com**
 - 🟢 Or, you can use the comments under each step.

PASO 6 Pro tip: inserting the nuts

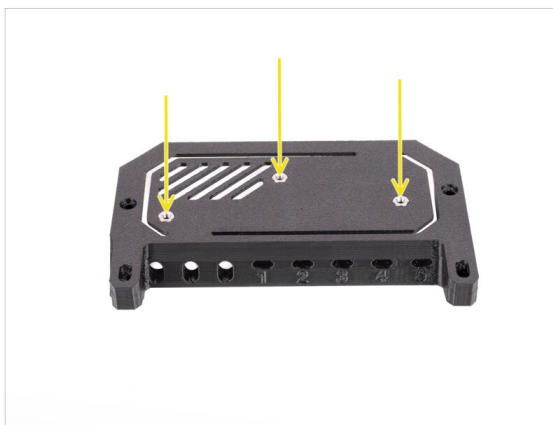


- 🟠 For deep openings, use a long screw like the M3x30 as a handle to help position the nut.
- 🟡 If a hex nut won't fit, use a fully threaded screw (e.g., M3x10, M3x18) and insert it from the opposite side to drive the nut into place.

PASO 7 Prepare your desk




- ◆ Tidy up your desk! Tidying up decreases the probability of losing small parts.
- ◆ **Clear your workspace.** Make sure you have enough room. A nice clear flat workbench will get you the results you are aiming for.
- ◆ **Let there be light!** Make sure you are in a well-lit environment. Another lamp or even an extra flashlight will probably come in handy.
- ◆ Prepare something to contain the plastic bags and the removed packing materials so you can recycle them afterwards. Make sure there are no important parts being discarded.
- ◆ OK, we are ready. Let's start!

7. Montaje Porta bobinas

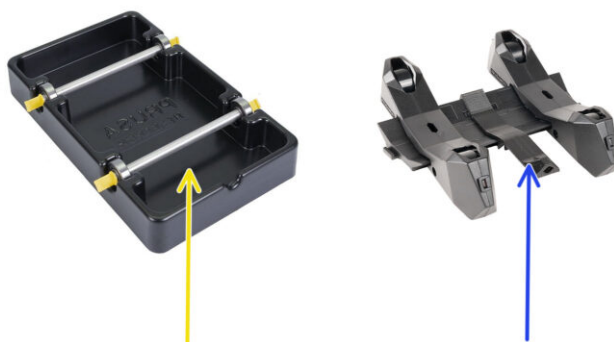

PASO 1 Two Spoolholder types

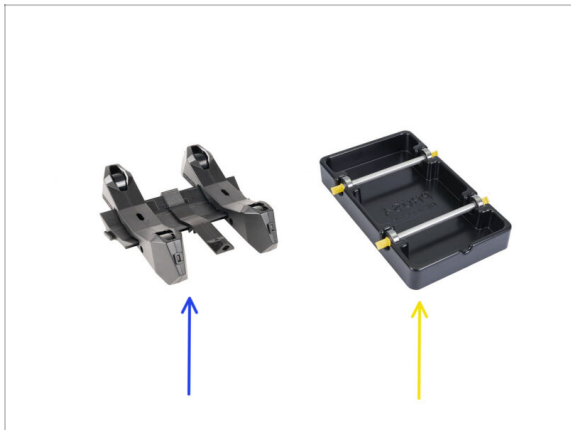

⚠ In this chapter, we will assemble the **spool holders**. Before proceeding, note that there are two types:

1. Current Injection-molded spoolholder


📌 Currently shipped in the MK4/S or CORE One versions. Continue to **Injection molded spoolholder: parts preparation**

2. Legacy vacuum-formed spoolholder

📌 This old version used to come with the first MK3S versions or older upgraded units.
Continue to the **Vacuum formed holder parts preparation**

(i) If the large portion of the box is occupied by the rectangular black trays, you have the first version, the older vacuum-formed spoolholders.

PASO 2 Vacuum formed holder parts preparation

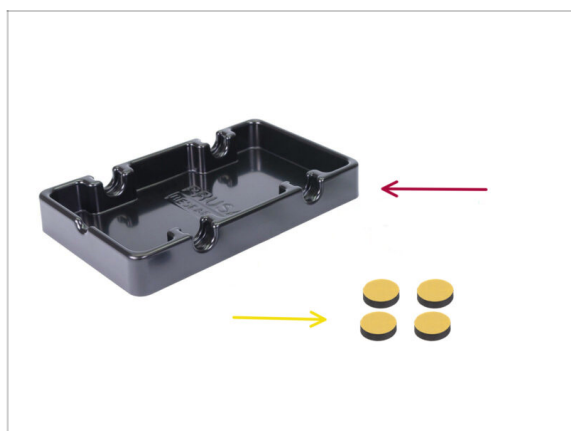

⬢ Para los siguientes pasos, por favor prepara:

⬢ Spoolholder base (1x)

⬢ Foam pad (4x)


(i) Note, this is a legacy version of the spool holder. If you have the newer injection-molded spool holders, skip these steps.

PASO 3 Foam pads installation




- Turn the spoolholder base upside down.
- Peel off the yellow protective layer off the foam pads.
- Attach the four foam pads into the bottom corners of the spoolholder base.

PASO 4 Rods, Bearings parts preparation

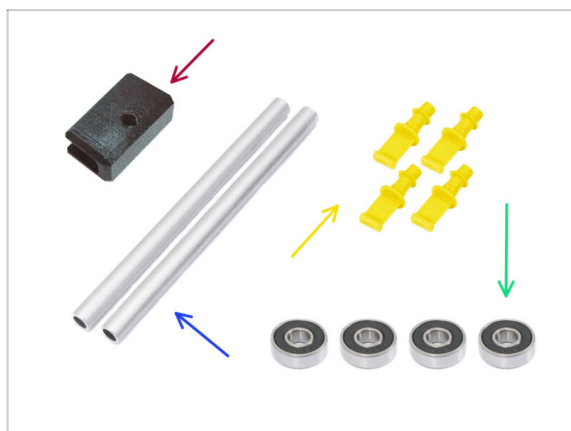

- **Para los siguientes pasos, por favor prepara:**
- PTFE holder (1x)
- Shaft (2x)
- Plug (4x)
- Bearing (4x)

PASO 5 Rods and bearings assembly

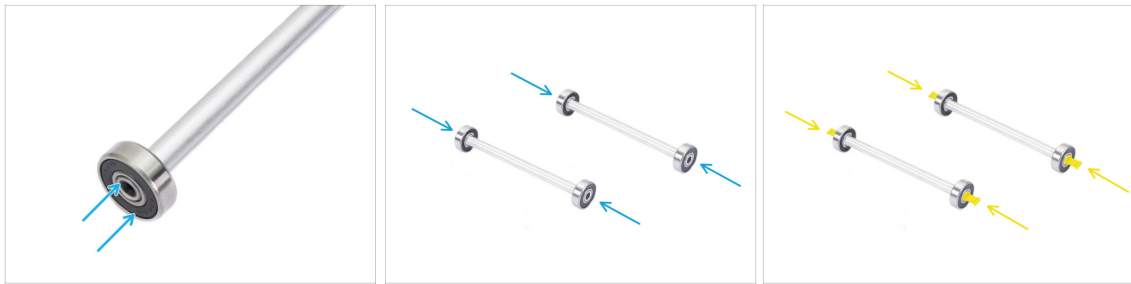

- Attach a bearing onto each end of both rods.
- Attach the plugs onto the rod ends to fix the bearings on each rod.

PASO 6 Finishing up the Spoolholders (vac. form.)



- Attach the rods with bearings into the base part so that the bearings engage into the corresponding grooves on the base.
- There is a notch on the front part of the spoolholder.
- Attach the PTFE holder onto the notched front part of the spoolholder.
- Repeat the same steps to build the remaining spool holders until you finish all five.

PASO 7 Injection molded spoolholder: parts preparation



⚠ If you have the injection-molded spoolholders instead, continue from here.

⬢ If you already assembled your **rectangular vacuum-formed spoolholders**, please, **skip to the next chapter**.

PASO 8 Injection molded holder parts preparation



⬢ **Para los siguientes pasos, por favor prepara:**

⬢ Base soporte bobina (4x)

⬢ Guía de soporte de bobina (1x)


⬢ Rueda Soporte bobina (4x)

i Wheels shipped after April 2024 are made of POM. We recommend using this version over the earlier models made from ABS.

⬢ sheet of Foam Pads (1x)

⬢ PTFE holder (1x)

PASO 9 Montaje de la base (parte 1)

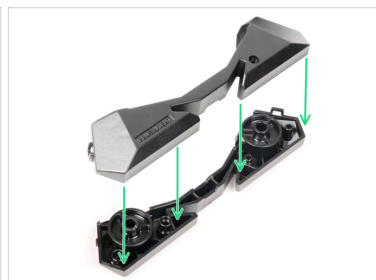

⬢ Coge una pieza Base. Colócala como en la imagen.

⬢ Inserta las dos ruedas en la Base.

⬢ Cubre el montaje con otra pieza Base encima.

PASO 10 Montaje de la base (parte 2)




- Empuja ambas piezas Base hasta que encajen completamente una en la otra.
- Comprueba que las piezas de la base se mantienen unidas correctamente.
- Repite los mismos pasos para el otro lado del soporte de bobina de filamento, hasta que tengas dos de estos.

PASO 11 Instalación de las almohadillas de espuma (parte 1)



- Coge la lámina de almohadilla de espuma. Dóblala para separar las tiras individuales de almohadilla de espuma.
- Hay una línea de doblado dentro de la abertura interior en la parte inferior de la pieza lateral del portabobinas.
- Coloca una tira de almohadilla de espuma individual en el medio de la línea de doblado dentro de la abertura, como se muestra en la imagen.

PASO 12 Instalación de las almohadillas de espuma (parte 2)

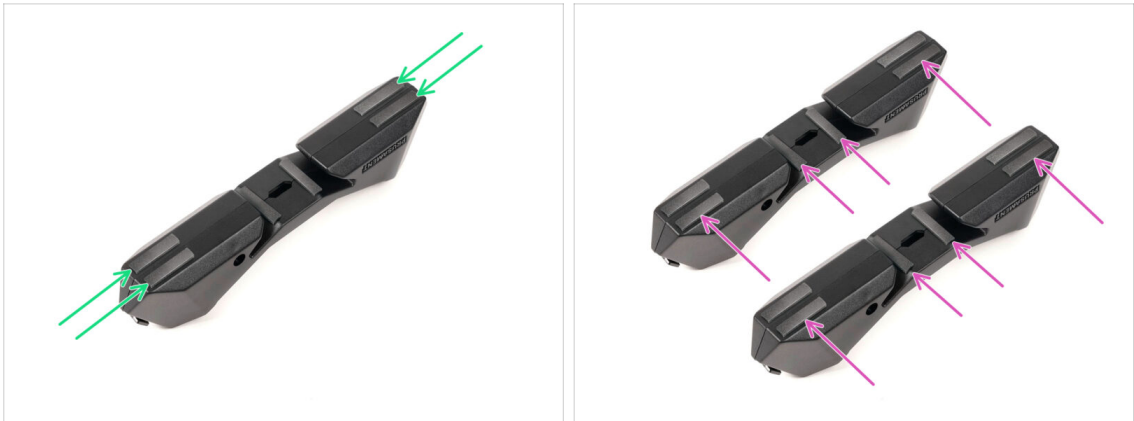


- Coloca otras cuatro tiras de almohadilla de espuma en las posiciones marcadas en la parte inferior de la pieza lateral del portabobinas.
- Instala otras seis tiras de almohadilla de espuma en la otra parte lateral del portabobinas.

PASO 13 PTFE holder assembly



- Take the spoolholder Guide part. Hook the end of the PTFE holder onto the Guide
- Make sure the longer part of the PTFE holder is located at the narrower side of the Guide part.
- Push the PTFE holder down onto the Guide until it fully engages and locks in place.

PASO 14 Finishing up the Spoolholders (inj. mol.)

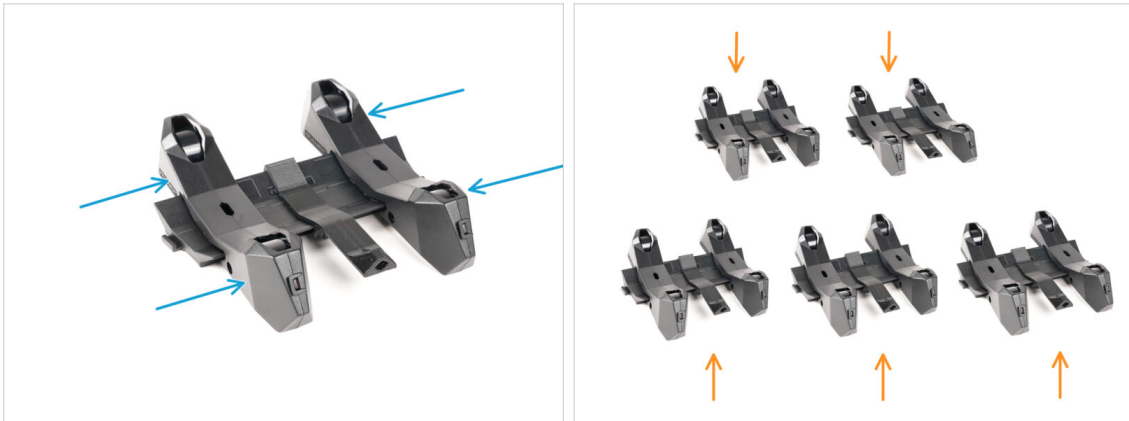

- Desliza las partes laterales sobre la parte Guía.
- Repeat the same steps for the remaining Spool holders, until you assemble all five. (Don't forget about the foam pads on the bottom!)

PASO 15 Joining the Spoolholder Guides




- There are protrusions on each side of the Guide part.
- Using these protrusions, the Guide parts can be joined together. To join them together, simply tilt in the Guide parts one into the other until the protrusions click in.
- The Guides can be joined together in form of a straight line.
- Or, if you flip one of the Guides around, they can be joined in an arc pattern. This is handy to form an arc of spool holders around the Buffer so that each filament path is as straight as possible.

PASO 16 Buffer Types



- In the upcoming chapter, we will be assembling the **Buffer**. There are two basic types, depending on your printer.
- ⓘ **Important note:** If you ordered the assembled Original Prusa MMU3 for CORE One, **your package contains parts for both buffer variants** (for CORE One and for the MK4/S). This is done to simplify production. The correct parts for the CORE One are in a separate box.
 - If you have the CORE One printer, continue to the **8B. Core One Buffer Assembly**
 - If you have the MK4/S, MK3.9/S, MK3.5/S or MK3S/+, continue to the **8A. Cassette Buffer Assembly**

8. Montaje Buffer CORE One

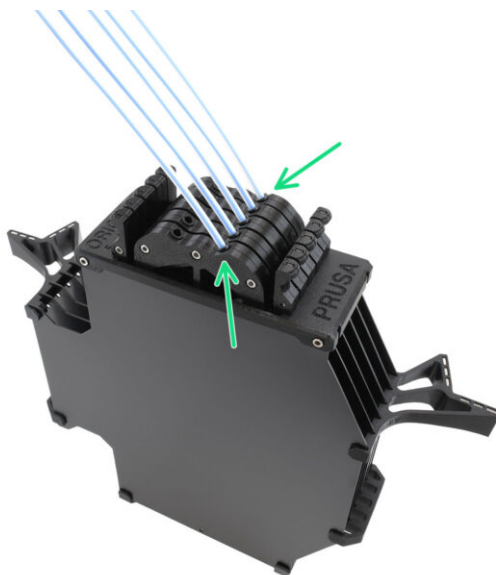


PASO 1 Herramientas necesarias para este capítulo



● **Por favor prepara las herramientas para este capítulo:**

- Llave Allen de 1.5mm para alinear las tuercas
- Llave Allen de 2.5mm para tornillos M3


PASO 2 Buffer Plates Preparation

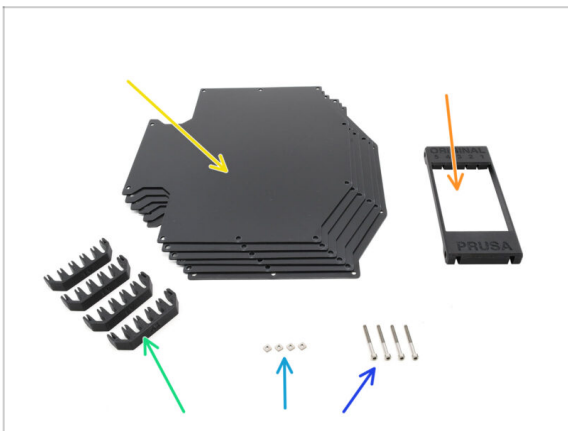

● **Para los siguientes pasos, prepara:**

- Placas del buffer (6x)
- Segmentador (1x)
- Plate Holders (4x)
- M3x30 Screw (4x)
- M3nS nut (4x)

PASO 3 Plates Peeling

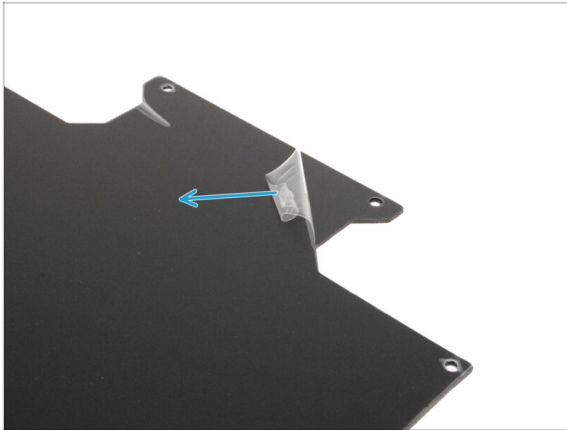


- Despega las **capas protectoras** de ambos lados de las placas buffer.

PASO 4 Segmenter Nuts




- Take the Segmenter part and position it as shown in the picture. Lay it on its flat side and rotate it so the **larger cutouts face away** from you.
- Insert the four M3nS nuts into the corresponding pockets in the center. Push them all the way in.

PASO 5 Plates Installation

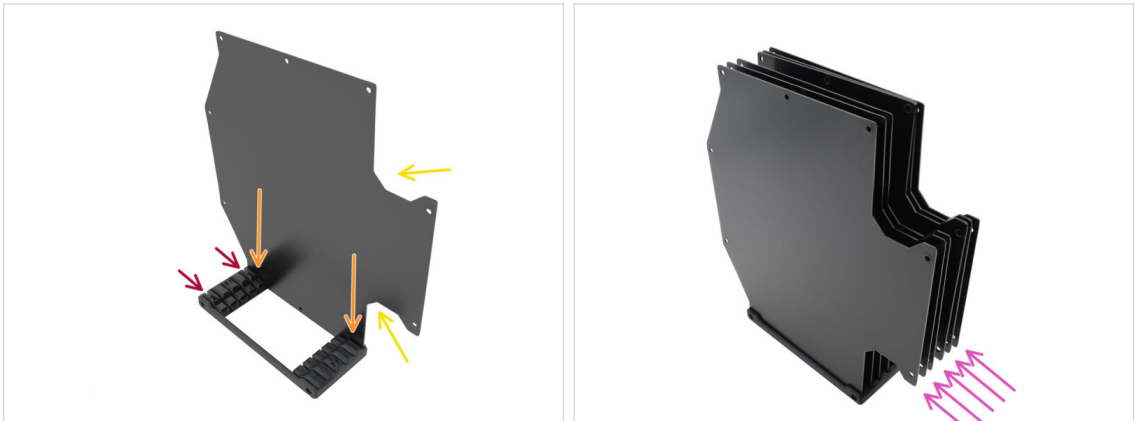


- Install the first buffer plate into the Segmenter.
- Make sure the large cutouts in the plate are facing you.
- Make sure the two larger slits in the Segmenter are facing away from you.
- Insert the remaining five sheets into the corresponding openings in the Segmenter.

PASO 6 Plate Holder Installation

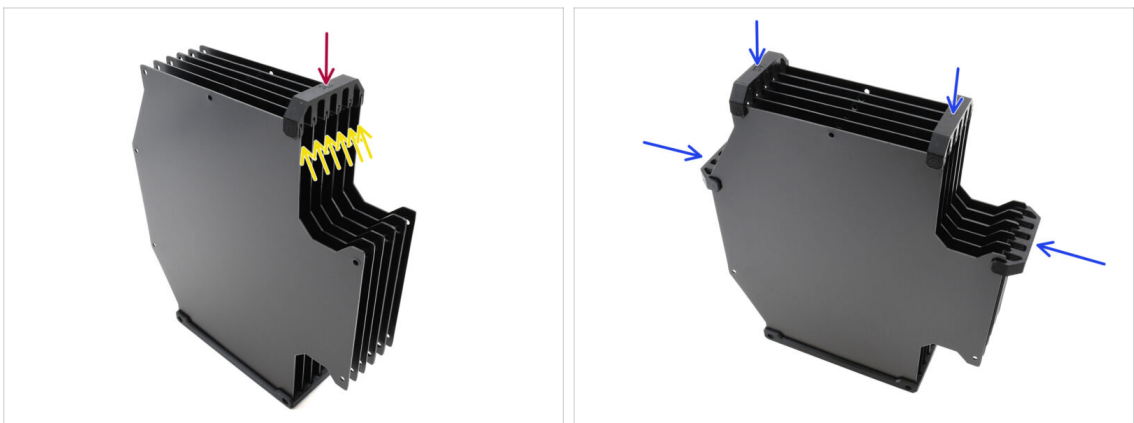

- Fix the plates together using the Plate holder in the marked position.
- Make sure all the plates are seated properly.
- Install the remaining plate holders so that the assembly is held together in the marked positions.

PASO 7 Segmenter Screws

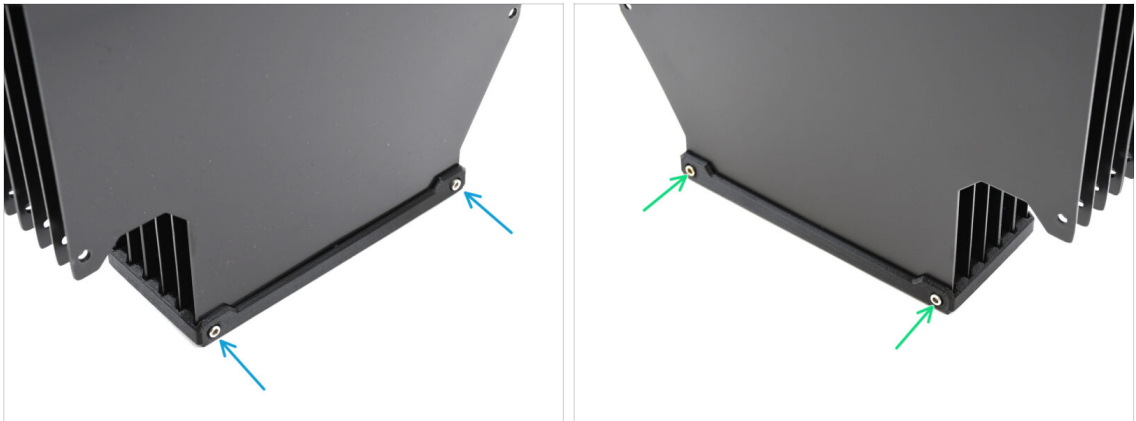

- Secure the plates to the Segmenter part using two M3x30 screws from one side.
- ① Tighten the screws in the position shown to prevent the M3nS nuts from falling out of the Segmenter part.
- Tighten the remaining two M3x30 screws from the other side.

PASO 8 Plate Holder L & R Preparation



■ Para los siguientes pasos, prepara:


- Plate holder L (1x)
- Plate holder R (1x)
- Imán 2x6x20 (12x)

PASO 9 Magnet Installation




- Install all twelve magnets into the marked openings on both the Plate holder L and R parts.
- i** Make sure all the magnets are fully inserted.
The orientation of the magnets is not important.

PASO 10 Plate Holder L & R Installation R Installation

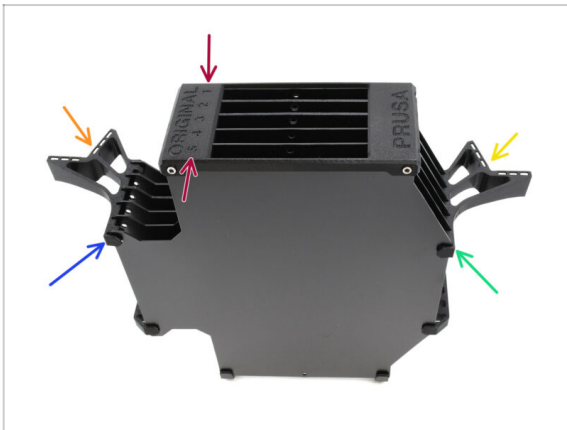

- Orient the assembly so that the segmenter is on top, with the position labeled 1 facing away from you and position 5 toward you.
- Install the Plate Holder L onto the left side of the assembly.
- The magnets should face away from you, toward position 1.
- Install the Plate Holder R onto the right side of the assembly.
- The magnets should face away from you, toward position 1.

PASO 11 Buffer segment preparation

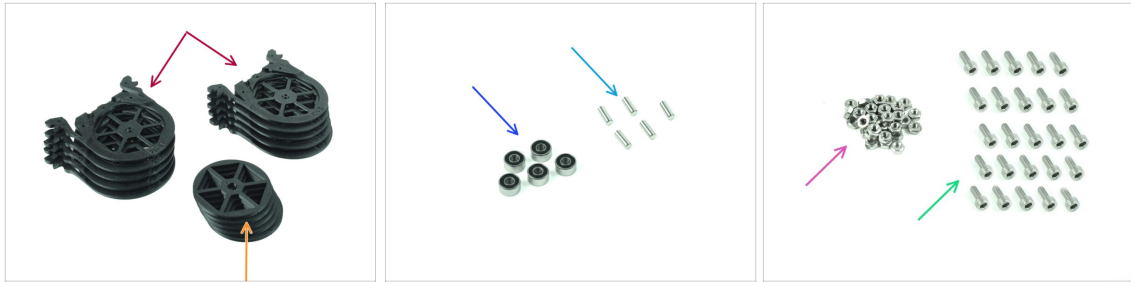

● Para los siguientes pasos, prepara:

● Buffer Segment (10x)

⚠ Make sure you are using the latest version of the Buffer segment.

● Wheel (5x)


● Rodamiento de bolas 693-2rs (5x)

● Shaft 2.9x8.5 (5x)

● M3n nut (15x)

● M3x6 screw (25x)

PASO 12 Segment assembly (part 1)

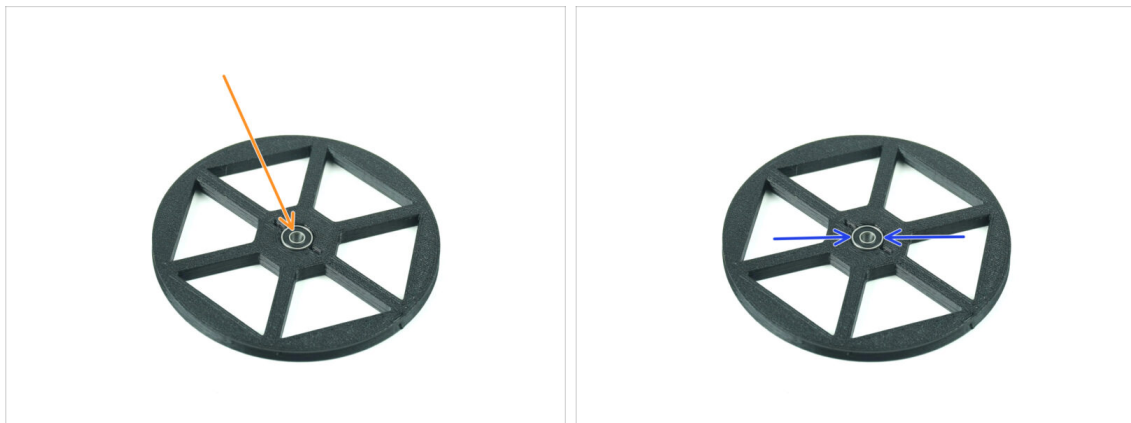


● Insert the bearing into the center opening in the wheel.

● Asegúrate de que el rodamiento se introduce hasta el fondo, hasta que quede enrasado con la superficie.

● Repeat for the remaining four wheels.

PASO 13 Segment assembly (part 2)

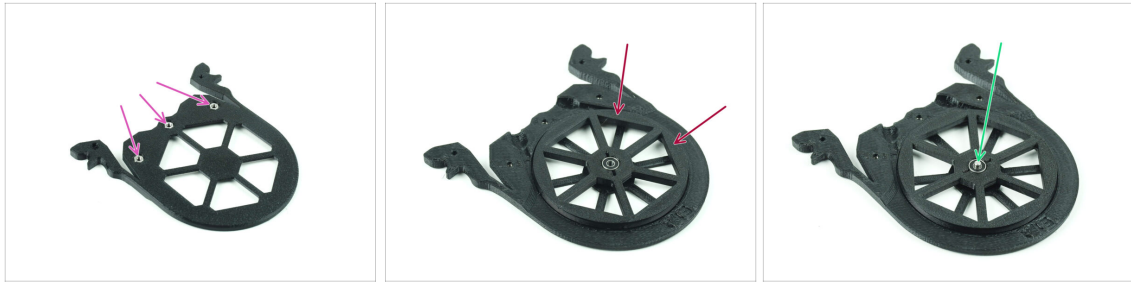


- ◆ Insert three M3n nuts into the marked openings on the Segment and push them all the way in.
- ◆ Add the wheel into the center of the segment.
- ◆ Push the Shaft all the way through the middle of the bearing, until it engages into the segment below.

PASO 14 Segment assembly (part 3)




- ◆ Cover the assembly with another Segment part. Push both parts together to make sure the center shaft engaged into the top segment too.
- ◆ Join both parts together using four M3x6 screws.
- ◆ Gira el conjunto.
- ◆ Add the fifth M3x6 screw from the other side.
- ◆ Assemble all the remaining segments, using the same technique.

PASO 15 Collets: parts preparation

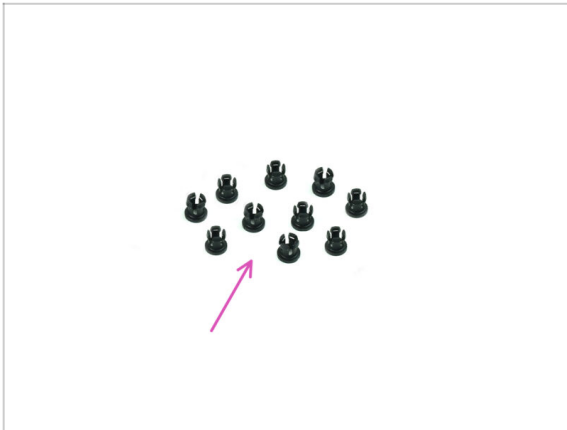

- Para los siguientes pasos, prepara:
- Collet (10x)

PASO 16 Collet installation

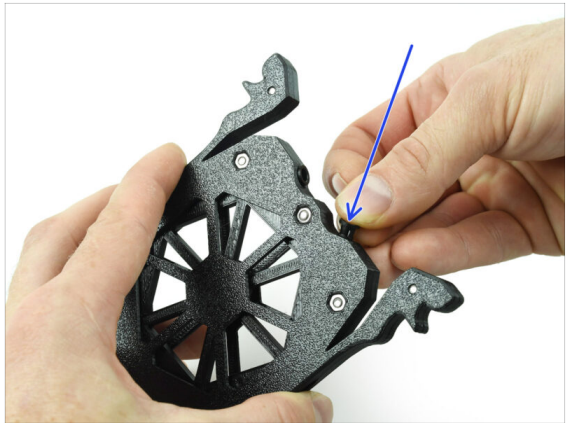


- Insert one of the collets into the marked position on the cartridge.
- ⚠ Note, for an easier instalation, you might want to squish the small fins together while you insert the collet into the opening. Otherwise, one of the fins might spread outwards, resulting in a damaged collet.
- Inserta otro collar en la otra abertura.
- Instale también los collares en los cuatro cartuchos restantes.

PASO 17 Cartridge installation




- Ahora, prepara los 5 cartuchos y el cuerpo del buffer.
- Coje uno de los cartuchos y sujétalo por las dos asas. Aprieta las asas para insertarlo.
- Inserta el cartucho en el cuerpo del buffer.
- Asegúrate de que el cartucho está correctamente insertado.
- ✂ Para extraer el cartucho más tarde, aprieta las dos asas y tira de él.
- Insert all the cartridges into the buffer body.

PASO 18 Preparación de las piezas de los tubos PTFE

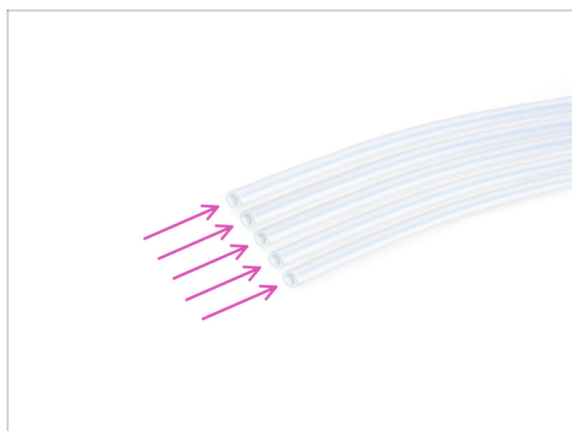


- Para los siguientes pasos, prepara:
- PTFE 650mm (5x)

PASO 19 PTFE tubes installation

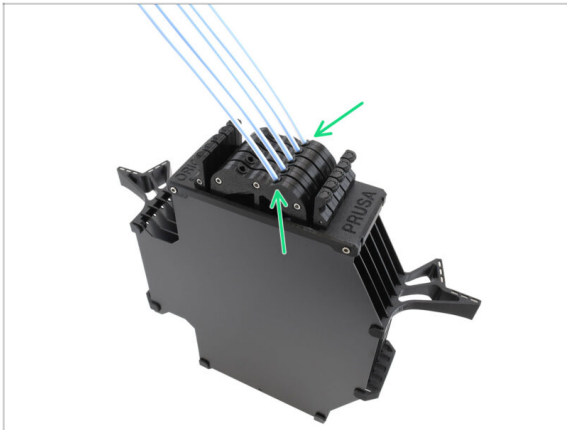


- Insert the PTFE tubes into the row of collets on the right of the cartridges. Push them all the way in.

9D. CORE One Nextruder mod

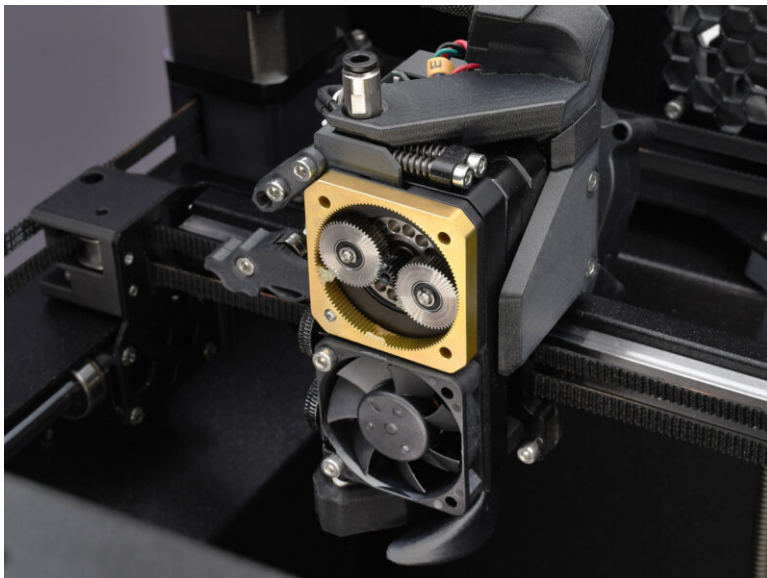

PASO 1 Introduction

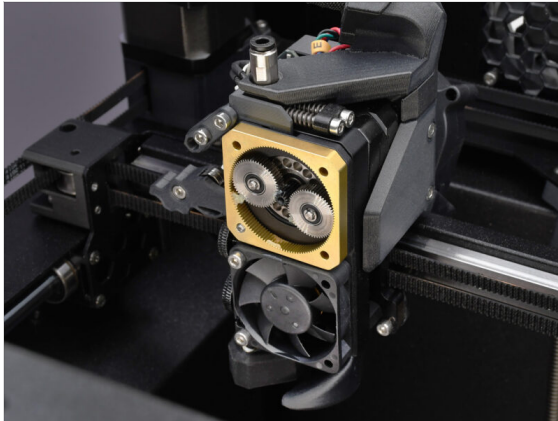


- In this guide, we're going to **modify the Nextruder** on your **CORE One** to accommodate the MMU functionality.
- ⚠ Before continuing, make sure there is no filament loaded in the printer.
- Power off your printer and disconnect it from the power.

PASO 2 Spare parts bag




- During the conversion of the Nextruder to the multi-material version, you'll encounter similar but distinct parts. We suggest keeping a spare parts bag for components that will no longer be used.
- 📌 Don't worry, our guide will clearly show which parts to reuse and which to set aside.
- Let's begin!

PASO 3 Tools Necessary

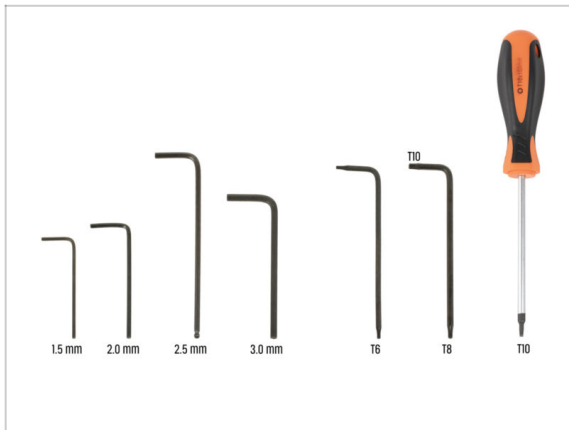

- Para este capítulo, prepara por favor:
- 2.5mm Allen key
- T8 / T10 Torx key
- T10 Torx Screwdriver

PASO 4 Prusa Nozzle Info

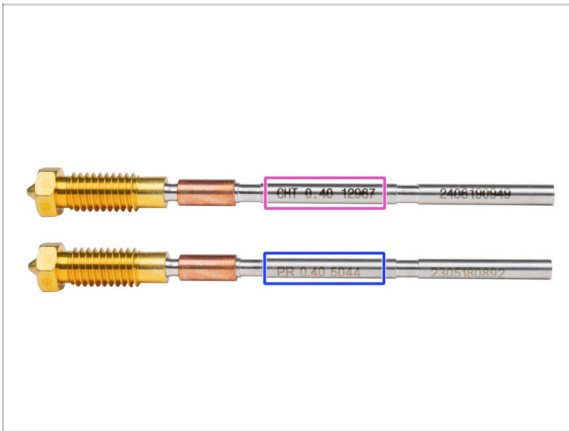

- There are two main versions of the Prusa Nozzle that we ship with the printers:
 - **High Flow** Prusa Nozzle brass CHT (marked CHT)
 - **Regular** Prusa Nozzle brass (marked PR)
 - The **CORE One** comes with the Prusa Nozzle CHT by default. However, for best MMU3 performance, **we recommend switching to a standard Prusa Nozzle.**
 - ① High-flow nozzles are also usable, but they need specific HF Nozzle Slicer profiles with large purge volumes.
 - To replace the nozzle, please follow the [Nozzle Replacement guide](#).
- ⚠ Once completed, return to this manual to continue with the assembly.

PASO 5 Top Cover Removal



- Abre la impresora. Desde el interior, busca el remache de nylon situado en la parte delantera derecha de la cubierta superior. Empújalo hacia fuera para desbloquearlo.
- A continuación, retira el remache desde el exterior.
- Retira los remaches de nylon restantes de la cubierta superior utilizando la misma técnica.
- Remove the top cover and store it as a spare part.


PASO 6 Heatbed Protection



⚠ ¡Antes de continuar, te recomendamos proteger primero la base calefactable!

- Utiliza un trozo de tela u otro material lo suficientemente grueso como para cubrir la base calefactable. Así te asegurarás de no dañar (arañar) la superficie durante el proceso.

PASO 7 PTFE Holder Preparation

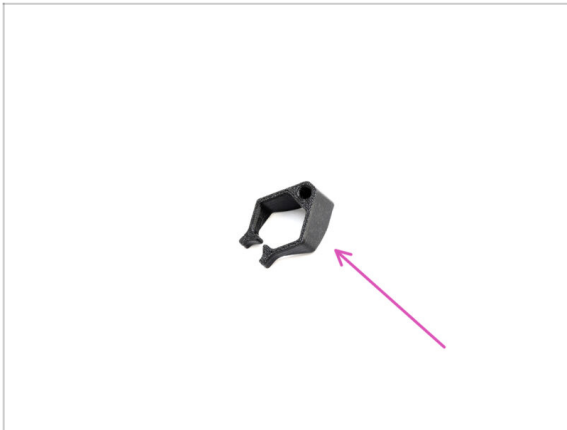


- Para los siguientes pasos, prepara:
- extruder_PTFE_holder (1x)

PASO 8 PTFE Tube Removal




- Lift the bowden-bend plastic part.
- Remove the PTFE tube from the extruder. by pushing the collet on the fitting, while pulling the PTFE tube.
- ✎ Press and hold the collet on the fitting. While holding it down, push the PTFE tube in, then pull it out.
- Remove the bowden-bend part and store it as a spare part.

PASO 9 PTFE Holder Installation

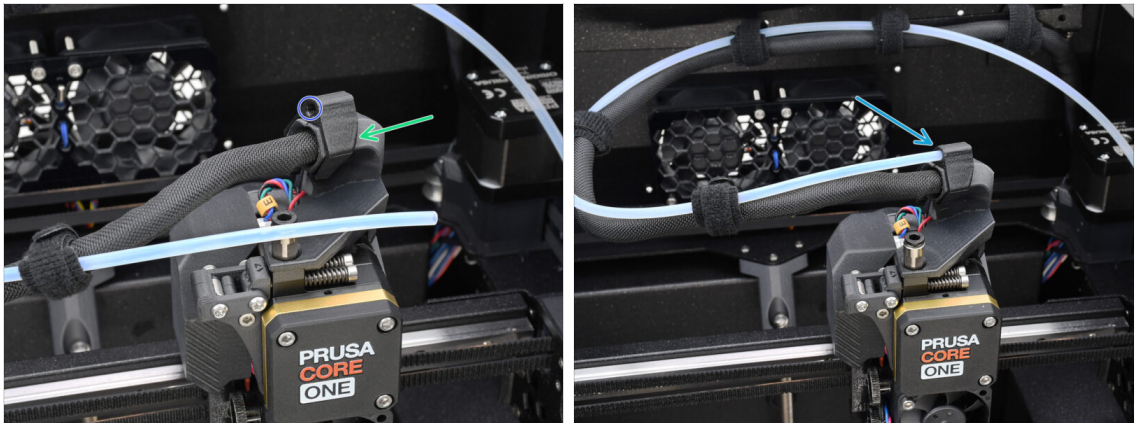


- Install the extruder_PTFE_holder onto the main cable holder.
- Make sure the part with the round opening faces the cable.
- Push the end of the PTFE tube into the holder.
- ⓘ This way, the original single-material PTFE tube stays in place and can be reattached if you convert the printer back to a single-material setup.

PASO 10 Nextruder disassembly (part 1)

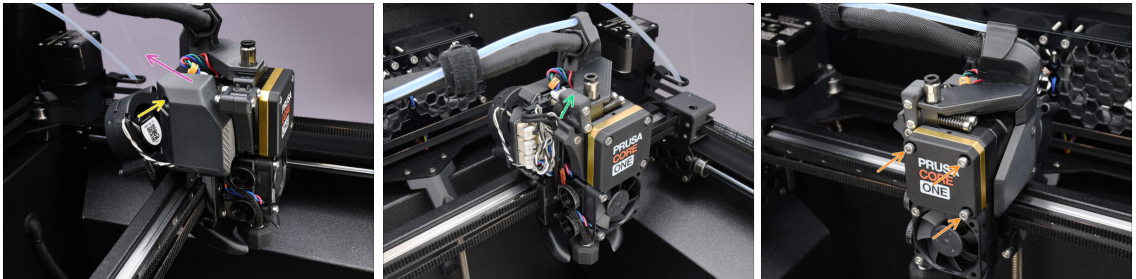


- Con la llave Allen de 2.5mm, retira el tornillo M3x10 que sujeta la tapa lateral.
- ⓘ Some older printer versions might have two screws with a T10 head.
- Remove the cover.
- Open the Idler swivel.
- Fully loosen the M3x25 screws holding the gearbox cover. Leave the screws in place. Do not remove them entirely yet.

PASO 11 Nextruder disassembly (part 2)

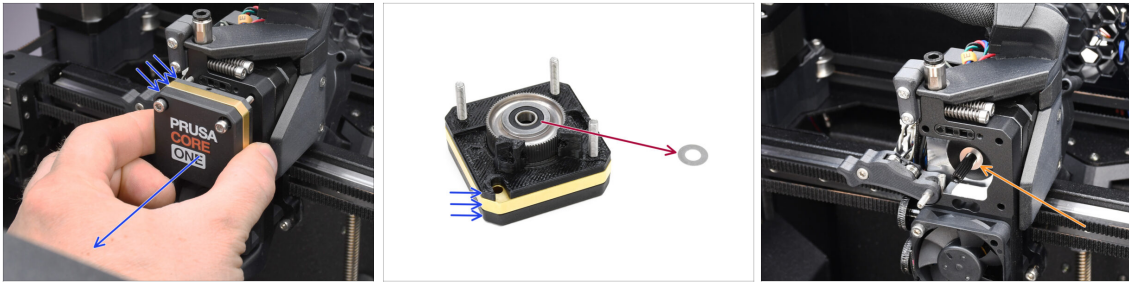


- ◆ Remove the whole **gearbox assembly** from the Nextruder.
- ◆ Locate the **metal washer** that should be between the gearbox and the motor. It might be stuck to the gearbox assembly.
- ◆ Reseat the washer / spacer on the motor shaft, in case it has come off the shaft.
- ⚠ The parts might be greasy. Clean off any excess grease.

PASO 12 Nextruder disassembly (part 3)

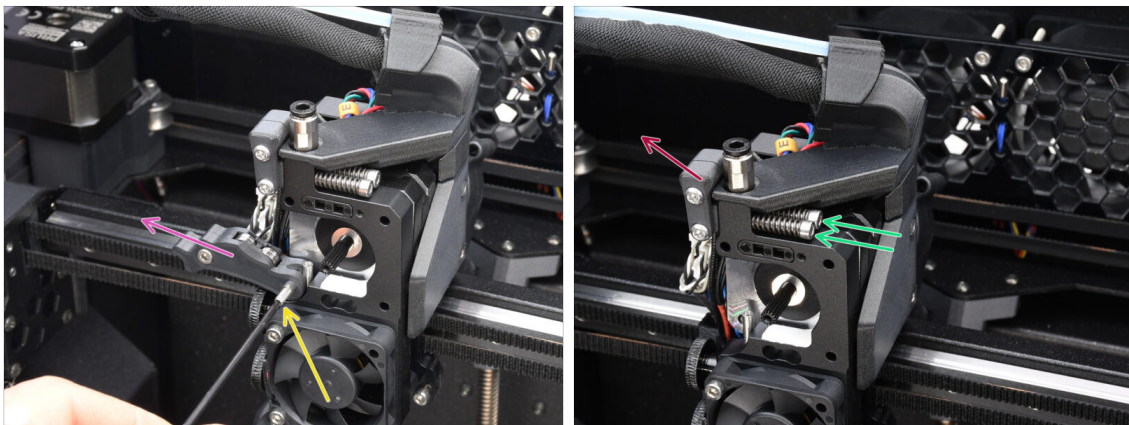


- ◆ Con la llave Allen de 1.5mm, retira el **tornillo prisionero**.
- ◆ Remove the Idler.
- ◆ Remove the two M3x30 screws with the springs.
- ◆ Remove the idler swivel assembly.

PASO 13 Nextruder disassembly (part 4)

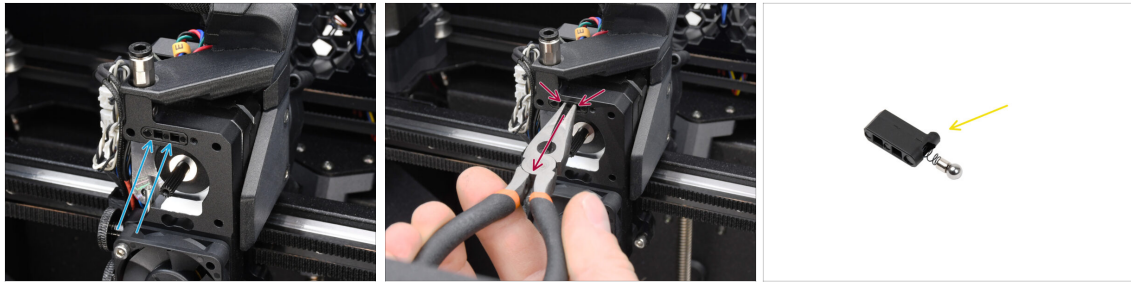


- On top of the **Nextruder heatsink**, there is a **filament sensor assembly**. We will need to remove it.
- Using the needle-nose pliers, gently pull the filament sensor assembly out of the heatsink.
- ❗ Proceed very carefully, there is a spring and a very tiny ball that can fall out!
- 📌 En caso de que el conjunto del sensor de filamento sea difícil de extraer, introduce la llave Allen de 2.5 mm en la abertura del filamento situada en la parte superior para empujar la bola de acero del interior del conjunto hacia dentro. A continuación, extrae el conjunto del sensor de filamento.
- This filament sensor assembly will not be used with the multi-material Nextruder. Store it in a spare parts bag.

PASO 14 Idler disassembly

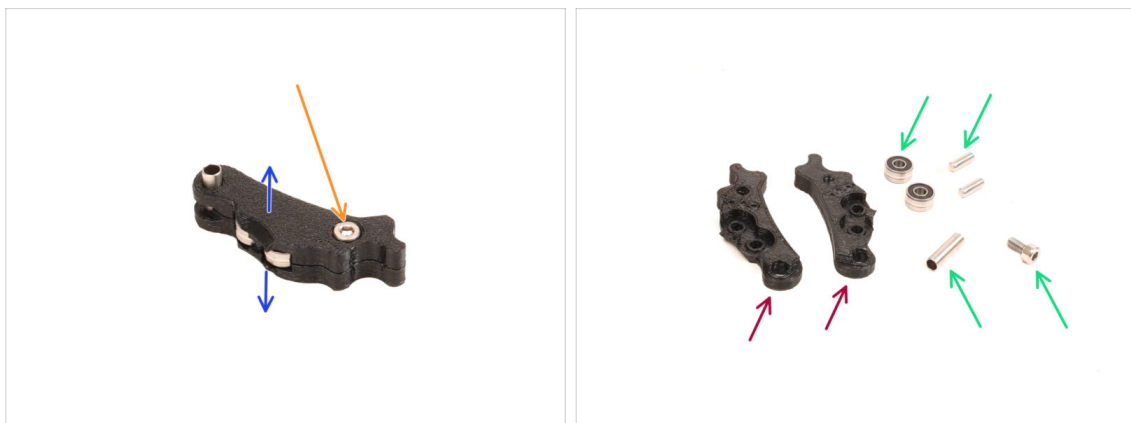

- We will need to take the Idler assembly apart.
- Remove the M3x6 screw.
- Split the printed parts to open it up.
- Set aside for later use: **Bearings, pins, spacer and the screw.**
- The printed parts won't be re-used. Set them aside so that they don't mix up with the new parts.


PASO 15 New Idler parts preparation

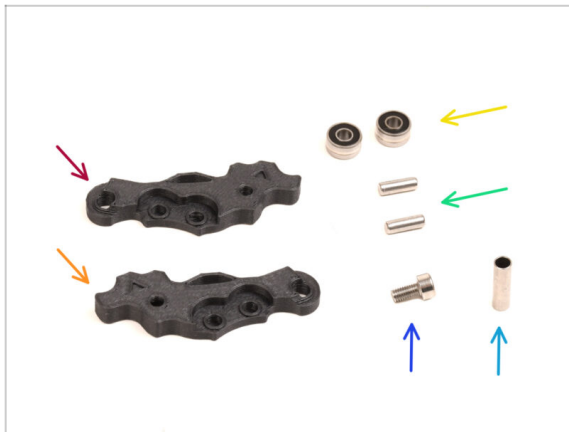

● Para los siguientes pasos, por favor prepara:


- Idler-lever-a (1x) *the new part*
- Idler-lever-b (1x) *the new part*
- Bearing 693 2RS (2x) *you removed earlier*
- Pin 2.9x8.5 (2x) *you removed earlier*
- M3x6 screw (1x) *you removed earlier*
- Spacer tube 13.2x3.8x0.35 (1x) *you removed earlier*

PASO 16 New Idler assembly

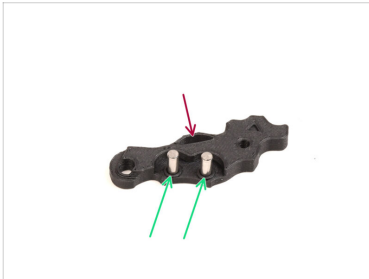

- Take the new Idler-lever-a part.
- Insert the two pins into the corresponding openings.
- Mount the bearings onto the pins.
- Cover the assembly with the Idler-lever-b part.
- Insert the spacer tube into the corresponding opening.
- Fix the assembly together using the M3x6 screw.

PASO 17 Swivel disassembly

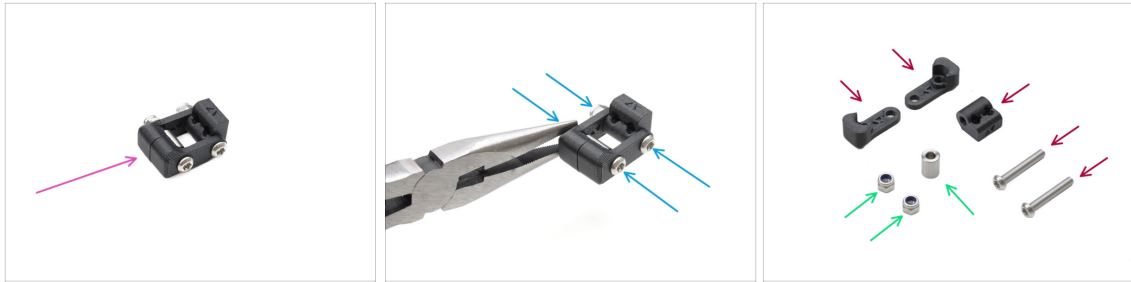

- ◆ We will need to take the Swivel assembly apart.
- ◆ Using the T10 Torx key, remove the screws while you hold the nuts using the needle-nose pliers.
- ◆ Set aside for later use: **M3nN nuts and spacer.**
- ◆ The printed parts and the screws won't be re-used. Set them aside so that they don't mix up with the new parts.

PASO 18 Idler nut FS parts preparation



- ◆ **Para los siguientes pasos, por favor prepara:**
- ◆ Idler nut FS (1x) the new part
- ◆ Magnet 3x1mm (1x)
- ① Two tiny magnets are included. Separate them and use only one; the other is a spare.

PASO 19 Idler nut FS assembly



- ✿ Arrange the **Idler nut FS** part as seen in the picture.
- ✿ Install the tiny 3x1mm magnet into the marked opening on the Idler nut FS part.
- ✿ Push the magnet all the way in, until it stops.
- ⓘ The polarity / orientation of the magnet isn't important. The printer will automatically adapt to it during the filament sensor calibration process.

PASO 20 New Swivel Preparation



- ✿ **Para los siguientes pasos, por favor prepara:**
- ✿ Idler nut FS (1x) *with the 3x1mm magnet installed*
- ✿ Swivel B (1x) *the new part*
- ✿ Swivel A (1x) *the new part*
- ✿ M3nN nut (2x)
- ✿ Spacer 6x3.1x8 (1x) *you removed earlier*
- ✿ M3x22 screw (2x)

⚠ This screw is a new type not previously used on a printer! Do not reuse old screws, as they are a different size and would not fit properly!

PASO 21 New Swivel Assembly 1




- Take the Swivel A part and orient it as seen in the picture.
- Insert the **M3x22 screw** into the opening near the thick part of the Swivel A.
- Slide the **spacer** onto the screw.
- Insert the second **M3x22 screw** into the other opening on the side.
- Slide the **Idler nut FS** part onto the other M3x22 screw.

PASO 22 New Swivel Assembly 2



- Orient the Swivel assembly as seen in the picture.
- There is a tiny magnet in the Idler nut FS part. Make sure it is in place.
 - i** In case the magnet has fallen out, there is a replacement one in the package.
- Slide the **Swivel B** part onto the screws.
- Attach the M3nN nuts onto the screws. Tighten the screws gently while holding the nuts using the needle-nose pliers.
 - ⚠ Do not overtighten the nuts. The Swivel must be able to move freely.**

PASO 23 Tension screws parts preparation

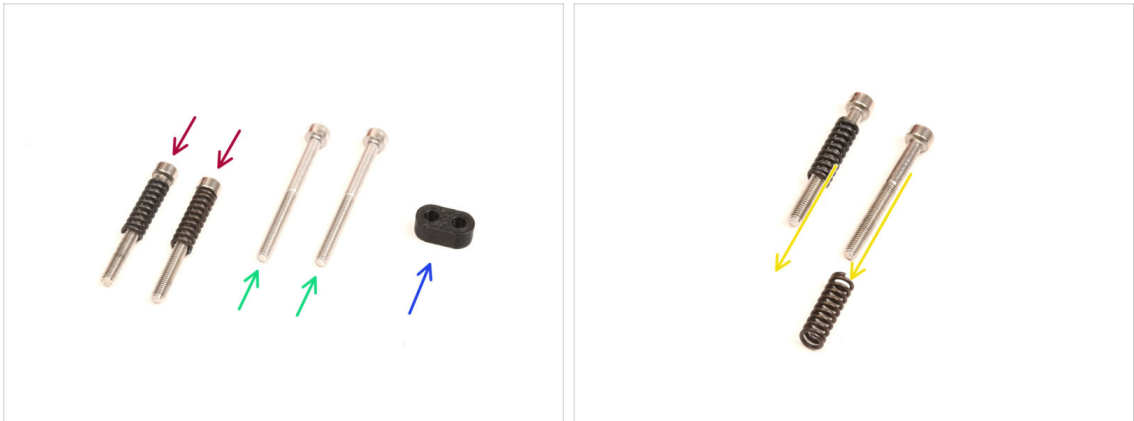

● Para los siguientes pasos, por favor prepara:

● **M3x30** screws with the springs (2x) *you have removed earlier*

① We will need the **springs alone**. The old M3x30 screws won't be re-used.

● Remove the springs from the old M3x30 screws.

● **M3x35** screws (2x) *the new, slightly **longer** ones.*

⚠ This screw is a new type not previously used on a printer! Do not reuse old screws, as they are a different size and would not fit properly!

● Screw guide (1x)

PASO 24 Tension screws assembly



● Take the new M3x35 screws.

⚠ Compare the size of the screws. Set the old M3x30 and the **new M3x35** screws apart so that they don't mix up.

● The old shorter M3x30 screws won't be re-used.

● Push the M3x35 screws through the screw guide.


● Attach the springs onto the end of both the screws.

PASO 25 Gearbox disassembly



- ◆ Take the gearbox assembly and split it apart.
- ◆ The parts might be greasy. Clean off any excess grease.
- ◆ Set aside for later use: **PG-case, PG-ring, PG-assembly, M3x25 screws.**
- ◆ The printed main-plate won't be re-used. Set it aside so that it doesn't mix up with a new part.

PASO 26 Main Plate Preparation

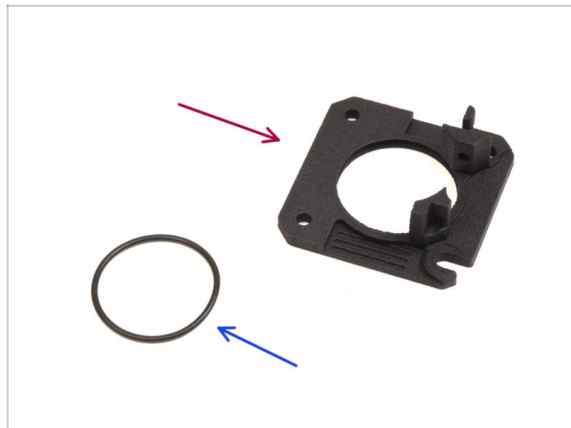


- ◆ Para los siguientes pasos, por favor prepara:
- ◆ new Main Plate (1x)
 - ⚠ We will need the newly supplied main-plate. It is different than the original one in the gearbox assembly, printed from PETG. Do not reuse the old main plate, as it may cause the printer to malfunction!
 - ℹ The new main plate is 3D printed using MJF technology. It cannot be replicated with the same quality using FDM printing.
- ◆ O-ring 24,5x1,5 (1x)

PASO 27 Main Plate Assembly




- The new main plate has a V-shaped groove inside its large round opening.
- Insert the O-ring into the groove, ensuring it's seated correctly.

PASO 28 MMU Nextruder Preparation

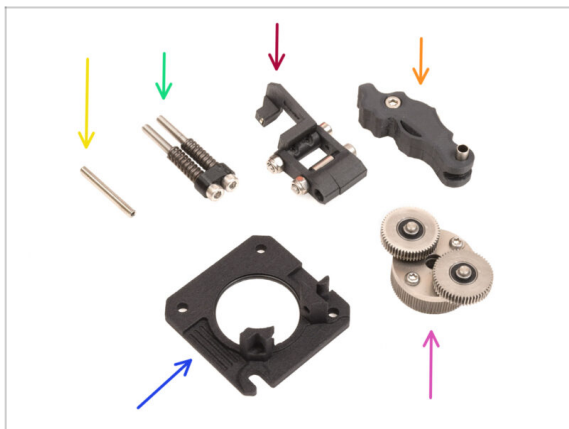


- **Para los siguientes pasos, por favor prepara:**
- Set screw M3x25 (1x)
 - ⓘ If you own the 4-screw version of the Nextruder, this specific type of set screw is not included.
- MMU Tension screws assembly (1x)
- MMU Swivel assembly (1x)
- MMU Idler assembly (1x)
- Main plate assembly (1x)
- PG-assembly (1x)

PASO 29 MMU Nextruder Assembly 1

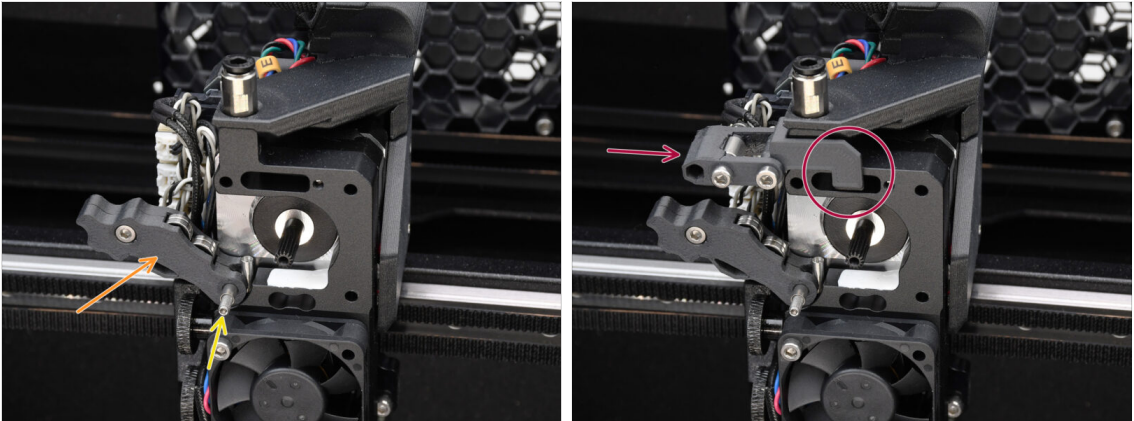


- Add the **Idler assembly** onto the extruder.
- Fix it in place using the **M3x25 Set screw**.
- ⓘ In case you have the 4-screw version of the Nextruder, you might use the M3x25 screw to temporarily hold the Idler assembly in place.
- Add the **Swivel assembly** onto the extruder. The protruding part of the Idler nut FS component should fit inside the filament sensor pocket in the heatsink, as seen in the picture.

PASO 30 MMU Nextruder Assembly 2

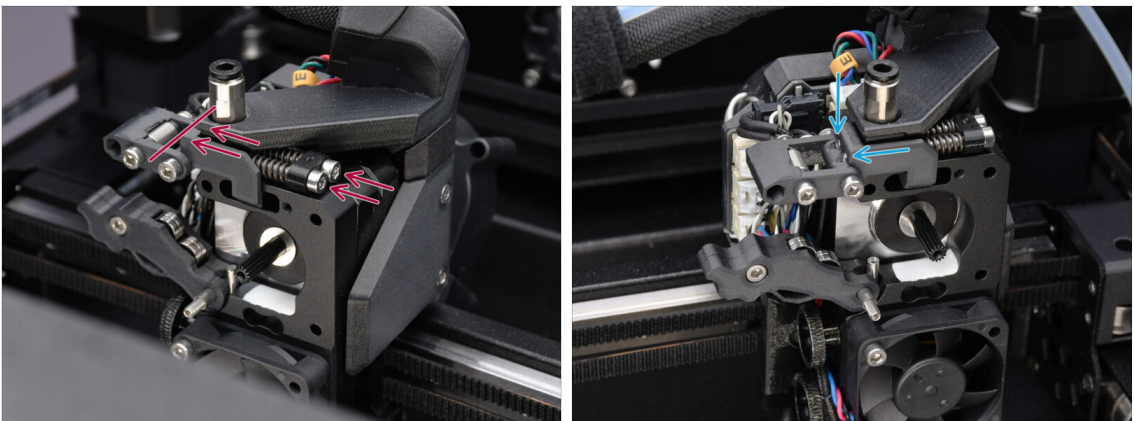

- Insert the tension screw assembly through the heatsink and guide it towards the Swivel assembly.
- Gradually tighten the tension screws one at a time until their ends are flush with the surface of the Idler nut part on the other side, as shown.

PASO 31 MMU Nextruder Assembly 3

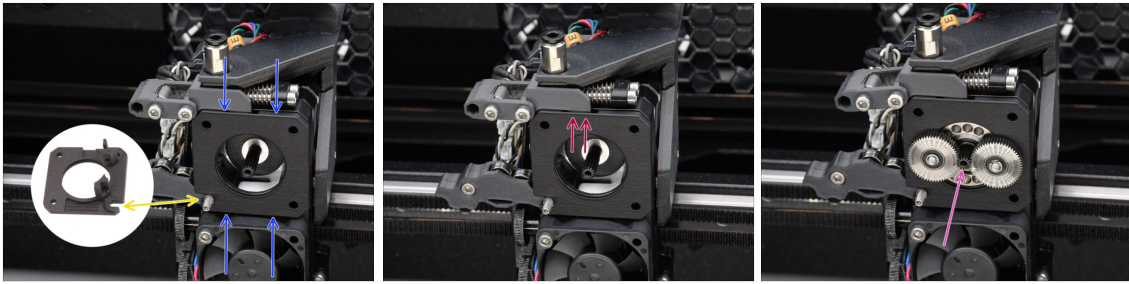

- Attach the new **main plate assembly** to the extruder, ensuring the protruding parts fit correctly into the heatsink.
 - The **notch** in one of the corners is designed to fit over the Idler spacer / set screw.
- Ensure the lever on the Swivel assembly fits correctly into the cutout on the main plate.
- Attach the **PG-assembly** to the motor shaft. Be very careful when inserting the assembly into the opening with the O-ring.


⚠ Watch out for any deformation or damage to the O-ring. **Ensure the O-ring stays properly seated** in its groove on the main plate. A slight wiggling motion, while inserting, can assist.

PASO 32 Gearbox Assembly Preparation




- **Para los siguientes pasos, prepara:**
- PG-case assembly (1x)
 - PG-ring (1x)
 - M3x25 screws (3x)
 - PG-assembly adapter (1x)

PASO 33 Gearbox Assembly 1

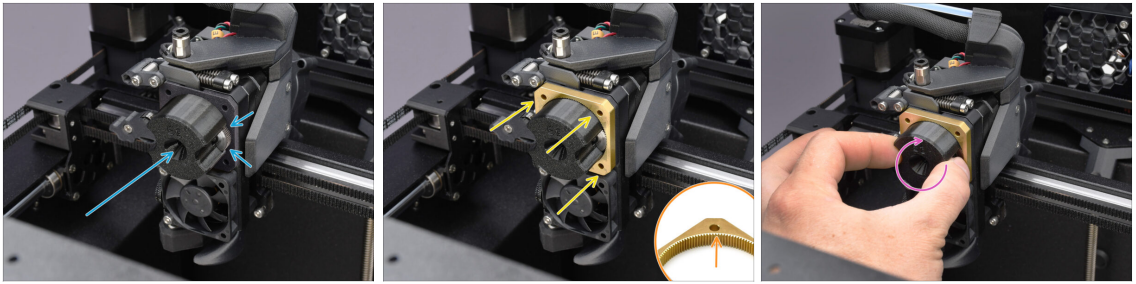


- ◆ Attach the **adapter** to the PG-assembly, making sure the spur gears are correctly aligned and fit snugly into the pockets on the adapter.
- ◆ Carefully slide the **PG-ring** onto the adapter, pushing it all the way in gently, until it locks onto the gears.
 - ◆ Note that the PG-ring has a chamfer on one side. This side should face the gears during insertion for easier assembly.
 - ◆ Gently rotate the adapter while sliding the PG-ring onto the gears to ensure proper gearbox alignment.

PASO 34 Gearbox Assembly 2

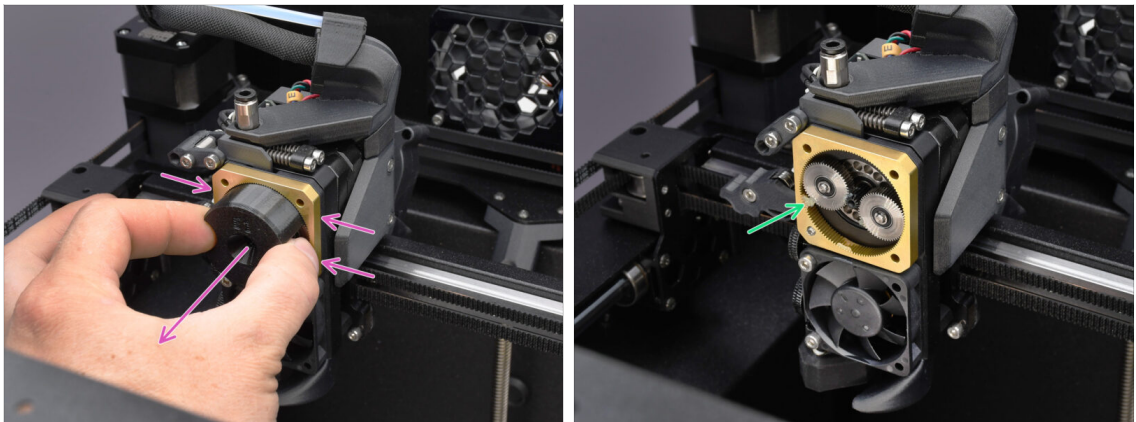


- ◆ Remove the adapter, while maintaining the gearbox assembly in place.
- ◆ Check the PG ring for adequate lubrication. If necessary, apply a slight amount of grease, as explained in the [Nextruder Assembly guide](#).

PASO 35 Gearbox Assembly 3

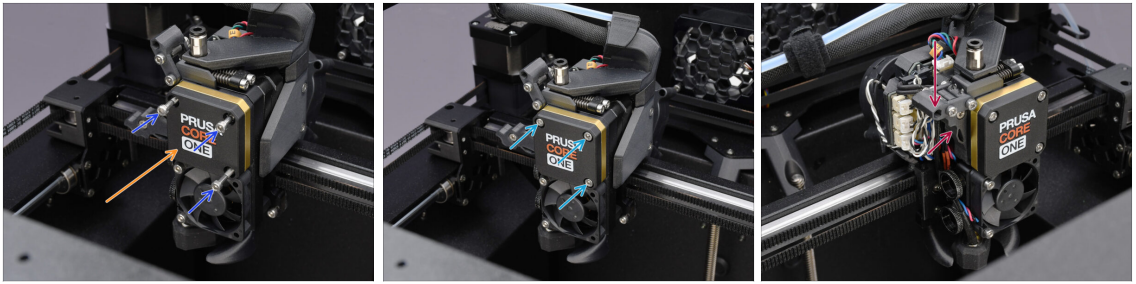


- 🟠 Cover the gearbox using the **PG-case**.
- 🟡 Fix it in place using the three M3x25 screws.
- 🟢 Tighten the screws just lightly, for now.
- 🔴 Close the Idler and secure it using the Swivel.

PASO 36 Nextruder Side Cover Preparation

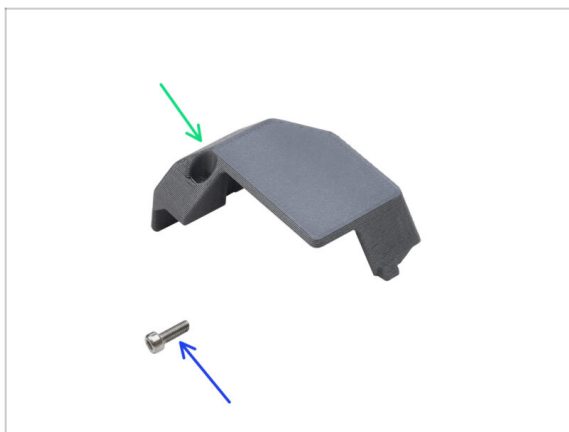

- ⬛ **Para los siguientes pasos, prepara:**
- 🟢 Nextruder Side Cover (1x) *you removed earlier*
- 🟡 Tornillo M3x10 (1x) *que quitaste antes*

PASO 37 Nextruder Side Cover Installation

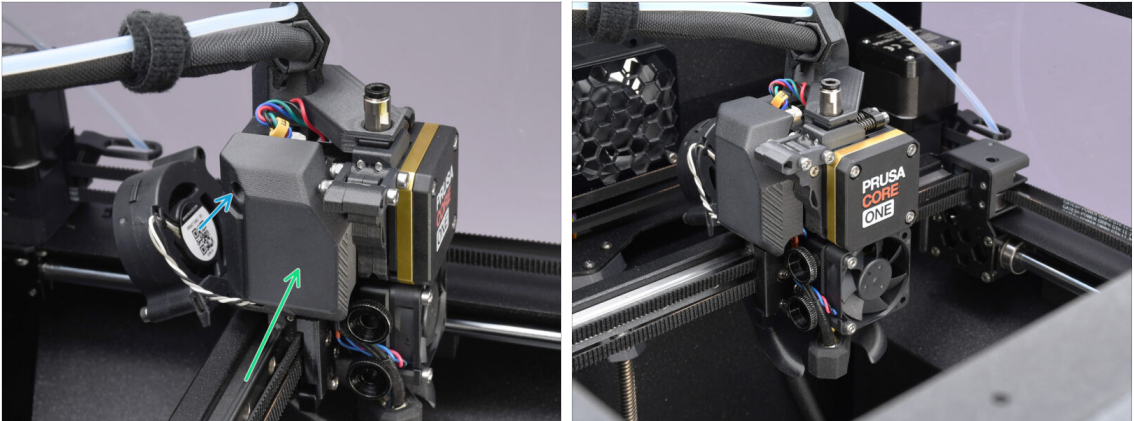

- 🟢 Re-install the side cover. First, hook it on the bottom, then push the top towards the Nextruder.
- 🔵 Fix it in place using the M3x10 screw.
- ⚠️ **Congratulations. Your Nextruder has been successfully reworked into the MMU version.**

10D. CORE One Setup and Calibration




PASO 1 Top Cover



- ◆ Before installing the MMU unit, remove the printer's top cover if it hasn't been removed already.

PASO 2 Core One MMU3 Types

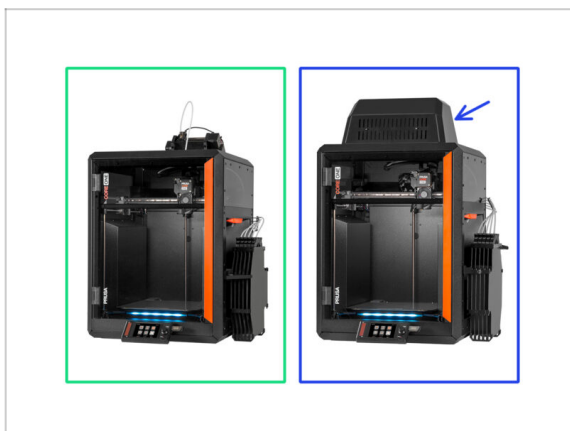

- ⚠ There are **two official versions** of the MMU3 for CORE One:


- ◆ the **Lite**

- ⚠ Si tienes esta versión, continúa en el siguiente paso.

- ◆ the **Enclosed with the Top Cover**.

- ⚠ If you have this version, continue to the Top Cover Preparation.

PASO 3 (LITE) MMU Holder Preparation

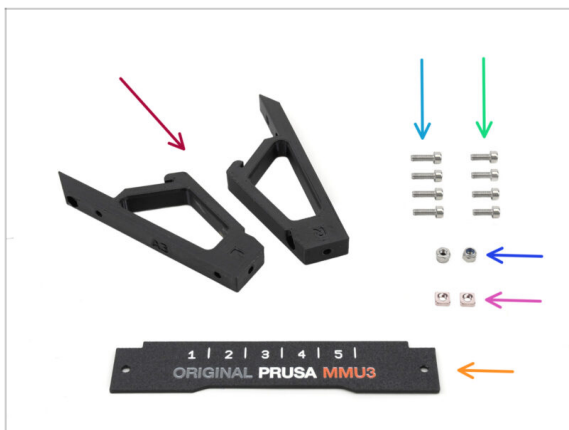

⚠ These steps are valid for the Lite version.

- Para los siguientes pasos, prepara:
- CO_MMU_Holder (2x)
 - M3x10 screw (4x)
 - M3x8 screw (2x)
 - M3nS nut (2x)
 - M3nN nut (2x)
 - Label Plate (1x)

PASO 4 (LITE) M3nS Installation




- Turn the unit around.
- Insert the two **M3nS** nuts into the marked openings on the side of the unit. Push the nuts all the way in using the 1.5mm Allen key.
- Check the nut alignment from above. Use the 1.5mm Allen key to center the nut, if necessary.

PASO 5 (LITE) MMU Holder Installation 1



- Insert the M3nN nuts into the hexagonal openings in the Holders. Make sure the flat part goes in first!
- Add the Holders onto the unit and align them with the assembly.
 - Ensure the holder marked R is on the unit's right side (sides are reversed when the unit is upside down).
 - Ensure the part with the M3nN nuts faces the back.
- ⚠ Watch out! the nuts might keep falling out.

PASO 6 (LITE) MMU Holder Installation 2

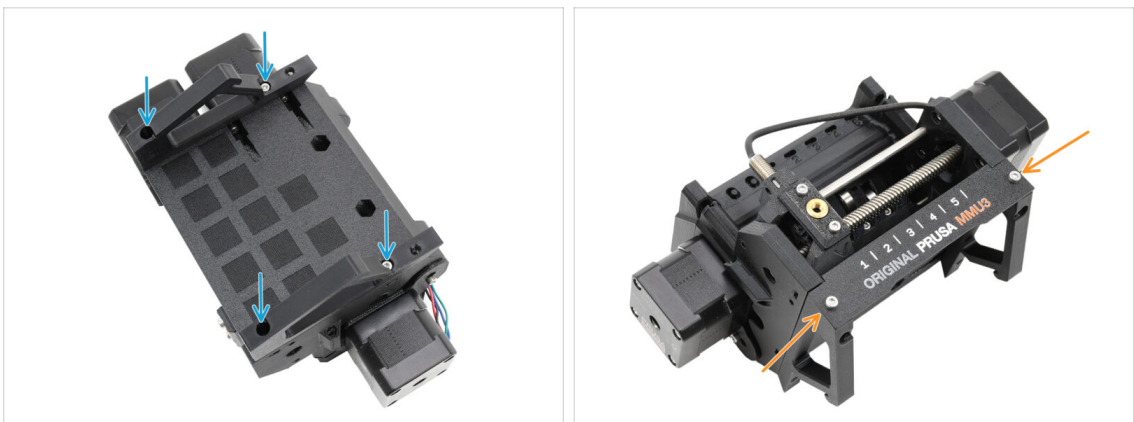


- Fix the holders to the unit using four M3x10 screws.
- Align the Label plate with the front part of the MMU unit. Fix it to the holders using two M3x8 screws.

PASO 7 (LITE) MMU Placement 1




- ◆ Now, we will place the MMU assembly onto the top back part of the printer.
- ◆ Hook the notch on the MMU holders to the front part of the metal profile.
- ◆ Lean the MMU against the profile.

PASO 8 (LITE) MMU Placement 2

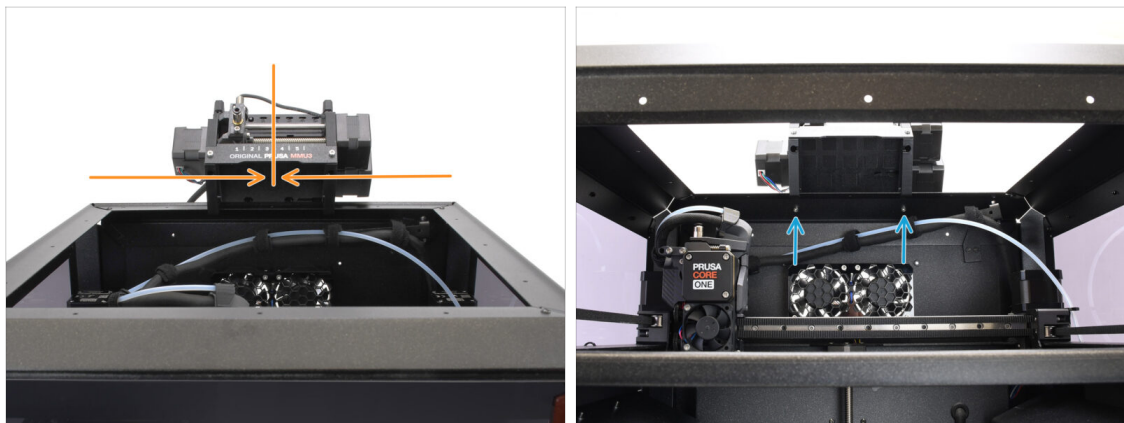

- ◆ Center the unit on the printer to align the screw holes.
 - ◆ Reach inside the printer to secure the unit with the two M3x8 screws.
- ⚠ Your MMU3 Lite is now securely attached.
Continue to the Back Cover Removal step.

PASO 9 (ENC) Top Cover Preparation

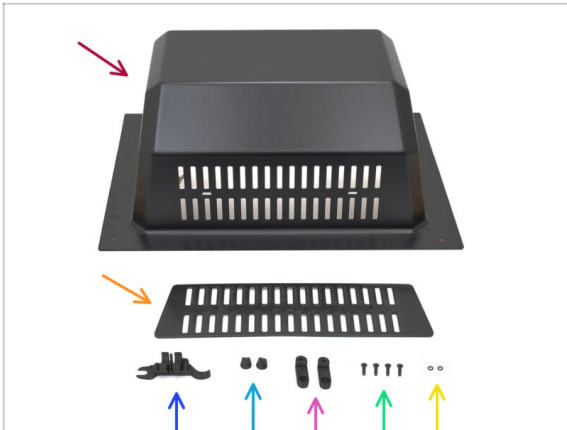

 These steps are valid for the Enclosed version.

Skip if you use the Lite.

- For the following steps, prepare:
 - MMU Top Cover (1x)
 - Vent Cover (1x)
 - CORE ONE ASSEMBLY MULTI TOOL (1x) *version E2 or newer*
 - Vent Nut (2x)
 - Top Cover Lock (2x)
 - M3x10rT (4x)
 - O-ring (2x)

PASO 10 (ENC) Top Cover Assembly 1



- Take the Vent Cover part.
 - Push the two M3x10rT screws through the openings.
- Install the Vent Cover to the inside of the Top Cover, making sure the screws go all the way through.
 - From the other side, attach the o-rings onto the screws.

PASO 11 (ENC) Top Cover Assembly 2



- Tighten the screws against the Vent Nuts
- Use the Assembly Multi Tool to hold the nuts while tightening.
- Tighten the screws just so that the vent cover holds in place when moved to a side. Make sure it is still easy to slide.

PASO 12 (ENC) Top Cover Assembly 3



- Attach the Locks onto the bottom part of the Top Cover.
- Make sure the Locks are oriented as seen in the picture. Then, fix them in place using two M3x10rT screws.
- Tighten the locks just until snug. They should be movable with reasonable force.

PASO 13 (ENC) MMU Holder Preparation



For the following steps, prepare:



CO_MMU_Holder (2x)

M3nS nuts (2x)

M3x10 screw (4x)


⚠ Some versions of the assembled unit may already have these holders pre-installed. If so, you can skip the holder installation steps.

PASO 14 (ENC) M3nS Installation

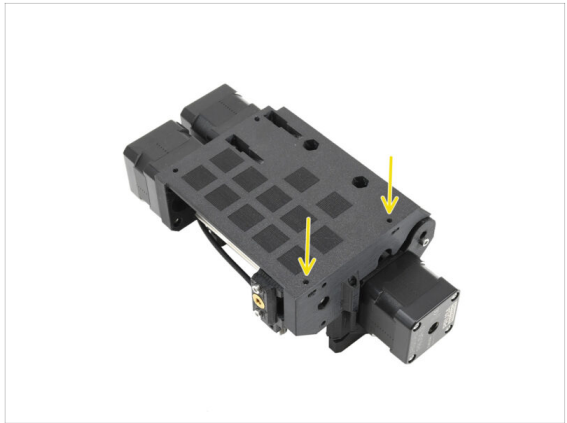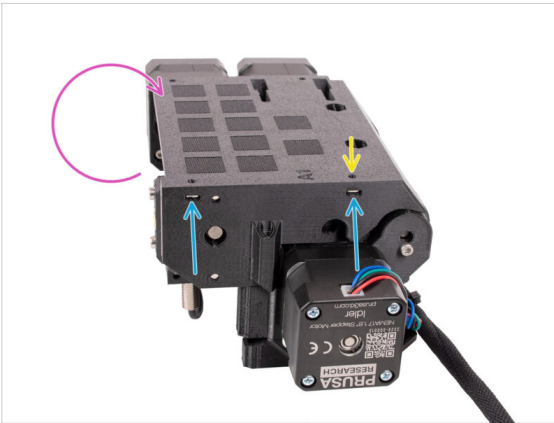

- Turn the MMU unit around.
- Insert the two **M3nS** nuts into the marked openings on the side of the unit. Push the nuts all the way in using the 1.5mm Allen key.
- Check the nut alignment from above. Use the 1.5mm Allen key to center the nut, if necessary.

PASO 15 (ENC) MMU Holders Installation

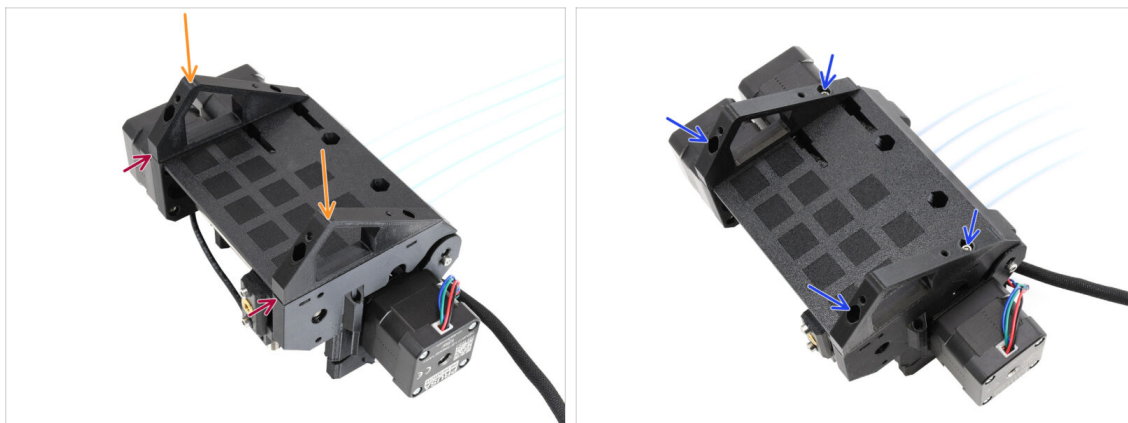


- Take the MMU unit and flip it upside down.
- Add the holders onto the bottom part.
- Align the flat front of the holders with the unit.
- Attach the holders using four M3x10 screws.

PASO 16 (ENC) Metal Holder Preparation




- Para los siguientes pasos, prepara:**
- MMU Metal Holder (1x)
- Top Cover Holder (2x)
- M3x10rT screws (8x)

PASO 17 (ENC) Metal Holder Assembly

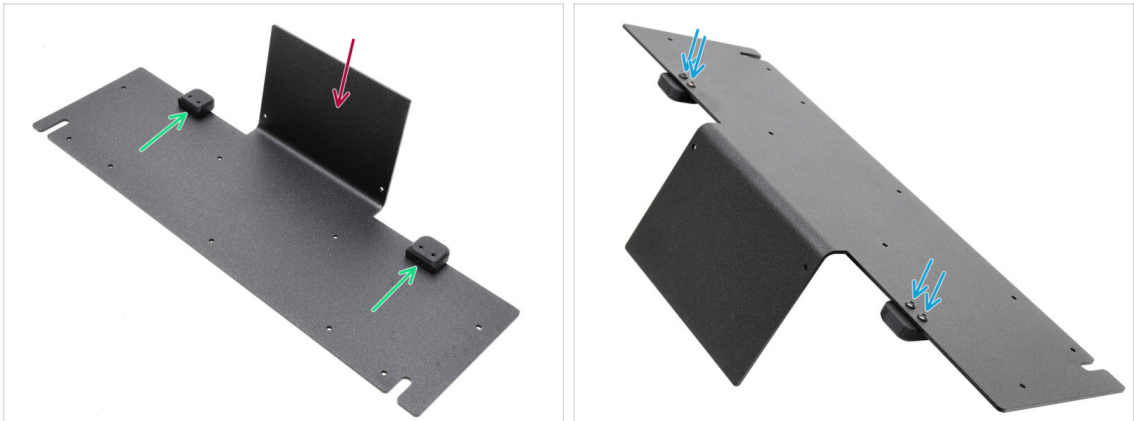


- Orient the metal holder with the bent part facing up as shown.
- Instal the plastic holders onto the metal using the four M3x10rT screws.
 Ensure the rounded part overhangs, as in the picture.
- Tighten the screws.

PASO 18 (ENC) Unit Assembly

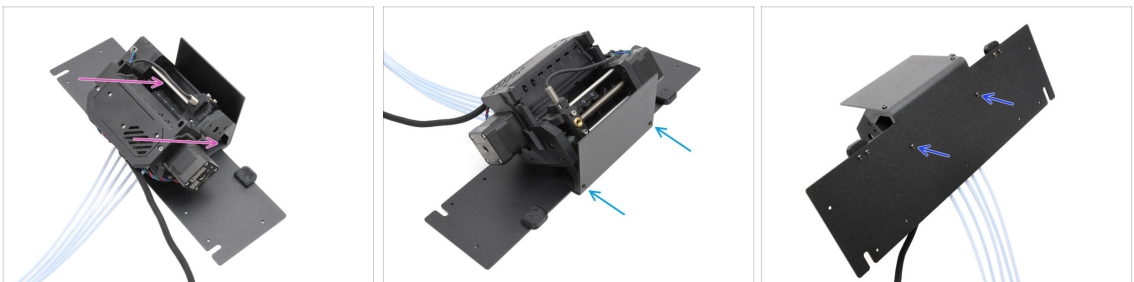


- Move the MMU unit onto the Metal holder, aligning its plastic holders with the bent part.
- Attach the MMU unit to the metal with two M3x10rT screws at the front.
 ⓘ Tighten the screws with reasonable force to avoid stripping the self-tapped plastic thread.
- Fix the unit using the other two M3x10rT screws at the bottom.

PASO 19 (ENC) MMU Placement Preparation

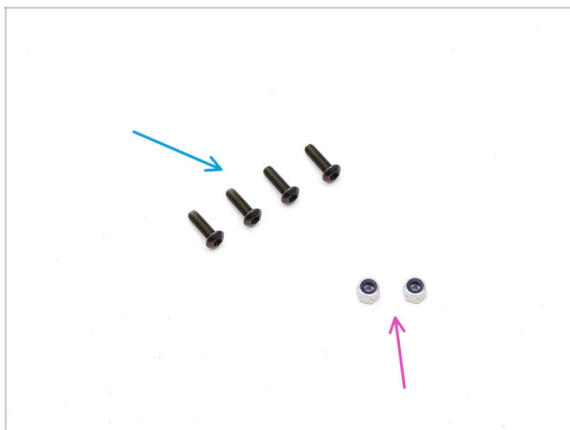

- Para los siguientes pasos, prepara:
- M3x10rT screws (4x)
 - M3nN nuts (2x)

PASO 20 (ENC) MMU Assembly Placement

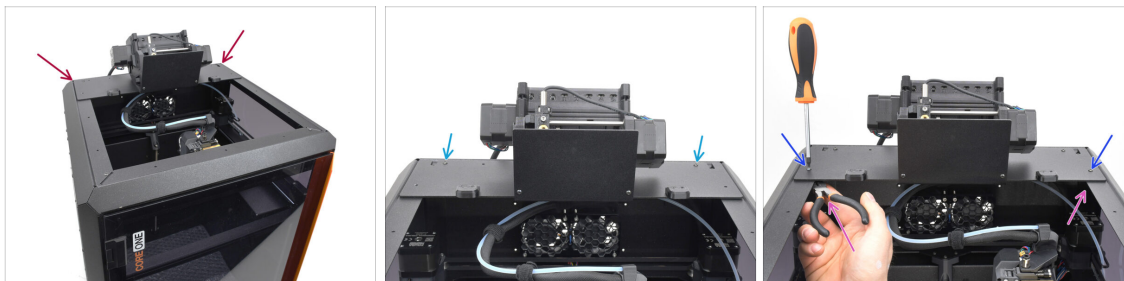

- Place the MMU assembly with the metal holder onto the printer. Make sure it sits in the back of the top recess, with the MMU facing the front of the printer.
- Fix it to the metal profiles in the back using two M3x10rT screws.
- Tighten two M3x10rT screws on sides against the M3nN nuts held with needle-nose pliers.

PASO 21 Extracción Cubierta Trasera 1



- ✦ En el interior de la impresora, retira los dos tornillos que sujetan la cubierta posterior.
- ✦ En la parte posterior de la impresora, desliza la cubierta central hacia abajo.
- ✦ Pull the bottom part of the cover outward while tilting the top toward the printer. This will unhook it from the cable bundle behind. Remove the cover.

PASO 22 Back Cover Removal 2



- ✦ Retira los seis tornillos que sujetan la cubierta de la xBuddy.
- ✦ Retira la tapa deslizándola hacia fuera.

PASO 23 MMU Cable Connection




- Guide the MMU cable towards the electronics box.
- Pull the cable through the top cable opening into the xBuddy box.
- Connect the cable to the dedicated MMU port on the xBuddy Extension board.

PASO 24 Back Cover Installation 1




- Attach the xBuddy box cover using the 6 M3x4rT screws.
- ⓘ Make sure no cable is getting pinched.
- Re-install the back cover, making sure the MMU cable fits through the mousehole opening on top.

PASO 25 Back Cover Installation 2

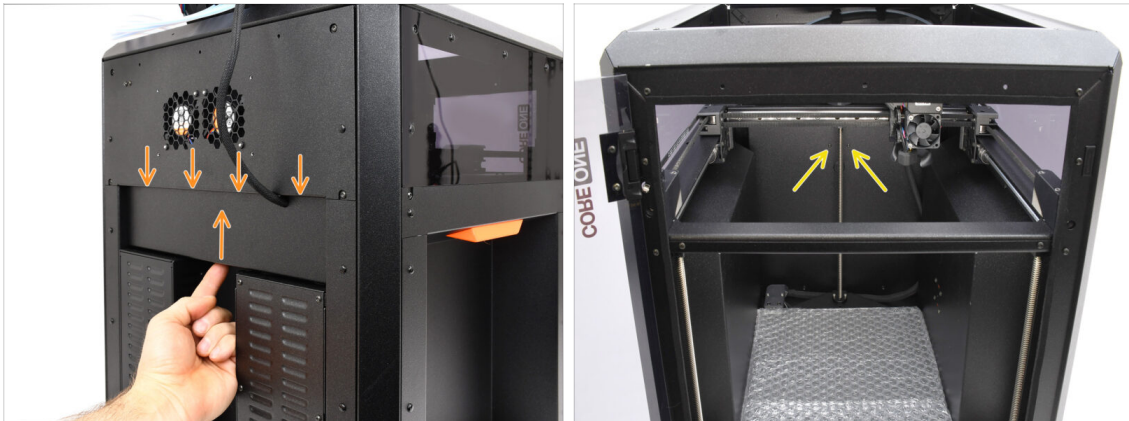


- Push the cover up, so that the four tabs on top engage into the recesses.
- Mientras empujas la cubierta hacia arriba, fíjala en su sitio utilizando dos tornillos M3x4bT desde el interior de la impresora.

PASO 26 Software Download

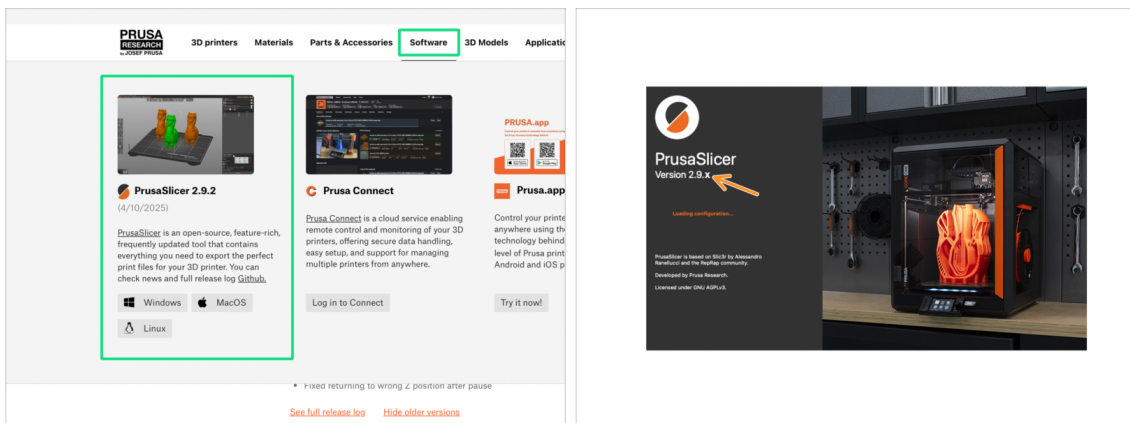


- Visit Prusa3D.com
- Download the latest **Drivers & Apps** package from the Software tab.
- ⚠ **MMU3 on CORE One requires PrusaSlicer version 2.9.2 or newer.**
- Install the latest **PrusaSlicer** and open it.

PASO 27 PrusaSlicer setup for MMU3

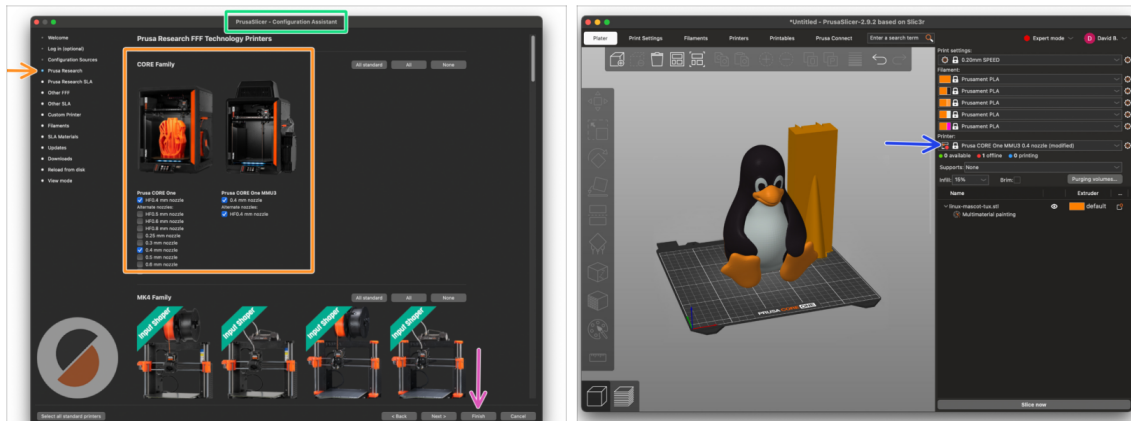

- Open the PrusaSlicer Wizard/Assistant. (from the menu **Configuration > Configuration Wizard/Assistant**)
- Open the **Prusa Research** printer list and select **MMU version** of your printer.
 - **Select the nozzle type and size in the list below.**
- Click Finish to save the settings.
- In **Printer:** menu, select the **MMU3** printer profile for future slicing.

PASO 28 Firmware files download

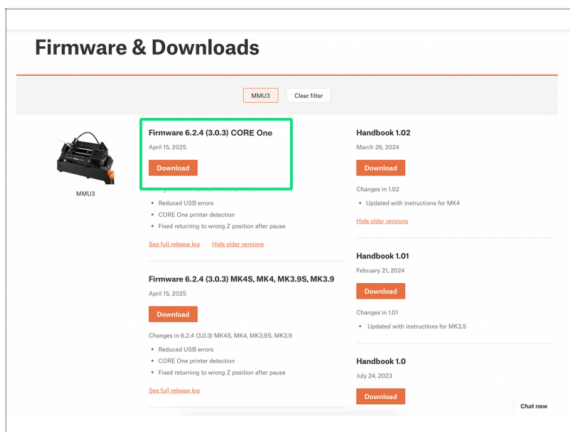


- ⚠ You will need to update the **firmware** for both the **printer** and the **MMU** unit. Each device has a **separate firmware file** that needs to be flashed. Always use only the newest compatible firmware versions together.
- ⚠ For more info, see the **MMU3 Firmware Compatibility** article.
- Visita la **página de Descargas del MMU3** en [Help.Prusa3D.com](https://help.prusa3d.com)
- Descarga el **último pack de Firmware** para tu modelo de impresora.

PASO 29 Firmware Upgrade: Printer



- **Printer's firmware - .bbf file**
 for the CORE One control board:
 (e.g. COREONE_firmware_6.x.x.bbf)
- **Firmware de la placa controladora de la MMU3:**
 (por ej. MMU3_FW3.0.3+896.hex)
 - This firmware update must be applied directly to the MMU unit using a computer. **We will flash the MMU unit firmware in the upcoming steps.**
- **Update the printer's firmware.** First, transfer the firmware file onto a USB drive.
- Turn on the printer and connect the USB drive into it. Press the RESET button to restart it. Then, select the FLASH option on the screen to begin the update.

PASO 30 Encendido de la MMU

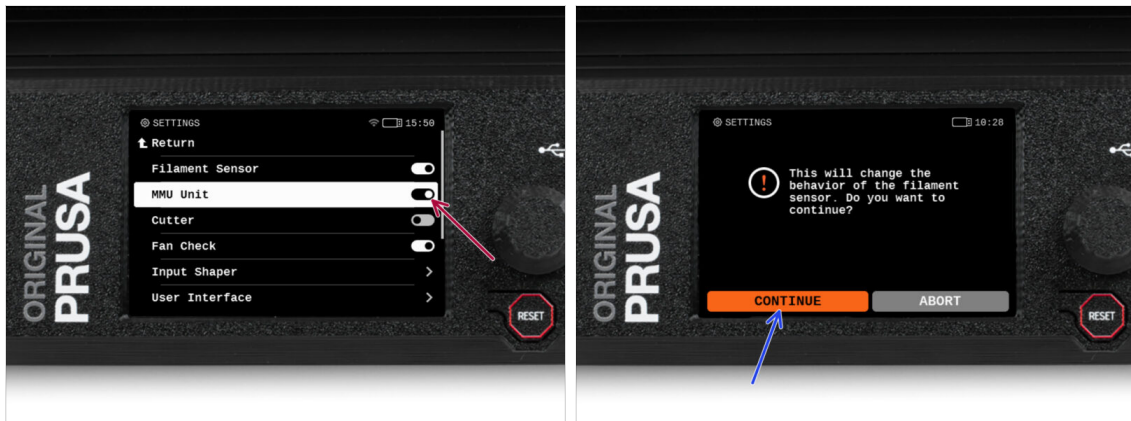

⚠ After finishing the firmware update, **make sure there are no filaments loaded** neither in the extruder, or in the MMU unit.

➤ Navigate to the **LCD menu > Settings > MMU**



and make sure the **MMU** is turned **on**.

📌 This option enables the MMU functionality in the firmware and turns on the power for the MMU unit, which is needed for a firmware update.

ⓘ The MMU unit will now perform a self-test (flashing LEDs). **Wait until it boots up completely** before issuing any commands. By the way, from now on, the printer's reset button will also reset the MMU unit.




➤ Since you've converted the extruder to the MMU version, when prompted to reconfigure the filament sensor's behavior, which should appear immediately, choose '**Continue**'.

PASO 31 MMU3 Firmware flashing (part 1)

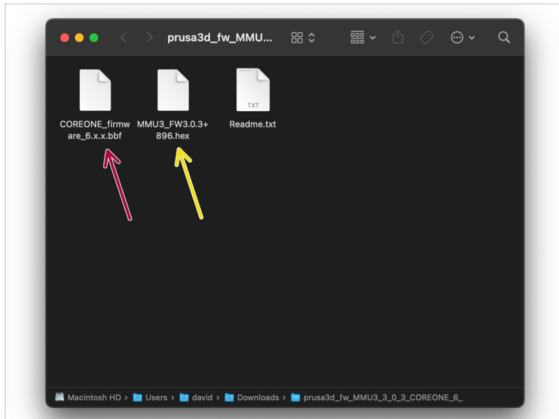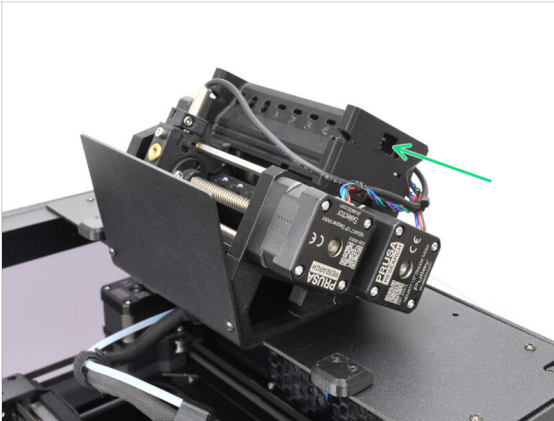

- 🟢 The MMU3 firmware file needs to be flashed into the MMU unit itself. Find the **microUSB** connector on the right side of the MMU3 unit.
- ⬛ Connect the unit to your computer using the bundled microUSB cable.
- 🟡 On your computer, select the appropriate **MMU firmware** file compatible with your printer model.

PASO 32 MMU3 Firmware flashing (part 2)

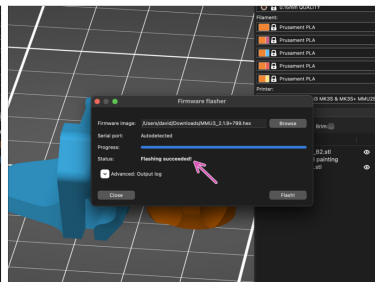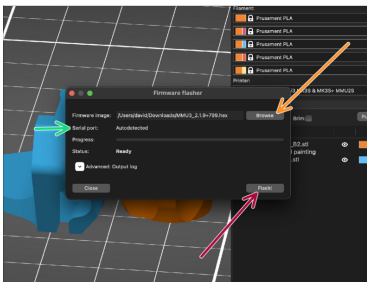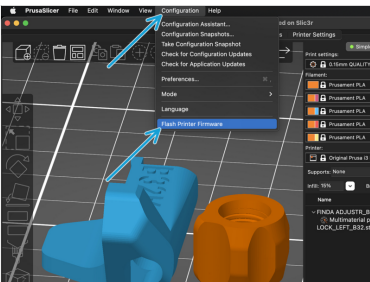

- 🟢 Open PrusaSlicer and select **Configuration -> Flash Printer Firmware** from the top menu.
- 🟡 Hit **Browse** and select the MMU3 firmware image file on your computer. (e.g. MMU3_FW3.0.3+895.hex)
- 🟢 El puerto serie debería detectarse automáticamente.
- 📌 Hit **Rescan** if your printer is not listed in the Serial port: column
- 🔴 Presiona el botón de **Flashear**.
- 🟡 Espera hasta que aparezca el mensaje **¡Exito al flashear!**.
- ⬛ Una vez finalizado el flasheo, desconecta el cable USB.
- 📄 En caso de que tengas problemas al instalar el firmware, por favor visita el [artículo para solucionar problemas](#).

PASO 33 Gears calibration



- Now, we need to calibrate the planetary gearbox in the Nextruder.
- Go to the Home screen and navigate to *Control -> Calibrations & Tests*, scroll down and select **Gears Calibration**.
- Una vez que llegues a la parte de Alineación de la caja de engranajes, selecciona **Continuar** y sigue las instrucciones que aparecen en pantalla.

PASO 34 Gearbox Alignment



- During the **Gear calibration** process, you will be prompted to:
 - Make sure the **Idler lock** (swivel) is in the open position - lifted up.
 - Afloja 1,5 vueltas los tres tornillos de la parte delantera de la caja de engranajes.
 - i** La impresora realizará el alineamiento automático de los engranajes. Este proceso no es visible desde el exterior.
 - Cuando se te indique, aprieta los tornillos siguiendo el patrón indicado en la pantalla.

PASO 35 MMU Filament sensor calibration




- After completing the Gearbox Alignment, you should be prompted to continue to the **filament sensor calibration**.
- ❗ Start with no filament in the extruder.
- Close the **Idler lock** (swivel).
- For the calibration, prepare a filament and hit **Continue**.
- ⚠ **Don't insert the filament before being prompted to do so!**
- Once prompted to, insert the filament.
- After successful calibration, remove the filament.

PASO 36 Footer Status Bar




- Turning on the MMU unit automatically displays the filament sensor and Finda sensor information on the footer status bar.
- To change the settings, visit **Settings > User Interface > Footer** menu.
- Los valores de los sensores también se muestran en el menú **Info > Info Sensor**.

PASO 37 SuperFINDA sensor calibration info

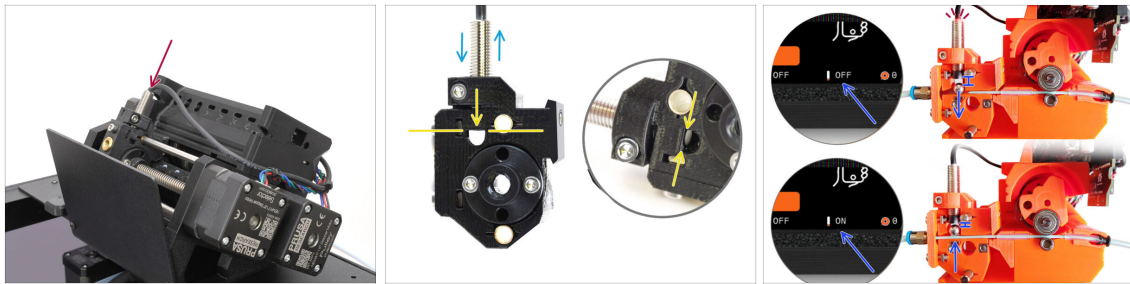

- ❖ If you built the MMU3, the **SuperFINDA sensor** inside the selector must be calibrated.
- ❗ For **factory-assembled MMU3** units, you can skip the calibration steps.
- ❖ In the next step, we'll calibrate the sensor's position.
- ⚠ **It is CRITICAL** that both the **filament sensor in the extruder** and the **SuperFINDA sensor function accurately**. Otherwise, you will have trouble with the device.
- ❖ Use the inspection window on the selector to align the bottom of the sensor with the top of the window, as a starting point.
- ❖ When filament is in the selector, the steel ball rises and should be detected by the SuperFINDA sensor. Ensure the distance between the ball and the sensor is perfectly calibrated.

PASO 38 SuperFINDA calibration

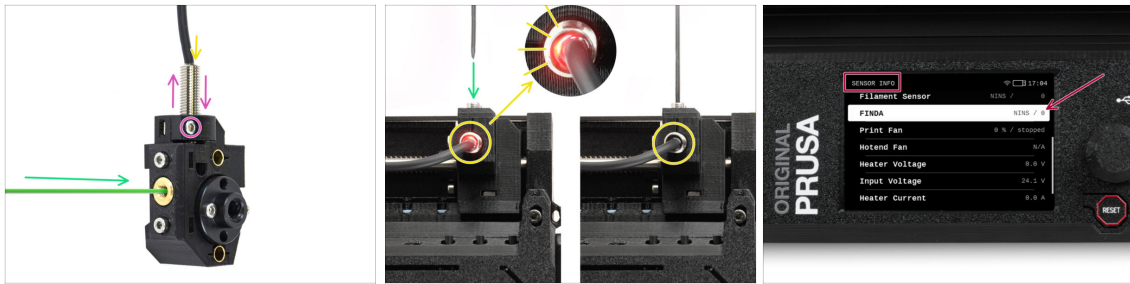


- Insert filament with a sharp tip into the brass opening at the front.
- Echa un vistazo a SuperFINDA desde arriba y fíjate en la lucecita roja del interior del sensor que se apaga cuando el filamento levanta la bola de acero de su interior.
- **Red light** = no filament detected = **FINDA 0 / OFF**
- **No light** = filament detected = **FINDA 1 / ON**
- Si la luz sigue encendida, baja ligeramente la SuperFINDA.
- Si la luz no se enciende, levanta la sonda SuperFINDA soltando el tornillo de su lado, moviendo la sonda y volviendo a apretar el tornillo.
- Observa las **lecturas del sensor en la pantalla LCD** (Info -> Info Sensor -> FINDA) Ten en cuenta que hay un ligero retraso en las lecturas del sensor en la pantalla LCD; proceda lentamente.
- ⚠ **Repeat the test, adjusting SuperFINDA height until consistent readings occur when inserting and removing filament.**

PASO 39 Error code details (Part 1)




- ◆ Later on, an **MMU error screen** will show up if something goes wrong during the operation. See the example image; the first line describes briefly, what's the error about.
- ◆ prusa.io/04101 is a web address, where you can view a detailed article about the exact issue, and how to fix it.
- ⓘ The QR Code gets you the detailed description.
- ◆ The status of the filament sensor is always displayed in the Footer section of the error screen to assist in diagnosis.
- ◆ Adjacent to it, you will find the status of the Finda sensor.
- 📌 (Note the FINDA status reading on the LCD has a slight delay.)

PASO 40 Detalles del código de error (Parte 2)

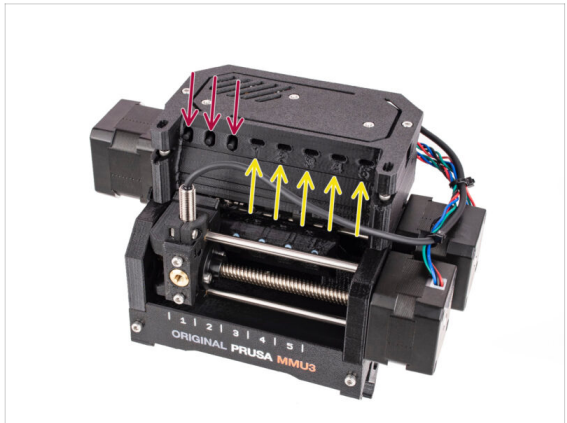

- ◆ The bottom line are the **solution buttons**. Some errors have multiple solutions.
 - ◆ You can also visit a detailed error description page via the QR code.
 - ◆ MMU unit being in an **error state** is also indicated by its LED lights flashing.
 - ◆ While in an ERROR state, the buttons on the MMU unit can be used to resolve the error too.
 - ◆ The **middle button** usually replicates the LCD solution buttons function.
- ⚠ **Note, if the MMU unit is in IDLE state, the buttons have a different functions; For example; If there is no filament loaded, the side buttons can be used to move the selector right and left. But more on that later.**

PASO 41 MMU-to-Extruder PTFE tube parts preparation

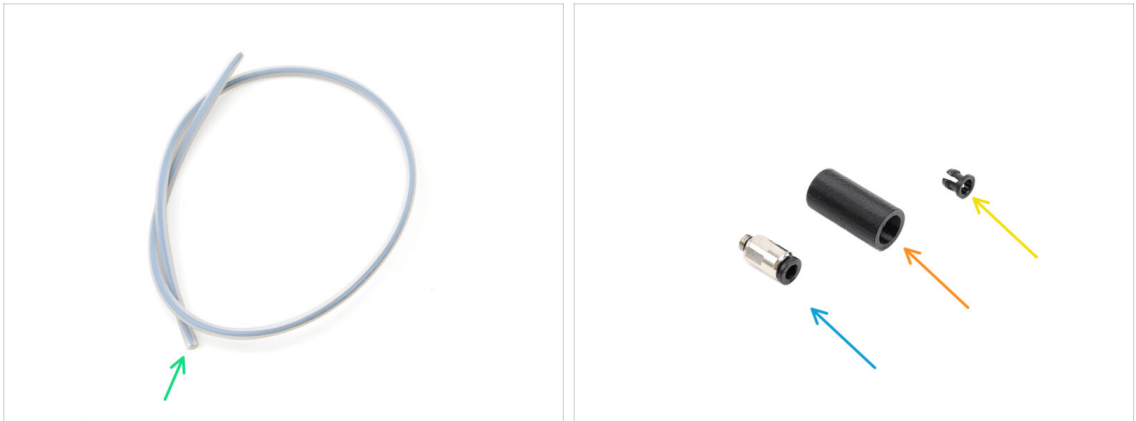

● Para los siguientes pasos, por favor prepara:

● MMU-Extruder PTFE tube (1x)

⚠ Use only the supplied PTFE tube.
Enclosed version: 390mm.
Lite version: 450mm.
 Do not reuse the shorter 360mm tube from MK4/S or other printers!

● M5-4 fitting (1x)

ⓘ The fitting might look slightly different if you are reusing the one from the MK4S.

● Fitting Cover (1x) *required for the Enclosed version only.*

● Collet (1x) *required for the Enclosed version only.*

PASO 42 MMU-to-Extruder PTFE tube 1




● Attach the M5-4 fitting onto the Selector and tighten it up using the Uniwrench.

● Connect the MMU and the extruder together with the PTFE tube. Make sure to push the tube all the way into both the fittings.

● Quick tip: **If you need to remove the PTFE tube** from the fitting, press the collet in. While the collet is pressed, first press the PTFE tube in, then pull it out entirely.

PASO 43 Fitting Cover. (ENC)

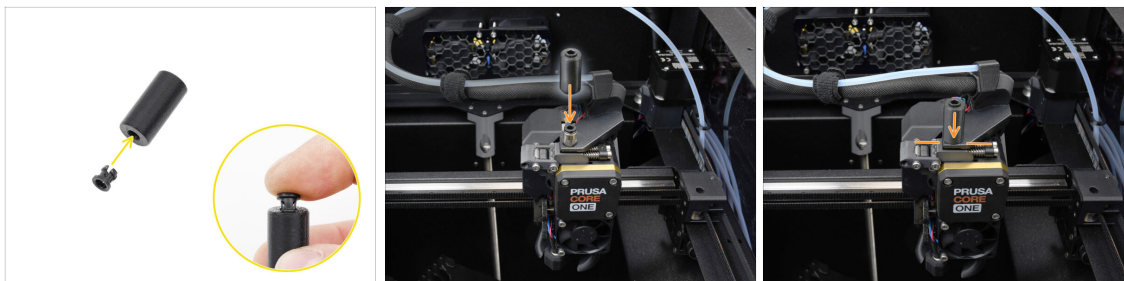

⚠ This step is required for the Enclosed version only.

- ✦ Insert the collet into the smaller opening on the Fitting cover.
- ⓘ The individual fins on the collet must be pressed together in order to fit into the fitting cover.
- ✦ Attach the fitting cover onto the fitting on the extruder.

PASO 44 MMU-to-Extruder PTFE tube 2



- ✦ Attach the end of the tube into the extruder.
- ✦ Make sure it is pushed all the way in.

PASO 45 PTFE Length Calibration



⚠ The MMU-to-Extruder PTFE tube length needs to be set in the firmware.

🔴 Visit the menu **Settings>Hardware>MMU**

🟠 Set the length:

📌 **Enclosed** version: **390mm**.

Lite version: **450mm**.


PASO 46 (ENC) Top Cover Installation



🔴 If you use the Enclosed version, cover the printer with the Top Cover.

🟠 First, hook it at the back, then lean it onto the printer.

PASO 47 Buffer Attachment

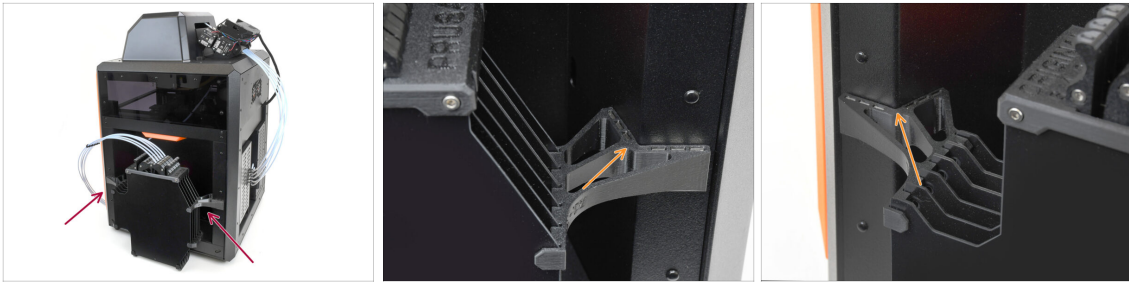

- Attach the buffer assembly onto the right side of the printer.
- Make sure the magnets are attached properly into the recessed side panel on the printer.

PASO 48 PTFE tubes connection



- Connect the five PTFE tubes **from the MMU** unit to the **free row of collets** on the buffer, ensuring you match the numbering on both the buffer and the MMU unit.
- The other PTFE tubes from the Buffer go to the Spool holders.
- ① We will attach the spool holders in the upcoming step.

PASO 49 Spoolholders setup



Congratulations! The hardest part is over.



The Buffer and spools setup in the picture is the one we will be trying to achieve. Arrange the **spool holders** and the **buffer** as seen in the picture.



The PTFE tubes should go from the spoolholders to the buffer. Then, from the buffer to the back of the MMU.



Connect the PTFE tubes from the buffer onto each of the spool holder.




Note the spool holder positioning. It is important that filament has **as straight path as possible** and that nothing interferes. PTFE tubes should **not be bent too much**. Otherwise, the filaments will jam.

11. Primer comienzo



PASO 1 Filament preparation

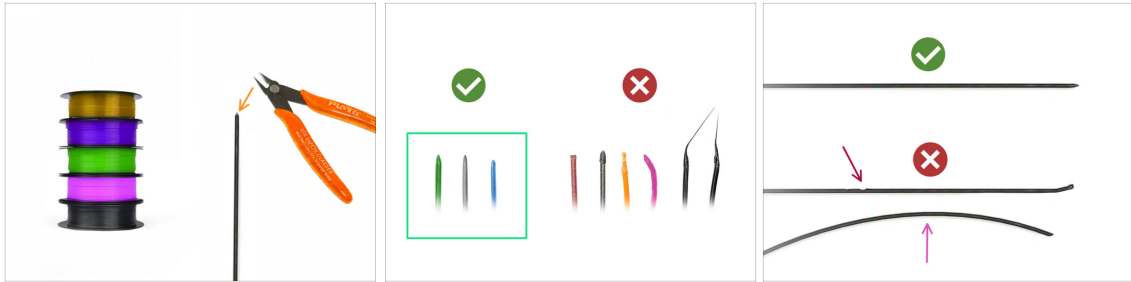

¡Ahora podemos cargar los filamentos e imprimir el objeto de prueba! Pero antes;


- Prepara al menos **cinco filamentos de PLA diferentes** y **corta los extremos** para formar una **punta afilada** en cada uno - como se ve en la imagen.
- Los filamentos deben tener una **punta afilada** para poder cargarse correctamente tanto en la MMU como en la impresora. Si la punta está deformada, doblada o tiene un diámetro mayor, no se cargará correctamente.
- Inspecciona los últimos **40cm (15")** de cada filamento. Asegúrate de que no está **sin deformaciones** en ella. A veces, si el filamento se atascó antes, la rueda de la polea hace una hendidura en él. Esta parte del filamento ya no puede ser agarrada y movida por la unidad MMU y debe ser cortada.
- Si el extremo del filamento está doblado, enderézalo. **Debe estar perfectamente recto.**
- ⚠ **Utiliza únicamente filamento de alta calidad con una desviación de diámetro baja garantizada. En caso de que tenga problemas de carga/descarga de filamento en el futuro, vuelve a revisar este paso también. Asegúrate de que el filamento está seco. Los filamentos sensibles a la humedad pueden ser problemáticos durante el funcionamiento de la MMU.**

PASO 2 Suggested filament layout



- Coloca los cinco filamentos en los portabobinas. Asegúrate de que las bobinas no interfieran entre sí.
- Ajusta cada portabobina de forma que la bobina encaja correctamente en los rodillos.
- Verifica que el bobina **puede girar libremente** y que nada interfiere.
- ❗ Ten en cuenta que la MMU3 funciona con varios modelos de impresoras, por lo que las piezas de las imágenes pueden parecer ligeramente diferentes de las tuyas. Sin embargo, los pasos generales son los mismos.

PASO 3 Loading a filament through the buffer

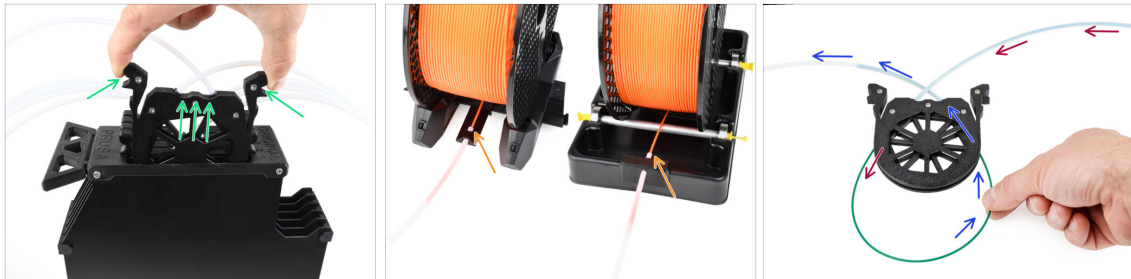


- Take the cassette for **filament 1** out of the buffer.
- Insert the **tip of the filament** into the bottom PTFE tube attached to the spoolholder.
- Keep pushing the filament into the PTFE tube until it appears in the corresponding buffer cassette.
- Take the tip and insert it through the cassette into the other PTFE tube, which goes into the MMU unit. Don't push it all the way into the MMU yet.

PASO 4 Preloading a filament to MMU





- On the printer, go to the **Filament -> Preload to MMU** (Menu -> Preload to MMU on MK3S/+)
- Select **Filament slot 1**. The MMU unit will engage the idler into the first position and start rotating the pulley until the filament is loaded in.
- Keep pushing the corresponding filament end into the PTFE tube from the buffer into the MMU, until you feel the filament being pulled in.
- ⚠ Remember, the filament tip must be straight and sharp in order to load it properly.

PASO 5 Closing the buffer

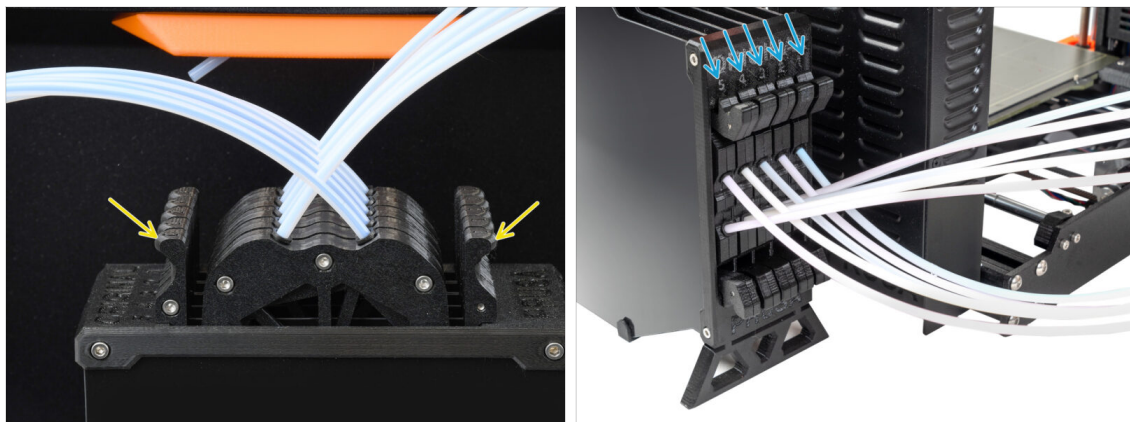


- After a given filament is successfully loaded into the MMU, return its cassette back into the buffer.
- Repeat the same process for the other filament positions, until you successfully load **all five filaments** into the MMU.

PASO 6 Pro tip: Loading using the buttons.

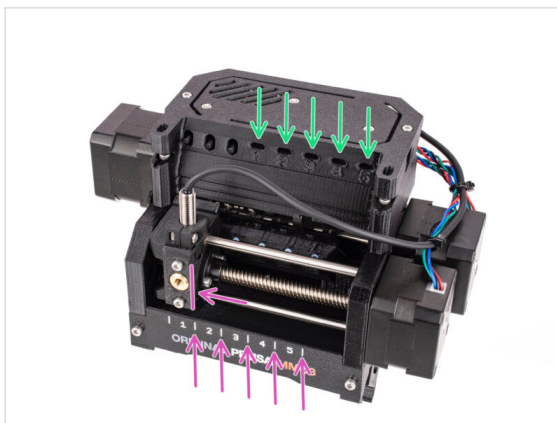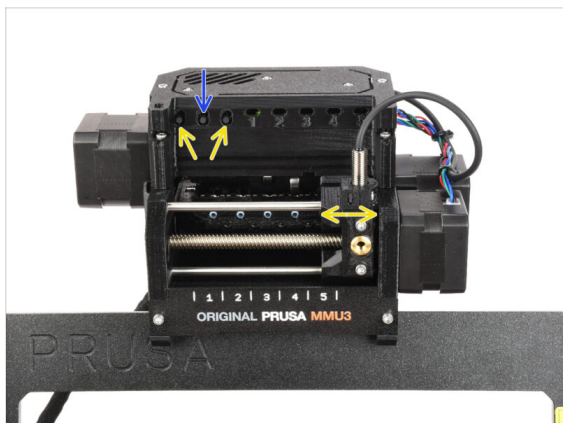

- También puedes cargar un filamento en la MMU utilizando los botones de la unidad. La próxima vez que cargues un filamento, utiliza el método que prefieras. Ya sea desde el menú LCD, o utilizando los botones físicos.
 - **Mientras la MMU está inactiva;** (indicado por TODAS las luces LED APAGADAS)
 - **El botón central** inicia o aborta la carga de filamento en la MMU.
 - Los **botones laterales** mueven el selector a izquierda y derecha para cambiar las posiciones del filamento.
 - Utiliza los botones laterales para desplazar el selector a la posición de filamento deseada, indicada por la alineación del selector con una de las líneas de la placa de identificación.
 - The ongoing **loading** process is indicated by a **blinking green LED** light for the respective filament position.
 - ① **Stable green LED** light means the given filament is loaded to extruder.
- 📌 Note, after you issue a command to the MMU unit, wait and let it finish the operation. Don't rush. Don't play around with the printer in the meanwhile. **Let it finish first if the MMU unit does something (homing, loading, unloading).**

PASO 7 Test de Carga (parte 1)

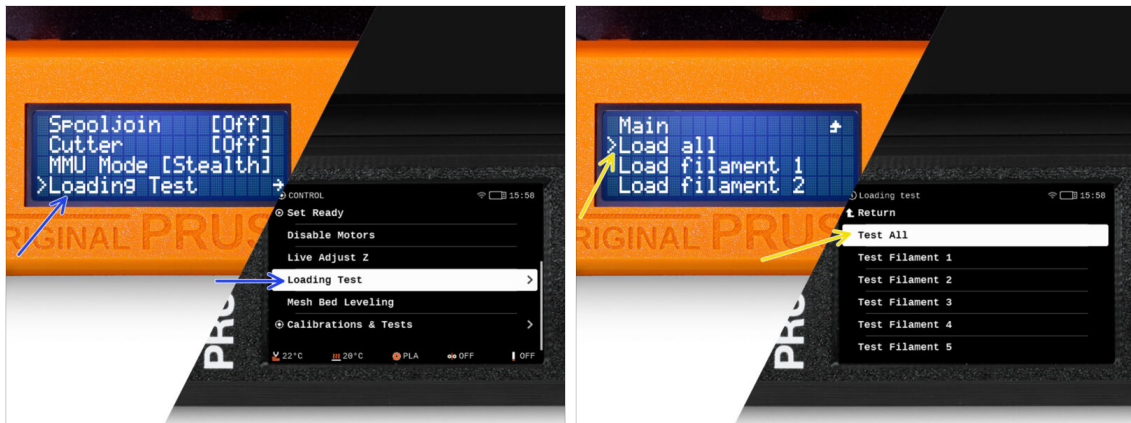


- ➊ Go to the **Control > Loading test**
(Menu > Settings > Loading Test on MK3S/+)
- ➋ Select the filament type to preheat (PLA)
- ➌ Select **Test All** / Load all
Or test all the filaments from 1 to 5 manually
- 📌 The MMU unit will now load and then unload all five filaments to see if all work correctly.

PASO 8 Test de Carga (parte 2)



- ➍ You can check the **filament sensor** status in the "**footer**" area of the LCD screen to see if it's detecting the filament correctly.
- ➎ On **MK3S+**, while loading a filament into the extruder, the loading check displays **solid blocks** at the bottom of the LCD if the IR filament sensor detects filament.
 - ➏ If **lines** appear instead of solid blocks, the filament sensor in the extruder is providing an intermittent reading and **may require additional tuning**.
 - ➐ En caso de que fallen varios reintentos de carga, aparecerá una **pantalla del error correspondiente**.


PASO 9 Calibración del eje Z y de la primera capa (opcional)

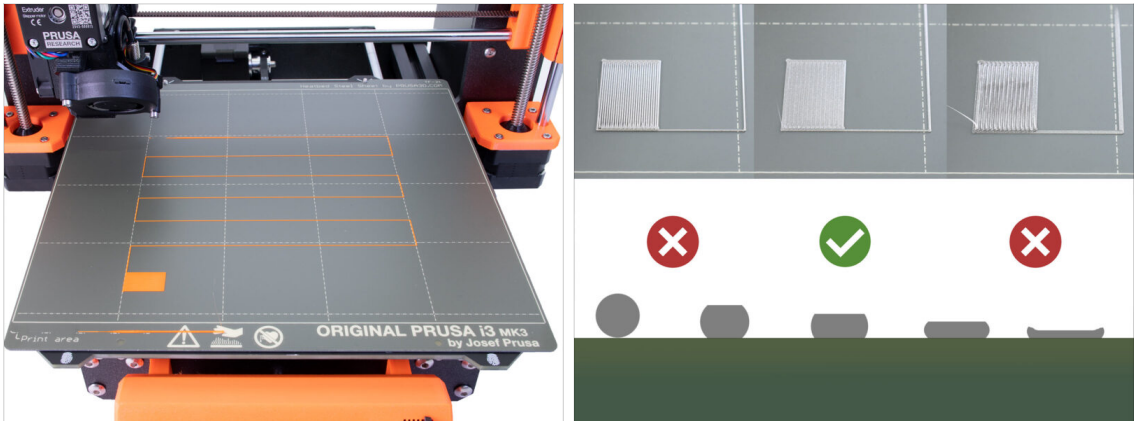

⚠ IMPORTANT: This step is necessary for the **MK3S+ / MK3.5** if you worked on the extruder head previously. If you only upgraded the old chimney to the new one, you can skip to the next step and use the **Live Adjust Z** function as usual to fine-tune the first layer.


- Go to **LCD Menu - Calibration - Calibrate Z**.
- A continuación, ejecuta la **Calibración de la primera capa**.

PASO 10 Printing a test object

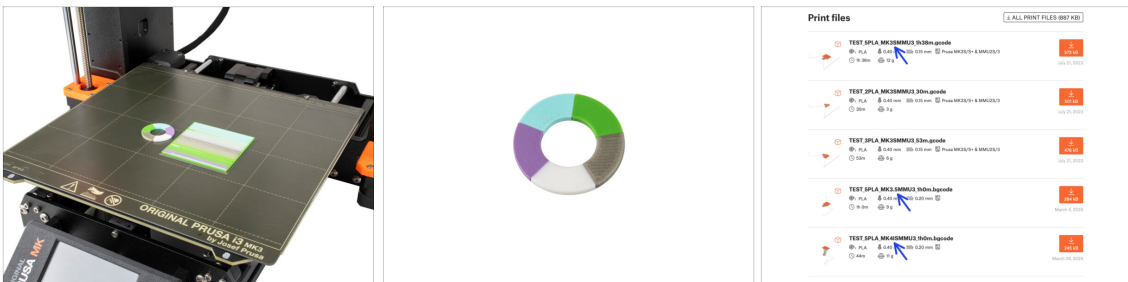

- ① We need to print a test object to verify that everything works correctly. Don't worry, it will be a quick print.
- Visit **MMU3 Test objects** on [Printables.com](https://www.printables.com)
 - In the Print files section, download a G-code file pre-sliced for your **printer model**.
 - Save the **.gcode** or **.bgcode** file onto a storage media and print the test object.

PASO 11 Mapeado de cabezales (CORE/ MK3.5 / MK4S)

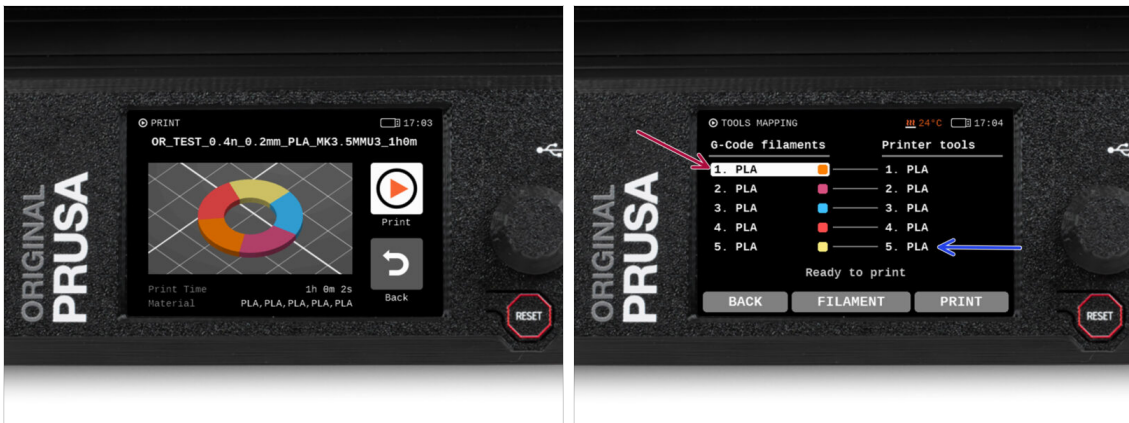

- When you start a print, the **Tools Mapping** screen appears. This allows you to reassign the extruders with the specified color to another one as needed.

 - On the left side, you'll see a list of the required materials and their colors, as specified in the G-code file.
 - On the right side, you'll find a list of materials currently available on the printer, that will be used to print the object.
- For example, if the G-code requires orange filament in the first position, but you have orange loaded in the fifth position, select the first position on the left menu and then assign it to the fifth position on the right.
- Toca dos veces las posiciones de filamento o utiliza el codificador para seleccionar el número del filamento.

PASO 12 Printable 3D models



- To further test your new MMU3, have a look at [MMU3 Test Objects Collection on Printables](#).

We recommend printing the cute sheep, which has been the MMU mascot since the beginning.

PASO 13 Print & Follow the Handbook.




- Start the print and wait until it finishes. In the meantime you can take a look at the **printed Handbook**.
- All the information regarding calibration, how to organise the printer, buffer, spools, or troubleshooting tips are all in the printed or online Handbook.

To download the **Handbook** or if you encounter any issues, please visit our knowledge base at: <http://help.prusa3d.com/en/tag/mmu3/>


- If you are having any issues while printing, follow the on-screen instructions or visit the link from the LCD screen.

PASO 14 Preparación del código G / preparación de modelos personalizados.

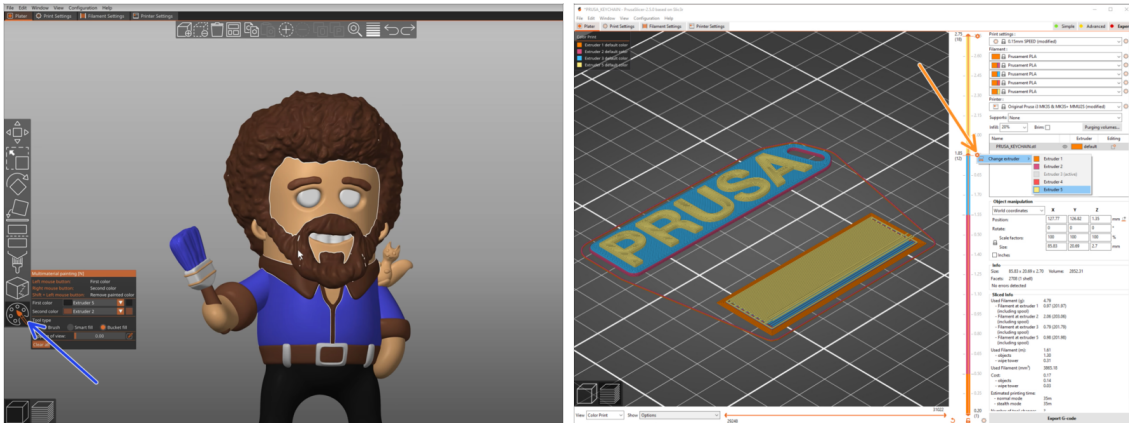


- Already printed all the bundled multi-material models from us as well as those seen at <http://Printables.com>? **Time to print your own designs!**
- The simplest way of making a single-body object colorful is the **MMU Painting function** in PrusaSlicer.
- Basic steps for the manual method are described in our **G-code preparation for multi material print** section.
- For printing logos or text labels, you might also find the **automatic color change at a given layer height** useful. Simply, slice an object, select a certain layer height, click the small orange "+" icon next to the height marker and select the desired MMU filament position (Extruder number).

PASO 15 Creando tus propios modelos 3D Multi material

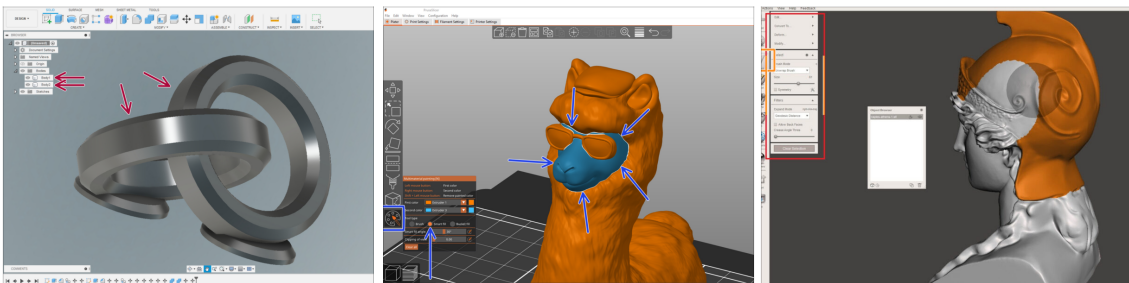

- If you have designed a model with multiple bodies, you may find the **Exporting model from Fusion 360** guide useful.
- If you are designing a single-body model, part of which should be MMU-Painted, make sure there is a sharp line surrounding each distinct part so that you can use the **MMU Painting's Smart-fill** function later on in **PrusaSlicer**.
- If you have an intricate STL file that can't be MMU-Painted easily, you can try the more sophisticated way of **Splitting STL with single compact part** or **Splitting STL into multiple parts** using MeshMixer.

PASO 16 MMU Single material operation

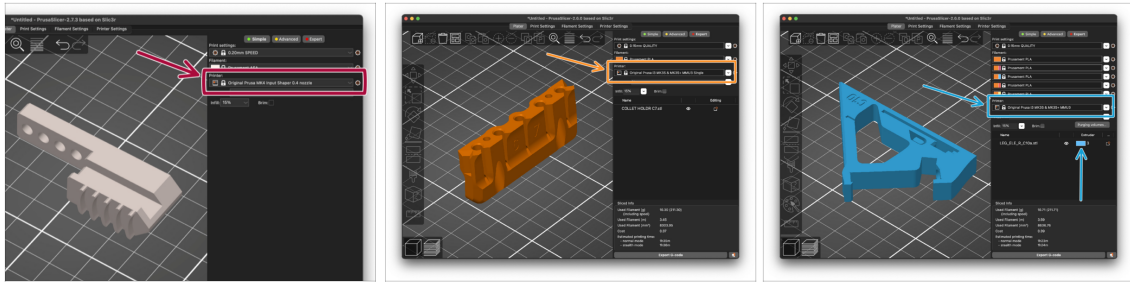

Did you know that MMU3 unit can also be used to make **single-material printing** more convenient too?

- Puedes dejar hasta cinco de tus materiales favoritos cargados en la unidad MMU.
- En la **CORE/MK3.5/MK4S**, utiliza el perfil normal **CORE/MK3.5/MK4S**, al laminar. La impresora te permitirá elegir qué filamento utilizar.
- En la **MK3S+**, lamina un objeto con el perfil MMU3 Single y comienza la impresión. Luego, elige qué filamento usar desde el LCD.
- If you know which of the five materials to use already while slicing, you can use the **MMU3 profile** and assign a single color (Extruder number) to the object.
- If a filament runs out, your print can continue automatically using the **SpoolJoin** function. For more information, refer to the [SpoolJoin article](#).

PASO 17 Date un capricho



We know you've been waiting for this! Sounds like a well-deserved break! Enjoy those Haribos and watching your printer in action. By the way, what are you printing?

Notes:

[illegible]

Notes:

This image shows a full page of blank, lined paper. It features approximately 20 evenly spaced horizontal grey lines across its entire width, providing a guide for handwriting or typing. The background is a clean, solid white color. There are no margins, text, or other markings present on the page.

[illegible]

This image shows a full page of blank, lined paper. It features approximately 20 evenly spaced horizontal grey lines across the entire width of the page, providing a guide for handwriting or typing. The background is a clean, solid white color.