

Spis treści

1. Wprowadzenie	3
Krok 1 - Wprowadzenie	4
Krok 2 - How to navigate through the manual	4
Krok 3 - View high resolution images	5
Krok 4 - Tools included in the package	5
Krok 5 - Prusa Cheatsheet	6
Krok 6 - Let's get everything set up!	6
2. Unpacking the printer	7
Krok 1 - Przygotowanie opakowania	8
Krok 2 - Wyciągnięcie pudełka	8
Krok 3 - Removing the cardboard layer	9
Krok 4 - Anti-vibration feet: parts preparation	9
Krok 5 - Sticking the anti-vibration feet	10
Krok 6 - Removing the inside protections	10
Krok 7 - Preparing the Tool pack	11
3. Mounting the xLCD	12
Krok 1 - Tools necessary for this chapter	13
Krok 2 - Removing the bezel	13
Krok 3 - xLCD assembly: parts preparation	14
Krok 4 - Connecting the xLCD assembly	14
Krok 5 - Mounting the xLCD	15
Krok 6 - Attaching the display assembly	16
Krok 7 - Peeling off the protectives	16
4. Kalibracja i pierwsze uruchomienie	17
Krok 1 - Print sheet and spool holder	18
Krok 2 - Firmware update	19
Krok 3 - Turning it ON	19
Krok 4 - Setting up the printer: Intro	20
Krok 5 - Setting up the printer: Network setup	20
Krok 6 - Wizard: Intro	21
Krok 7 - Wizard: Loadcell Test	22
Krok 8 - Wizard: Gearbox Alignment	22
Krok 9 - Wizard - Filament Sensor Calibration	23
Krok 10 - Wizard complete	23
Krok 11 - Podręcznik	24
Krok 12 - Prusa knowledge base	24
Krok 13 - Join Printables!	25
Lista zmian w instrukcji	26
Krok 1 - Historia wersji	27

1. Wprowadzenie




KROK 1 Wprowadzenie




-  Welcome to the guide for unboxing, calibrating, and setting up your **Prusa CORE One+**. Follow these steps to ensure your printer is ready for its first print.
-  Although the Prusa CORE One+ comes pre-assembled, the LCD must be installed before printing, as it is removed for transport protection.
-  **Do not install the LCD at this moment; wait for the appropriate instructions later in the guide.**
-  We recommend keeping all the packaging material in case you decide to send the printer for service.

KROK 2 How to navigate through the manual

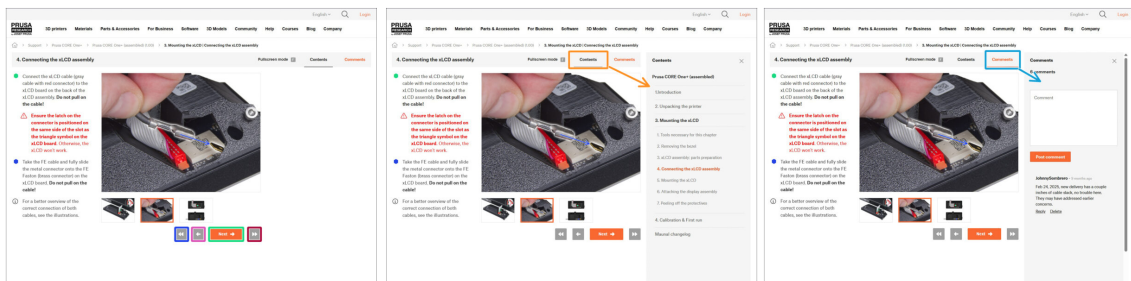


-  Use the graphical navigation buttons in the bottom right corner or the arrow keys on your keyboard:
 -  **Next button / Right arrow key** - Moves to the next image, or to the next step if it's the last image in the step.
 -  **Left arrow button / Left arrow key** - Moves to the previous image, or to the previous step if it's the first image in the step.
 -  **Play backward button / Up arrow key** - Moves to the previous step.
 -  **Play forward (Next) button / Down arrow key** - Moves to the next step.
 -  Click on **Contents** to expand the full list of steps in this guide. This allows you to jump to any step regardless of the sequence.
 -  Click on **Comments** to open the discussion for a specific step and leave your feedback.

KROK 3 View high resolution images

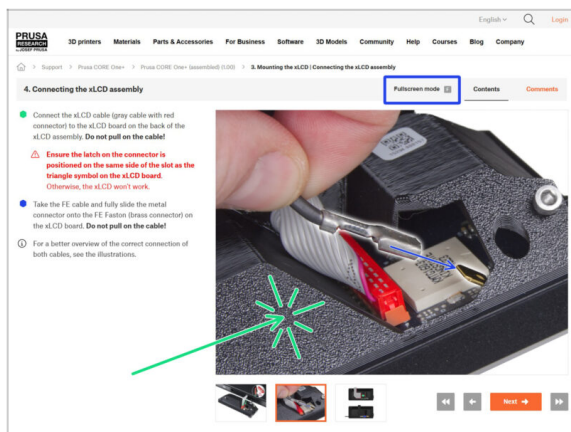

- When you browse the guide on help.prusa3d.com, you can view the original images in high resolution for clarity.
- Just click on the image to open it in high resolution for a detailed view.
- Click on **Fullscreen mode** or press the F key to maximize your screen space and focus entirely on the instructions.

KROK 4 Tools included in the package

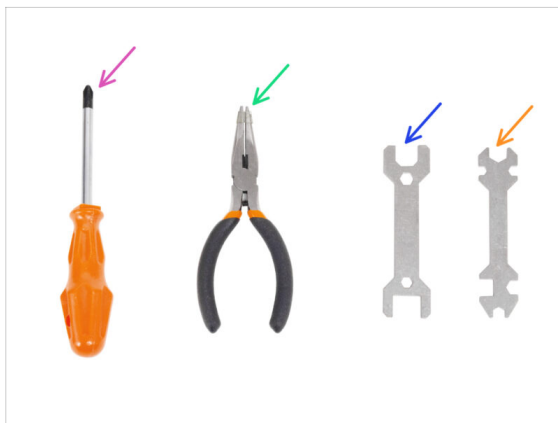


- Your Prusa CORE One+ package includes all the tools for printer operation and maintenance:
 - Phillips (PH2) screwdriver (1x)
 - Szczypce spiczaste (1x)
 - Wrench size 13 mm (1x)
 - Klucz uniwersalny (1x)
 - Allen key set 1.5 mm - 3.0 mm
 - Torx key set T6 - T10
- You will come across the tool pack during unpacking the printer, we will let you know.
- i** For this guide, you will only need the 2.5 mm Allen key.

KROK 5 Prusa Cheatsheet



- If you're unsure whether you're using the correct screw type or size, our cheatsheet will help you. Print it at a 1:1 scale and place the fastener on the corresponding drawing to compare its type and size.
- 📌 You can download the cheatsheet on prusa.io/core-one-cheatsheet.
- ⓘ This guide doesn't involve screws or nuts, but this option may be useful for future maintenance.

KROK 6 Let's get everything set up!

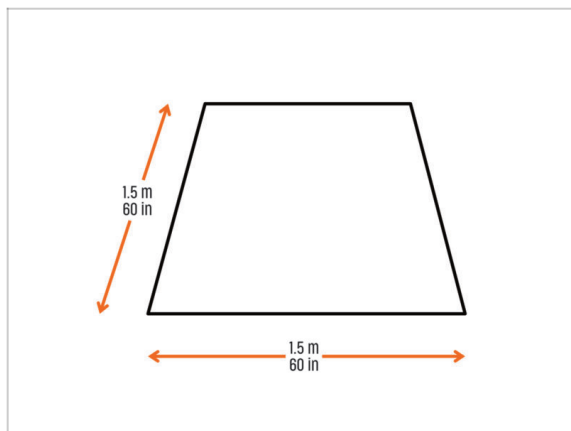

- ⚠️ **CAUTION: The package is heavy—handle it with care!**
- Make sure you have enough space to prepare the printer. **A clean space is essential.**
- ⓘ A minimum of 1.5 x 1.5 meters (60 x 60 inches) is recommended.
- Bring your family, friends, or pets—this will be engaging!
- Continue to the next chapter: **2. Unpacking the printer.**

2. Unpacking the printer



KROK 1 Przygotowanie opakowania




 **CAUTION: The package is heavy—handle it with care!**

 **The package fixations and foam inserts may vary.**

- Open the package. On the top layer, you will find:
 -  Płyta stołu
 -  Pamięć USB
 -  Przewód zasilający
 -  Bloki antywibracyjne
- Remove these items from the package and place them in a safe spot for later use.
-  Remove the cardboard protection layer.
-  Take out the Prusament cardboard box and set it aside.

KROK 2 Wyciągnięcie pudełka

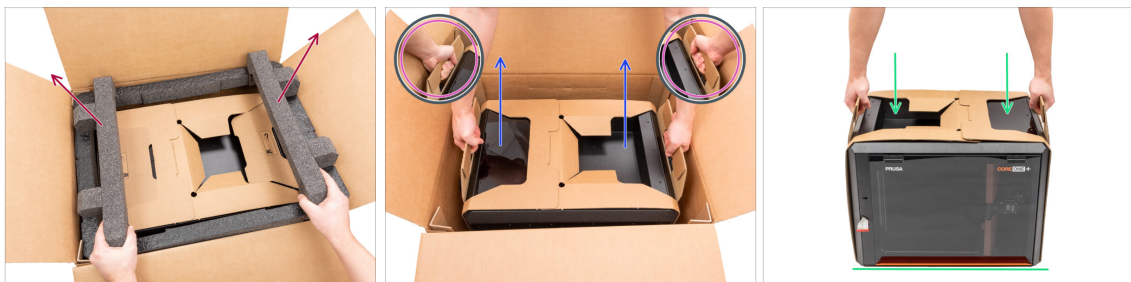

-  Remove top foam fixation.
-  Notice the two cutouts (handles) on both sides of the cardboard layer. Bend them downward.



 **CAUTION: The printer is heavy—handle it with care!**

-  Grasp both handles and **CAREFULLY** lift the printer out of the box.

 **Tip:** Ask someone to hold the bottom cardboard box in place to make it easier to lift the printer out.

-  Place the printer on a **stable and clean surface**.

KROK 3 Removing the cardboard layer

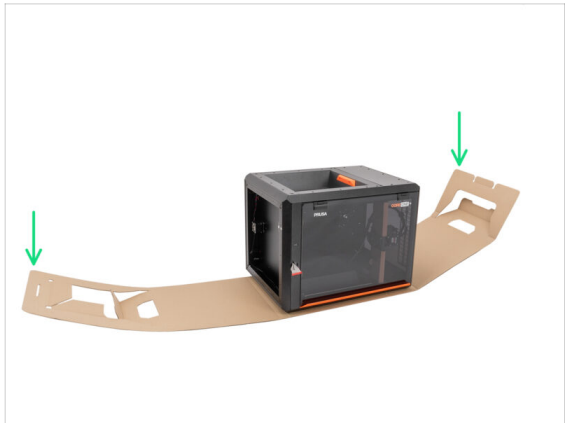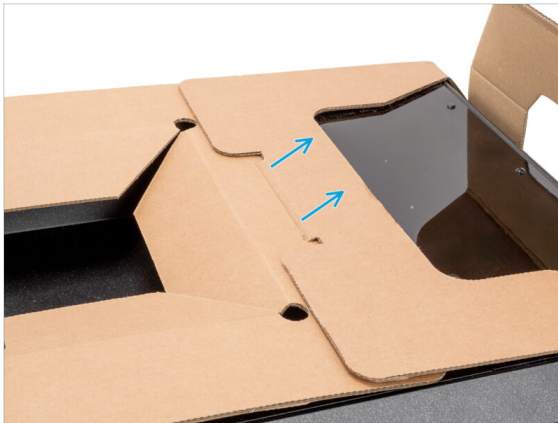


- Detach the two ends of the cardboard protective layer from each other by pulling the upper layer out.
- Fold down the cardboard protective layer away from the printer.

KROK 4 Anti-vibration feet: parts preparation



- Do kolejnych etapów przygotuj:
 - Stopy antywibracyjne (4x)

KROK 5 Sticking the anti-vibration feet

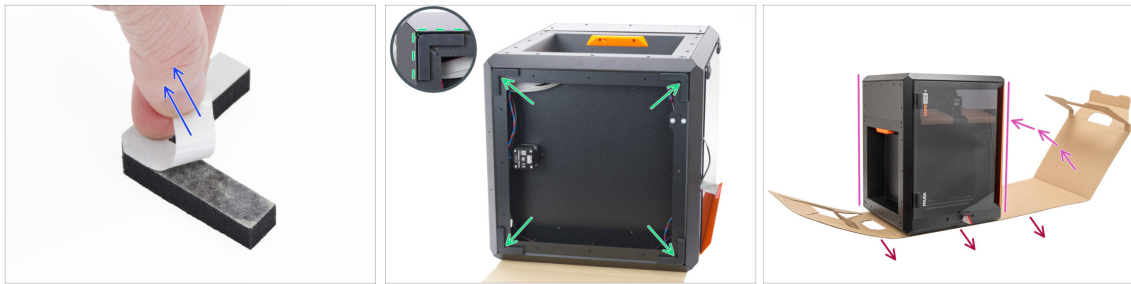

- Peel off the protective film from all anti-vibration feet.
- Stick one anti-vibration foot in each corner of the frame. Align it with the outer edge of the flat side of the profile.
- Carefully turn the printer to its "natural standing position" with the orange door handle on the right side.
- Now, you can completely remove the cardboard layer from the printer.

KROK 6 Removing the inside protections



- Otwórz drzwi.
- Locate two cardboard fixtures on the X-axis. There is a notch that releases the fixation.
- Pull the notch, release, and remove the fixture.
- Using the same method, remove the second fixture.

KROK 7 Preparing the Tool pack




- The tool pack is located on the right side of the printer.
- Remove the cardboard tool pack from the printer.
- Open the tool pack completely. **Inside, you will find:**
 - Zespół xLCD
 - Zestaw narzędzi
 - O-ring uchwytu szpuli
 - Akcesoria
- Keep the content aside for later use. Now let's go to the next chapter: **3. Mounting the xLCD**

3. Mounting the xLCD




KROK 1 Tools necessary for this chapter

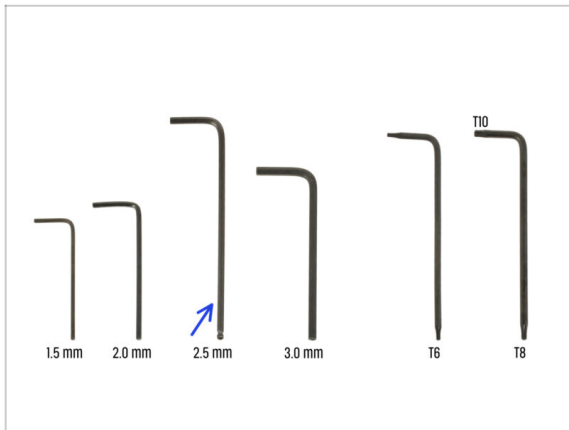

For this chapter, please prepare:

• Klucz imbusowy 2,5 mm

KROK 2 Removing the bezel

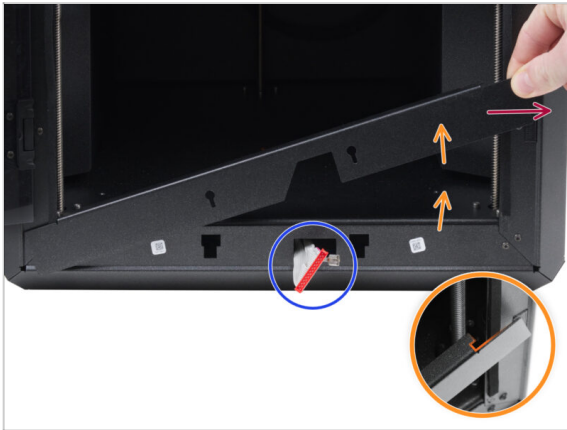

• Open the door fully.

• Lift the right end of the front bezel and unhook it from the printer frame.

• Pull the bezel out of the printer. Do not discard the part.

⚠ **Proceed carefully** to avoid scratching the parts or damaging the door.

ⓘ The bezel is attached to the printer with magnets, making it easy to remove.

• Note the cables coming from the printer. We'll address them shortly. **Avoid pushing them into the printer, keep them as they are.**


KROK 3 xLCD assembly: parts preparation



● For the following steps, please prepare:

● Zespół xLCD (1x)

KROK 4 Connecting the xLCD assembly

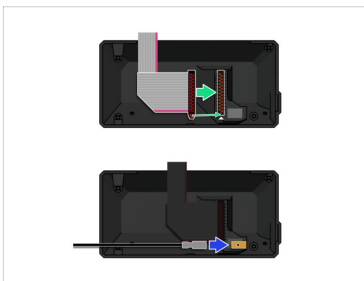

● Connect the xLCD cable (gray cable with red connector) to the xLCD board on the back of the xLCD assembly. **Do not pull on the cable!**

⚠ **Ensure the latch on the connector is positioned on the same side of the slot as the triangle symbol on the xLCD board. Otherwise, the xLCD won't work.**

● Take the FE cable and fully slide the metal connector onto the FE Faston (brass connector) on the xLCD board. **Do not pull on the cable!**


ⓘ For a better overview of the correct connection of both cables, see the illustrations.

KROK 5 Mounting the xLCD



- ✿ Install the bezel onto the screws on the back of the xLCD assembly.
- ✿ **Ensure the magnets face upward.** The bezel has four magnets, but only two are visible in the picture.
- **Ensure both screws (M3x6) are not fully tightened,** leaving approximately a 3 mm (1/8 inch) gap between the screw head and the xLCD cover.
- ✿ Slide the bezel toward you, ensuring both screws are positioned at the end of the keyhole-shaped holes.
- Keep the bezel in position and fully tighten both screws.

KROK 6 Attaching the display assembly

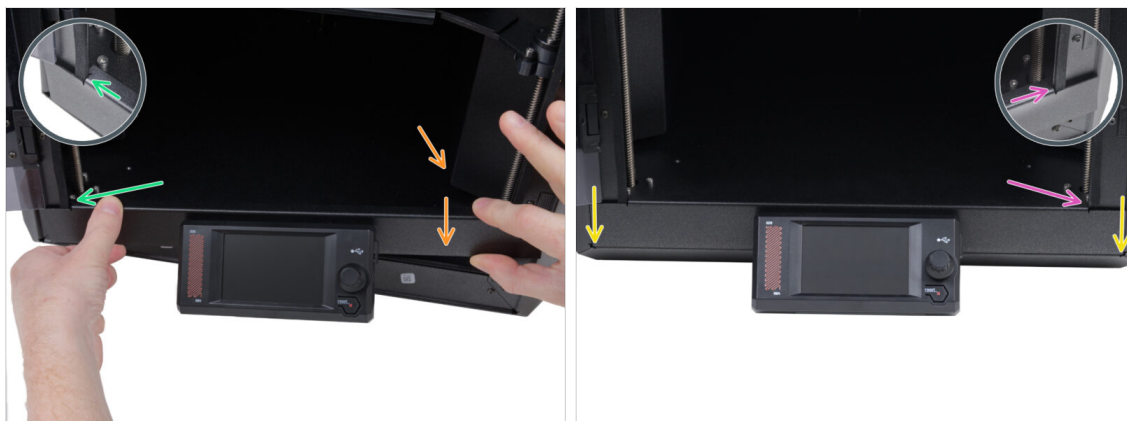

- Carefully install the display assembly (xLCD and bezel) onto the printer using the following procedure:

⚠ **Proceed carefully** to avoid scratching the parts or damaging the door.


- Hook the left side of the bezel onto the left frame of the printer, ensuring the square cutout is securely attached to the frame.
- Slowly lower the right side into place as well.
- Secure the right side of the bezel onto the right frame of the printer, ensuring the square cutout is securely attached to the frame.
- Ensure the **bezel is evenly seated at both ends along the bottom edge** — test it by closing the door slowly to check if the bezel obstructs movement.

KROK 7 Peeling off the protectives



- Now, you can remove the protective films from the transparent panels on the printer.
- The protective film is located on the top, left, and right sides of the printer.
- We are almost there! Let's go to the last chapter: **4. Calibration & First run**

4. Kalibracja i pierwsze uruchomienie

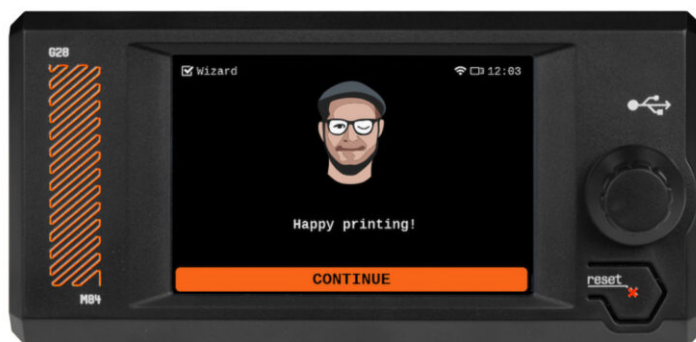


KROK 1 Print sheet and spool holder



- i** Ten rozdział zawiera instrukcje kalibracji i przygotowania drukarki do pierwszego uruchomienia.
- !** **Upewnij się, że nic nie znajduje się na stole grzewczym.** Stół musi być czysty. Wszelkie zabrudzenia mogą uszkodzić powierzchnię zarówno stołu grzewczego, jak i arkusza druku.
- **Attach the sheet by first aligning the rear cutout with the locking pins on the back of the heated bed.** Hold the sheet by the front two corners and slowly lay it down onto the heated bed - **watch your fingers!**

 - Keep the **print sheet** clean for optimum performance.
 - #1 cause of prints detaching from the print surface is a greasy print sheet. **Use IPA (Isopropyl alcohol) to degrease it** if you have touched its surface before.
- Put the O-ring onto the spoolholder.
- Push the spoolholder into the Puck-universal and lock it in by turning clockwise.

KROK 2 Firmware update

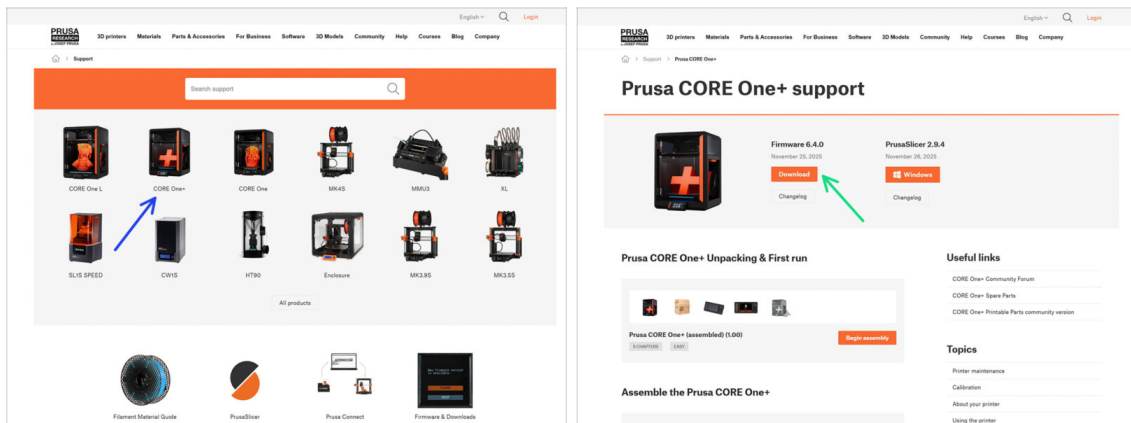


- ❗ Wszystkie drukarki wysyłamy z pamięcią USB z najnowszym firmware. Zalecamy jednak sprawdzenie i ewentualną aktualizację oprogramowania.
- 📍 Odwiedź stronę help.prusa3d.com
- 📍 Przejdź do strony Prusa CORE One+.
- 📍 Save the firmware file (.bbf) onto the bundled USB drive.
- ❗ Pro tip: To access Prusa CORE One+ homepage you can use the URL: prusa.io/core-one-plus

KROK 3 Turning it ON



- 📍 Podłącz do drukarki pamięć USB z zestawu.
- ❗ The included USB drive contains the latest firmware file.
- 📍 Connect the power cable and plug the printer into a wall outlet.
- 📍 Turn the printer on using the switch on the back.
- ❗ The printer will now detect if a new firmware file is available on the USB drive.
- 📍 If the "New firmware available" screen appears, hit **FLASH** by pressing the rotary knob to upgrade to the latest firmware.
- 📍 If no such message appears, the printer is running the latest firmware already. Proceed to the next step.

KROK 4 Setting up the printer: Intro

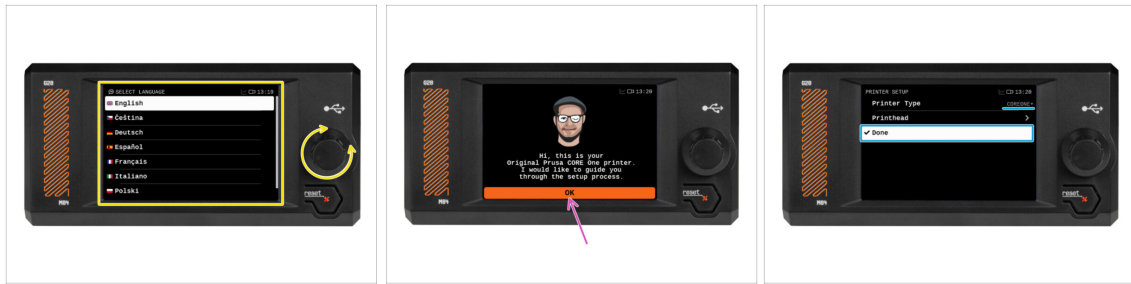

- ✦ Drukarka wyświetli na ekranie monit o wybranie języka. Użyj pokręćła lub ekranu dotykowego, aby ustawić preferowany język.
- ✦ After selecting your language, the printer will display the welcome screen. Hit **OK** to continue through the setup process.
- ✦ The next screen will prompt you to select your printer model. Since the assembled Prusa CORE One is fully tested in our facility, it has been pre-selected to COREONE+ during these tests. Hit **Done** to continue.

KROK 5 Setting up the printer: Network setup




- ✦ Na ekranie konfiguracji sieci pojawi się prośba o połączenie z siecią Wi-Fi z użyciem oficjalnej aplikacji mobilnej Prusa.
 - ❶ Read more on prusa.io/app.
- ✦ If you select **No**, the printer will show alternative ways to connect to Wi-Fi. This step is optional and can be done later.
 - ❶ You can skip this screen and set up the network connection later.

KROK 6 Wizard: Intro



- ❶ Drukarka wyświetli monit o przeprowadzenie Selftestu i kalibracji wszystkich ważnych komponentów. Cały proces trwa kilka minut, a niektóre jego etapy wymagają Twojej interakcji.
- 🔵 Although the printer was thoroughly tested at our facility, we highly recommend running the self-test again. Hit **YES** to start the self-test.
- ⚠️ **Warning:** During the self-test, **keep the door closed** until you are prompted. Opening the door will interrupt the process.
- ⚙️ **There are HOT and moving parts inside during the self-test.**
- ⚠️ **Caution:** Some parts of the Wizard, such as fan testing and axis calibration, **may be loud**.
- 🟢 The printer will begin by testing all the fans. **Be aware—it will be quite noisy for a while!**

KROK 7 Wizard: Loadcell Test

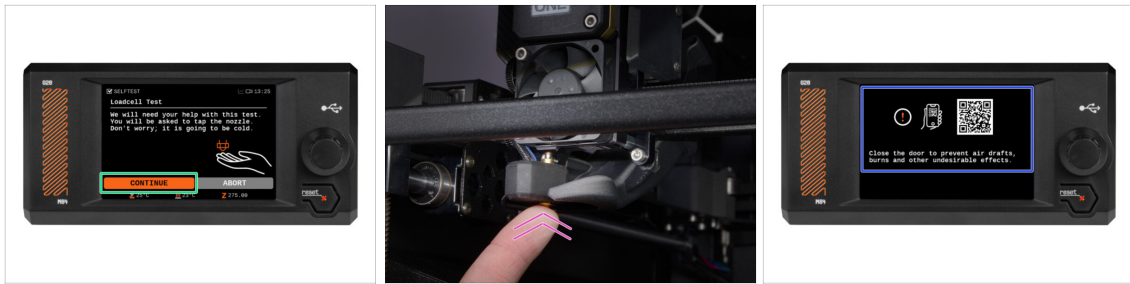

- 🟢 W kolejnym kroku kreatora pojawi się monit o dotknięcie dyszy w celu przetestowania i skalibrowania czujnika tensometrycznego. Podczas tej procedury **części drukarki nie są podgrzewane**, więc możesz ich bez obaw dotykać. Kliknij przycisk **Kontynuuj**.
- ❗ Loadcell calibration requires the door to be open, as you must interact directly inside the printer.
- ⬛ Do not touch the nozzle yet, wait until prompted by the **Tap nozzle NOW** message.
- 🟡 Tap the nozzle from below. In case the Loadcell does not detect the touch, you will be prompted to repeat the step. Otherwise, you will see **Loadcell test passed OK** when it succeeds.
- 🟡 To allow the printer to continue with the Wizard, **close the door**.

KROK 8 Wizard: Gearbox Alignment




- ⬛ Na następnym ekranie zostanie wyświetlony monit o przeprowadzenie osiowania przekładni ekstrudera. Ta kalibracja nie jest konieczna w drukarkach zmontowanych fabrycznie.
- 🟡 Naciśnij **Pomiń**, aby kontynuować.

KROK 9 Wizard - Filament Sensor Calibration



- ◆ Podczas kalibracji czujnika filamentu potrzebny będzie krótki kawałek filamentu. Przygotuj go i wybierz opcję **Kontynuuj**.
- ❗ Przed rozpoczęciem procesu kalibracji wewnątrz ekstrudera nie powinien znajdować się filament.
- Place a spool of filament onto the spool holder on the right side of the printer.
- When prompted, begin inserting the filament into the PTFE tube located beneath the right handle.
- Remove the filament after the calibration finishes.

KROK 10 Wizard complete

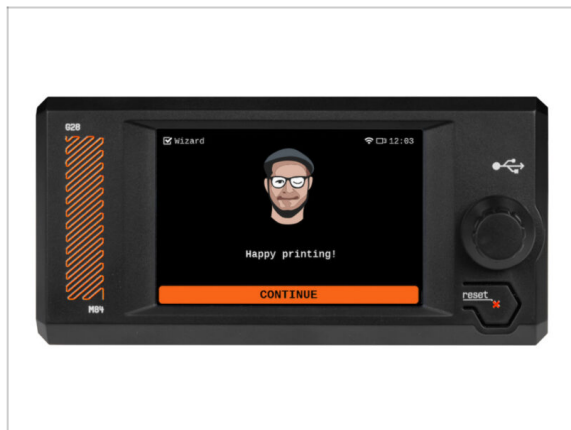

- Gratulacje! Kreator zakończył pracę i nadszedł czas na wydruk testowy.

KROK 11 Podręcznik




- Zapoznaj się z **Podręcznikiem druku 3D** dedykowanym dla Twojej drukarki i postępuj zgodnie z instrukcjami, aby skonfigurować ją i przygotować do pierwszego wydruku.

📌 Najnowsza wersja jest zawsze dostępna na prusa.io/core-one-plus.

⚠️ **Read the Disclaimer and Safety instructions chapters.**


KROK 12 Prusa knowledge base

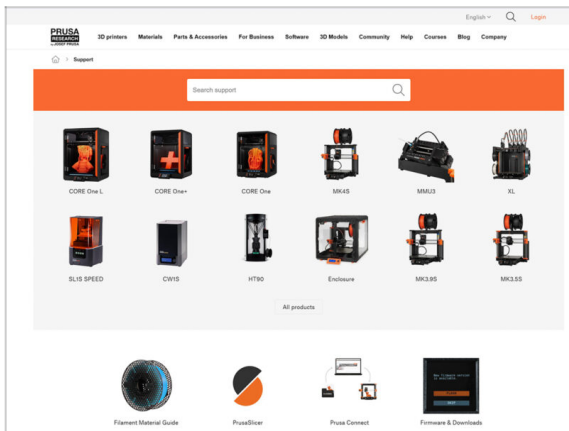

📌 Jeśli masz jakiegokolwiek problemy, nie zapominaj, że możesz poszukać rozwiązania w naszej Bazie Wiedzy pod adresem help.prusa3d.com


- Codziennie dodajemy nowe tematy!

KROK 13 Join Printables!

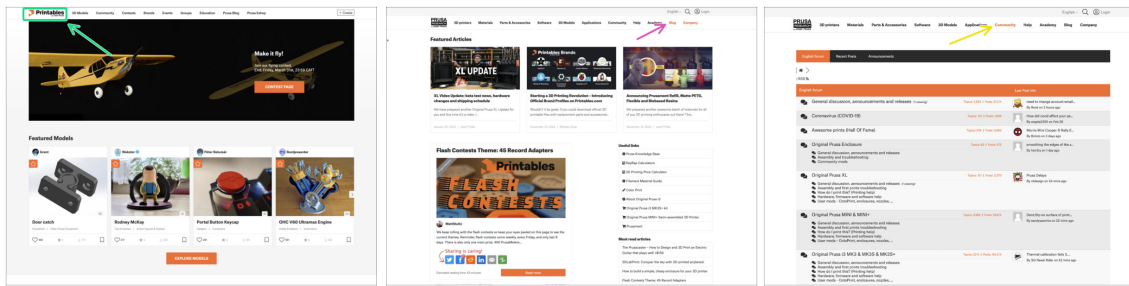

- Nie zapomnij dołączyć do największej społeczności użytkowników urządzeń marki Prusa! Znajdziesz tam najnowsze modele w formie plików STL i gotowe pliki G-code dla Twojej drukarki. Zarejestruj się na [Printables.com](https://www.printables.com)
- Szukasz inspiracji dla nowego projektu? Przejrzyj nasz blog i cotygodniowe aktualizacje.
- If you need help with the build, check out our forum with a great community :-)
- ❗ All Prusa services share one user account.

Lista zmian w instrukcji

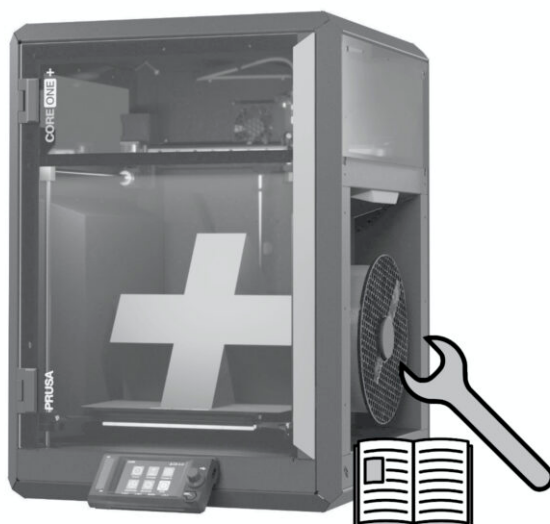

KROK 1 Historia wersji



- **Wersje instrukcji dla Prusa CORE One+ (fabrycznie zmontowanej):**
- 11/2025 - Wersja początkowa 1.00

[illegible]

This image shows a full page of blank, lined paper. It features approximately 20 evenly spaced horizontal grey lines across the entire width of the page, typical of notebook or composition paper. There are no margins, text, or other markings present.

This image shows a full page of blank, lined paper. It features approximately 20 evenly spaced horizontal grey lines across the entire width of the page, typical of notebook or primary school writing paper. There are no margins, text, or other markings present.