

Table des matières

1. Introduction	9
Étape 1 - Préparation du kit	10
Étape 2 - How to navigate through the manual	10
Étape 3 - View high resolution images	11
Étape 4 - All the required tools are included	11
Étape 5 - Additional utilities for this guide	12
Étape 6 - Guide des étiquettes	12
Étape 7 - Sachet de pièces de rechange	13
Étape 8 - Printed parts - versioning	13
Étape 9 - We are here for you!	14
Étape 10 - Pro tip: inserting the nuts	15
Étape 11 - Important : Protection des composants électroniques	16
Étape 12 - Récompensez-vous	17
Étape 13 - How to successfully finish the assembly	18
Étape 14 - Préparez votre bureau	19
Étape 15 - Installing the add-ons and upgrades	20
2. Assemblage de la base	21
Étape 1 - Tools necessary for this chapter	22
Étape 2 - Base assembly: parts preparation	22
Étape 3 - Inserting the zip ties	23
Étape 4 - Base assembly: parts preparation	23
Étape 5 - Installing the motor mounts	24
Étape 6 - Installing the rear motor	24
Étape 7 - Securing the rear motor	25
Étape 8 - Installing the front motor right	25
Étape 9 - Installing the front motor left	26
Étape 10 - Bottom frame: parts preparation	26
Étape 11 - Assembling the bottom profile: front + left	27
Étape 12 - Assembling the bottom profile: left + rear	27
Étape 13 - Assembling the bottom profile: right	28
Étape 14 - Inserting the spacer pins	28
Étape 15 - Anti-vibration feet: parts preparation	29
Étape 16 - Installing the anti-vibration feet	29
Étape 17 - Installing the bottom frame	30
Étape 18 - Mounting the bottom frame: right side	30
Étape 19 - Mounting the bottom frame: rear + left + front	31
Étape 20 - C'est l'heure des Haribo	31
Étape 21 - Fini	32
3. Assemblage de l'arrière	33
Étape 1 - Tools necessary for this chapter	34
Étape 2 - PSU assembly: parts preparation	34
Étape 3 - Préparation du bloc d'alimentation	35
Étape 4 - Informations sur les câbles d'alimentation	36
Étape 5 - Connexion de l'alimentation	37
Étape 6 - xBuddy: parts preparation I.	37
Étape 7 - xBuddy: parts preparation II.	38
Étape 8 - Applying the thermal pads	38
Étape 9 - Installation de la xBuddy	39
Étape 10 - Installing the xBuddy extension	39
Étape 11 - Installation des colliers de serrage	40

Étape 12 - Connecting the xBuddy extension board	40
Étape 13 - Inserting grommets: xBuddy box	41
Étape 14 - Wi-Fi : préparation des pièces	41
Étape 15 - Assemblage du Wi-Fi	42
Étape 16 - Installing the Wi-Fi assembly	42
Étape 17 - Back panel: parts preparation	43
Étape 18 - Installing grommets: back panel top	43
Étape 19 - Installing grommets: sides + bottom	44
Étape 20 - Alignement du bloc d'alimentation	44
Étape 21 - Montage du bloc d'alimentation	45
Étape 22 - Aligning the xBuddy box assembly	45
Étape 23 - Mounting the xBuddy box	46
Étape 24 - Power cables cover: parts preparation	46
Étape 25 - Connecting the power cables	47
Étape 26 - Préparation du PSU-cable-cover	48
Étape 27 - Covering the PSU cables	48
Étape 28 - Chamber fans: parts preparation	49
Étape 29 - Assembling the fan grid	50
Étape 30 - Fixation des ventilateurs	51
Étape 31 - Covering the cooling fans	51
Étape 32 - Rear profiles: parts preparation	52
Étape 33 - Installing the rear profiles	52
Étape 34 - Mounting the back panel	53
Étape 35 - Stepper splitter: parts preparation	53
Étape 36 - Guiding the Stepper splitter cable	54
Étape 37 - Connecting the Stepper splitter	54
Étape 38 - Mounting the Stepper Splitter	55
Étape 39 - LCD cable: parts preparation	55
Étape 40 - Guiding the LCD cable	56
Étape 41 - Main FE cable INFO	56
Étape 42 - Connecting the FE cable (no 3.)	57
Étape 43 - Guiding the FE cable (no. 2)	57
Étape 44 - Guiding the FE cable (no. 1)	58
Étape 45 - Guiding the FE cable (no. 4 and 5)	58
Étape 46 - FE cable - xBuddy: parts preparation	59
Étape 47 - Connecting the FE cable: xBuddy	59
Étape 48 - Plugging the xLCD cable	60
Étape 49 - PSU-cover : préparation des pièces	60
Étape 50 - Connecting the FE cable: PSU	61
Étape 51 - C'est l'heure des Haribo	61
Étape 52 - Fini	62
4. Assemblage du plateau chauffant	63
Étape 1 - Outils nécessaires pour ce chapitre	64
Étape 2 - Plateau chauffant : préparation des pièces	65
Étape 3 - Assemblage du câble du plateau chauffant (partie 1)	65
Étape 4 - Assemblage du câble du plateau chauffant (partie 2)	66
Étape 5 - Bed-cable-cover-bottom : préparation des pièces	66
Étape 6 - Fixation du cache-câble	67
Étape 7 - Chariot de plateau chauffant : préparation des pièces	67
Étape 8 - Préparation du chariot du plateau chauffant	68
Étape 9 - Installation des joints de dilatation	68
Étape 10 - RGB LED strip: parts preparation	69
Étape 11 - Installing the LED strip	69
Étape 12 - Attaching the LED strip diffuser	70

Étape 13 - Covering the RGB LED strip	70
Étape 14 - Guiding the RGB LED strip cable	71
Étape 15 - Bed mounts: parts preparation	71
Étape 16 - Assembling the bed mounts	72
Étape 17 - Securing the bed mounts	72
Étape 18 - Bed mounts: inserting the nuts	73
Étape 19 - Assemblage du CORE-One-bed-spacer-rear	73
Étape 20 - Installation du bed-mount-right	73
Étape 21 - Installation du bed-mount-left	74
Étape 22 - Mounting the heatbed: parts preparation	74
Étape 23 - Montage du plateau chauffant	75
Étape 24 - Serrage du plateau chauffant	75
Étape 25 - Covering the cables: parts preparation	76
Étape 26 - Guiding the heatbed cables	76
Étape 27 - Covering the heatbed cables	77
Étape 28 - Mounting the heatbed: parts preparation	77
Étape 29 - Attaching the heatbed assembly	78
Étape 30 - Mounting the heatbed assembly: rear motor	79
Étape 31 - Mounting the heatbed assembly: front motor left	79
Étape 32 - Mounting the heatbed assembly: front motor right	80
Étape 33 - Attaching the heatbed cables I.	80
Étape 34 - Attaching the heatbed cables II.	81
Étape 35 - Securing the heatbed cables: parts preparation	81
Étape 36 - Securing the textile sleeve	82
Étape 37 - Guiding the heatbed assembly cables	82
Étape 38 - Connecting the heatbed power cables	83
Étape 39 - C'est l'heure des Haribo	83
Étape 40 - Fini	84
5. Assemblage du CoreXY	85
Étape 1 - Tools necessary for this chapter	86
Étape 2 - Rod holders: parts preparation	86
Étape 3 - Assembling the rod holders	87
Étape 4 - Preparing the front rod holders	87
Étape 5 - Installing the front rod holders	88
Étape 6 - XY carriage: parts preparation	88
Étape 7 - Assemblage des XY-carriages	89
Étape 8 - Assembling the linear holder left	89
Étape 9 - Assembling the linear holder right	90
Étape 10 - Attaching the linear holder assemblies	90
Étape 11 - Informations sur les tiges lisses	91
Étape 12 - Mounting the smooth rods	91
Étape 13 - Securing the rear rod holders	92
Étape 14 - Securing the front rod holders	92
Étape 15 - Motor mounts: parts preparation	93
Étape 16 - Motor mounts: part preparation	93
Étape 17 - Assembling the XY-motor-mount-right I.	94
Étape 18 - Assembling the XY-motor-mount-right II.	94
Étape 19 - Assembling the XY-motor-mount-left I.	95
Étape 20 - Assembling the XY-motor-mount-left II.	95
Étape 21 - Belt tensioners: parts preparation I.	96
Étape 22 - Belt tensioners: parts preparation II.	96
Étape 23 - Préparation des poulies du tendeur	97
Étape 24 - Assembling the belt tensioner left I.	97
Étape 25 - Assembling the belt tensioner left II.	98

Étape 26 - Assembling the belt tensioner right	98
Étape 27 - Installing the belt tensioners: parts preparation	99
Étape 28 - Installing the motor mount left	99
Étape 29 - Installing the motor mount right	100
Étape 30 - Installation du belt-tensioner-left	100
Étape 31 - Installation du belt-tensioner-right	101
Étape 32 - Linear rail: parts preparation	101
Étape 33 - Attaching the linear rail	102
Étape 34 - Securing the linear rail	102
Étape 35 - Installing the linear rail: parts preparation	103
Étape 36 - Installing the linear rail assembly	103
Étape 37 - Linear rail: removing the safety pins	104
Étape 38 - Bed-stop : préparation des pièces	104
Étape 39 - Assemblage du bed-stop	104
Étape 40 - Montage du bed-stop	105
Étape 41 - X&Y motors: parts preparation	105
Étape 42 - Installing the X-axis pulley	106
Étape 43 - Installing the Y-axis pulley	107
Étape 44 - XY belts: parts preparation	108
Étape 45 - Informations sur les courroies XY	108
Étape 46 - Y belt guiding: Y motor pulley	109
Étape 47 - Securing the Y-axis motor	109
Étape 48 - Y belt guiding: Y motor mount	110
Étape 49 - Y belt guiding: belt tensioner	110
Étape 50 - Y belt guiding: X motor mount	111
Étape 51 - Y belt guiding: securing the belt	111
Étape 52 - X belt guiding: X motor pulley	112
Étape 53 - Securing the X-axis motor	112
Étape 54 - Y belt guiding: X motor mount	113
Étape 55 - X belt guiding: belt tensioner	113
Étape 56 - X belt guiding: Y motor mount	114
Étape 57 - X belt guiding: securing the belt	114
Étape 58 - Checking the belt guidance	115
Étape 59 - Bowden guide: parts preparation	115
Étape 60 - Securing the Nextruder holder	116
Étape 61 - Securing the Y motor cable	116
Étape 62 - Securing the X motor cable	117
Étape 63 - Installing the bowden guide	117
Étape 64 - White LED strip: parts preparation	118
Étape 65 - Sticking the White LED strip	118
Étape 66 - Installing the white LED assembly	119
Étape 67 - Door sensor & White LED strip: parts preparation	119
Étape 68 - Inserting the zip ties	120
Étape 69 - Installing the door sensor	120
Étape 70 - Securing the door sensor cable	121
Étape 71 - Guiding the cables: LED and door sensor	121
Étape 72 - Remarque sur la caméra Buddy3D	122
Étape 73 - Smooth rods: parts preparation	122
Étape 74 - Installing the CoreXY assembly	123
Étape 75 - Securing the smooth rods	123
Étape 76 - Aligning the linear rail	124
Étape 77 - Guiding the corexy cables	124
Étape 78 - Guiding the cooling fan cables	125
Étape 79 - Fixation du bed-stop	125
Étape 80 - Connecting the cooling fans cables	126

Étape 81 - Connecting the corexy cables	126
Étape 82 - C'est l'heure des Haribo	127
Étape 83 - Fini	127
6. Assemblage du Nextruder	128
Étape 1 - Tool necessary for this chapter	129
Étape 2 - Nextruder idler assembly: parts preparation	129
Étape 3 - Assembling the extruder idler	130
Étape 4 - Assembling the extruder: parts preparation I.	130
Étape 5 - Assembling the extruder: parts preparation II.	131
Étape 6 - Assemblage de l'extrudeur	131
Étape 7 - Assemblage du réducteur	132
Étape 8 - Assemblage de PG-ring	132
Étape 9 - Assemblage du PG-assembly	133
Étape 10 - Vérification du PG-assembly	133
Étape 11 - Assembling the Nextruder idler	134
Étape 12 - Gear lubrication: parts preparation	134
Étape 13 - Lubrification de l'engrenage	135
Étape 14 - Covering the planetary gear	135
Étape 15 - Assembling the Idler-swivel: parts preparation	136
Étape 16 - Assemblage de l'idler-swivel	136
Étape 17 - Assemblage de l'idler-nut	137
Étape 18 - Mounting the Idler-swivel assembly	137
Étape 19 - NTC thermistor: parts preparation	138
Étape 20 - Assembling the NTC thermistor	138
Étape 21 - Mounting the Nextruder: parts preparation	138
Étape 22 - Protection du plateau chauffant	139
Étape 23 - Montage du Nextruder	139
Étape 24 - Ventilateur de la Hotend : préparation des pièces	140
Étape 25 - Installation du ventilateur de la Hotend	140
Étape 26 - Guidage des câbles du ventilateur de la Hotend	141
Étape 27 - LoveBoard: parts preparation I.	141
Étape 28 - LoveBoard: parts preparation II.	142
Étape 29 - Assemblage du Loveboard-mount	142
Étape 30 - Assemblage du Printhead-cover	143
Étape 31 - Assemblage de la LoveBoard	143
Étape 32 - Guidage du câble principal	144
Étape 33 - Mise en place du cache de la LoveBoard	144
Étape 34 - Swingarm: parts preparation I.	145
Étape 35 - Swingarm: parts preparation II.	145
Étape 36 - Guidage du câble principal	146
Étape 37 - Mounting the main cable	146
Étape 38 - Attaching the LoveBoard assembly	147
Étape 39 - Montage du SwingArm	147
Étape 40 - Attaching the main cable	148
Étape 41 - Inserting the PTFE tube	148
Étape 42 - Securing the PTFE tube	149
Étape 43 - Vérification du mouvement	149
Étape 44 - Print fan: parts preparation	150
Étape 45 - Assemblage du fan-shroud	150
Étape 46 - Installing the print fan assembly	151
Étape 47 - Hotend : préparation des pièces	151
Étape 48 - Installation de la hotend	152
Étape 49 - Connecting the heatsink cables	152
Étape 50 - Connecting the hotend cables	153

Étape 51 - Connecting the print fan cable	153
Étape 52 - Connexion du câble du moteur E	153
Étape 53 - LoveBoard covers: parts preparation	154
Étape 54 - Mise en place du cache de la LoveBoard	154
Étape 55 - LoveBoard : vérification du câblage	155
Étape 56 - Guiding the main cable	155
Étape 57 - C'est l'heure des Haribo	156
Étape 58 - Fini	156
7. Bodywork & Electronics	157
Étape 1 - Tools necessary for this chapter	158
Étape 2 - Front profiles: parts preparation	158
Étape 3 - Installation du profilé avant droit	159
Étape 4 - Installing the front left profile	159
Étape 5 - Top profiles: parts preparation	160
Étape 6 - Assembling the top profiles I.	160
Étape 7 - Assembling the top profiles II.	161
Étape 8 - Aligning the top profiles	161
Étape 9 - Installing the top profiles	162
Étape 10 - CoreXY fixing screws: parts preparation	162
Étape 11 - Fixing the CoreXY assembly	163
Étape 12 - Side sensor base: parts preparation	163
Étape 13 - Assembling the side sensor base	164
Étape 14 - Test du levier	164
Étape 15 - Assemblage du commutateur	165
Étape 16 - IR Sensor: parts preparation	165
Étape 17 - Connecting the IR sensor	166
Étape 18 - Installing the IR sensor	166
Étape 19 - Installing the side sensor cover	167
Étape 20 - Side filament sensor: parts preparation	167
Étape 21 - Installing the side filament sensor	168
Étape 22 - Guide the filament sensor cable	168
Étape 23 - Connecting the side filament sensor	169
Étape 24 - NFC Antenna: parts preparation	169
Étape 25 - Applying the adhesive film	170
Étape 26 - Installing the NFC Coil	170
Étape 27 - Connecting the NFC Coil	171
Étape 28 - Vérification du câblage	171
Étape 29 - Preparing the electronics cover	172
Étape 30 - Installing the electronics cover	172
Étape 31 - Remarque sur la caméra Buddy3D	173
Étape 32 - xBuddy cover: parts preparation	173
Étape 33 - Installing the xBuddy cover	174
Étape 34 - Installing the rear cover	174
Étape 35 - Right side: parts preparation	175
Étape 36 - Installation du puck du support de bobine	175
Étape 37 - Right handle: parts preparation	176
Étape 38 - Installation du collet	176
Étape 39 - Montage de la poignée	177
Étape 40 - Fixing the right side	177
Étape 41 - Left side: parts preparation	178
Étape 42 - Installing the left side	178
Étape 43 - C'est l'heure des Haribo	179
Étape 44 - Fini	179
8. Trim, Door & xLCD	180

Étape 1 - Tools necessary for this chapter	181
Étape 2 - Top cover: parts preparation	181
Étape 3 - Retrait du film	182
Étape 4 - Test-fitting the top cover	182
Étape 5 - Assembling the top cover I.	183
Étape 6 - Assembling the top cover II.	183
Étape 7 - Test de la ventilation	184
Étape 8 - Installing the top cover	184
Étape 9 - Side covers: parts preparation	185
Étape 10 - Retrait du film	185
Étape 11 - Covering the left side	186
Étape 12 - Covering the right side	186
Étape 13 - xLCD : préparation des pièces	187
Étape 14 - Assembling the xLCD I.	187
Étape 15 - Assembling the xLCD II.	188
Étape 16 - Installing the FE Faston connector	188
Étape 17 - Installing the LCD knob	189
Étape 18 - xLCD bezel: parts preparation	189
Étape 19 - Mounting the xLCD I.	190
Étape 20 - Mounting the xLCD II.	190
Étape 21 - Installing the xLCD assembly	191
Étape 22 - Securing the xLCD assembly	191
Étape 23 - Door seal: parts preparation	192
Étape 24 - Attaching the top seal	192
Étape 25 - Attaching the side seals	193
Étape 26 - Magnet holders: parts preparation	193
Étape 27 - Assembling the magnet holders	194
Étape 28 - Installing the magnet holders	194
Étape 29 - Charnières : préparation des pièces	195
Étape 30 - Installing the door-hinge-in parts	195
Étape 31 - Installing the door-hinge-out I.	196
Étape 32 - Installing the door-hinge-out II.	196
Étape 33 - Door panel: parts preparation	197
Étape 34 - Door panel: removing the protective film	197
Étape 35 - Installing the door panel	198
Étape 36 - Assembling the door handle	198
Étape 37 - Securing the door handle	199
Étape 38 - Pose de l'autocollant : Préparation des pièces	199
Étape 39 - Pose de l'autocollant	200
Étape 40 - C'est l'heure des Haribo	200
Étape 41 - Fini	201
9. Calibration & First run	202
Étape 1 - Tension de la courroie	203
Étape 2 - Installation du support de bobine : Préparation des pièces	203
Étape 3 - Fixation de la plaque d'impression et du support de bobine	204
Étape 4 - Mise à jour du firmware	204
Étape 5 - Allumage de l'imprimante	205
Étape 6 - Setting up the printer: Intro	205
Étape 7 - Setting up the printer: Network setup	206
Étape 8 - Assistant : Introduction	206
Étape 9 - Wizard: Door Sensor Calibration	207
Étape 10 - Assistant : Test du capteur de force	207
Étape 11 - Assistant : Alignement du réducteur	208
Étape 12 - Wizard: Filament Sensor Calibration	208

Étape 13 - Assistant terminé	209
Étape 14 - C'est l'heure des Haribo	209
Étape 15 - Manuel	210
Étape 16 - Base de connaissances Prusa	210
Étape 17 - Rejoignez Printables !	211
Journal des modifications	212
Étape 1 - Historique des versions	213

1. Introduction




ÉTAPE 1 Préparation du kit




- Bienvenue dans le guide d'assemblage et de configuration de votre kit Prusa CORE One+.** Suivez ces étapes pour vous assurer que votre imprimante est prête pour sa première impression.
- Please prepare the kit received from Prusa Research.
- No soldering or wire crimping is required.

ÉTAPE 2 How to navigate through the manual

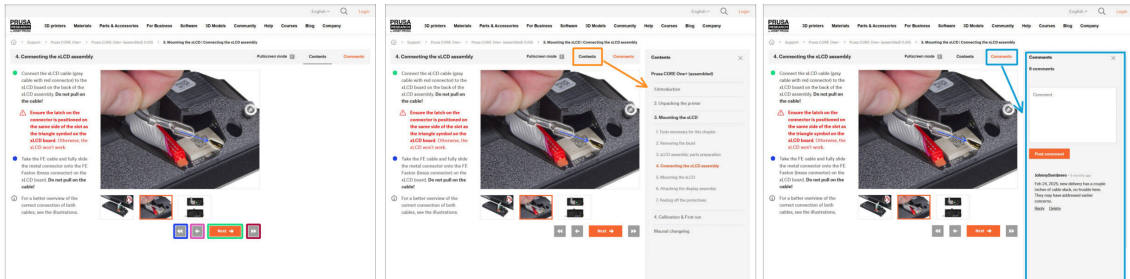



- Use the graphical navigation buttons in the bottom right corner or the arrow keys on your keyboard:
 - Play backward button / Up arrow key** - Moves to the previous step.
 - Left arrow button / Left arrow key** - Moves to the previous image, or to the previous step if it's the first image in the step.
 - Next button / Right arrow key** - Moves to the next image, or to the next step if it's the last image in the step.
 - Play forward (Next) button / Down arrow key** - Moves to the next step.
- Click on **Contents** to expand the full list of steps in this guide. This allows you to jump to any step regardless of the sequence.
- Click on **Comments** to open the discussion for a specific step and leave your feedback.

ÉTAPE 3 View high resolution images

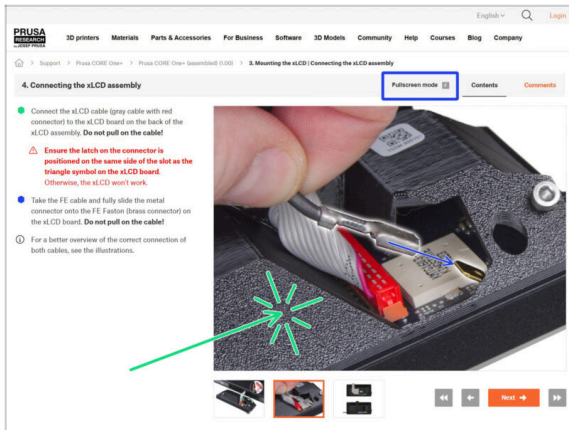

- When you browse the guide on help.prusa3d.com, you can view the original images in high resolution for clarity.
- Just click on the image to open it in high resolution for a detailed view.
- Click on **Fullscreen mode** or press the F key to maximize your screen space and focus entirely on the instructions.

ÉTAPE 4 All the required tools are included

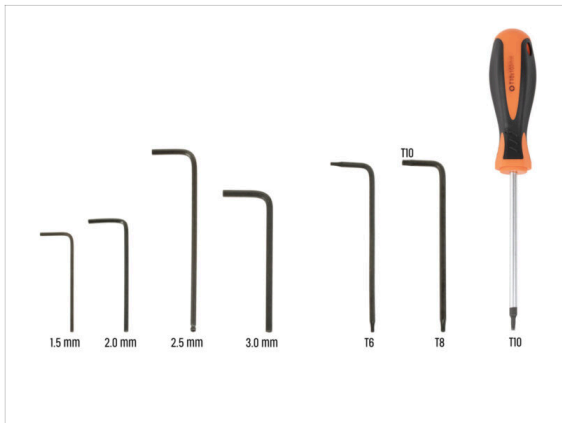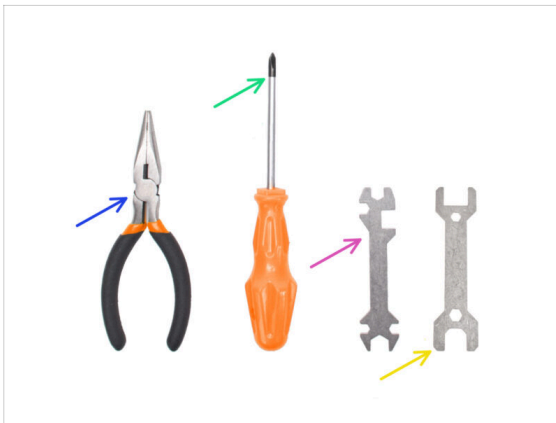

● Le paquet d'outils comprend :


- Tools can be found in *Electronics & fasteners* package.
- Pince à bec fin (1x)
- Philips (PH2) screwdriver (1x)
- Clé universelle (1x)
- Wrench size 13-16 mm (1x)
- Jeu de clés Allen
- Jeu de clés Torx

ÉTAPE 5 Additional utilities for this guide



- ◆ **Some steps in the manual will require commonly available items to help you with assembly (not included in the kit):**
- ◆ Paper towels or a piece of cloth - For wiping preservative oil from the smooth rods and linear rail.
- ◆ Scissors - For cutting a bag with bearings
- ◆ Lubricant (included in the kit) - For lubricating the planetary gear in the Nextruder (print head).

ÉTAPE 6 Guide des étiquettes

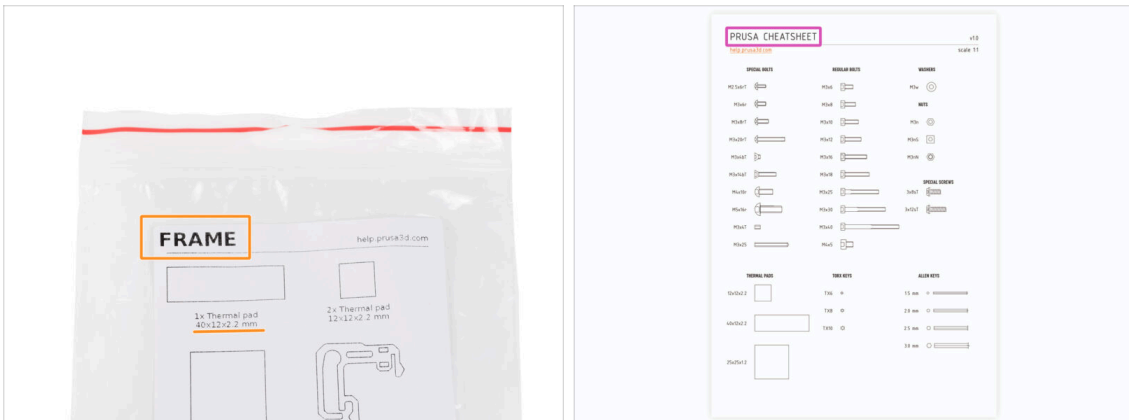

- ◆ All the boxes and bags including parts for the build are labeled.
- ◆ The labels include the list of contents and part count.
- ◆ You can download a **Cheatsheet** with 1:1 fastener drawings from our site prusa.io/core-one-cheatsheet. Print it at 100 %, don't rescale it, otherwise, it won't work.
- i For PRUSA veterans: Fasteners are divided into individual bags according to its type. Not into packages for individual chapters, as it was with previous printers.
- P The instructions will specify the package for each part, with the exception of fasteners, which are always located in the Fasteners package.

ÉTAPE 7 Sachet de pièces de rechange



- ◆ Spare fasteners are included in each bag of fasteners. The amount of spare is always included in the total number shown on the bag.
- ◆ Similarly, some parts may include one extra piece in the same bag.

ÉTAPE 8 Printed parts - versioning



- ◆ La plupart des pièces imprimées en 3D sur la Prusa CORE One+ sont marquées de leur version.
- ◆ **E, F and Gx series** (e.g. E1) - those parts are printed on Prusa Research farm and are distributed with the kit.
- ◆ **R, S and Tx series** (e.g. R1) - those parts are available for download at [printables.com](https://www.printables.com). They are identical to the factory ones.
- ◆ The numbers indicate minor revisions that usually involve small design tweaks. A different label in the manual (e.g., a different version shown in photos) does not affect the assembly – all versions are fully compatible.
- ◆ However, if a specific revision requires a different assembly procedure, we will clearly highlight it in the manual and explain the differences.
- ① In case you have issues while assembling the printer with the certain printed part, please try to find this label and tell it to our support team.

ÉTAPE 9 We are here for you!

The screenshot shows the Prusa 3D printer assembly instructions for step 4: Connecting the xLCD assembly. The interface includes a list of instructions, a video player, and a comments section. A red box highlights the 'Comments' tab, and a red arrow points to the 'Chat now' button in the bottom right corner.

4. Connecting the xLCD assembly

- Connect the xLCD cable (gray cable with red connector) to the xLCD board on the back of the xLCD assembly. **Do not pull on the cable!**
- Ensure the latch on the connector is positioned on the same side of the slot as the triangle symbol on the xLCD board. Otherwise, the xLCD won't work.
- Take the FE cable and fully slide the metal connector into the FE Fasten (brass connector) on the xLCD board. **Do not pull on the cable.**
- For a better overview of the correct connection of both cables, see the illustrations.

Comments

5 comments

Oh look at the detail!

Post comment

JohnnyBambers · 7 days ago

Feb 24, 2025, new delivery had a couple inches of cable slack, no trouble here. They may have addressed earlier concerns.

Reply · Delete

Powered by TRY

SUBMIT

Chat now


- Lost in the instructions, missing screw or cracked printed part? **Let us know!**
- You can contact us using the following channels:
 - Using comments under each step.
 - Using our 24/7 live chat here at help.prusa3d.com
 - Writing an email to info@prusa3d.com

ÉTAPE 10 Pro tip: inserting the nuts



- 3D printed parts are very precise, however, there still might be a tolerance in the printed part and the same goes for the size of the nut.
- Therefore it might happen, that the nut won't fit easily in or might be falling out. Let's see, how to fix it:
 - **Nut won't fit in:** use a screw with a thread along its entire length (typically: M3x10, M3x18) and screw it from the opposite side of the opening. While tightening the screw, the nut will be pulled in. Remove the screw afterwards.
 - **Nut keeps falling out:** Use a piece of tape to fix the nut temporarily in place, as soon as you insert the screw in, you can remove the tape. *Using glue isn't recommended as it can partly reach into the thread and you won't be able to tighten the screw properly.*
- Every time we recommend using the "screw pulling technique", you will be reminded with Joe's avatar ;)
- ① Parts in the pictures are used as an example.

ÉTAPE 11 Important : Protection des composants électroniques

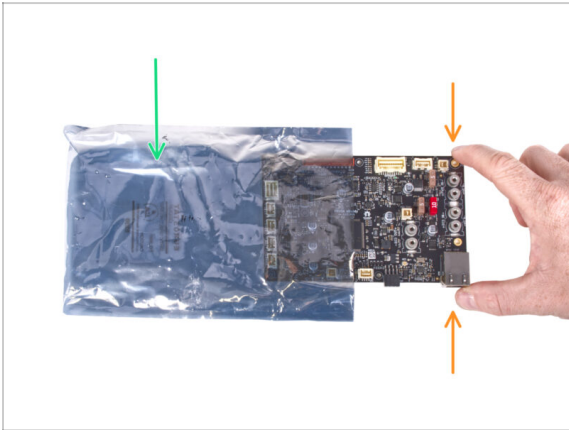

 **WARNING:** Make sure to **protect the electronics against electrostatic discharge (ESD)**. Always unpack the electronics right before you need them!

Here are some **tips to prevent damage to the electronics**:

-  **Keep the electronics inside the ESD bag** right until you are asked to install them.
-  **Always touch the sides of the board only** while handling it. Avoid touching the components on the surface.
-  **Before you touch the electronics** use any conductive (metal) structure nearby to neutralize the possible static charge from your hands.
-  Be extra cautious **in rooms with carpets**, which are often a source of electrostatic energy.
-  Clothes made of wool or certain synthetic fabrics can easily gather static electricity too. It is safer to wear cotton clothing for the assembly.

ÉTAPE 12 Récompensez-vous



- ◆ Construire la CORE One+ est une expérience enrichissante. Après avoir terminé chaque chapitre, récompensez-vous. **Il y a un sachet d'ours Haribo dans la boîte juste pour ça !**
- ⚠ **The biggest issue from our experience** (MK4S, MK4, MK3S+, MK3S, MK3, MK2S, ...) is inadequate bear consumption. Many of you didn't have enough gummy bears for all chapters, some even ate them all before they started!
- ◆ After years of thorough scientific research, we came to a solution => At the end of each chapter, you will be told a specific amount of bears to consume.
- ◆ Eating an incorrect amount than prescribed in the manual might lead to a sudden boost of energy. Please consult a professional in the closest candy store.
- ⚠ **Hide the Haribo for now!** From our experience, an unattended bag with sweets will suddenly disappear. Confirmed by multiple cases all around the World.

ÉTAPE 13 How to successfully finish the assembly

Step 25 Attaching the spacers



- Insert two M3n nuts to the X-carriage-back.
- ① Use the screw pulling technique.
- From the opposite side, insert the M3x10 screw into the X-carriage-back. The screw must protrude from the "front" side of the part.
- Attach the spacer 10 mm on the M3x10 screw and tighten the screw. **Note the cutout of the same shape as the spacer. It must fit perfectly and must not rotate.**




2 comments

 Pour terminer avec succès le kit CORE One+, veuillez suivre toutes ces étapes :

-  **Always read all the instructions at the current step first**, it will help you to understand what you need to do. Don't cut or trim unless you are told to!!!
-  **Don't follow pictures only!** It is not enough, the written instructions are as brief as they could be. **Read them!**
-  Read the comments from the other users, they are great sources of ideas. We read them too and based on your feedback improved the manual and the entire assembly.
-  **Use a reasonable force**, the printed parts are tough, but not unbreakable. If it doesn't fit, check your approach twice.
-  **Eat the gummy bears as instructed!** Disobedience won't be tolerated :D
-  **Most importantly: Enjoy the build, and have fun.** Cooperate with your kids, friends or partners.

ÉTAPE 14 Préparez votre bureau

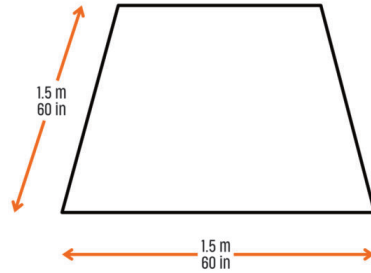

- **Tidy up your desk!** Tidying up decreases the probability of losing small parts.
- **Clear your workspace.** Make sure you have enough room. A nice clear flat workbench will get you the results you are aiming for.
- **Let there be light!** Make sure you are in a well-lit environment. Another lamp or even an extra flashlight will probably come in handy.
- Prepare something to contain the plastic bags and the removed packing materials so you can recycle them afterwards. Make sure there are no important parts being discarded.
- A minimum working space of 1.5×1.5 meters (60×60 inches) is recommended.
- ⚠ **It's highly recommended to place a soft pad on your workbench. Some sheet metal parts have sharp edges that could scratch the surface.**
- ⓘ You can use a piece of cardboard as a protective pad.
- OK, we are ready. Let's start! Go to chapter **2. Frame assembly**

ÉTAPE 15 Installing the add-ons and upgrades




- ◆ This information applies to users planning to install upgrades and add-ons, such as Buddy Camera, an advanced filtration system, and MMU3 in the future.
- ① **Before installing any add-ons and upgrades, it is essential to completely assemble and test your printer.** Once the printer is fully functional, follow the separate MMU3 or add-on assembly manuals to modify the printer for installation.

2. Assemblage de la base




ÉTAPE 1 Tools necessary for this chapter

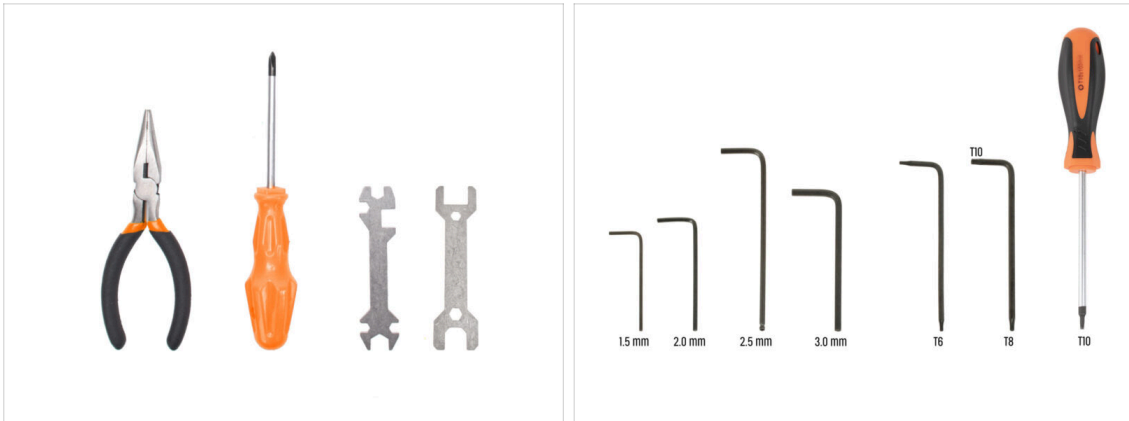


- For this chapter, please prepare:
- Clé 13-16
- Clé Allen de 2,5 mm
- T10 torx key / T10 torx screwdriver

ÉTAPE 2 Base assembly: parts preparation

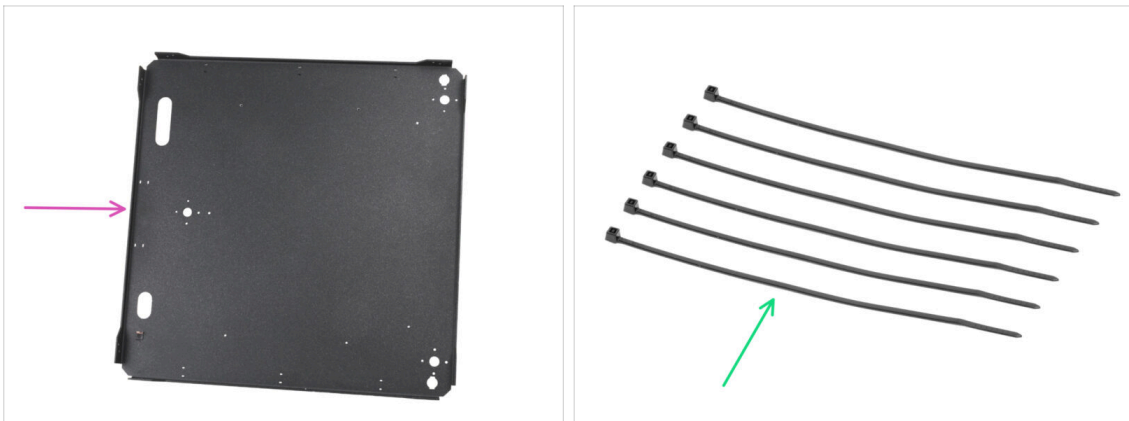


- For the following steps, please prepare:
- Bottom panel (1x) found in the Metal parts 1/3 package
- Zip tie (6x) found in the Electronics & Fasteners package

ÉTAPE 3 Inserting the zip ties

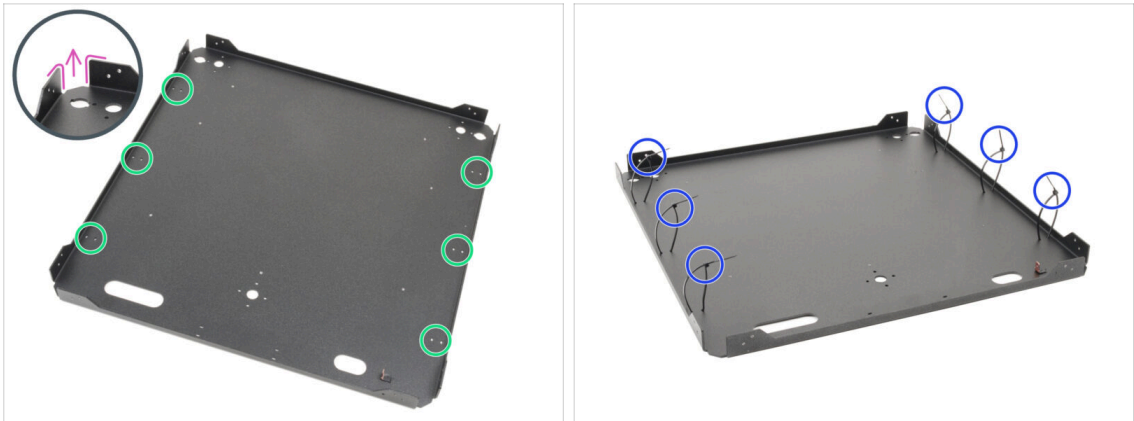


- ✿ Turn the bottom panel so that the bends of the plate are facing upwards.
- ✿ Note the twin holes for the zip ties around the perimeter of the panel.
- ✿ Insert six zip ties through the holes, placing them along both sides and partially tightening them, engaging only the first few teeth.
- ⚠ **Do not fully tighten them yet, as we will route cables through them later.**
- ℹ Note: The orientation of the zip tie heads (inside or outside the metal sheet) doesn't matter.

ÉTAPE 4 Base assembly: parts preparation

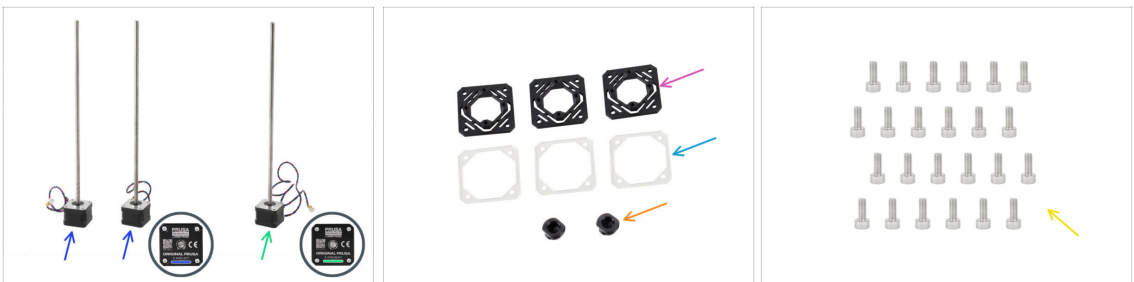

- ✿ **For the following steps, please prepare:**
- ✿ Z-axis left motor (2x) *found in the Motor set box.*
- ⚠ **One Z-axis left motor is packed separately in the *Electronics & chamber parts* package.**
- ℹ For now, keep the trapezoidal nuts in the motor package.
- ✿ Z-axis right motor (1x) *found in the Motor set box*
- ✿ Z-motor-mount (3x) *found in the Printed parts package*
- ✿ Motor washer (3x) *found in the Electronics & Chamber parts package*
- ✿ Z-rod-mount (2x) *found in the Printed parts package*
- ✿ Vis M3x8 (24x)

ÉTAPE 5 Installing the motor mounts

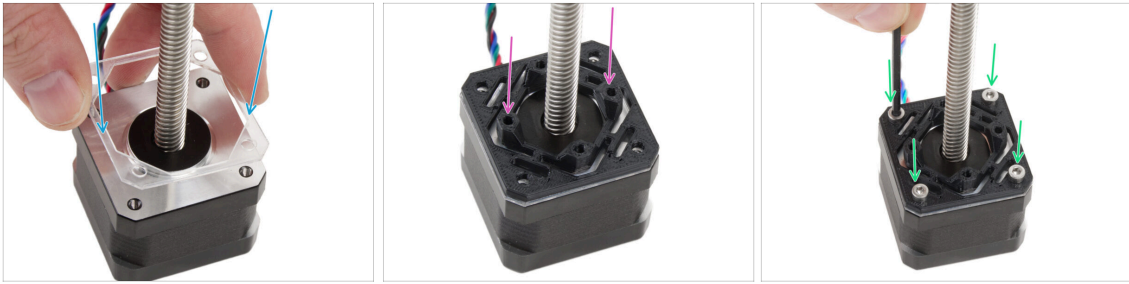


- Attach one transparent motor washer pad on each Z motor.
- Place one Z-motor-mount on each motor washer. **The protrusions on the part must be facing upwards.**
- Align holes with all the parts.
- Assemblez toutes les pièces avec quatre vis M3x8.
- Follow the same procedure for all motors.

ÉTAPE 6 Installing the rear motor



- Turn the bottom panel upside down.
- Locate the circle hole in the middle of the panel back side.
- Take the **Z motor right** - the motor with the longest cable. Labeled ZR on the cable.
- Push the motor threaded rod through the panel and align the holes in the panel with the holes in the motor assembly.
- ⚠ **The motor cable must point outwards (towards you).**
- Push both Z-axis motor left through the bottom panel.
- **The motor cables must point to the rear motor side.**
- ❗ In the following instructions, we will refer to the **front** and **rear** sides of the assembly. The **front side** has **TWO** motors, while the **rear side** has **ONE** motor. We will remind you along the way, but it's good to keep this in mind :).

ÉTAPE 7 Securing the rear motor

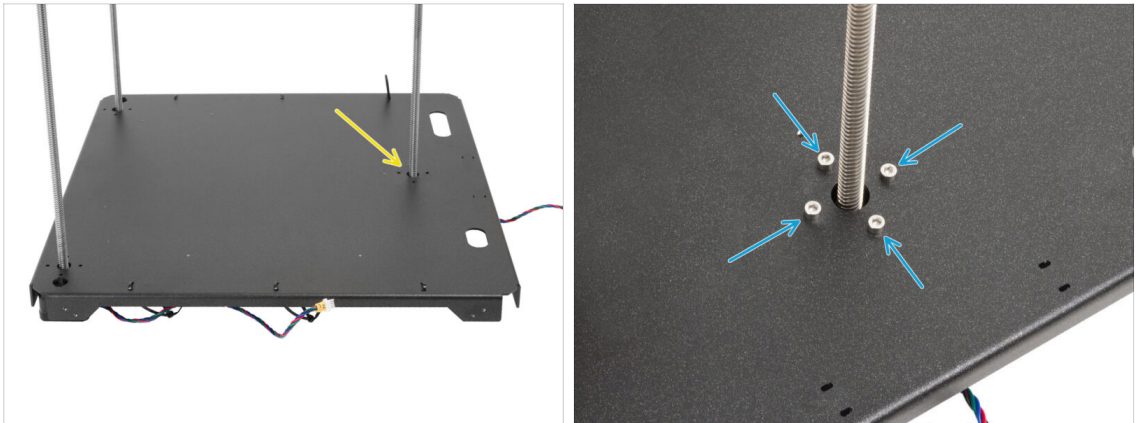


- ✦ Begin securing the motors, starting from the rear motor.
- ✦ Insert and fully tighten four M3x8 screws into the **rear motor**.
 - ⚠ Make sure the screws stay straight and do not tilt as you tighten them.
 - ⚠ Do not overtighten the screws, as they thread directly into the plastic part. For a final tightening, use the shorter part of the key as a handle to apply the correct amount of torque.

ÉTAPE 8 Installing the front motor right



- ✦ First, insert the rod-mount into the opening next to the front right Z motor.
- ✦ Use the 13-16 wrench to rotate the rod mount 90 degrees, locking it into place.
- ✦ Secure the motor using four M3x8 screws. Tighten them completely.
 - ⚠ Make sure the screws stay straight and do not tilt as you tighten them.

ÉTAPE 9 Installing the front motor left

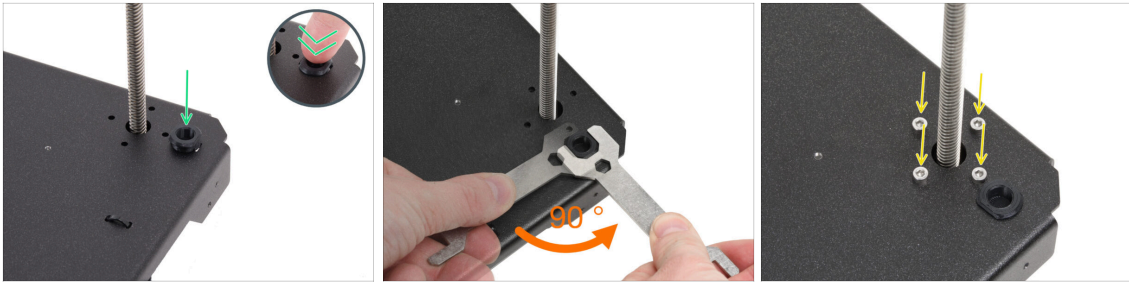


- Let's move to the front left motor (from the front view).
- ⚠ **Ensure, the motor cable still points to the rear side.**
- Insert the rod-mount into the opening next to the front right Z motor.
- Use the 13-16 wrench to rotate the rod mount 90 degrees, locking it into place.
- Secure the motor using four M3x8 screws. Tighten them completely.
- ⚠ **Make sure the screws stay straight and do not tilt as you tighten them.**
- Place the whole assembly aside for a while.

ÉTAPE 10 Bottom frame: parts preparation



- **For the following steps, please prepare:**
- ⚠ **Be very careful when handling sharp sheet metal parts to avoid injury or damage.**
- ⚠ **Metal sheet profiles may look identical at first glance, but there are some differences. DOUBLE-CHECK to pick the correct ones.**
- Front profile (1x) **notice the cutouts** - found in the Metal parts 1/3 package
- Rear profile (1x) **with two holes on the flat side** - found in the Metal parts 1/3 package
- Universal profile (2x) **no holes on the flat side** - found in the Metal parts 1/3 package
- Spacer pin (2x) found in the Electronics & Fasteners package
- Vis M3x4rT (4x)


ÉTAPE 11 Assembling the bottom profile: front + left

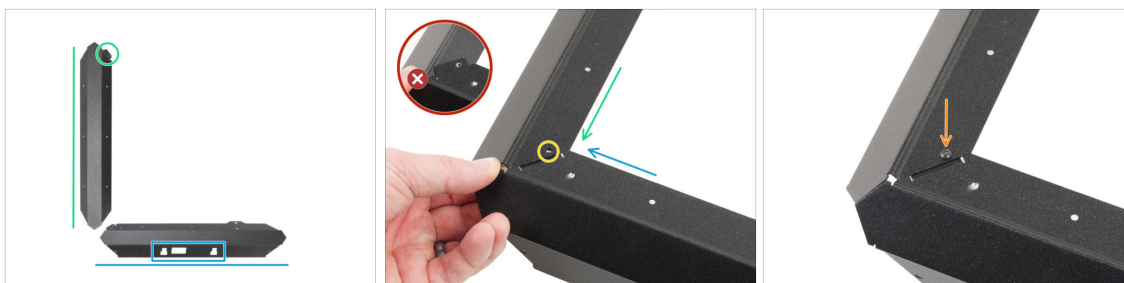

 Be very careful when handling sharp sheet metal parts to avoid injury or damage.

-  Place the front profile according to the picture. The cutouts must be facing you.
-  Place one of the universal profiles on the left side. Orient the part according to the picture. **Use the flange as a guide.**
-  Attach the two profiles together.
-  The flange of the front plate (blue arrow) must be inserted **under** the left universal profile (green arrow), not on top of it.
-  Align the holes in both parts.
-  Join both parts together with the M3x4rT screw.

ÉTAPE 12 Assembling the bottom profile: left + rear

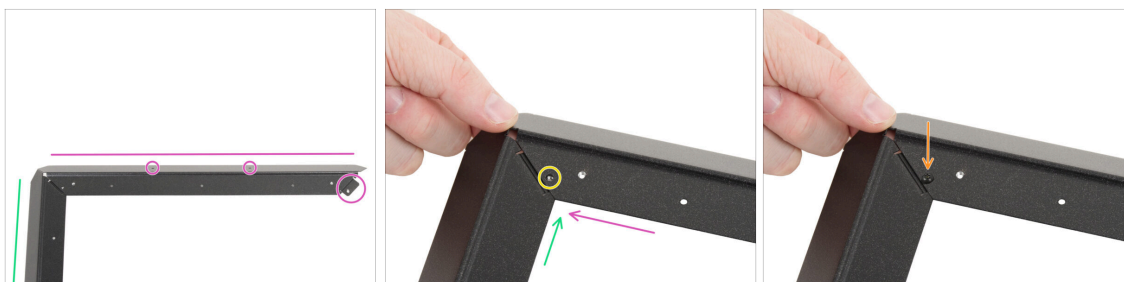

-  According to the picture, place the rear profile (with two holes on the flat side) to the universal left profile. Orient the part according to the picture. **Use the flange as a guide.**
-  Join the rear profile with the universal left profile together.
-  Make sure the flange is under the rear profile, not on top.
-  Align the holes in both parts.
-  Join both parts together with the M3x4rT screw.

ÉTAPE 13 Assembling the bottom profile: right




- Attach the universal right profile between the rear and front profile. **Ensure that:**
 - The **rear** end is **above** the rear profile flange.
 - The **front** flange is inserted **under** the front profile.
- Secure the left profile with M3x4rT on both ends.

ÉTAPE 14 Inserting the spacer pins



- Insert the spacer pin into the hole in the front profile protrusion.
- Push firmly on the spacer pin so that it fits perfectly into the hole.
- Use the same procedure for the second spacer pin.

ÉTAPE 15 Anti-vibration feet: parts preparation

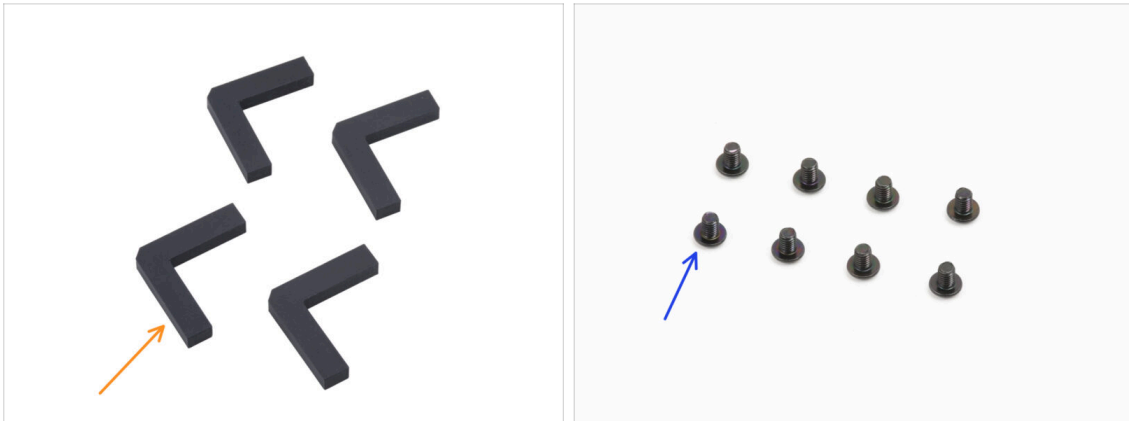

● For the following steps, please prepare:

- Anti-vibration foot (4x) found in the *Electronics & Chamber parts package*
- Vis M3x4rT (8x)

ÉTAPE 16 Installing the anti-vibration feet



- Place the bottom frame according to the picture. The front profile must be facing you.



Before applying the anti-vibration feet, **wipe the metal profiles with isopropyl alcohol** and let them dry. This ensures proper adhesion.

- Peel off the protective layer from all anti-vibration feet.

⚠ **Décollez soigneusement *seulement le film protecteur* de chaque pied anti-vibration. Si la couche adhésive commence à se détacher avec le film, arrêtez-vous et décollez-le d'un autre coin.**

- Stick one anti-vibration foot in each corner of the frame. Align it with the outer edge of the flat side of the profile.

ÉTAPE 17 Installing the bottom frame




- Turn the bottom frame upside down. **The front profile must be facing you.**
- Attach the rear side of the bottom panel assembly to the rear side of the bottom frame.
 - Ensure that the front side of the bottom panel assembly (with two motors) aligns with the front profile of the bottom frame (with cutouts).
- Place all the motor cables inside the center area of the bottom frame to prevent pinching.
- Slowly and carefully lower the bottom panel assembly into the bottom profile.
 - Ensure the assembly fits completely **inside the bottom profile.**
 - Make sure no part of the bottom panel assembly extends outside the bottom frame
- ⚠ **Double-check that no cables are pinched.**

ÉTAPE 18 Mounting the bottom frame: right side




- Focus on the front right corner and right side.
- Slightly lift one of the corners of the bottom panel assembly.
- Align the threaded hole in the bottom panel with the hole in the profile.
- Join both parts together with the M3x4rT screw.
- Move to the rear corner of the right side.
- Align the holes in the base and the profile and secure it with the M3x4rT screw.

ÉTAPE 19 Mounting the bottom frame: rear + left + front

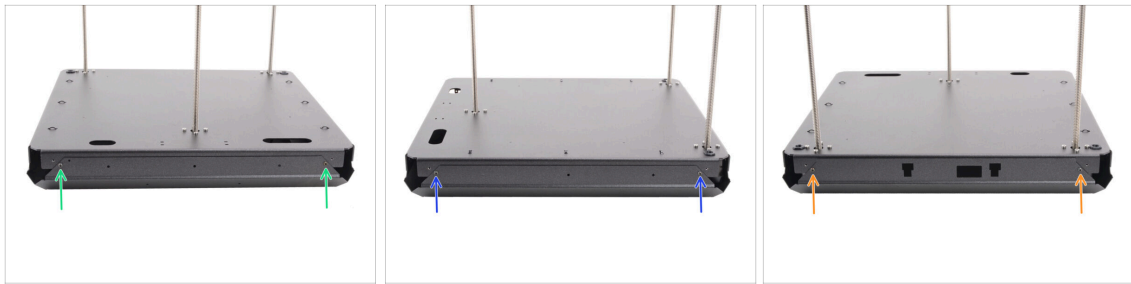

- Move to the rear side of the assembly (side with one Z motor).
- Align holes in the base assembly and the profile and secure it with two M3x4rT screws.
- Focus on the left side of the assembly.
- Align holes in the base assembly and the profile and secure it with two M3x4rT screws.
- Turn the assembly with the front profile facing you (profile with cutouts).
- Align holes in the base assembly with the profile and secure them using two M3x4rT screws.

ÉTAPE 20 C'est l'heure des Haribo

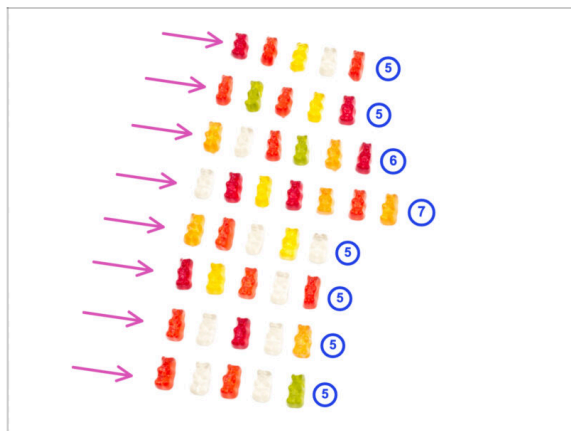

- It's time to reward yourself!
- Stack your gummy bears in eight rows.
- Arrange the number of gummy bears in each row as shown in the picture.
- ① If you don't get the exact number in the last row, we recommend finding the nearest candy store and buying the missing ones.
- Eat the first row.

ÉTAPE 21 Fini




- ◆ **Congratulations!** You just assembled the **base assembly**.
- ◆ Set the assembly aside for now and let's move to the next chapter.

3. Assemblage de l'arrière




ÉTAPE 1 Tools necessary for this chapter

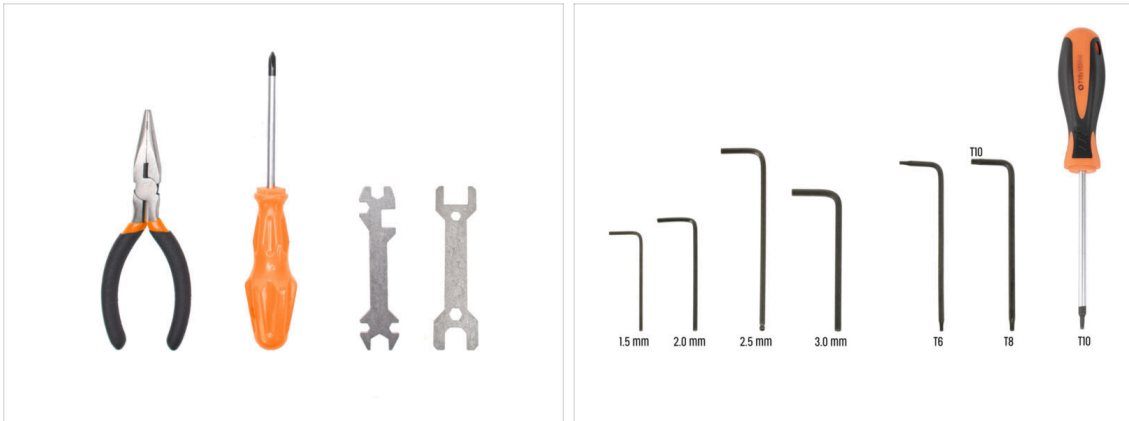

- **For this chapter, please prepare:**
- Tournevis Philips (PH2)
- Pince à bec fin
- Clé Allen de 2,5 mm
- T10 torx key / T10 torx screwdriver

ÉTAPE 2 PSU assembly: parts preparation

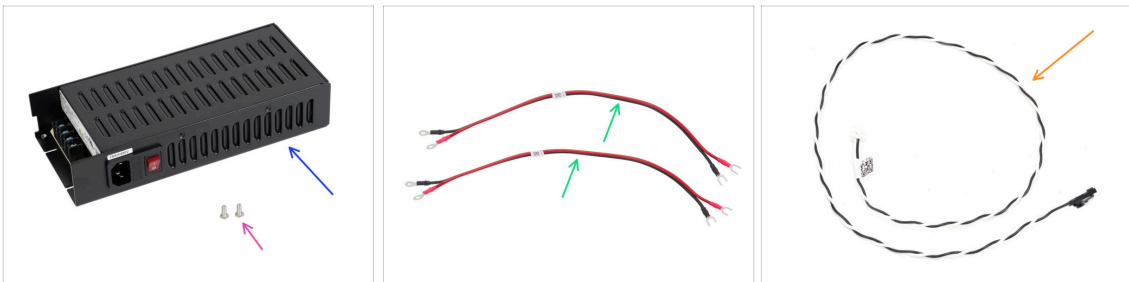


- **For the following steps, please prepare:**
- Delta PSU 240 W 24 V (1x) *power supply*
- M4x6r screw (2x) *from the Fasteners 3/3 package*
- Câbles d'alimentation de la xBuddy (2x) *qui se trouve dans le paquet Électronique*
- Power panic cable (1x) *found in the Electronics package*

ÉTAPE 3 Préparation du bloc d'alimentation



- Insert two M4x6r screws into the left side of the PSU. **Do not tighten them completely.** Leave at least a 4 mm (0.16 in) gap between the screw head and the PSU.
- Slightly loosen all four power terminal screws on the PSU. **Do not remove them.** 3-4 turns are enough.

ÉTAPE 4 Informations sur les câbles d'alimentation

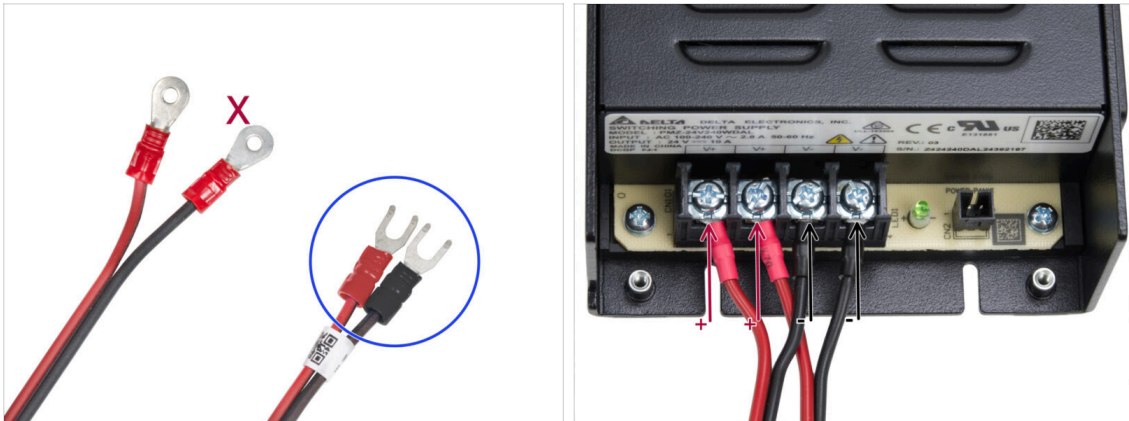

- i** In the following steps, we will be connecting the power cables one by one. The terminal screws are installed on the PSU already. Loosen them but **don't remove them completely** so they don't get mixed up with the other type of screws used on the xBuddy board side of the cable. Each of the two power cables has two leads. One has a prevailing **red color = positive / +**. One has a prevailing **black color = negative / -**.
- Note that the power cables have different connectors on each end. For now, prepare the U-shaped connectors (crimping tube color may vary).
- **Note that the polarity of the terminals on the PSU is:**


 - Positif (V+)
 - Positif (V+)
 - Négatif (V-)
 - Négatif (V-)
- i** The red cable (positive) may have a black stripe on it. Similarly, the black cable (negative) can have a red stripe on it.
- ⚠** **Do not connect any cables yet, wait until you have been prompted.**

ÉTAPE 5 Connexion de l'alimentation




- Take the RED wire and slide the fork connector all the way into the first (positive) terminal from the left on the bottom of the PSU. Make sure the steel washer is above the "fork" connector.
- Tighten the terminal screw firmly.
- Use the same procedure to connect the second red wire to the second terminal slot from the left.
- Connect two black wires to the third and fourth terminal slots using the same procedure.
- Plug the power panic cable to the right most connector.
- Put the assembly aside for a while.

ÉTAPE 6 xBuddy: parts preparation I.

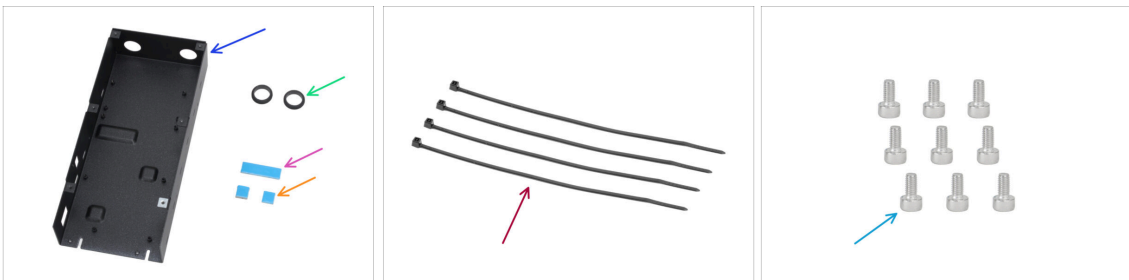


- **For the following steps, please prepare:**
- CORE One xBuddy box (1x) *found in the Metal parts 3/3 package*
- Grommet 19/16 mm (2x) *found in the Electronics & Fasteners package*
- Thermal pad 40x12x2.2 mm (1x) *found in the Electronics & Fasteners package*
- Thermal pad 12x12x2.2 mm (2x) *found in the Electronics & Fasteners package*
- Collier de serrage (4x)
- Vis M3x6 (9x)
- **i** The list continues in the next step...

ÉTAPE 7 xBuddy: parts preparation II.

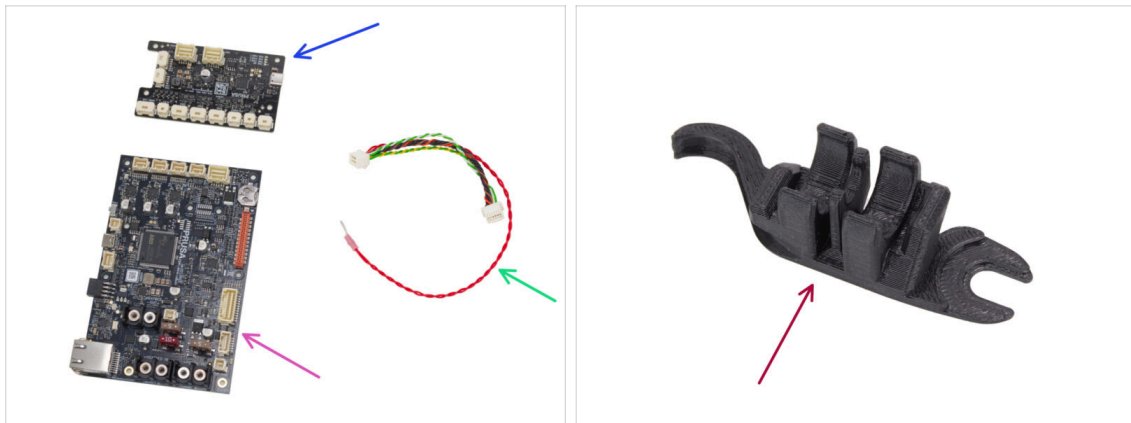


- xBuddy extension board (1x) found in the Electronics & chamber package
- xBuddy board (1x) found in the Electronics package
- xBuddy extension cable (1x) found in the Electronics & Fasteners package
- Assembly-multi-tool (1x) found in the Printed parts package

ÉTAPE 8 Applying the thermal pads

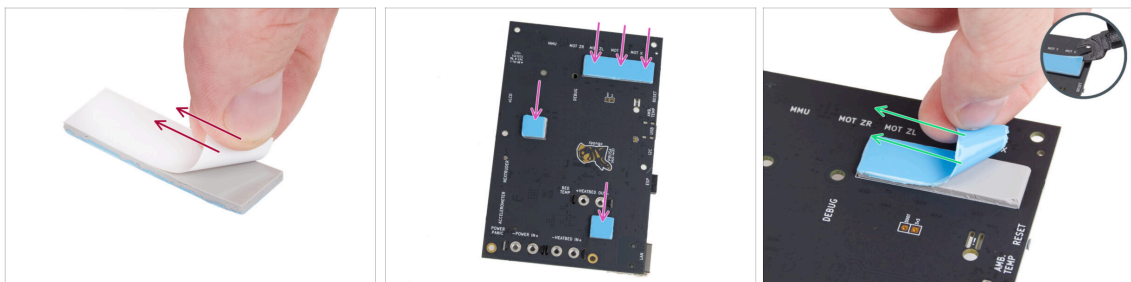


- Peel off the white protective layer from all thermal pads.
 - ⚠ **Always touch the sides of the electronics board while manipulating it. Avoid touching the chips, capacitors and other parts of the electronics.**
- Attach the pads onto the back of the xBuddy board. There are markings that indicate the correct size and positions.
 - ⓘ The surface to which the pads are stuck must be cleaned of grease. This will ensure better adhesion.
- ⚠ **For the protection of the board's electronic components, we strongly recommend placing the xBuddy board on the soft pad. You can use the original xBuddy bubble wrap package.**
- Peel off the blue protective layer from all thermal pads.
 - ⓘ Pro tip: If the edge of the layer is difficult to lift, you can use the thin side of the Assembly-multi-tool to help separate the protective layer.

ÉTAPE 9 Installation de la xBuddy

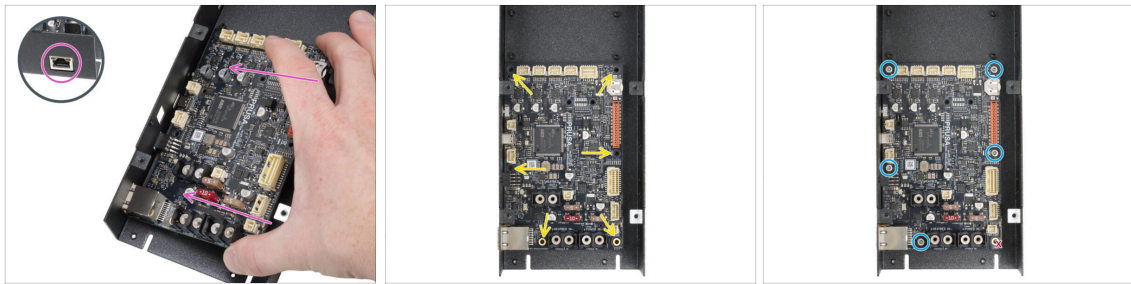


- ⚠ **Always touch the sides of the electronics board while manipulating it. Avoid touching the chips, capacitors and other parts of the electronics.**
- ✿ Insert the xBuddy board to the xBuddy box.
 - ⬛ Make sure the Ethernet connector is properly inserted into the hole in the xBuddy box.
- ✿ **Before fully attaching it completely, center the holes in the board with the holes (columns) in the xBuddy box**
- ⬢ Fix the position of the xBuddy board by inserting five M3x6 screws. Do not fully tighten the screws. A few turns are enough for now.
- ⚠ **Put aside your instinct and leave the hole on the bottom right empty.**
- ⬛ **Fully tighten all five screws. But very carefully, otherwise you can damage the electronics board.**

ÉTAPE 10 Installing the xBuddy extension

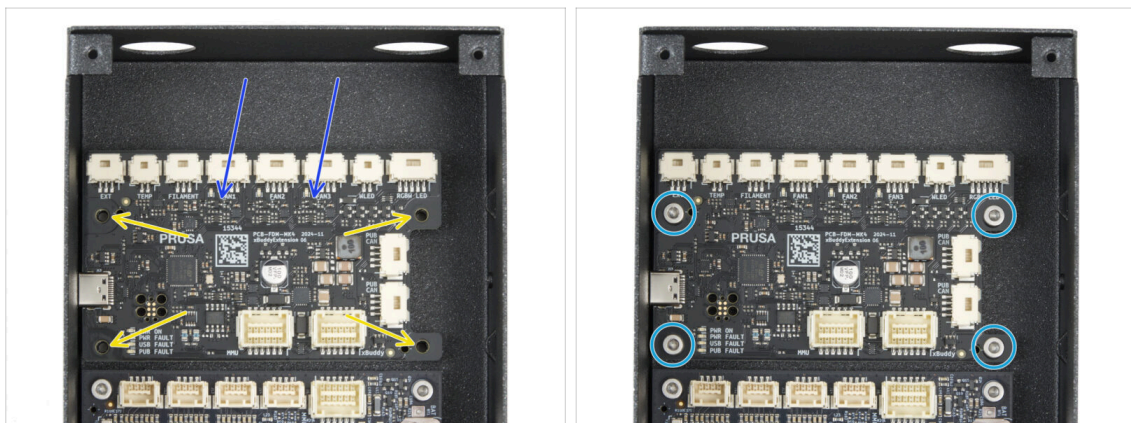


- ⬢ Insert the xBuddy extension board to the xBuddy box above the xBuddy board. Notice the part orientation.
- ✿ Before fully attaching it completely, center the holes in the board with the holes (columns) in the xBuddy box.
- ⬢ Fix the position of the xBuddy extension board by inserting four M3x6 screws. Tighten them completely.

ÉTAPE 11 Installation des colliers de serrage

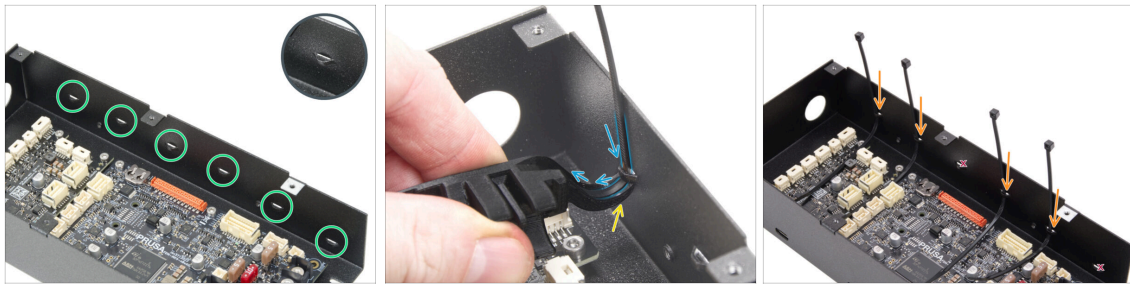

- ◆ Take a closer look at to the xBuddy box. There are six perforations on the metal case.
- ⚠ **Proceed very carefully. Be careful not to damage the connectors or capacitors on the xBuddy board.**
- ◆ Attach the hook on the Assembly-multi-tool below the first perforation on the left.
- ◆ Push the zip tie through the perforation and into the Assembly-multi-tool. It will guide the zip tie into the electronics box.
- ⚠ **Note the correct orientation of the zip tie. The teeth on the zip tie must be on the visible side.**
- ◆ Repeat the process at the indicated perforations.
- ◆ Skip the third and sixth perforations.

ÉTAPE 12 Connecting the xBuddy extension board

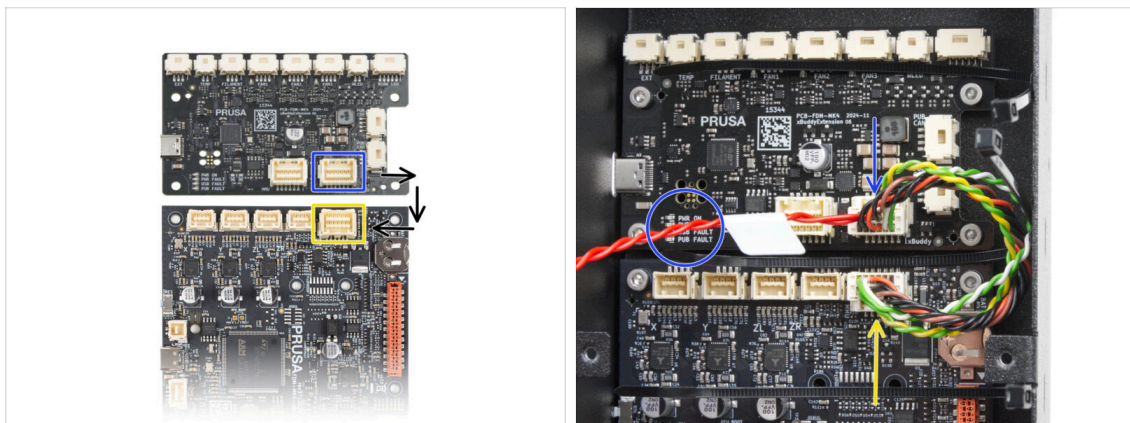

- ◆ Plug the xBuddy extension connector with the free red cable to the xBuddy extension board.
- ◆ Leave the red cable free for now.
- ◆ Plug the other end of the xBuddy extension cable to the xBuddy board.

ÉTAPE 13 Inserting grommets: xBuddy box




- Insert both grommets into both circle holes in the xBuddy box.
- Gently compress the grommet and fit it into the metal sheet, ensuring the groove locks into place

ÉTAPE 14 Wi-Fi : préparation des pièces




- For the following steps, please prepare:
- ESP-WiFi (1x) found in the Electronics package
- CORE-One-Wifi-cover (1x) found in the Printed parts package
- Vis M3x12 (1x)
- Vis M3x6 (2x)

ÉTAPE 15 Assemblage du Wi-Fi

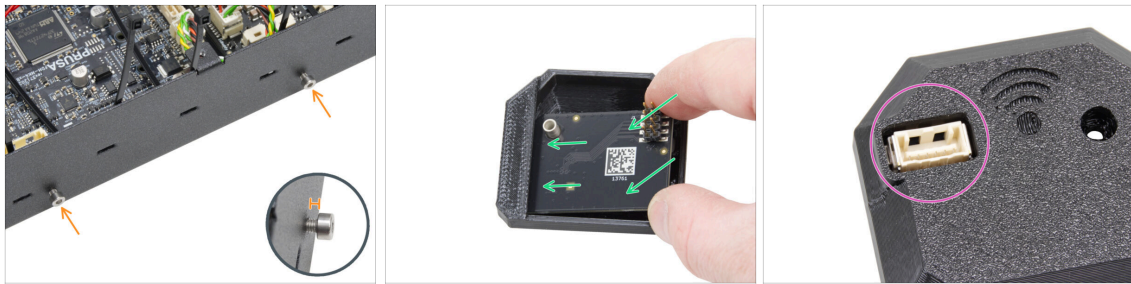


- ✚ Insert two M3x6 screw to the xBuddy box assembly from the right side. **Do not tighten them completely.** Leave at least a 4 mm (0.16 in) gap.
- ✚ Insert the ESP-WiFi module into the WiFi-cover, positioning it just below the bridge on the left side.
- ✚ On the other side, ensure the connector fits correctly into the hole in the cover.

ÉTAPE 16 Installing the Wi-Fi assembly

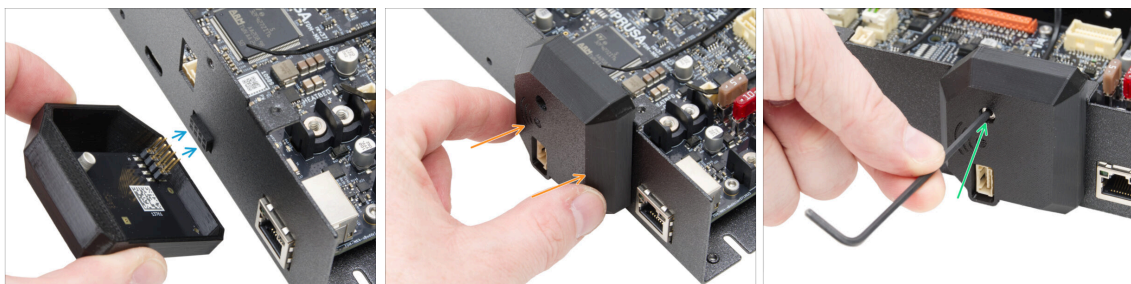

- ⚠ **Be very careful when handling and connecting the ESP module to avoid bending and damaging the pins.**
- ✚ Take the WiFi cover assembly and connect the ESP module pins to the connector in the xBuddy.
- ✚ Close the WiFi cover carefully, ensuring the pins of the ESP module are properly engaged in the connector on the xBuddy.
- ✚ Secure the cover with the M3x12 screw.
- ⬛ Put the assembly aside for a while.

ÉTAPE 17 Back panel: parts preparation

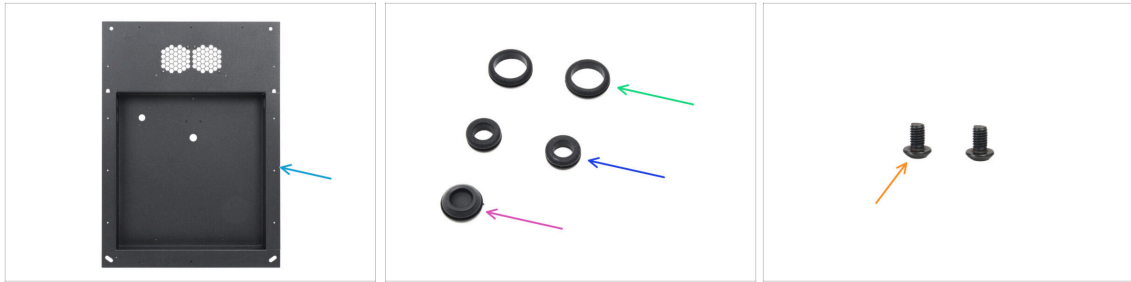

For the following steps, please prepare:


- Back panel (1x) *found in the Metal parts 1/3 package*
- Grommet 19/16 mm (2x) *large one - found in the Electronics & Fasteners package*
- Grommet 13.5/10 mm (2x) *small one - found in the Electronics & Fasteners package*
- Sealing plug 15.5 mm (1x) *found in the Electronics & Fasteners package*
- Vis M3x4rT (2x)

ÉTAPE 18 Installing grommets: back panel top




- Position the back panel as shown in the first image. Use the two oval holes as a reference.
- Insert the sealing plug into the center hole.
 - The sealing plug is not symmetrical.** Insert the side with the smaller diameter facing downward.
- Insert one small grommet to the left circle hole.
- Insert one small grommet into the oval hole.

ÉTAPE 19 Installing grommets: sides + bottom

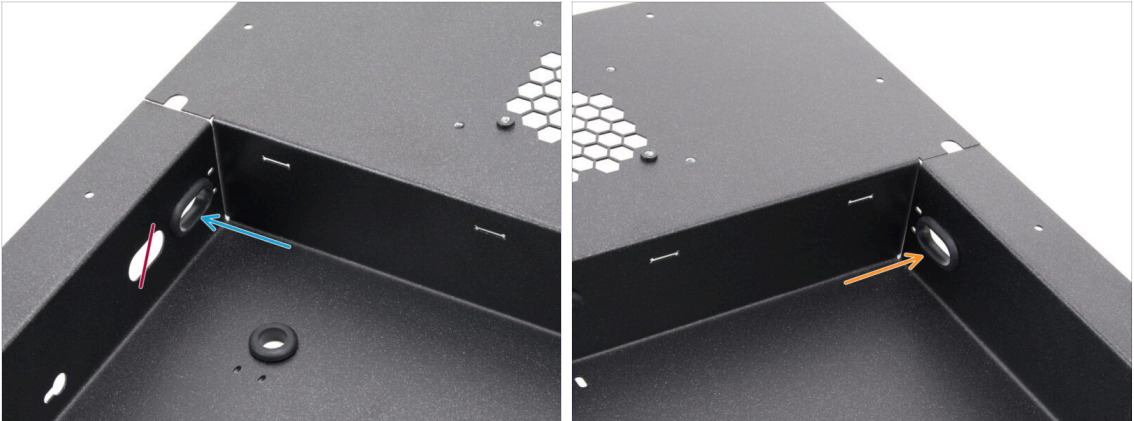


- Focus on the left top side of the back panel and locate two oval holes.
- Insert one large grommet into the oval hole closest to the corner.
- Déplacez-vous vers le côté supérieur droit du panneau arrière et insérez un grand œillet dans le trou ovale.

ÉTAPE 20 Alignement du bloc d'alimentation

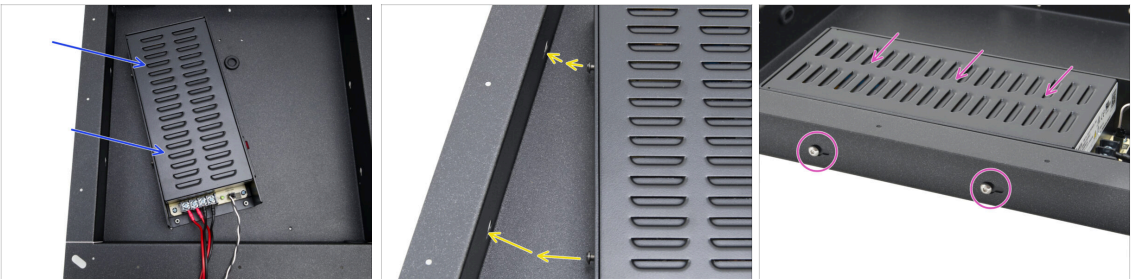


- Carefully insert the PSU into the rear panel pocket.
- Align the screws on the PSU to the holes on the left side of the back panel.
- Faites glisser le bloc d'alimentation de manière à ce que les vis traversent les trous.

ÉTAPE 21 Montage du bloc d'alimentation

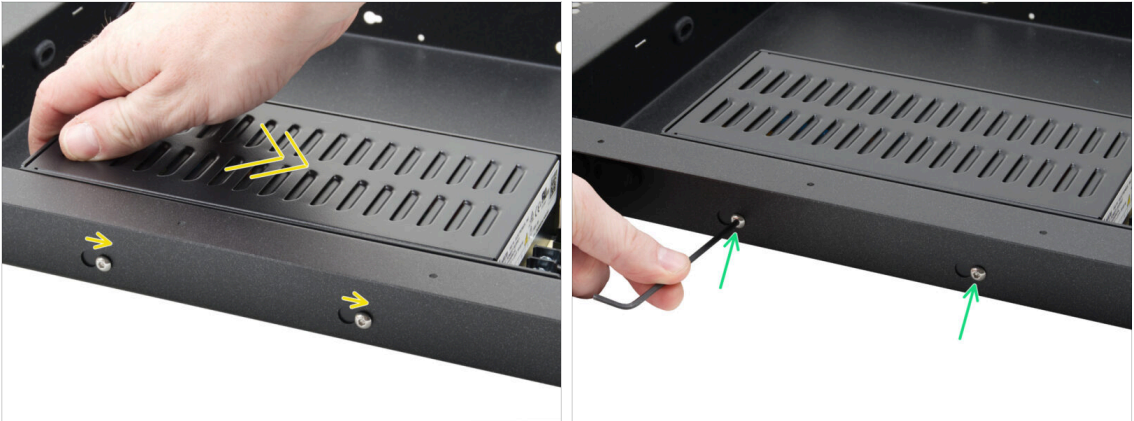


- Gently slide the PSU so that the position of the screws moves to the end position of the keyhole-shaped holes.
- Maintain the PSU position and fully tighten both screws.

ÉTAPE 22 Aligning the xBuddy box assembly

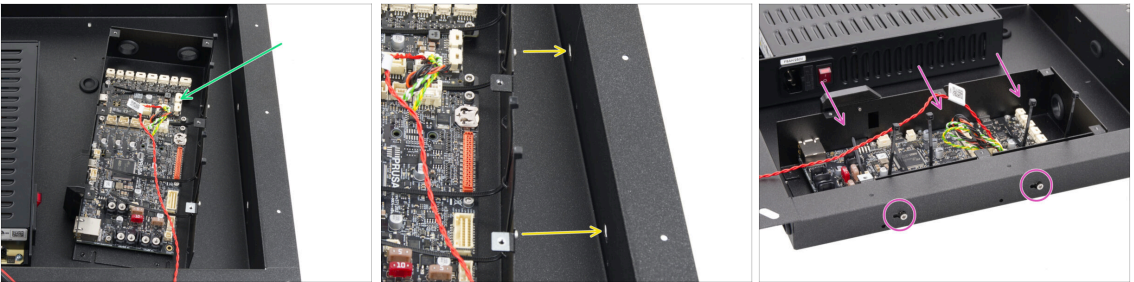


- Carefully insert the xBuddy box assembly into the rear panel pocket.
- Align the screws on the xBuddy box to the holes on the right side of the back panel.
- Faites glisser le boîtier de la xBuddy de manière à ce que les vis traversent les trous.

ÉTAPE 23 Mounting the xBuddy box

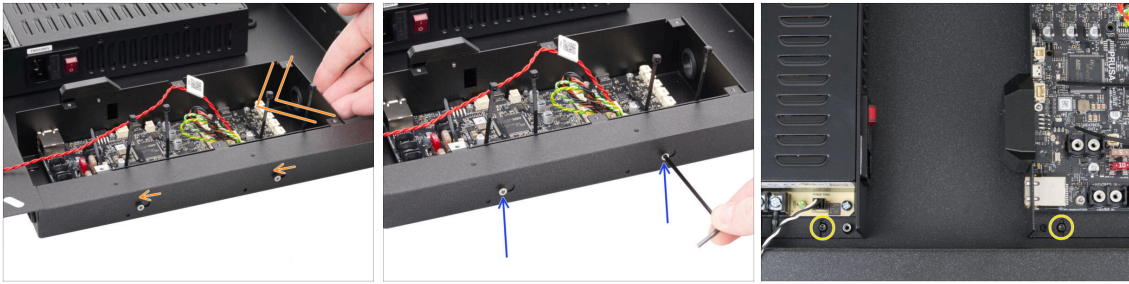


- 🟠 Gently slide the xBuddy box assembly so that the position of the screws moves to the end position of the keyhole-shaped holes.
- 🟡 Maintain the xBuddy box position and fully tighten both screws.
- 🟡 Fixez le bloc d'alimentation et l'assemblage du boîtier de la xBuddy au panneau arrière en serrant les deux vis M3x4rT.

ÉTAPE 24 Power cables cover: parts preparation

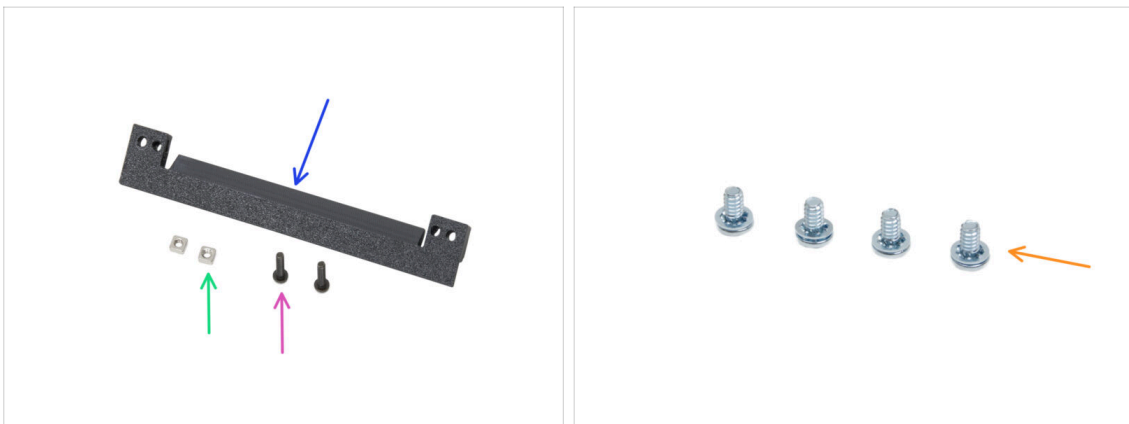


- ⬛ **For the following steps, please prepare:**
- 🟡 PSU-cable-cover (1x) *found in the Printed parts package*
- 🟢 Écrou M3nS (2x)
- 🟡 Vis M3x10rT (2x)
- 🟠 6-32 Power Terminal Screw (4x)

ÉTAPE 25 Connecting the power cables

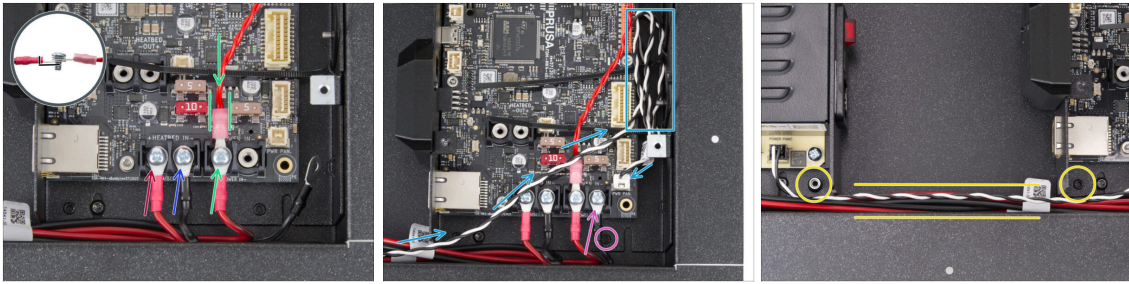


- Take one red cable leading from the PSU and connect it to the first left terminal slot on the xBuddy board using the 6/32" terminal screw. Tighten it firmly but gently.
 - ⚠ Note that the "L" shape of the cable connector must always "undercut" the head of the terminal screw.
- Connectez le câble d'alimentation noir de la même paire que le rouge à la deuxième borne à l'aide de la vis de borne 6/32". Serrez fermement les vis.
- Take the second red cable from the PSU and attach it to the red cable leading from the extension board. **Note the detail.** Secure these two cables with the terminal screw in the third terminal slot.
 - Guide the xBuddy extension cable carefully between the fuses, ensuring it is positioned securely without pressing against them.
- ⓘ **Note that from early 2025, the fuses are different.** Significantly smaller, white, and embedded in the fuse slot in the xBuddy board, so as not to obstruct the cables.
- Connect the second black PSU cable to the xBuddy, **ensuring it does not obstruct the threaded hole.**
- Route the power panic cable to the xBuddy box and connect it to the bottom right slot on the xBuddy board. Make several loops from the excess cable above the slot.
- Arrange the PSU cables as shown, ensuring that no obstructions are around the threaded holes in the PSU and xBuddy box.

ÉTAPE 26 Préparation du PSU-cable-cover

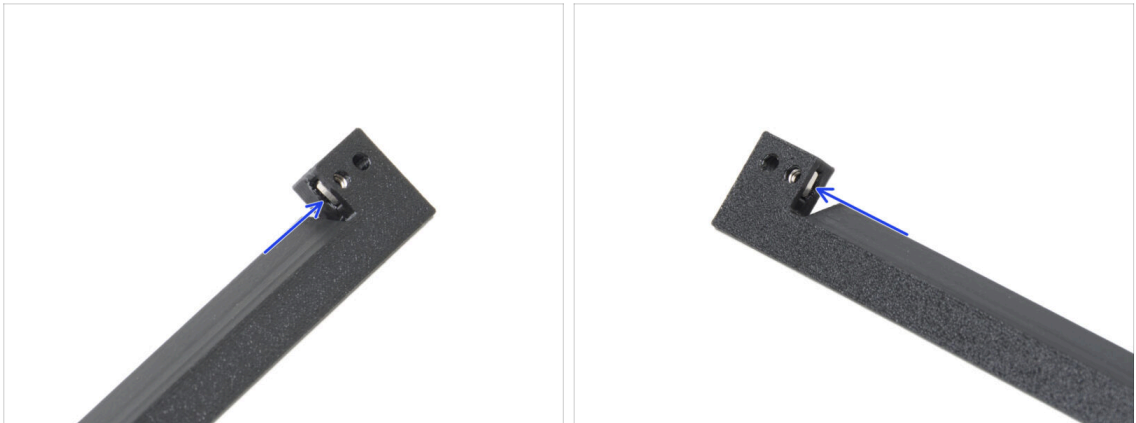


- Insert one M3nS nut into the hole on each end of the PSU-cable-cover.
- Ensure the holes are aligned.

ÉTAPE 27 Covering the PSU cables

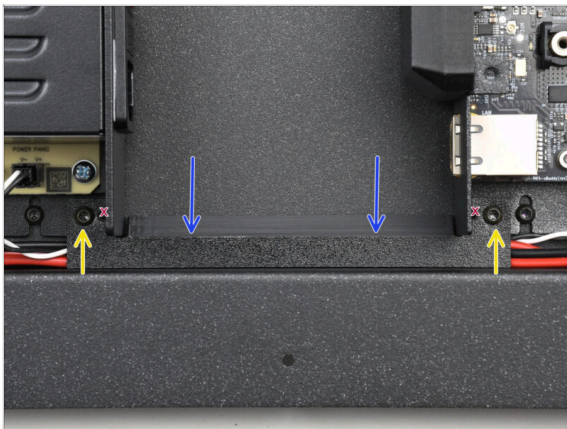

- Attach the PSU-cable-cover on the PSU cables.
- Secure the cover with two M3x10rT screws in the outermost holes of the part.


ÉTAPE 28 Chamber fans: parts preparation

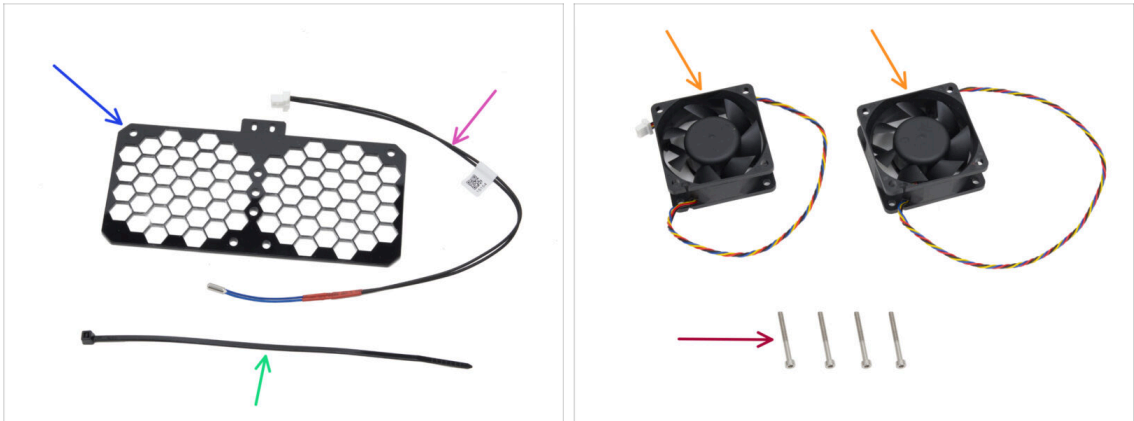

● **For the following steps, please prepare:**



- Fan grid (1x) *found in the Electronics & Chamber parts package*
- Thermistance de la chambre 260 mm (1x) *qui se trouve dans le paquet Électronique & Pièces de la chambre*
- Collier de serrage (1x)
- Cooling fan (2x) *found in the Electronics & Chamber parts package*
- Vis M3x30 (4x)

ÉTAPE 29 Assembling the fan grid

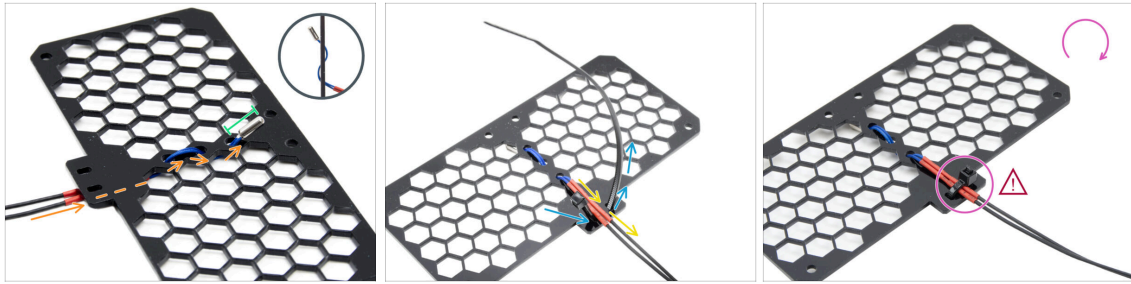



- Guide the thermistor cable under the grid. Thread it in the direction shown in the picture.
- ① The grid has both sides the same.
- Laissez toute la pièce de la thermistance dépasser.
- Turn the grid over and push the zip tie through the pair of holes on the grid's protrusion.
- Route the thermistor cable in between the zip tie parts.
- Carefully secure the thermistor cable by tightening the zip tie. **Do not overtighten it, it may damage the cable.**
- ⚠ **Make sure that the header of the zip tie is facing the same way as in the picture. It must be on the same side as where the cable starts.**
- Put the assembly aside for a while.

ÉTAPE 30 Fixation des ventilateurs

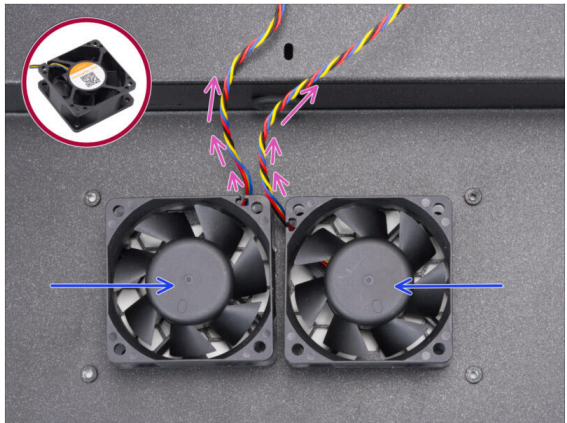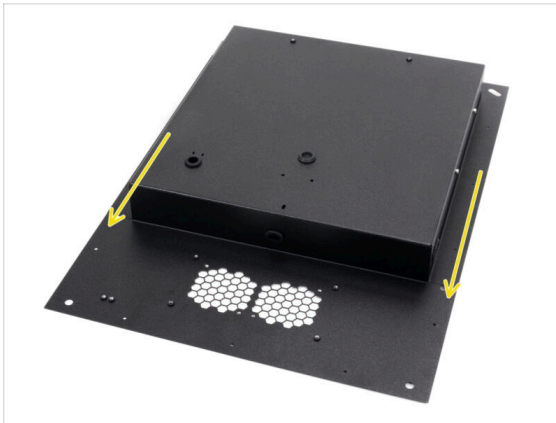

- ✦ Place and orient the back panel according to the picture. The grid cutouts must be facing you.
- ✦ Place both fans to the grid in the back panel.
 - ⚠ **Le côté du ventilateur sans l'autocollant doit être orienté vers le haut.**
 - ✦ Orient the fans so that the cables run from the corners in the centre.
 - ⬛ Let the cables hang freely for now, ensuring they are not pinched during handling.

ÉTAPE 31 Covering the cooling fans

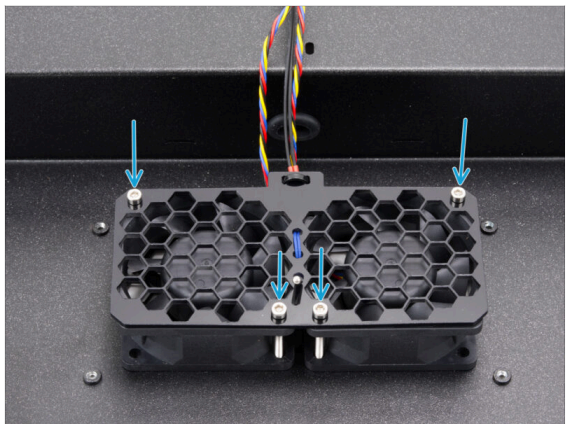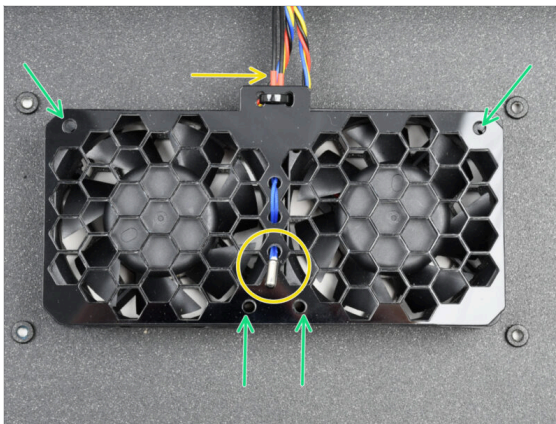

- ✦ Place the fan grid assembly on the cooling fans.
 - ⚠ **Make sure that the thermistor is pointing up and its cable runs under the grid.**
- ✦ Alignez les trous des ventilateurs, de la grille de ventilation et du panneau arrière.
- ✦ Secure the fan assembly to the back panel with four M3x30 screws.
 - ⚠ **Do not overtighten the screws to avoid damaging the grid.**

ÉTAPE 32 Rear profiles: parts preparation



For the following steps, please prepare:

- Rear profile (2x) found in the Metal parts 1/3 package

i Prenez les deux plus longs.

Notez que les deux autres plus longs diffèrent par des découpes.

- Rivet en nylon (11x)
- Vis M3x4rT (4x)
- 2.9x6.5sT self-tapping screw (1x) from the Electronics and Fasteners Package

ÉTAPE 33 Installing the rear profiles




- Take the bottom assembly and turn it so the rear side (with one motor in the center) faces you.



Focus on the right rear corner—the side with the longest oval opening in the bottom panel.


- Fixez le profilé arrière au coin droit, à l'aide de l'**extrémité sans brides**.
- Align the hole on the rear side and secure it with the M3x4rT screw.
- Secure the corner on the other side with a second M3x4rT screw - each corner will be secured with two M3x4rT screws.
- Proceed the same with the second rear profile on the rear left corner.

ÉTAPE 34 Mounting the back panel

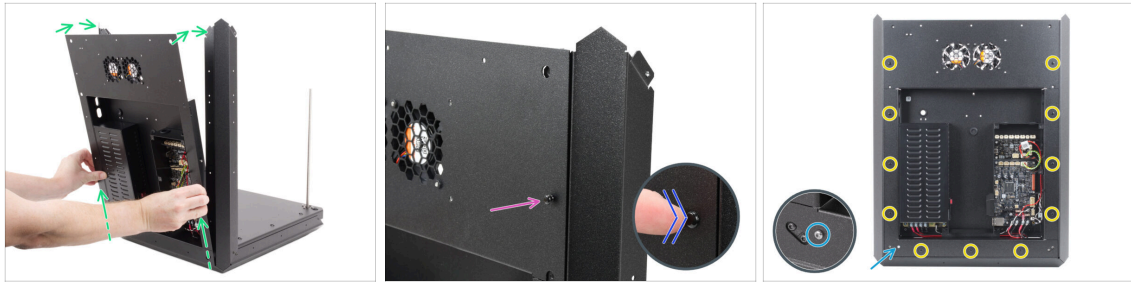

- ◆ Slightly lift the back assembly and gently place it on the base assembly and rear profiles.
- ◆ Insert one nylon rivet through the rear panel and rear profile on the top right side.
- ◆ Poussez la tête du rivet avec votre doigt jusqu'à ce qu'il soit complètement inséré.
- ◆ Use this procedure for all eleven nylon rivets around the back panel assembly to secure it in place.
- ◆ Insert and tighten the 2.9x6.5 self-tapping screw into the back panel. **Avoid overtightening** to prevent stripping the self-tapped thread.

ÉTAPE 35 Stepper splitter: parts preparation

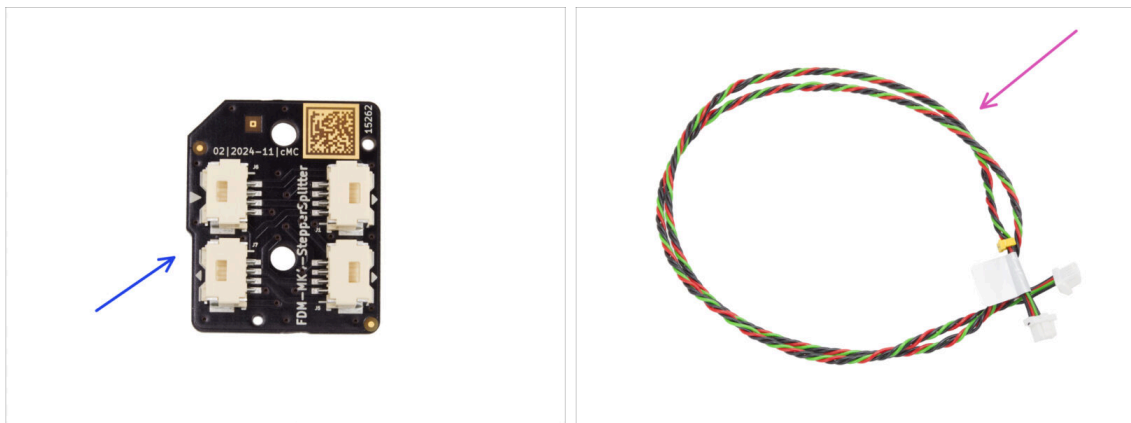


- ◆ **For the following steps, please prepare:**
- ◆ Stepper splitter (1x) *found in the Electronics & Chamber parts package*
- ◆ Câble de la carte splitter des moteurs pas-à-pas (1x) *qui se trouve dans le paquet Électronique & Visserie*

ÉTAPE 36 Guiding the Stepper splitter cable




- ◆ Very carefully turn the assembly on its back (back panel).
 - ◆ **It is recommended to support the rear of the assembly** with a soft, raised pad to prevent it from resting on the protruding Wi-Fi module.
 - i Conseil : utilisez le rembourrage en mousse du paquet des pièces en tôle ou un carton vide.
- ◆ Guide the Stepper splitter cable through the three zip ties on the left side.
 - ◆ For now, leave the side with the label hanging freely outside.
- ◆ Guide the Z-axis motor R cable through the three zip ties on the left side.
 - ⚠ **Do not tighten the zip ties at this moment.**

ÉTAPE 37 Connecting the Stepper splitter

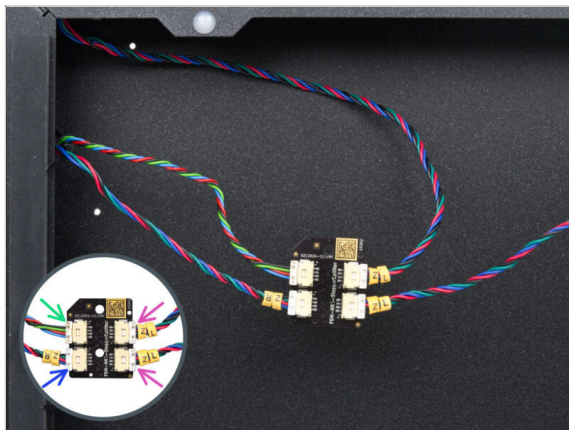


- ◆ **Connect the Z motor cables to the stepper splitter:**
 - ◆ Câble de la carte splitter des moteurs pas-à-pas
 - ◆ Moteur R de l'axe Z
 - ◆ Moteur L de l'axe Z
 - ◆ Moteur L de l'axe Z

ÉTAPE 38 Mounting the Stepper Splitter

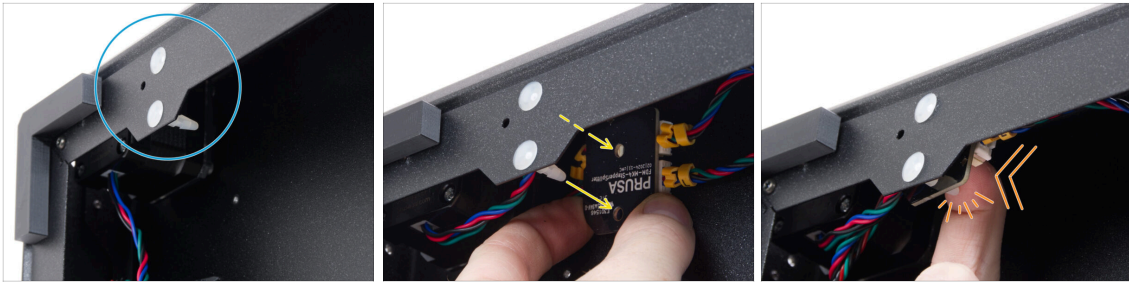

- 🔵 Locate two spacer pins in the bottom frame.
- 🟡 From the inside of the frame, prepare the Stepper splitter and attach its holes opposite the pins.
 - ⬛ Vérifiez la bonne orientation de la pièce grâce au logo sur la carte. **Le logo est à l'envers.**
- 🟠 Push the aligned Stepper Splitter onto the pins until you feel a click - this secures the Stepper Splitter. Push in the center of the board.
 - 📖 ⓘ It is necessary to apply a significant pressure to seat the part in. Yet, be very careful not to damage the components.

ÉTAPE 39 LCD cable: parts preparation

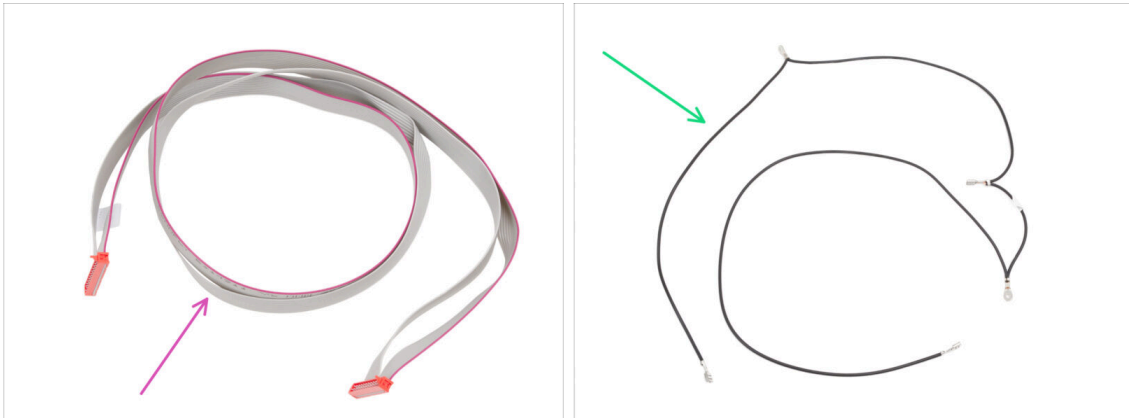


- ⬛ **For the following steps, please prepare:**
- 🟡 xLCD cable (1x) *found in the Electronics & Fasteners package*
- 🟢 Câble FE principal (1x) *qui se trouve dans le paquet Électronique & Visserie*

ÉTAPE 40 Guiding the LCD cable




- Guide the Stepper splitter cable through the oval hole to the electronics.
- Take the end of the xLCD cable with the QR code label.
- Poussez quelques centimètres du câble du xLCD (l'extrémité avec l'étiquette QR code) à travers le trou ovale du panneau inférieur.
- **i** The cable must be slightly folded to pass through the hole.
- Guide the xLCD cable through the zip ties on the left side of the frame.
- Guide the xLCD cable through the rectangular opening in the front profile. Keep protruding approximately 6 cm (2.36 in).
- Leave the cable hang freely for now.

ÉTAPE 41 Main FE cable INFO

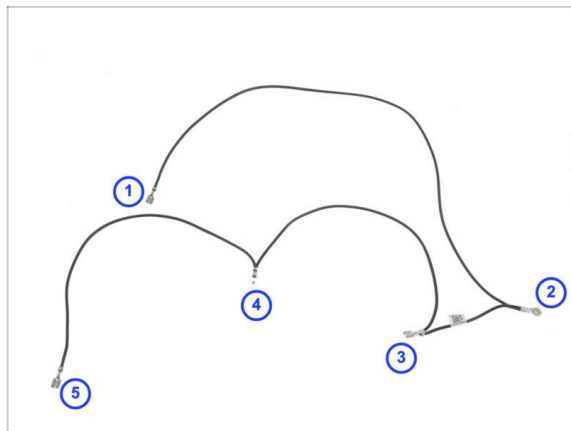

- Lay out the Main FE cable as shown in the picture, ensuring each connector is positioned accordingly.
- The connectors are numbered in the picture for reference only. This numbering will be used in the following steps to help with proper connections.
- **i** Remarque : nous indiquerons toujours quel connecteur utiliser dans les étapes suivantes. Il est toutefois judicieux de garder à l'esprit cet aperçu pour faciliter le montage.

ÉTAPE 42 Connecting the FE cable (no 3.)

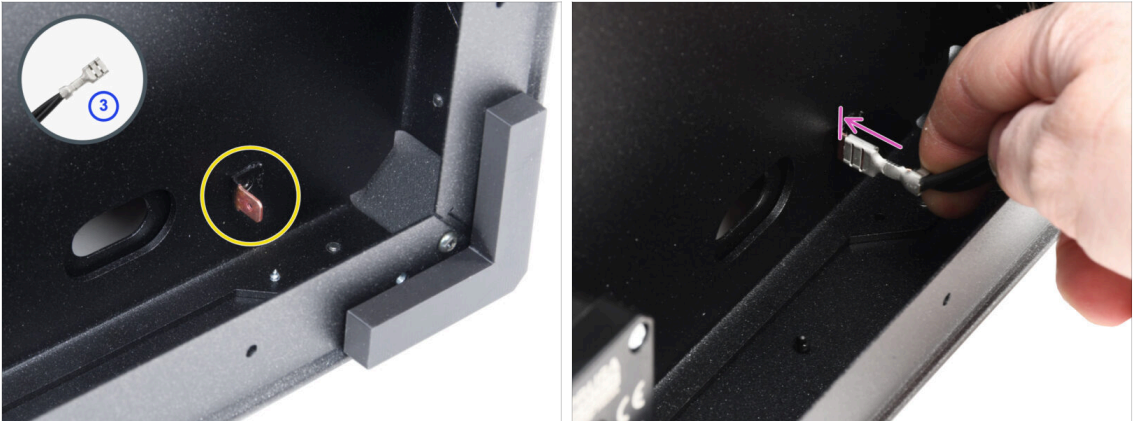


- Prepare the connector number 3.
 - ⓘ That's the female faston connector in the middle of the cable.
- Localisez le connecteur Faston mâle dans le coin inférieur droit.
- Slide the FE cable connector completely onto the Faston connector.

ÉTAPE 43 Guiding the FE cable (no. 2)




- Take the FE cable connector number 2.
 - ⓘ The round connector nearby.
- Insérez le connecteur sans serrer dans le trou du panneau inférieur.

ÉTAPE 44 Guiding the FE cable (no. 1)

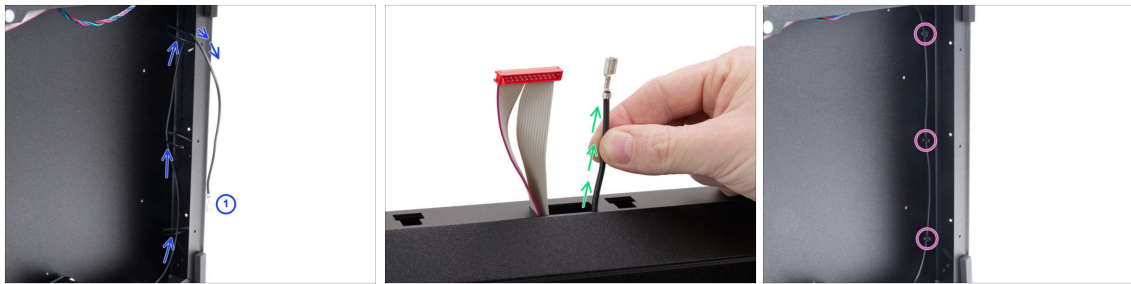


- Take the connector number 1 and guide it through the zip ties on the right side of the frame.
- ❗ That is the long part with just one faston connector at the end.
- Poussez le connecteur à travers l'ouverture rectangulaire du profilé avant. Laissez dépasser d'environ 6 cm (2,36 in).
- Leave the cable hang freely for now.
- Tighten all three zip ties. Cut off the excess.

ÉTAPE 45 Guiding the FE cable (no. 4 and 5)

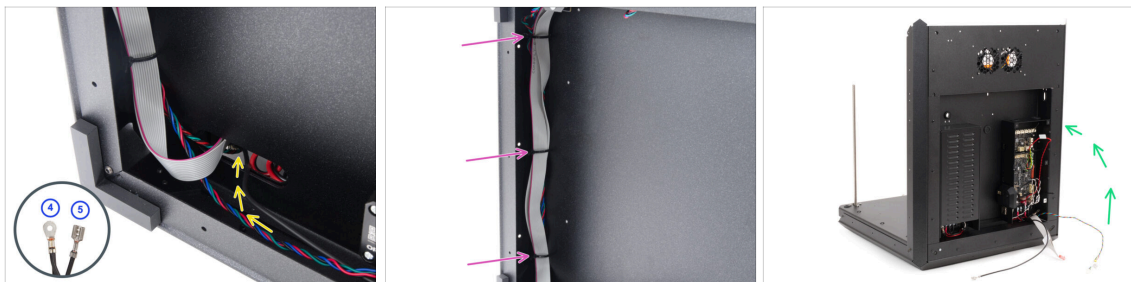

- Take the FE cable connectors number 4 and 5.
- Push both connectors through the leftmost hole in the bottom. Leave them free for now.
- Serrez les trois colliers de serrage sur le côté gauche du cadre. Coupez l'excédent.
- There's no need to fully tighten the zip ties. However, the cables must still be easy to move for any necessary length adjustment during connection.
- Carefully turn the printer back on its feet. Focus on the back side.

ÉTAPE 46 FE cable - xBuddy: parts preparation

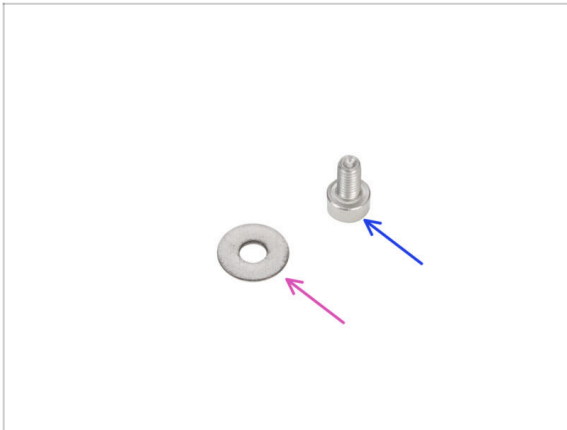

● For the following steps, please prepare:

● Rondelle M3w (1x)

● Vis M3x6 (1x)

ÉTAPE 47 Connecting the FE cable: xBuddy




- Take the connector number 4 and connect it to the xBuddy using the M3x6 screw and M3w washer.

⚠ The M3 washer must be between the screw head and the connector.


- Guidez le câble FE (numéro 5) le long du boîtier de la xBuddy et faites-le passer à travers les trous du côté droit hors du boîtier.
- Guide the Stepper splitter cable alongside the xBuddy box and connect it to the second slot from the right in the top row on the xBuddy board (labeled ZR).

ÉTAPE 48 Plugging the xLCD cable

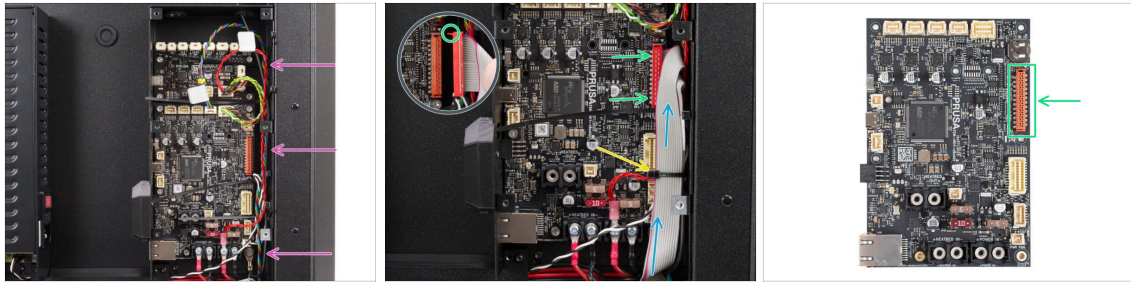


- ◆ Arrange the cables as shown - route all cables along the right side of the xBuddy box.
- ⚠ Make sure all the cables guide through the zip ties in the xBuddy box, not under them.
- ◆ Placez le câble du xLCD sur les autres câbles et acheminez-le vers le haut.
- ◆ Connect the xLCD to the slot on the right side of the xBuddy. **Note the safety latch on the xLCD cable connector. The latch must fit into the upper side of the connector.**
- ◆ Secure the cable arrangement by tightening the bottom zip tie.
- ⚠ Do not overtighten the zip tie, as it may damage the wires.
- ◆ Carefully cut off the excess length of the zip tie. **Avoid cutting cables!**

ÉTAPE 49 PSU-cover : préparation des pièces : préparation des pièces

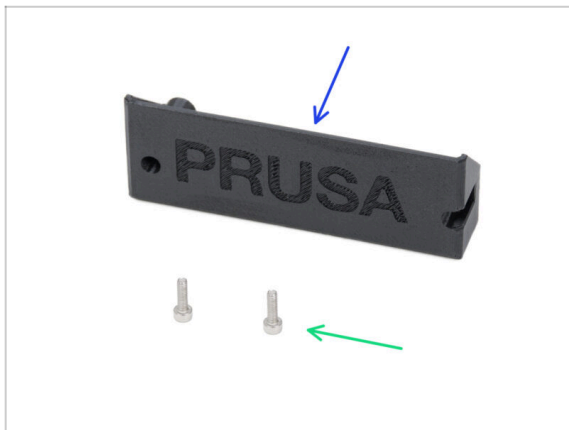


- ◆ For the following steps, please prepare:
- ◆ CORE-One-PSU-cover (1x) found in the Printed parts package
- ◆ Vis M3x10 (2x)

ÉTAPE 50 Connecting the FE cable: PSU

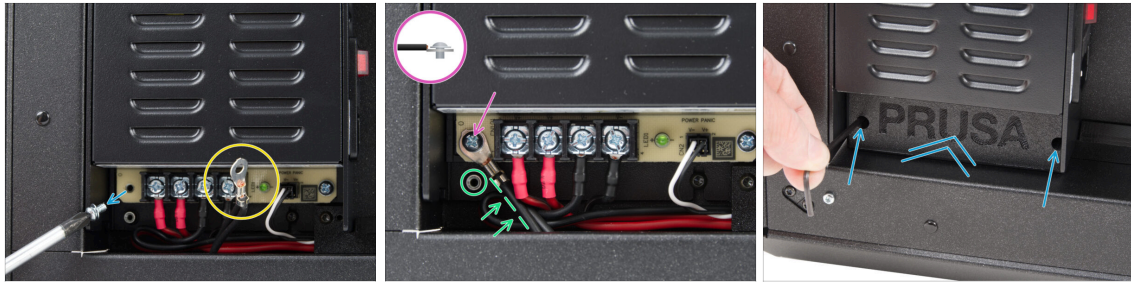

- Remove the screw from the PSU board. **Do not discard it!**
- Ensure the FE connector (number 2) is routed into the PSU compartment.
- Insérez la vis retirée dans le connecteur du câble FE et revissez-la sur la carte d'alimentation.
- Note the correct orientation of the connector.
- Rotate the connector counter-clockwise, positioning it so it doesn't block the threaded hole underneath.
- Attach the PSU-cover over the PSU connectors and secure with two M3x10 screws.

ÉTAPE 51 C'est l'heure des Haribo

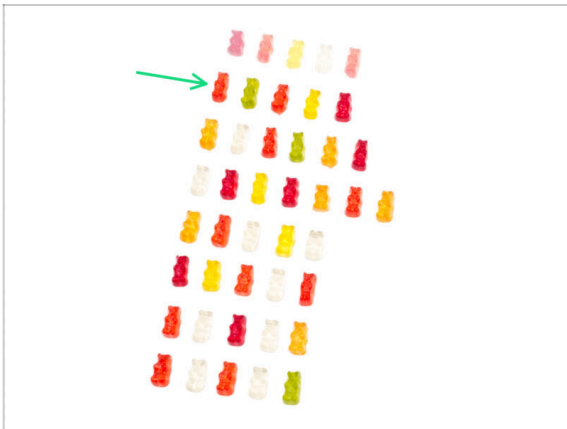

- Time to recharge for the next chapter!
- Eat the second row.
- ⚠ **Pas de triche — mangez uniquement le nombre indiqué !**

ÉTAPE 52 Fini




- Congratulations! The back assembly is installed.
- Now continue to the next chapter.

4. Assemblage du plateau chauffant




ÉTAPE 1 Outils nécessaires pour ce chapitre

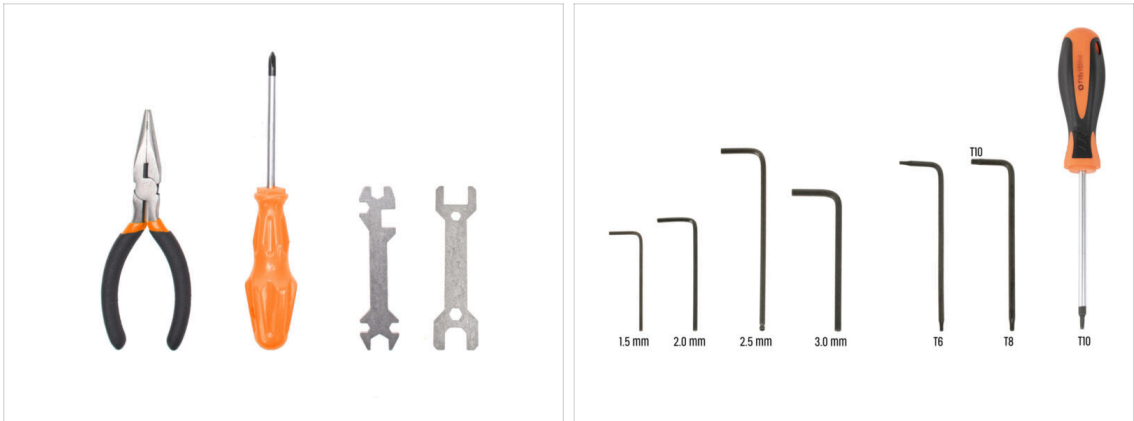

● **For this chapter, please prepare:**

- Pince à bec fin
- Clé universelle
- Clé 13-16
- Tournevis Philips (PH2)
- Clé Allen de 2,5 mm
- Clé Allen de 2,0 mm
- Clé Torx T10 / Tournevis Torx T10


ÉTAPE 2 Plateau chauffant : préparation des pièces

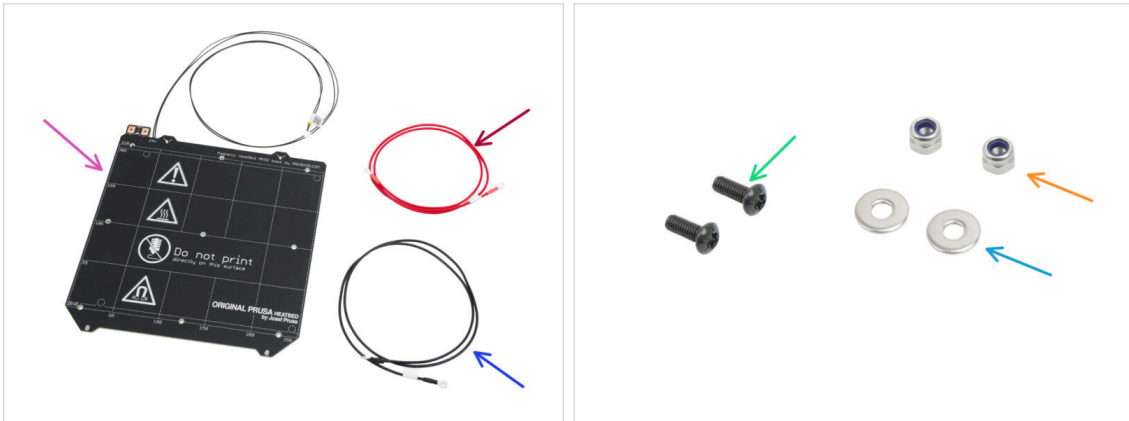

For the following step please prepare:


- Heatbed MK52 24V (1x) found in the CoreXY parts + Hinges set package
- Heatbed cable red (1x) found in the Electronics & Fasteners package
- Heatbed cable black (1x) found in the Electronics & Fasteners package
- Vis M3x10rT (2x)
- Écrou M3nN (2x)
- Rondelles M3w (2x)

ÉTAPE 3 Assemblage du câble du plateau chauffant (partie 1)

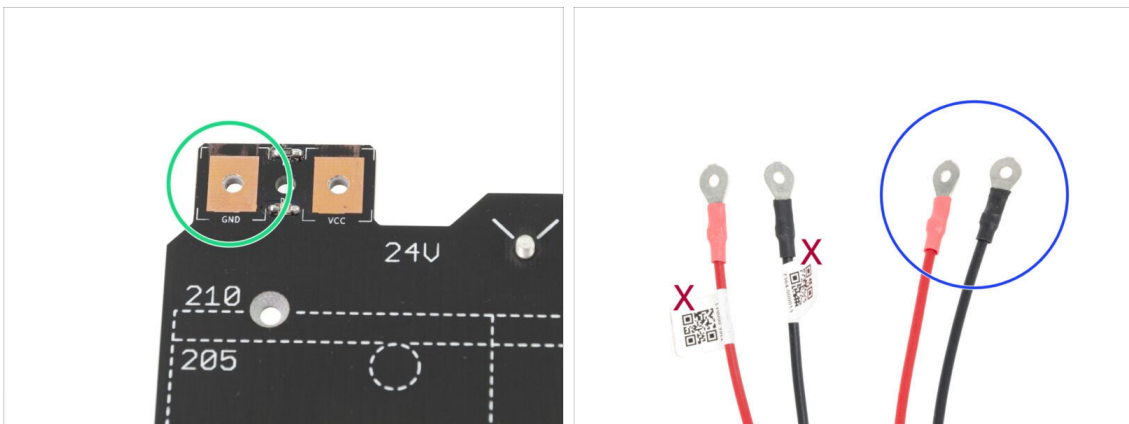


- IT IS IMPORTANT** to connect the power cable correctly. Before you start the assembly have a look at the pins. The one on the left with "GND" sign must be connected to the **BLACK WIRE**.
- Take both Heatbed cables. Note the label on each cable. For the following steps, prepare the ends of the cables **without the label**.

ÉTAPE 4 Assemblage du câble du plateau chauffant (partie 2)

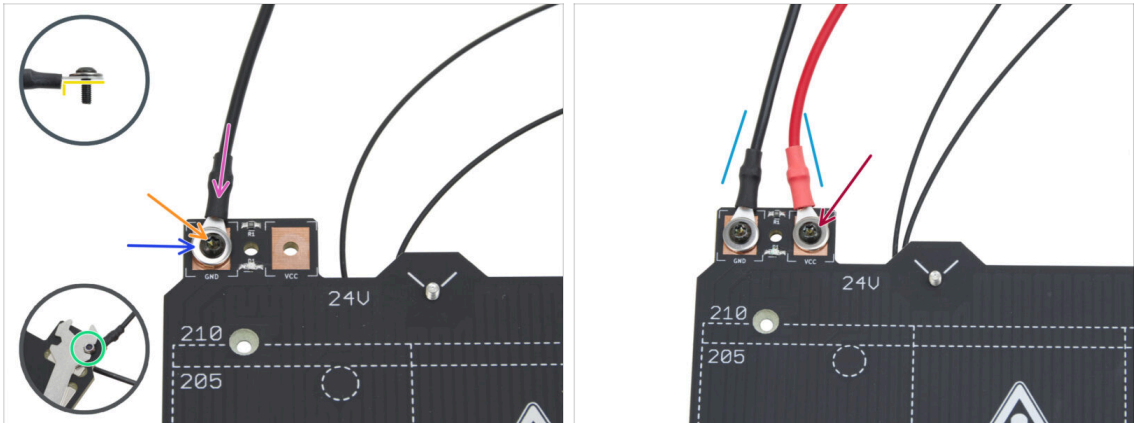


- Place the black wire above the pin with "GND" sign. **Use the end of the cable that is not labeled with QR code.** The QR code must be at the other end.
- Note the correct position of the cable terminal lug on the detail.
- Place the M3w washer above the round cable connector.
- Push the M3x10rT screw through all parts.
- Hold the screw and carefully turn the heatbed upside down.
- Fixez l'écrou M3nN sur la vis M3x10rT et serrez-le légèrement.
- En utilisant la même procédure, fixez le câble rouge à la broche étiquetée "VCC" sur le plateau chauffant.
- Guidez légèrement les câbles du plateau chauffant l'un vers l'autre (en forme de "V"). **Serrez ensuite fermement les écrous par le dessous.**

ÉTAPE 5 Bed-cable-cover-bottom : préparation des pièces

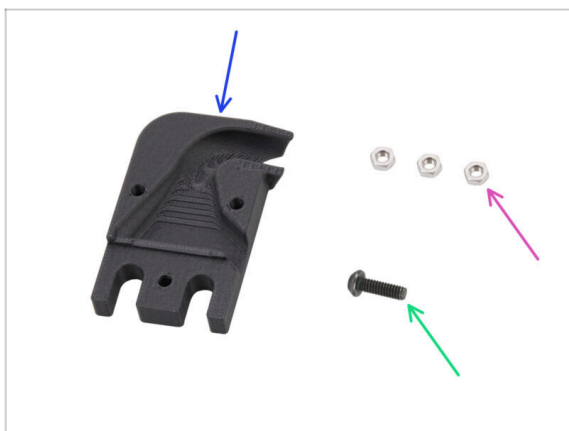

- **For the following steps, please prepare:**
- Bed-cable-cover-bottom (1x)
- Écrou M3n (3x)
- Vis M3x10rT (1x)

ÉTAPE 6 Fixation du cache-câble

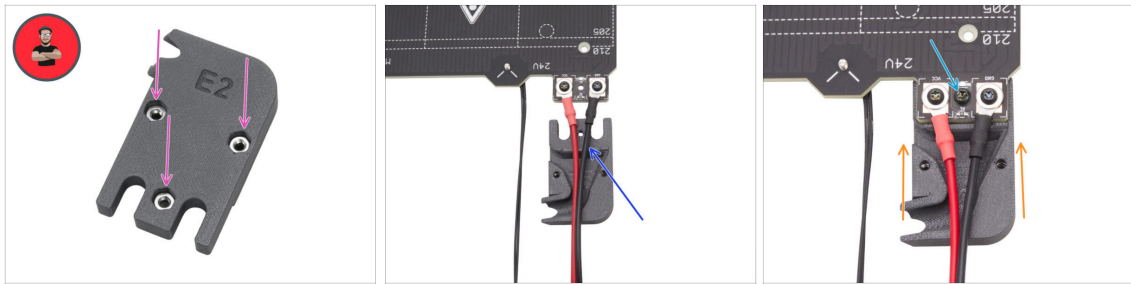


- ✿ Insert three M3n nuts into the Bed-cable-cover-bottom part.
- ❗ Pro tip: Use the screw-pulling technique.
- ⬛ Make sure the nuts are fully inserted and held in place.
- 🔵 Insert the Bed-cable-cover-bottom under the heatbed cables. Note the orientation of the part.
- 🟠 Slide the Bed-cable-cover-bottom under the cable joint of the heatbed.
- 🔵 Alignez le trou du plateau chauffant avec le capot des câbles et fixez-le avec la vis M3x10rT.

ÉTAPE 7 Chariot de plateau chauffant : préparation des pièces



- ⬛ **For the following steps, please prepare:**
- ✿ Heatbed carriage (1x) *found in the Metal parts 1/3 package*
- 🟠 Expansion joint (8x) *found in the Electronics package*
- 🟢 vis M3x4r (8x)
- 🔧 The Fasteners package includes both M3x4r and M3x4rT screws. Make sure you have the correct type prepared.

ÉTAPE 8 Préparation du chariot du plateau chauffant

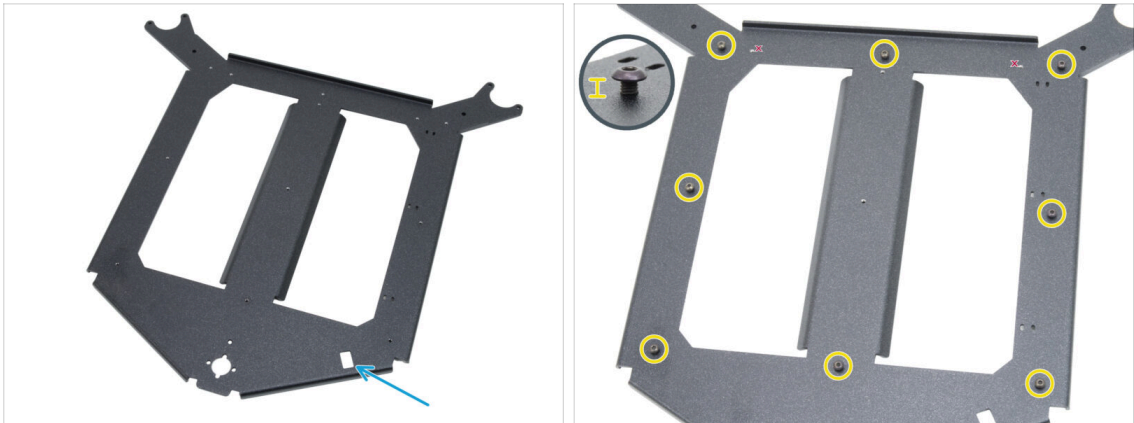

- Place the heatbed carriage in front of you in the same orientation as in the picture.
- Make sure the **rectangular cutout is facing you on the right side**.
- Insert eight M3x4r screws around the heatbed carriage.
- ⚠ **Do not tighten completely, leave a gap of approximately 3 mm (0.12 in).**

ÉTAPE 9 Installation des joints de dilatation



- Attach one expansion joint to any M3x4r screw in the same orientation as shown.
- Note the U-shaped "groove" for the screw inside the expansion joint - point it towards the screw.
- Slide the expansion joint onto the screw.
- Grasp the expansion joint in the rectangular cutout of the universal wrench.
- Position the key with the expansion joint in its correct orientation as shown in the illustration.
- **Maintenez le joint de dilatation dans la bonne position** et serrez fermement la vis M3x4r à travers le joint de dilatation avec une clé Allen de 2,0 mm.
- ⚠ **Répétez cette procédure pour tous les autres joints de dilatation. Respectez leur bonne position !**


ÉTAPE 10 RGB LED strip: parts preparation



For the following steps, please prepare:


- RGB LED strip 166 mm (1x) *found in the Electronics & Fasteners package*
- ⚠️ **Avoid direct contact with the LED and resistors on the LED strip.**
- LED status cover (1x) *found in the Electronics & Chamber parts package*
- LED strip diffuser (1x) *found in the CoreXY parts + Hinges set package*
- Entretoise 3,2/6x5 mm (2x) *qui se trouve dans le paquet Électronique & Visserie*
- Vis M3x10rT (2x)
- Collier de serrage (3x)

ÉTAPE 11 Installing the LED strip

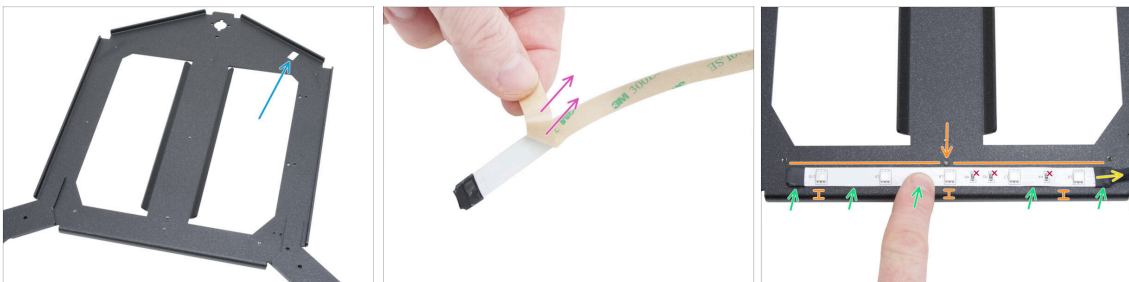


- Place the heatbed carriage in front of you in the same orientation as in the picture.
- Make sure the **rectangular cutout is far from you and on the right side**.
- Carefully peel off the protective (paper) layer from the RGB LED strip.
- ⚠️ **After removing the protective layer, the RGB LED strip is adhesive.**
- Stick the RGB LED strip evenly to the front of the heatbed carriage, approximately 3 mm (0.12 in) from the folded edge.
Align the middle LED with the screw on the carriage.
- Le câble de la bande LED RGB doit pointer vers la droite.
- Après le collage, appuyez légèrement sur les zones vides de la bande pour assurer l'adhérence. **Ne touchez pas les LED et les résistances !**

ÉTAPE 12 Attaching the LED strip diffuser

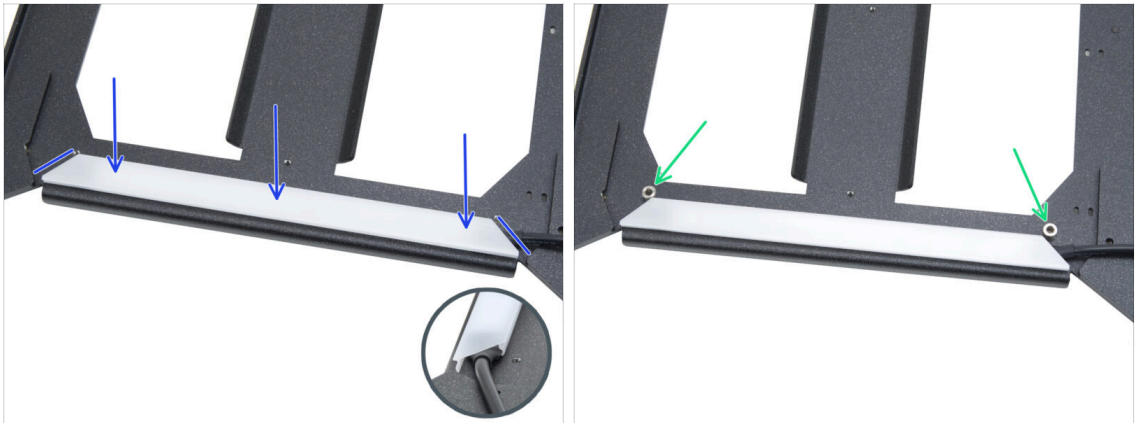


- Place the LED strip diffuser over the RGB LED strip. Note the orientation of the part - according to the beveled edges.
- Place two spacers 3.2/6x5 mm on the holes in the edges of the LED assembly.

ÉTAPE 13 Covering the RGB LED strip

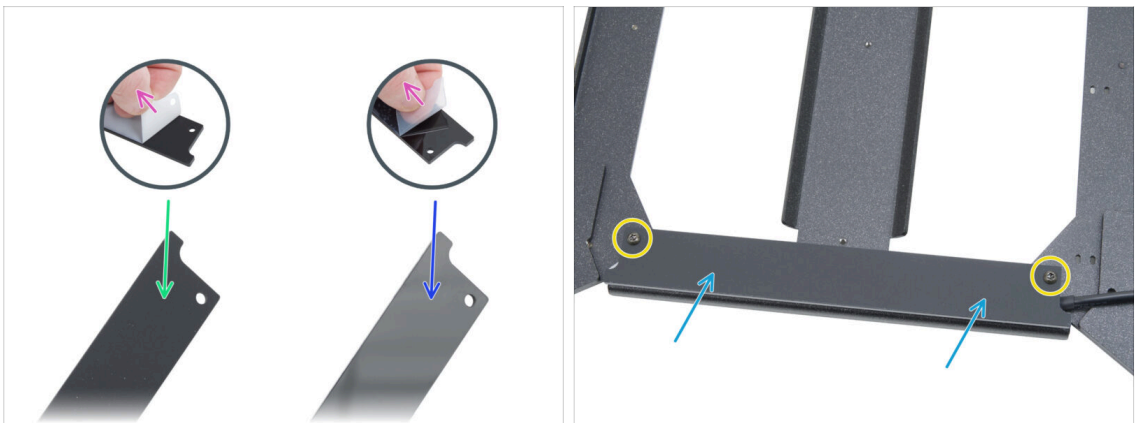


- From both sides of the LED status cover, peel off the protective layers.
- Note that one side of the cover is matte.
- The other side of the cover is glossy.
- Attach the LED strip cover to the assembly, **matte side up**.
- Secure all parts together by inserting and tightening two M3x10rT screws. **Do not overtighten the screws**, as it may crack the cover.

ÉTAPE 14 Guiding the RGB LED strip cable

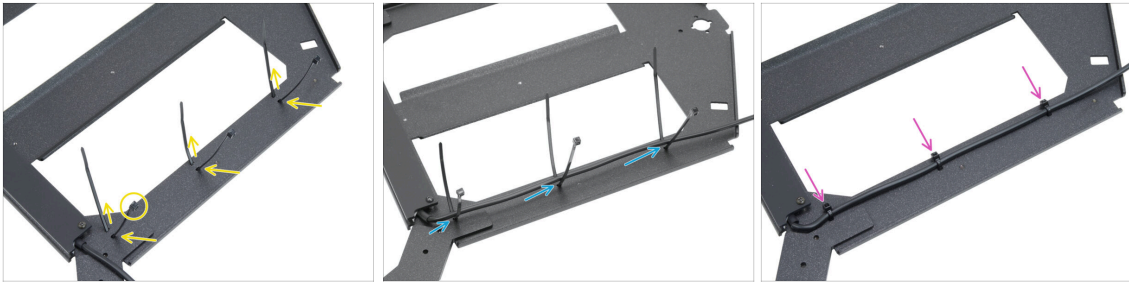


- ✦ Thread the three zip ties along the **RIGHT SIDE** of the heatbed carriage. Make sure the zip tie heads are facing outward.
- ✦ Guide the RGB LED strip cable through all zip ties.
- ✦ Then tighten all three zip ties. Cut off excess zip ties.

ÉTAPE 15 Bed mounts: parts preparation

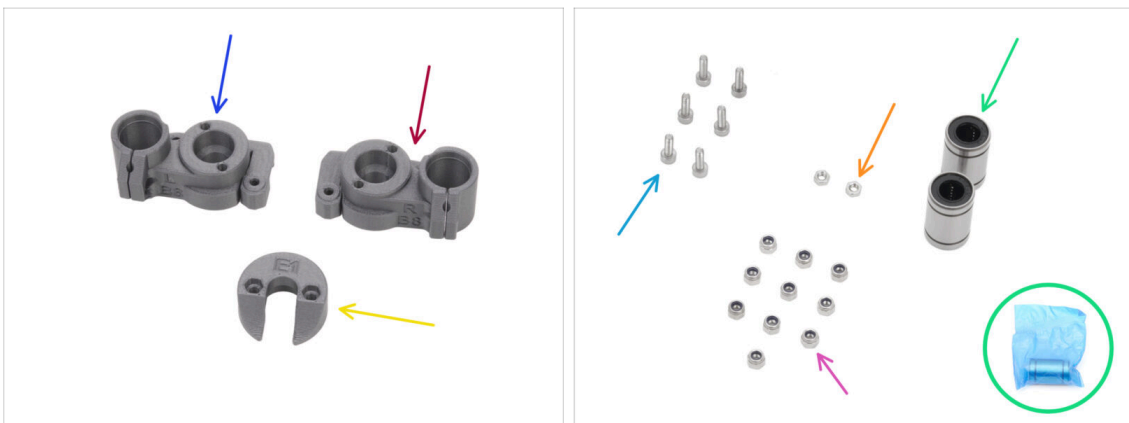

- ✦ **For the following steps, please prepare:**
- ✦ CORE-One-bed-mount-left (1x) *found in the Printed parts package*
- ✦ CORE-One-bed-mount-right (1x) *found in the Printed parts package*
- ✦ CORE-One-bed-spacer-rear (1x) *found in the Printed parts package*
- ✦ LM8UU bearing (2x) *found in the Electronics package*
- ❗ Les roulements du kit sont emballés dans des sacs bleus.
- ✦ Vis M3x10 (6x)
- ✦ Écrou M3n (2x)
- ✦ Écrou M3nN (10x)

ÉTAPE 16 Assembling the bed mounts

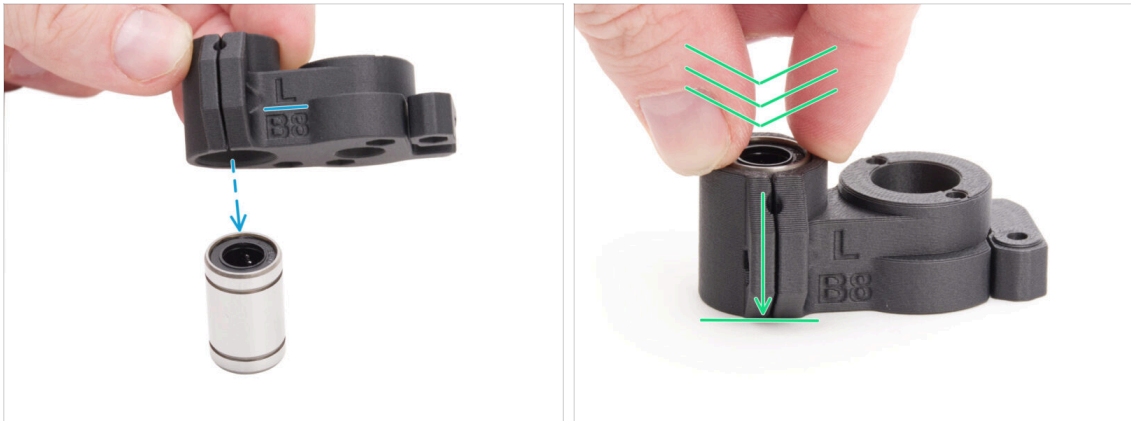

- Place the CORE-One-bed-mount-left onto the bearing, ensuring the correct orientation.
- Press the part onto the bearing, applying more force to ensure it moves all the way down. You will feel a click, indicating that the plastic part and bearing are correctly seated.
- ⚠ The bearing must be fully enclosed within the part and must not protrude.
- Follow the same procedure with CORE-One-bed-mount-right.

ÉTAPE 17 Securing the bed mounts



- Insert one M3n nut into the CORE-One-bed-mount-left.
- Position the CORE-One-bed-mount-left according to the picture:
 - Position the bearing so that two ball rows face the bottom of the part, not just one.
- Keep the bearing in the position and secure it by inserting and tightening one M3x10 screw.
- ⚠ Ensure that the top surface of the bearing is flush with the top surface of the plastic part.
- Suivez la même procédure avec le CORE-One-bed-mount-right.

ÉTAPE 18 Bed mounts: inserting the nuts



- Insert four M3nN nuts into both bed mounts.
- Make sure they are inserted completely inside.

ÉTAPE 19 Assemblage du CORE-One-bed-spacer-rear



- Insert two M3nN nuts into the CORE-One-bed-spacer-rear.
- Insert the nuts down as much as possible.

ÉTAPE 20 Installation du bed-mount-right




- Turn the heatbed carriage piece with the "forks" facing you and with the **expansion joints facing up**.
- Take the CORE-One-bed-mount-**right** part and slide it **under the right fork** - with the bearing on the right.
- Fix it with two M3x10 screws.

ÉTAPE 21 Installation du bed-mount-left




- Take the One-bed-mount-**left** part and slide it **under** the **left** fork - with the bearing on the left.
- Fix it with two M3x10 screws.

ÉTAPE 22 Mounting the heatbed: parts preparation

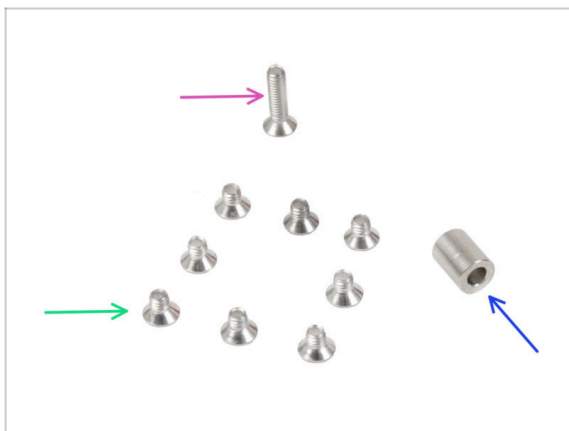


- For the following steps, please prepare:
- M3x12bT countersunk screw (1x)
 - ⓘ Note: The package may label this screw as M3x12cT.
- Spacer 6x3.1x8 mm (1x) *found in the Nextruder assembly package*
- M3x4bT countersunk screw (8x)

ÉTAPE 23 Montage du plateau chauffant

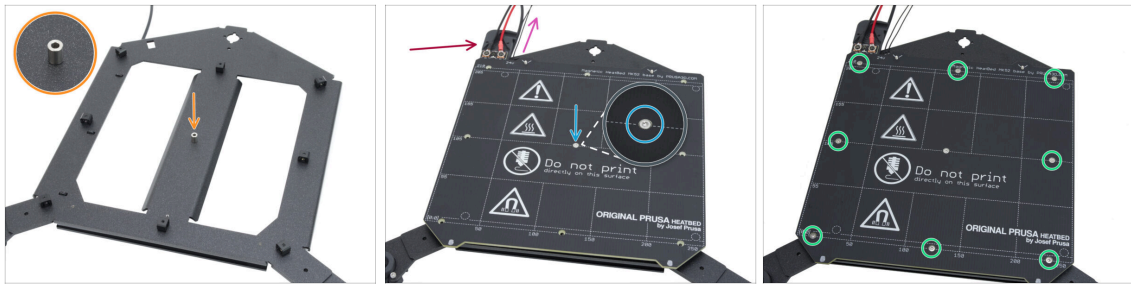


- Place the spacer onto the heatbed carriage on the side with the expansion joints and align it with the hole in the center.
- Put the heatbed on the heatbed carriage and secure it by the M3x12bT. **Do not fully tighten the screw yet.**
 - Make sure the heatbed thermistor cable (the thinnest pair) is routed alongside the heatbed power cables. Do not route it around or across any expansion joints.
- ⚠ **Ensure the correct orientation of the part. Use the heatbed cables as a guide.**
- Insert the M3x4bT screws into the remaining holes in the heatbed. **Do not fully tighten the screws yet.**

ÉTAPE 24 Serrage du plateau chauffant

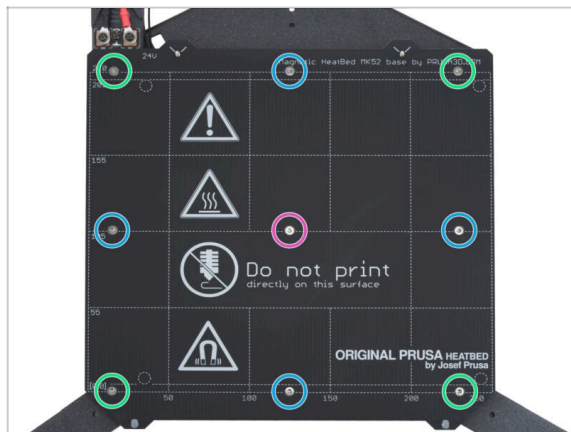

- ⚠ **IMPORTANT:** The heatbed must be tightened in a specific order. Repeat the sequence multiple times, ensuring the final tightening after at least two rounds.
- After all screws are in place, tighten them in the following sequence:
 - Vis du centre
 - First four screws (edges)
 - Last four screws (corners)
- ⚠ **Serrez les vis doucement mais fermement.**


ÉTAPE 25 Covering the cables: parts preparation

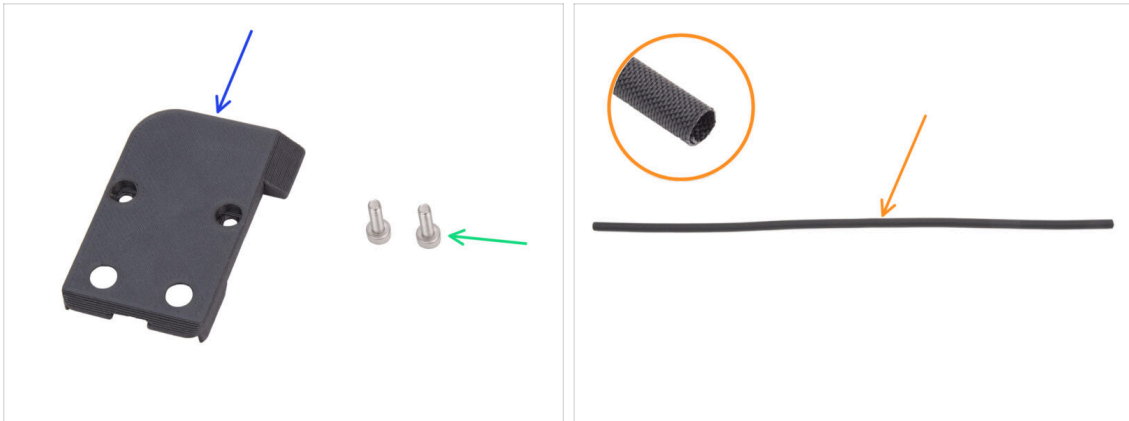

■ For the following steps, please prepare:


- CORE-One-bed-cable-cover-top (1x) found in the Printed parts package
- Vis M3x10 (2x)
- Gaine textile 520 x 8 mm (1x) qui se trouve dans le paquet Électronique & Pièces de la chambre

ÉTAPE 26 Guiding the heatbed cables

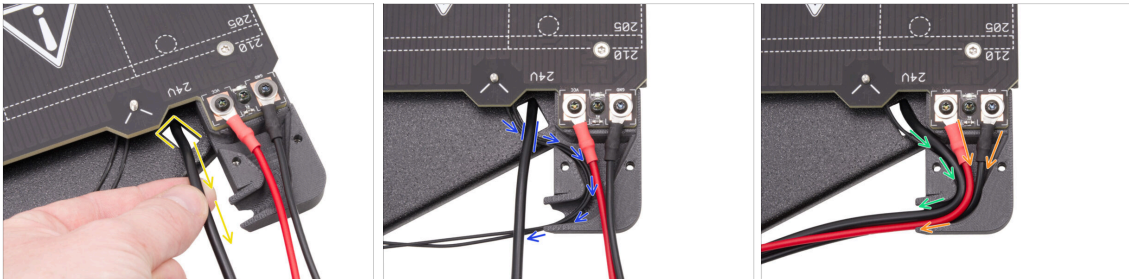

- Pull the RGB LED strip cable from the bottom through the rectangular cutout to the top.
- Guide the heatbed thermistor cable under the RGB LED cable, and insert the heatbed thermistor cable into the cable channel in the cable cover.
- Route the RGB LED strip cable through the cable channel.
- Guide the heatbed power cables through the cable channel.

ÉTAPE 27 Covering the heatbed cables

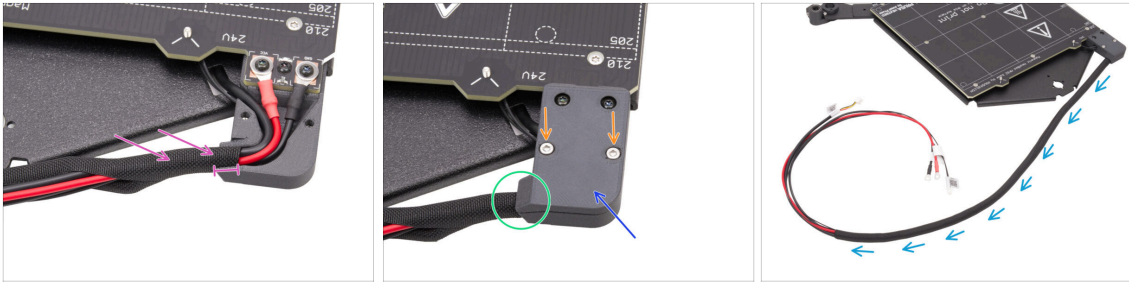

- ◆ Thread approximately 5 cm (2 in) of the textile sleeve onto the heatbed cable bundle and slide the textile sleeve 1 cm (0.39 in) into the cable channel.
- ◆ Attach the CORE-One-bed-cable-cover-top on the heatbed cables.
- ◆ Make sure the textile sleeve is still in place - inside the cable cover. **Do not pull on the textile sleeve.**
- ◆ Secure the top cover with two M3x10 screws.
- ◆ Enroulez le reste de la gaine textile autour du faisceau de câbles.

ÉTAPE 28 Mounting the heatbed: parts preparation




◆ For the following steps, please prepare:

◆ Écrou trapézoïdal (3x)

① Two trapezoidal nuts are included in the motors set package, and one nut can be found in the Electronics & Chamber parts package.


◆ Vis M3x18 (6x)

ÉTAPE 29 Attaching the heatbed assembly

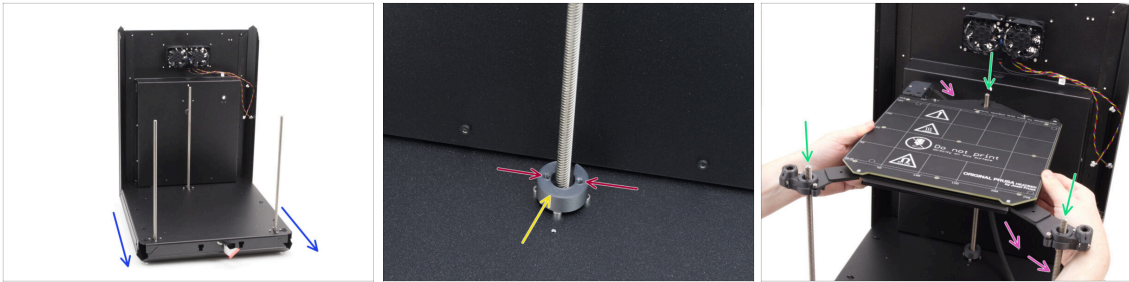

- Take the back and base assembly and orient the front side towards you.
- Place the CORE-One-bed-spacer-rear onto the rear motor screw heads, making sure it stays in place.
 - ⚠ Note the orientation of the part and holes as shown. The holes must be parallel to the motor screw heads.
- Very carefully thread the heatbed assembly onto the threaded rods of the Z motors, then gently lay it down onto the base.
 - ⚠ Gardez à l'esprit qu'il y a une entretoise sur le moteur arrière. Évitez l'entretoise près du câble du plateau chauffant.
- Le câble du plateau chauffant doit passer **sous le plateau chauffant et derrière le moteur arrière.**

ÉTAPE 30 Mounting the heatbed assembly: rear motor

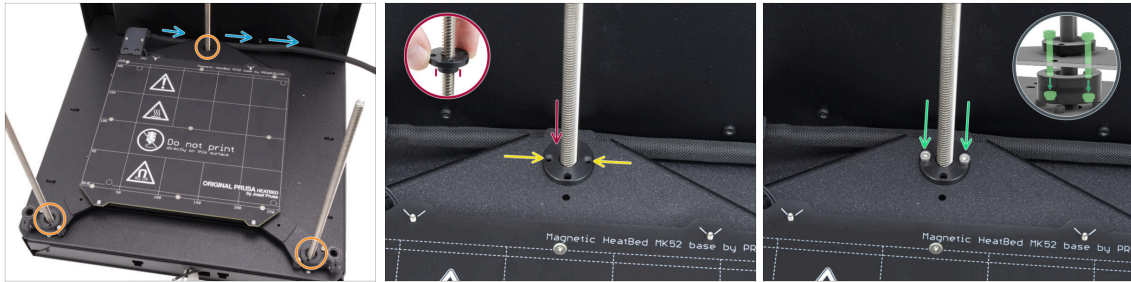

- ❖ Ensure the heatbed assembly is seated correctly—all threaded rods pass through the correct holes.
- ❖ Double-check that the heatbed cable bundle (textile sleeve) runs properly—it **must go under the heatbed assembly** and **behind the threaded rod** of the rear motor.
- ❖ Manually thread the trapezoidal nut onto the rear Z motor. Screw the nut all the way down until it seats into the heatbed carriage.
 - ⚠ Ensure the correct orientation of the part. **The protruding section must face downwards.**
- ❖ Alignez les trous de l'écrou trapézoïdal, du chariot et de la bed-spacer-rear.
 - i Peu importe les trous que vous utilisez dans l'écrou trapézoïdal.
 - i Astuce : vous pouvez enfoncer une clé Allen de 1,5 mm dans les trous de toutes les pièces pour les aligner.
- ❖ Fixez l'écrou trapézoïdal, le chariot du plateau chauffant et la bed-spacer-rear avec deux vis M3x18.

ÉTAPE 31 Mounting the heatbed assembly: front motor left




- ❖ Manually thread the trapezoidal nut onto the **left** Z motor. Screw the nut all the way down until it seats into the plastic part.
 - ⚠ Ensure the correct orientation of the part. **The protruding section must face downwards.**
- ❖ Align the holes in the trapezoidal nut with those in the plastic part. Either pair of holes can be used.
- ❖ Secure all the part together with two M3x18 screws.

ÉTAPE 32 Mounting the heatbed assembly: front motor right




- Manually thread the trapezoidal nut onto the **right** Z motor. Screw the nut all the way down until it seats into the plastic part.
- ⚠ Ensure the correct orientation of the part. **The protruding section must face downwards.**
- Align the holes in the trapezoidal nut with those in the plastic part. Either pair of holes can be used.
- Secure all the part together with two M3x18 screws.

ÉTAPE 33 Attaching the heatbed cables I.

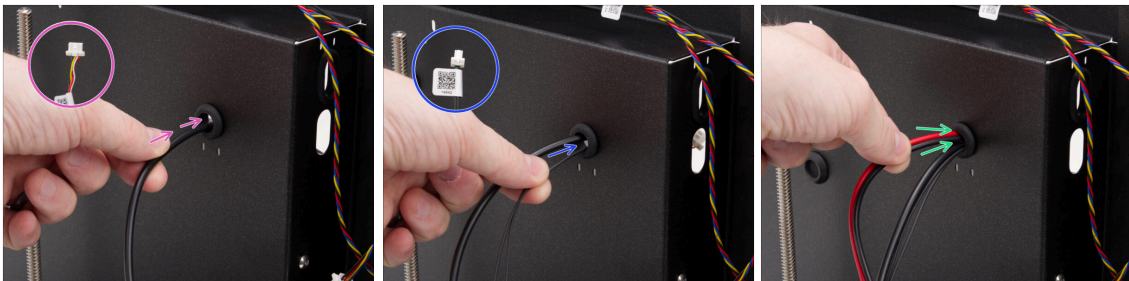


- Locate the grommet hole at the top right of the rear assembly and push the heatbed cables through in the following order:
 - Guide the RGB LED strip cable through the hole first.
 - Route the thermistor cable through the hole.
 - Finally, insert both power cables of the hole.

ÉTAPE 34 Attaching the heatbed cables II.

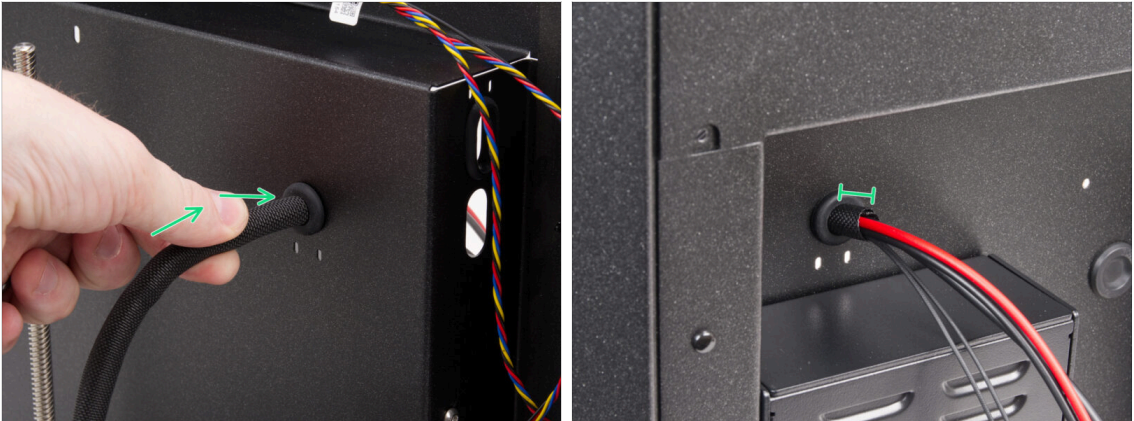


- Push the heatbed cables and the textile sleeve through the grommet hole.
- No more than 1 cm (0.39 in) of the textile sleeve should protrude from the back side.

ÉTAPE 35 Securing the heatbed cables: parts preparation

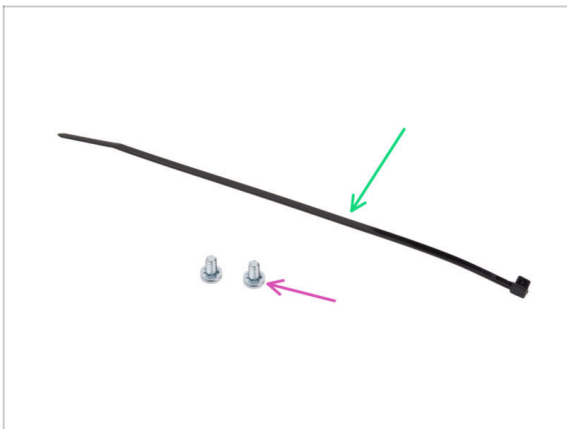


- For the following steps, please prepare:
- Collier de serrage (1x)
- Power terminal screw 6-32 (2x)

ÉTAPE 36 Securing the textile sleeve

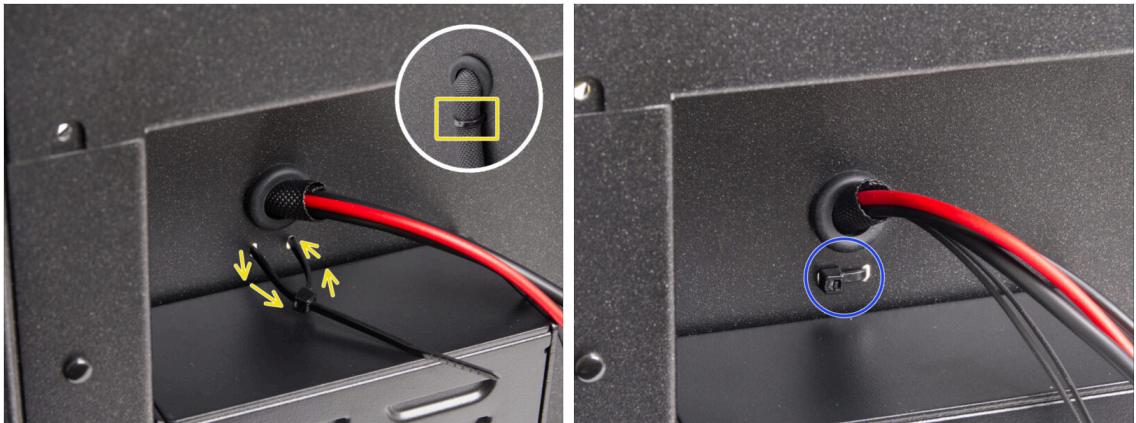


- Guide the zip tie through the two holes under the heatbed cables and make a loop around the heatbed cable bundle (textile sleeve) on the inside.
- Tighten the zip tie firmly and cut off the excess.

ÉTAPE 37 Guiding the heatbed assembly cables

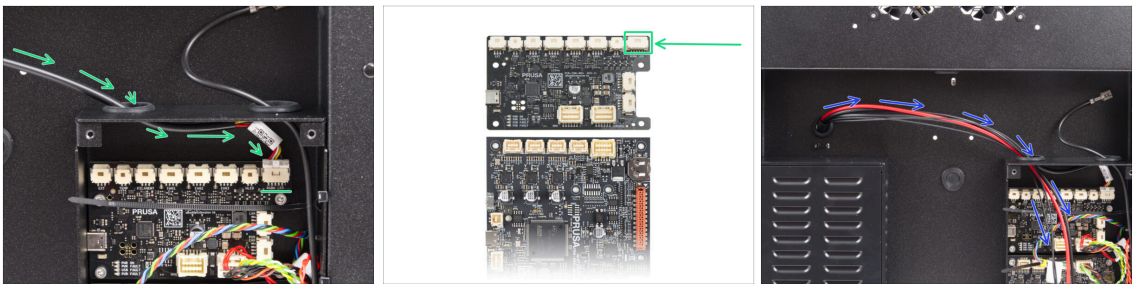


- Route the RGB LED strip cable through the left hole in the xBuddy box and connect it to the xBuddy Extension board labeled 'RGBW LED.'
- Connect it to the first slot from the right on the xBuddy extension board.
- Guide the heatbed power cables along with the thermistor through the left hole. Leave the cables hanging freely for now.

ÉTAPE 38 Connecting the heatbed power cables

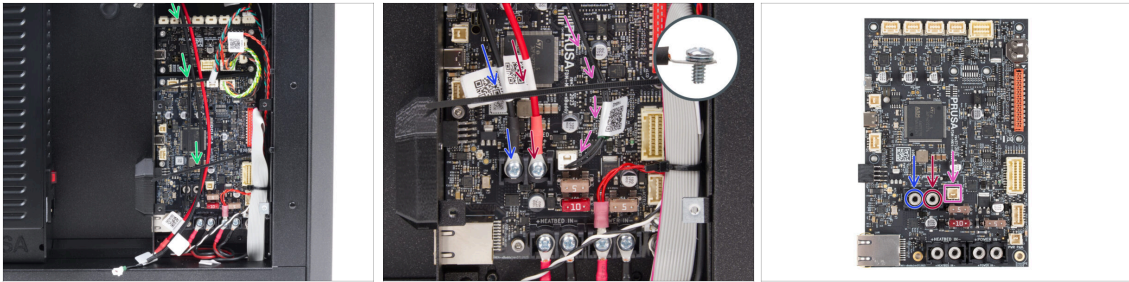

- Ensure that none of the heatbed cables run over the zip ties—they must be guided underneath.
- Using the 6/32" terminal screw connect the **black** power cable to the **left** terminal slot on the xBuddy board. Tighten firmly.
- Using the 6/32" terminal screw to connect the **red** power cable to the **right** terminal slot. Tighten firmly.
- Plug the heatbed thermistor connector to the slot next to the power terminals.

ÉTAPE 39 C'est l'heure des Haribo

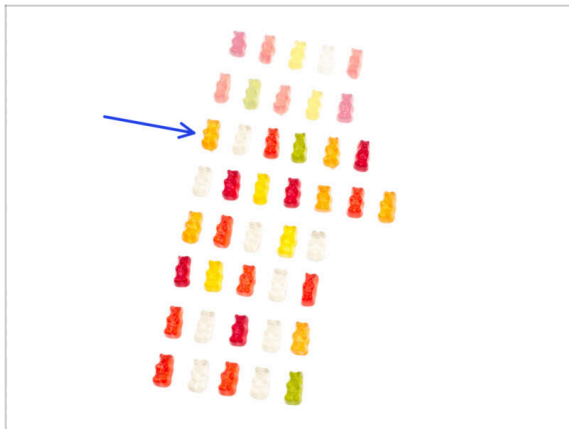

- Time for another quick energy boost!
- Eat the third row.
 - With one extra treat. You deserve it!

ÉTAPE 40 Fini



- ◆ Congratulations! You have just assembled and installed the heatbed.
- ◆ Let's go to the next chapter.

5. Assemblage du CoreXY




ÉTAPE 1 Tools necessary for this chapter




- **For this chapter, please prepare:**
- Pince à bec fin
- Clé Allen de 2,0 mm
- Clé Allen de 2,5 mm
- T10 torx key / T10 torxy screwdriver

ÉTAPE 2 Rod holders: parts preparation

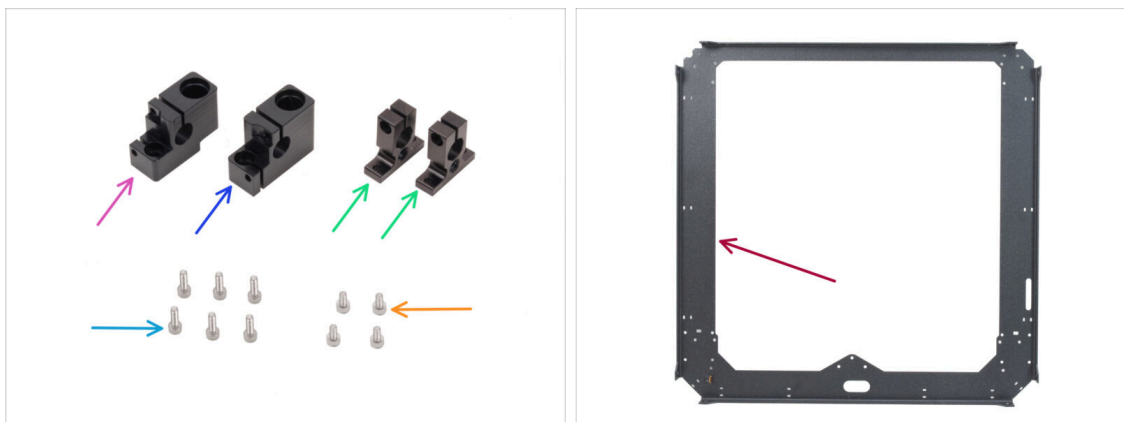


- **For the following steps, please prepare:**
- Rod holder left (1x) *found in the CORE XY parts + hinges + HB set package*
- Rod holder right (1x) *found in the CORE XY parts + hinges + HB set package*
- Rod holder rear (2x) *found in the CORE XY parts + hinges + HB set package*
- Vis M3x10 (6x)
- Vis M3x6 (4x)
- CoreXY plate (1x) *found in the Metal parts 1/3 package*

ÉTAPE 3 Assembling the rod holders

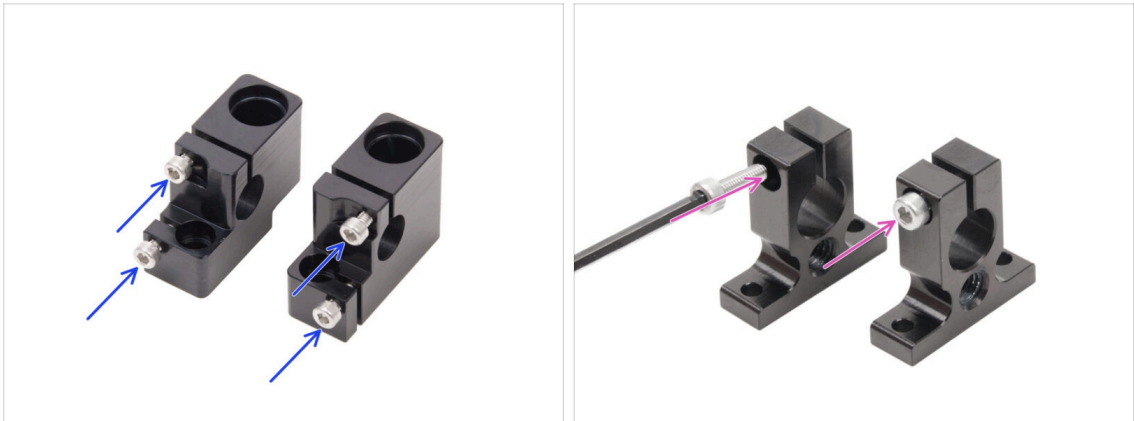

- Insert two M3x10 screws into the Rod holder left and two into the Rod holder right.
- **Do not tighten them completely**, a few turns are enough for now.
- Insert one M3x10 screw into each Rod holder rear. Insert from the **side with the screw head hole**.
- **Do not tighten them completely**, a few turns are enough for now.

ÉTAPE 4 Preparing the front rod holders

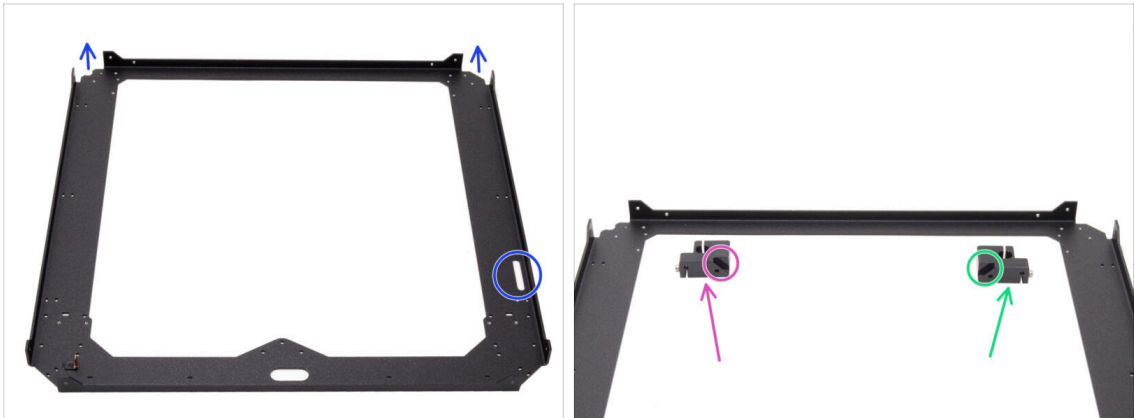

- Place the CoreXY plate as shown - the **bent parts of the plate must point upwards**.
- Divide the Rod holder left and the Rod holder right into the sides of the front:
 - ⚠ **Ensure you are preparing the correct part for the correct side. Use the chamfers on both parts as a reference for alignment.**
 - **Support de tige gauche**
 - **Support de tige droit**

ÉTAPE 5 Installing the front rod holders




- Place the Rod holder left to the left front corner on the corresponding threaded holes.
- Secure it with two M3x6 screws.
- Place the Rod holder right to the right front corner on the corresponding threaded holes.
- Secure it with two M3x6 screws.

ÉTAPE 6 XY carriage: parts preparation




- For the following steps, please prepare:
- Linear holder left (1x) found in the Metal parts 1/3 package
 - Linear holder right (1x) found in the Metal parts 1/3 package
 - XY-carriage (2x) found in the Printed parts package
 - LM10LUU linear bearing (2x) found in the CORE XY parts + hinges + HB set package
 - GT2-20 Idler pulley (4x) found in the Electronics & Fasteners package
 - M3x8rT black screw (8x)
 - Vis M3x18 (10x)

ÉTAPE 7 Assemblage des XY-carriages

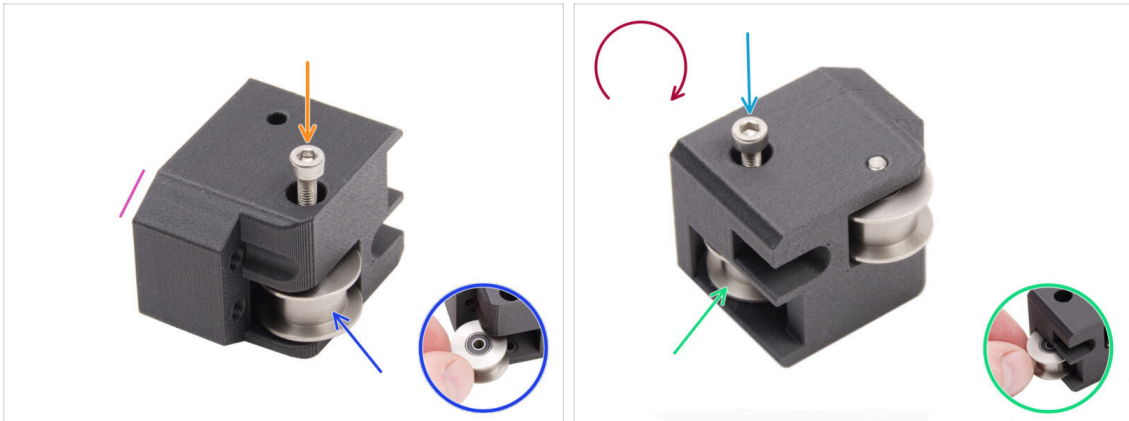


- Take one of the XY-carriage and orient it as shown. Use the beveled side as a guide.
- Insert the GT2-20 Idler pulley into the XY-carriage.
- Push one M3x18 screw through the pulley and tighten it completely down.
- Turn the part upside down.
- Insert another GT2-20 Idler pulley into the XY-carriage.
- Secure it with the M3x18 screw. Tighten it completely down.
- Repeat the same procedure with the second XY-carriage.

ÉTAPE 8 Assembling the linear holder left

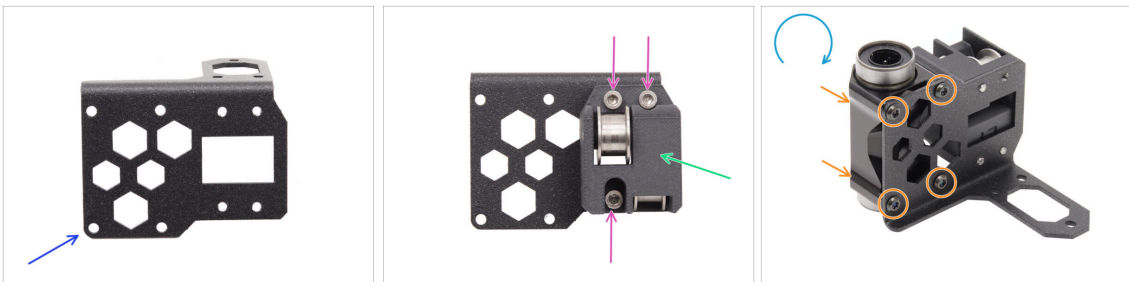


- Prepare the Linear holder **left** and position it as in the picture.
- Attach one of the XY-carriages to the Linear holder.
- Installez-le sur le support linéaire avec trois vis M3x18.
- Turn the Linear holder upside down.
- From the XY-carriage side, attach the LM10LUU linear bearing to the holder and secure it with four M3x8rT screws.

ÉTAPE 9 Assembling the linear holder right

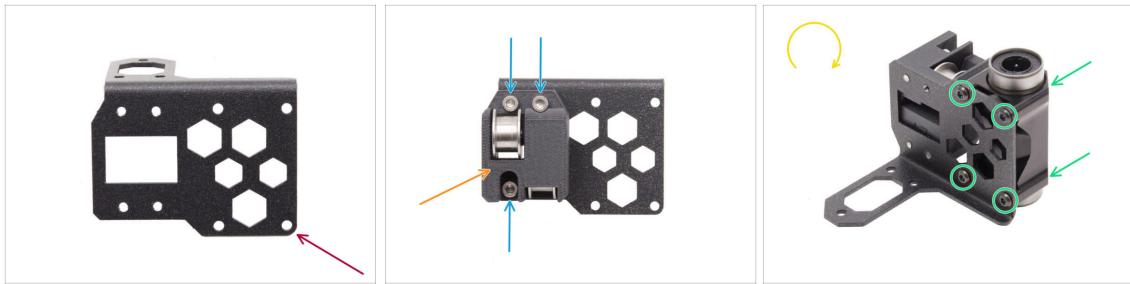


- Prepare the Linear holder **right** and position it as in the picture.
- Attach one of the XY-carriages to the Linear holder.
- Installez-le sur le support linéaire avec trois vis M3x18.
- Turn the Linear holder upside down.
- From the XY-carriage side, attach the LM10LUU linear bearing to the holder and secure it with four M3x8rT screws.

ÉTAPE 10 Attaching the linear holder assemblies

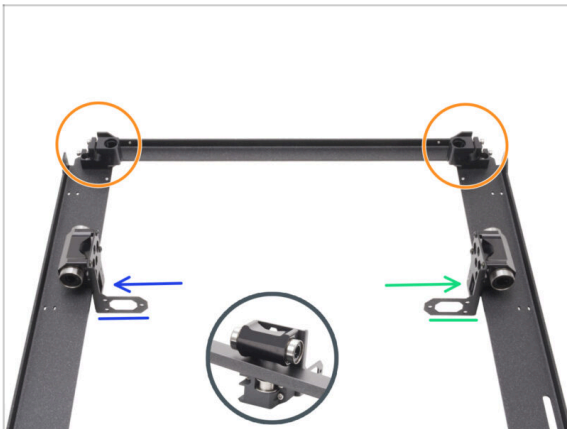

- Position the CoreXY plate as shown in the picture, ensuring the front rod holders are facing up.
- Slightly lift the CoreXY plate and from the plate's inner side loosely attach the Linear holder of the assemblies.
- **Support linéaire gauche**
- **Support linéaire droit**
- ① The linear holders are now only loosely seated.

ÉTAPE 11 Informations sur les tiges lisses

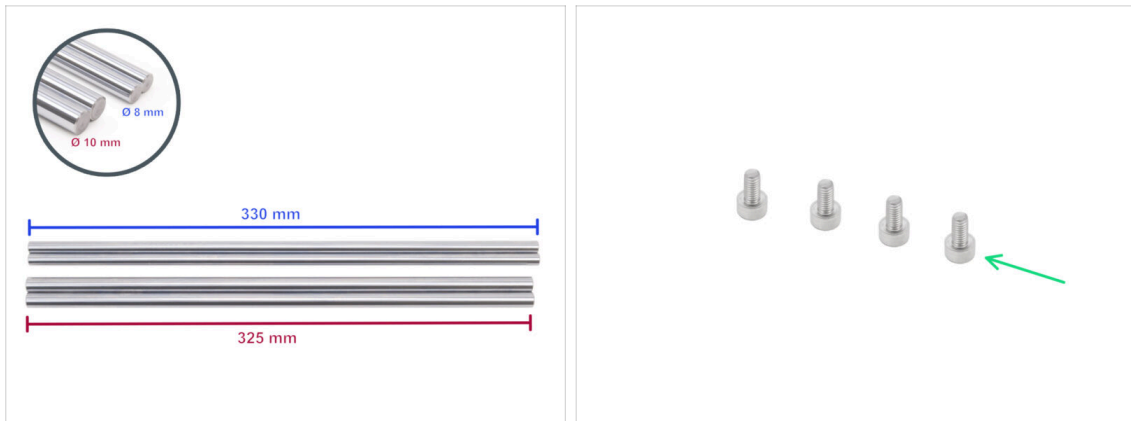

- There are two different types of smooth rods in the package. Compare carefully with the picture and prepare the correct ones required.

i Smooth rods are included in the Rods box.

Smooth rod 330 x 8 mm (2x)

Smooth rod 325 x 10 mm (2x) **required for the following steps**

- For the following steps, please prepare:**


Vis M3x6 (4x)

ÉTAPE 12 Mounting the smooth rods



- Slide both rear rod holders onto both 10mm smooth rods.
- Line up the ends of the rods with the holders.
- Push both 10mm smooth rods through the LM10LUU bearing to the front rod holders.
- Make sure the screws on the rear rod holders are pointing out of the frame.
- Line up the front end of the 10mm smooth rods with the front rod holders.

ÉTAPE 13 Securing the rear rod holders

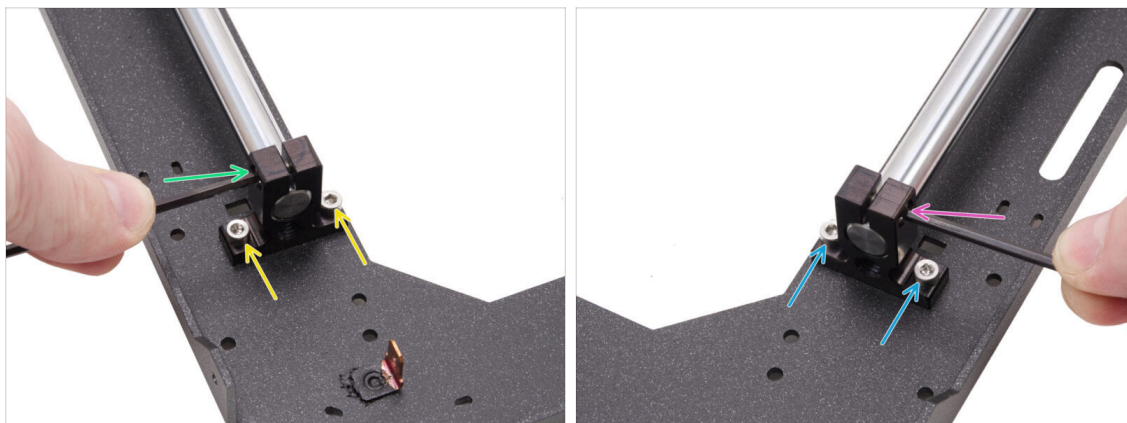


- Line up the left rear rod holder with the threaded holes in the plate.
- Fix it with two M3x6 screws.
- Firmly tighten the screw in the rod holder.
- Line up the right rear rod holder with the threaded holes in the plate.
- Fix it with two M3x6 screws.
- Firmly tighten the screw in the rod holder.

ÉTAPE 14 Securing the front rod holders



- Concentrez-vous sur le support avant gauche (actuellement sur la droite) et fixez la tige en serrant la vis dans le support.
- ⚠ **Do not tighten the bottom screw.**
- Concentrez-vous sur le support avant droit (actuellement sur la gauche) et fixez la tige en serrant la vis dans le support.
- ⚠ **Do not tighten the bottom screw.**

ÉTAPE 15 Motor mounts: parts preparation

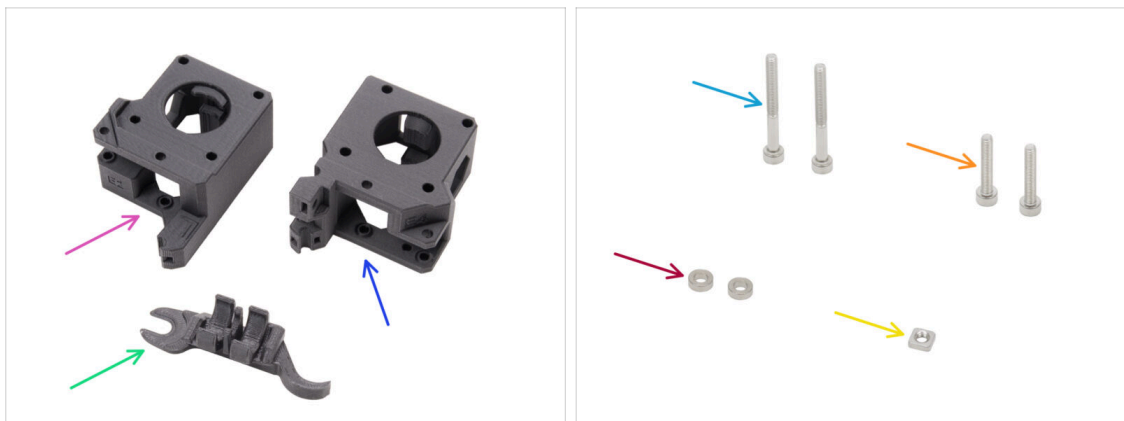


● **For the following steps, please prepare:**

- XY-motor-mount-left (1x) *found in the Printed parts package*
- XY-motor-mount-right (1x) *found in the Printed parts package*
- Outil multifonction d'assemblage (1x) *que vous avez déjà utilisé*
- Vis M3x30 (2x)
- Vis M3x18 (2x)
- Spacer 3.2/6x2 (2x) *found in the Electronics & Fasteners package*
- Écrou M3nS (1x)

❗ The list continues in the next step...

ÉTAPE 16 Motor mounts: part preparation

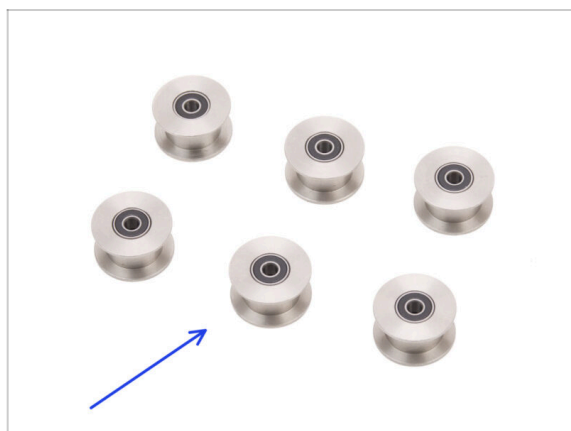


- GT2-20 Idler pulley (6x) *found in the Electronics & Fasteners package*

ÉTAPE 17 Assembling the XY-motor-mount-right I.



- ✿ Insérez une poulie dans la position inférieure de l'outil multifonction d'assemblage.
- ✿ Insert the spacer 3.2 on the pulley.
- ✿ Insérez la deuxième poulie dans l'outil multifonction d'assemblage.
- ✿ Insert the whole assembly into the XY-motor-mount-right.
 - ⬛ Position the part according to the picture. Note the beveled corner.
- ✿ Align holes in both parts and secure it with the M3x30 screw.
 - 🔩 La pièce en plastique n'a pas de filetage préformé, donc la vis le créera au fur et à mesure que vous serrez. Une légère résistance est attendue.
- ✿ Retirez l'outil multifonction d'assemblage.

ÉTAPE 18 Assembling the XY-motor-mount-right II.

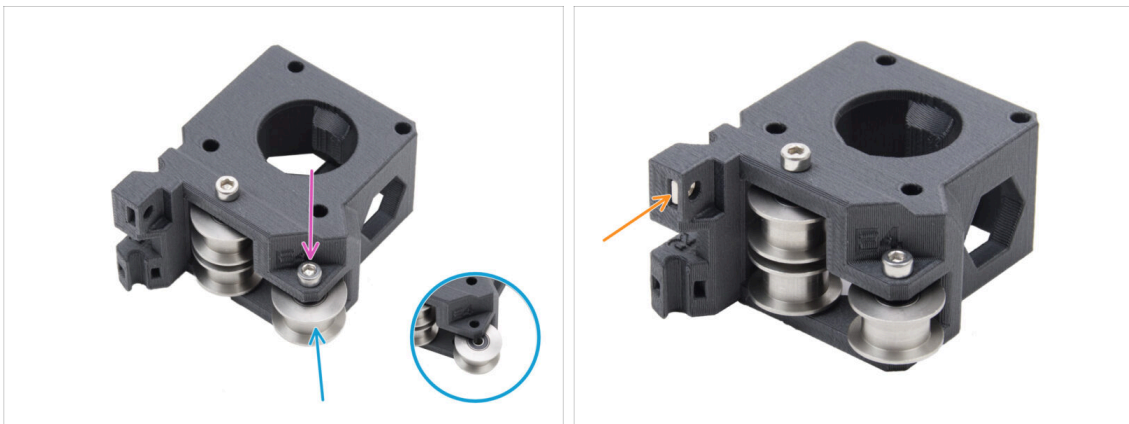

- ✿ Insert another pulley into the XY-motor-mount-right.
- ✿ Secure it with M3x18 screw.
 - ⓘ La pièce en plastique n'a pas de filetage préformé, donc la vis le créera au fur et à mesure que vous serrez. Une légère résistance est attendue.
- ✿ Insert the M3nS nut into the XY-motor-mount-right.

ÉTAPE 19 Assembling the XY-motor-mount-left I.




- ✿ Insérez une poulie dans la position inférieure de l'outil multifonction d'assemblage.
- ✿ Insert the spacer 3.2 on the pulley.
- ✿ Insérez la deuxième poulie dans l'outil multifonction d'assemblage.
- ✿ Insert the whole assembly into the XY-motor-mount-left.
 - ⬛ Position the part according to the picture. Note the bevel next to the screw hole.
- ✿ Align holes in both parts and secure it with the M3x30 screw.
 - ⓘ La pièce en plastique n'a pas de filetage préformé, donc la vis le créera au fur et à mesure que vous serrez. Une légère résistance est attendue.
- ✿ Retirez l'outil multifonction d'assemblage.

ÉTAPE 20 Assembling the XY-motor-mount-left II.



- ✿ Insert another pulley into the part.
- ✿ Secure it with M3x18 screw. **Do not overtighten the screw.**
 - ⓘ La pièce en plastique n'a pas de filetage préformé, donc la vis le créera au fur et à mesure que vous serrez. Une légère résistance est attendue.

ÉTAPE 21 Belt tensioners: parts preparation I.

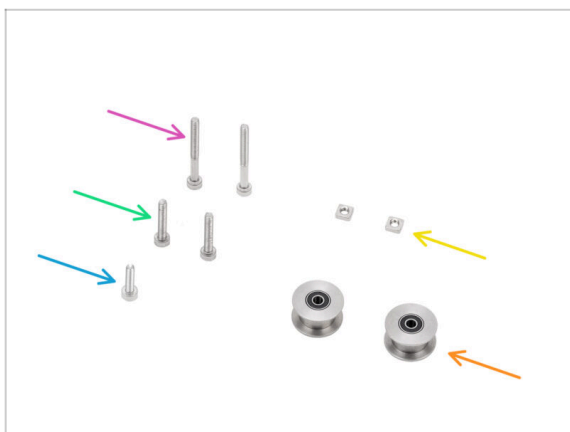

For the following steps, please prepare:

GT2-20 Idler pulley (2x) *found in the Electronics package*

Vis M3x30 (2x)


Vis M3x18 (2x)

Vis M3x12 (1x)

Écrou M3nS (2x)

i The list continues in the next step...

ÉTAPE 22 Belt tensioners: parts preparation II.

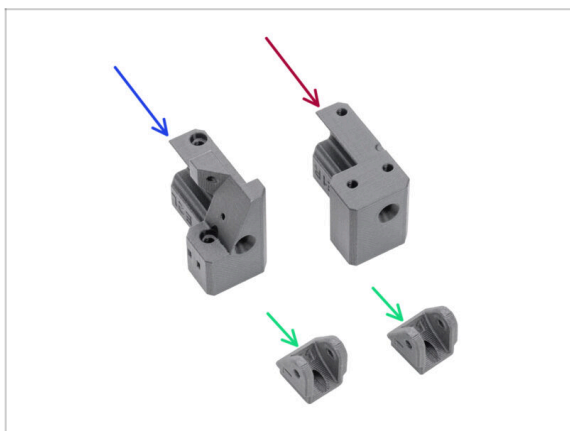


For the following steps, please prepare:

Belt-tensioner-left (1x) *found in the Printed parts package*

Belt-tensioner-right (1x) *found in the Printed parts package*

Belt-tensioner-pulley (2x) *found in the Printed parts package*

ÉTAPE 23 Préparation des poulies du tendeur

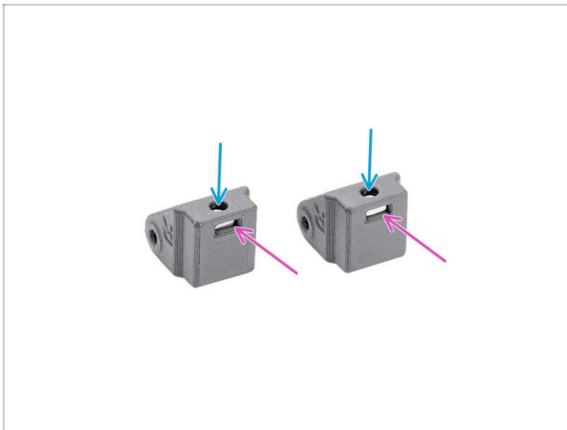

- ✿ Insert one M3nS nut into each Belt-tensioner-pulley.
- ✿ Assurez-vous que les écrous sont correctement insérés dans les pièces. Les trous dans les écrous et les pièces **doivent être alignés**.
- ✿ Gardez les deux pièces dans cette position.

ÉTAPE 24 Assembling the belt tensioner left I.



- ✿ Appliquez une petite quantité de Prusa Lubricant sur la pointe des deux vis M3x30.
- ✿ Répartissez le lubrifiant uniformément sur tout le filetage.
- ① Astuce : utilisez la pointe d'un collier de serrage pour répartir le lubrifiant.
- ✿ Slide the Belt-tensioner-**left** onto the Belt-tensioner-pulley.
- ✿ **Ensure the parts are oriented correctly**, as shown.
- ✿ Insert the M3x30 screw through the Belt-tensioner-left into the Belt-tensioner-pulley. **Do not tighten completely!** 3-4 turns are sufficient.

ÉTAPE 25 Assembling the belt tensioner left II.




- Insert the GT2-20 Idler pulley into the Belt-tensioner-pulley.
- Secure it with the M3x18 screw.
 - ⓘ La pièce en plastique n'a pas de filetage préformé, donc la vis le créera au fur et à mesure que vous serrez. Une légère résistance est attendue.
- Insert the M3x12 screw into the Belt-tensioner-left. Tighten slightly—five turns are enough. It must not protrude through the other side.
 - ⓘ Note: This screw, referred to as the tensioning screw, will later be used to adjust the door sensor.

ÉTAPE 26 Assembling the belt tensioner right



- Slide the Belt-tensioner-**right** onto the Belt-tensioner-pulley.
 - **Ensure the parts are oriented correctly**, as shown.
- Insert the M3x30 screw through the Belt-tensioner-right into the Belt-tensioner-pulley. **Do not tighten completely!** 3-4 turns are sufficient.
- Insert the GT2-20 Idler pulley pulley into the Belt-tensioner-pulley-right.
- Secure it with the M3x18 screw.
 - ⓘ La pièce en plastique n'a pas de filetage préformé, donc la vis le créera au fur et à mesure que vous serrez. Une légère résistance est attendue.


ÉTAPE 27 Installing the belt tensioners: parts preparation

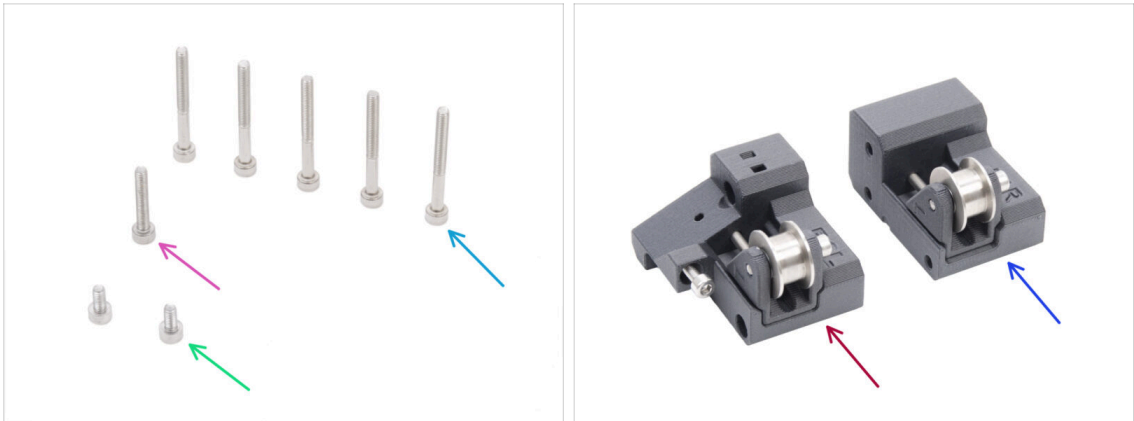

● For the following steps, please prepare:


- Vis M3x30 (5x)
- Vis M3x18 (1x)
- Vis M3x6 (2x)
- Belt tensioner left assembly (1x) *you assembled earlier*
- Belt tensioner right assembly (1x) *you assembled earlier*

ÉTAPE 28 Installing the motor mount left

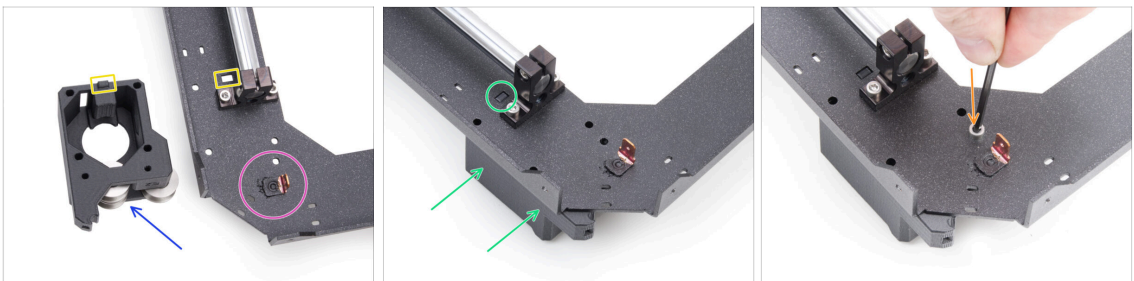


- Locate the corner of the CoreXY plate with the Faston connector on it. It is on the underside of the assembly.
- Position the motor-mount-**left** on the CoreXY plate as shown in the picture.
- Note the rectangular protrusion on the motor-mount-left and the rectangular cutout on the CoreXY plate.
- Faites glisser le motor-mount-left sous la plaque du CoreXY, en vous assurant que la saillie rectangulaire s'insère dans la découpe.
- Align the holes in both parts and secure them with an M3x6 screw in the designated hole

ÉTAPE 29 Installing the motor mount right

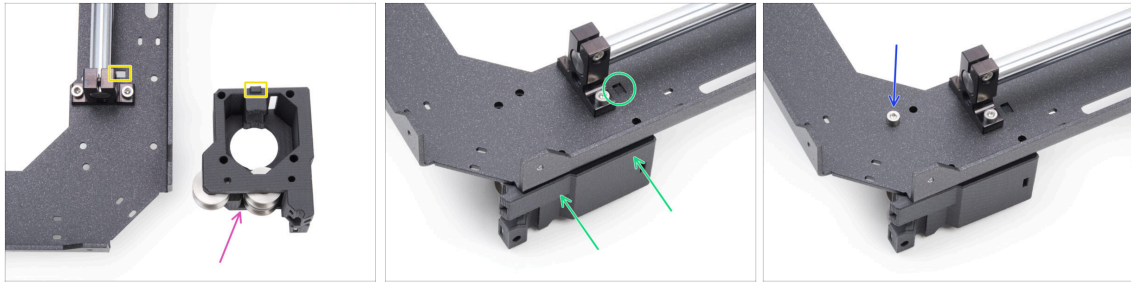


- ◆ Position the motor-mount-**right** on the CoreXY plate as shown in the picture.
- ◆ Notez la saillie rectangulaire sur le motor-mount-right et la découpe rectangulaire sur la plaque du CoreXY.
- ◆ Faites glisser le motor-mount-right sous la plaque du CoreXY, en vous assurant que la saillie rectangulaire s'insère dans la découpe.
- ◆ Align the holes in both parts and secure them with an M3x6 screw in the designated hole

ÉTAPE 30 Installation du belt-tensioner-left

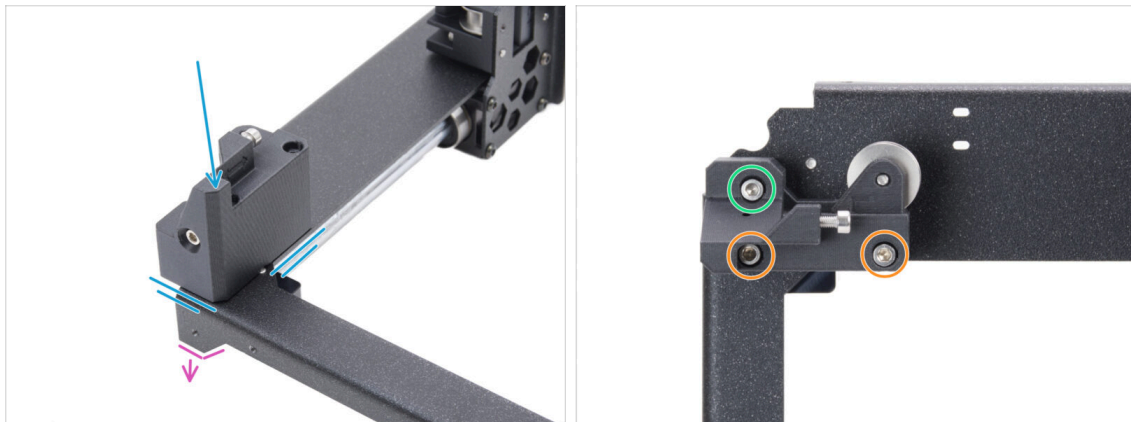


- ◆ Turn the CoreXY assembly upside down so that the bent parts face downward. Focus on the front left corner on the assembly.
- ◆ Place the belt-tensioner-**left** assembly in the front left corner of the CoreXY plate. Align it with the front and inner side edges.
- ◆ Line up the holes in both parts.
- ◆ Secure the part with two M3x30 screws.
- ◆ Insert and tighten one M3x18 screw.

ÉTAPE 31 Installation du belt-tensioner-right

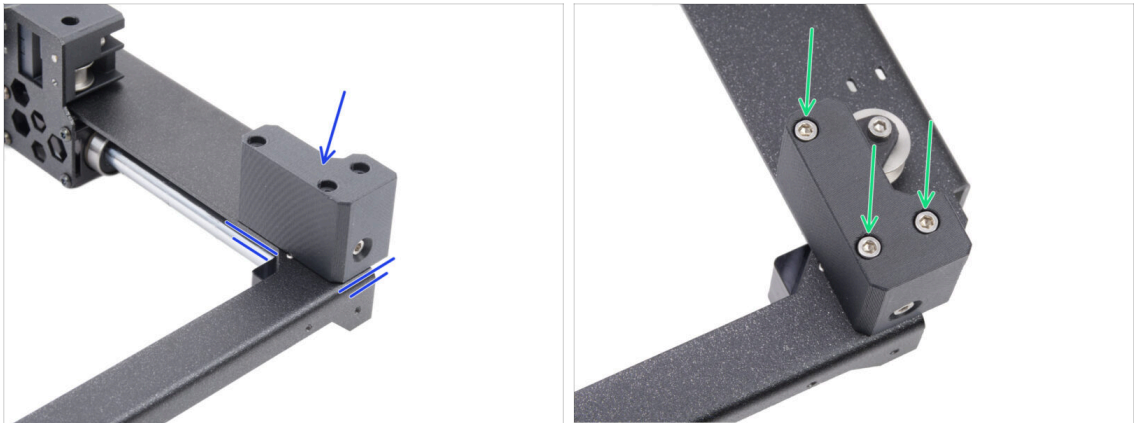


- Place the belt-tensioner-**right** assembly in the front right corner. Align it with the front and inner side edges.
- Line up the holes in both parts.
- Secure the part with three M3x30 screws.

ÉTAPE 32 Linear rail: parts preparation

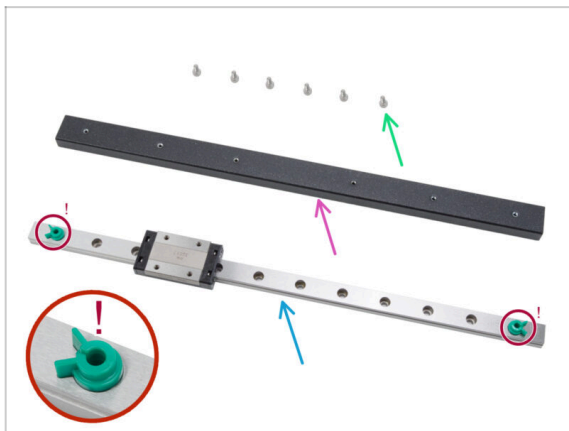

- For the following steps, please prepare:
 - Vis M3x6 (6x)
 - Linear rail beam (1x) *found in the Metal parts 3/3 package*
 - Linear rail (1x) *found in the Electronics & Chamber parts package*
- ⚠ **Under no circumstances remove the green anti-ejection safety pins.** Wait for the prompt in the instructions.
- Piece of cloth or a paper towels to wipe the preservative lubricant from the linear guide.


ÉTAPE 33 Attaching the linear rail

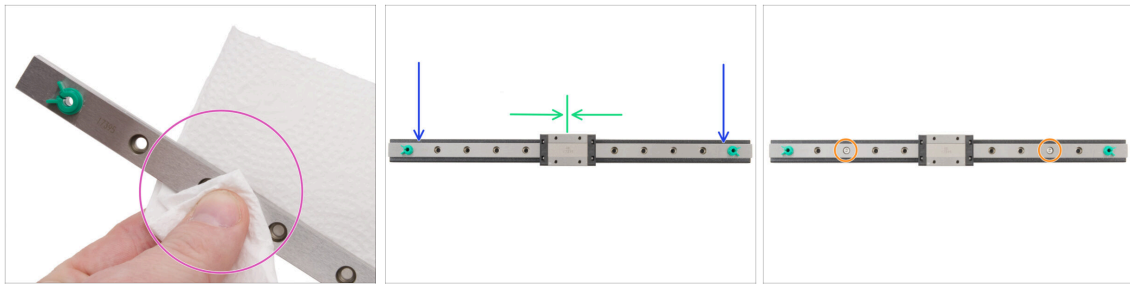

⚠ Under no circumstances remove the green anti-ejection safety pins. Wait for the prompt in the instructions.

- ✎ Immediately after removing the linear guide from the package, wipe off the preservative lubricant with a paper towel.
- ⬢ Attach the linear rail on the linear rail beam and line up the holes in both parts.
- 🟡 Insert and slightly tighten two M3x6 screws into the third holes from both ends.
- 🟢 Move the linear carriage approximately to the center of the rail.

ÉTAPE 34 Securing the linear rail

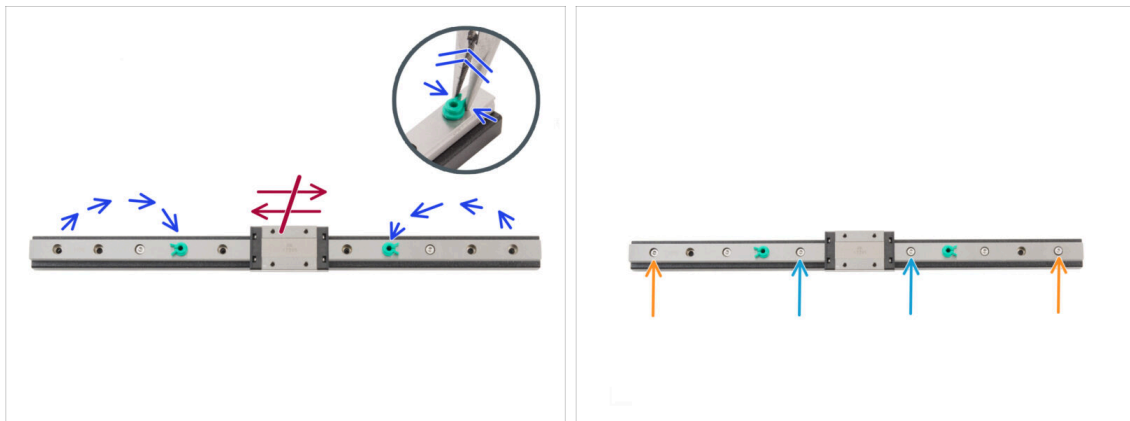


⚠ Do not move the linear carriage in any way in this step.

- ⬢ Relocate the safety pins from each end to the fourth holes from the ends of the linear rail.
- ⬢ Gently squeeze the safety pin with needle-nose pliers and pull it out.
- ⬢ Insert two M3x6 screws into the fifth holes from the ends of the rail. **Tighten just slightly.**
- 🟡 Insert two M3x6 screws into the first holes in the rail. **Tighten just slightly.**

⚠ Do not remove the safety pins from the rail.

ÉTAPE 35 Installing the linear rail: parts preparation

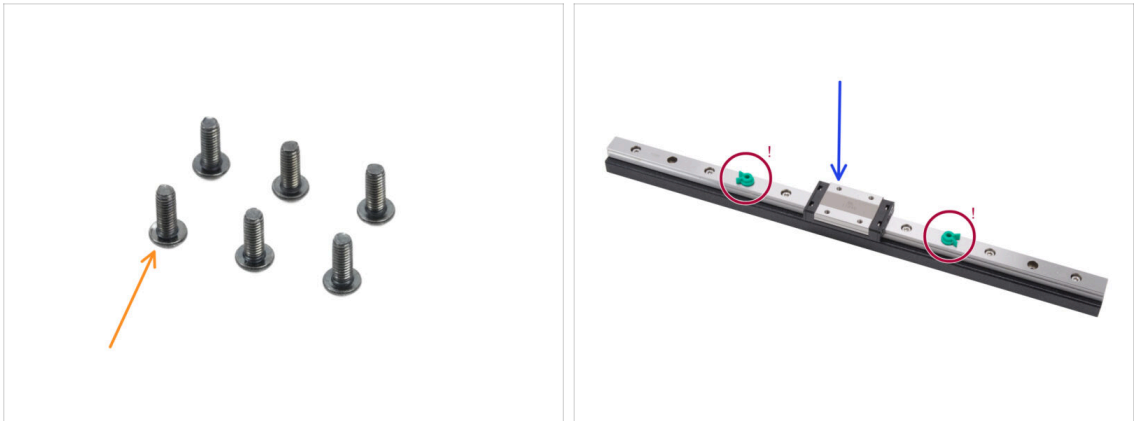

⬛ For the following steps, please prepare:

🟡 Vis M3x8rT (6x)

ⓘ There are both M3x8rT and M3x8 screws in the kit. Make sure you have prepared the correct ones.

🟢 Linear rail assembly (1x) *you assembled earlier*

⚠️ **Do not remove the safety pins.**

ÉTAPE 36 Installing the linear rail assembly




🔴 Position the assembly with the motor mounts facing you.

🟢 Move both linear holders approximately to the center of the Y-axis.

🟡 Attach the linear rail assembly to the holders from the front side of the assembly.


🟡 Secure it with three M3x8rT screws from the back side on both the left and right sides.

ÉTAPE 37 Linear rail: removing the safety pins

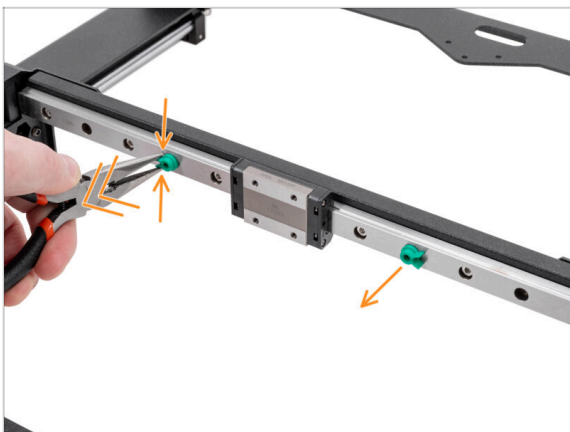

- Gently squeeze both safety pins with needle-nose pliers and pull them out of the linear rail.
- i You can discard the safety pins as they are no longer needed.

ÉTAPE 38 Bed-stop : préparation des pièces

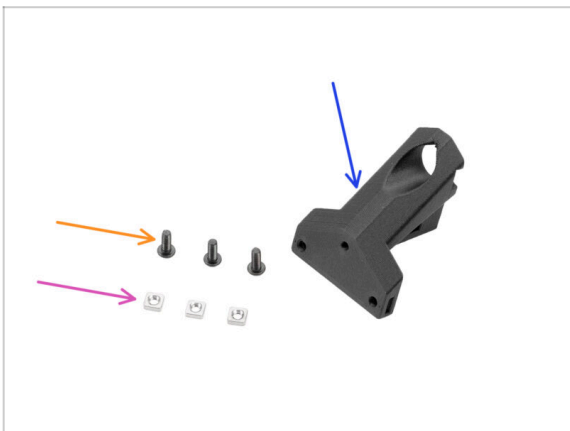

- **For the following steps, please prepare:**
- Bed-stop-rear (1x) *found in the Printed parts package*
- Écrou M3nS (3x)
- Vis M3x8rT (3x)

ÉTAPE 39 Assemblage du bed-stop



- Insert two M3nS nuts into the bed-stop from one side.
- Insert one M3nS nut into the bed-stop from the other side.

ÉTAPE 40 Montage du bed-stop



- Position the CoreXY assembly as shown, ensuring the motor mounts face upwards.
- Focus on the triangle protrusion on the metal part.
- Insert the bed-stop-rear **under** the protrusion at the back of the CoreXY plate.
- Align all three holes in both parts.
- Secure both parts together with three M3x8rT screws.
- i** The upper screw is screwed into plastic with no pre-cut thread. It cuts the thread as it's tightened. Slight resistance is expected.

ÉTAPE 41 X&Y motors: parts preparation



- For the following steps, please prepare:**
- Y-axis motor (1x) *found in the Motors package*
- X-axis motor (1x) *found in the Motors package*
- i** Note that the motors are marked as X and Y-axes in order to distinguish between them. We will continue to follow this marking.
- Pulley T16-2GT (2x) *found in the Electronics package*
- Assembly-multi-tool (1x) *you already used*

ÉTAPE 42 Installing the X-axis pulley




- Prepare the **X-axis** motor.
- Note the flat part on the motor shaft.
- ⚠ Slide the Pulley on, **note the CORRECT orientation.**
- Rotate the motor shaft with the flat part facing you.
- Using the fork on the Assembly-multi-tool set a gap between the pulley and the motor.
- Push the pulley on the tool and firmly tighten the screw against the flat part on the shaft.
- Rotate the pulley and firmly tighten the second grub screw.
- ⚠ Vérifiez à nouveau l'orientation de la poulie. Le **côté denté de la poulie doit être du côté du moteur.**

ÉTAPE 43 Installing the Y-axis pulley



- Prepare the **Y-axis** motor.
- Note the flat part on the motor shaft. Rotate the motor shaft with the flat part facing you.
- ⚠ Faites glisser la poulie et **notez la BONNE orientation. L'orientation de la poulie de l'axe Y est DIFFÉRENTE de celle de l'axe X. Assurez-vous que les dents de la poulie sont orientées à l'opposé du moteur. Utilisez le crochet le plus large de l'outil d'assemblage.**
- À l'aide du crochet de l'outil multifonction d'assemblage, placez la partie courbée la plus épaisse entre la poulie et le moteur.
- ⚠ **N'essayez pas de l'accrocher autour de l'arbre.** Posez simplement l'outil contre le moteur et assurez-vous que la pointe du crochet glisse entre le moteur et la poulie.
- Push the pulley on the tool and firmly tighten the screw against the flat part on the shaft.
- Rotate the pulley and firmly tighten the second grub screw.
- ⚠ **Vérifiez à nouveau l'orientation de la poulie. Les dents doivent être tournées à l'opposé du moteur.**

ÉTAPE 44 XY belts: parts preparation

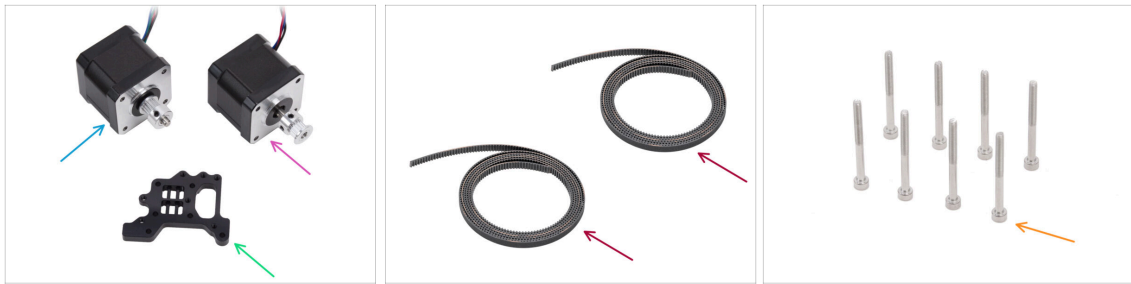

■ For the following steps, please prepare:

- X-axis motor assembly (1x) *you assembled earlier*
- Y-axis motor assembly (1x) *you assembled earlier*
- Nexttruder holder (1x) *found in the CORE XY parts + hinges + HB set package*
- XY belt (2x) *found in the CORE XY parts + hinges + HB set package*
- Vis M3x35 (8x)


ÉTAPE 45 Informations sur les courroies XY



❗ The next steps cover belt installation and guiding on the core XY assembly. Before starting, refer to the illustration for an overview and better understanding of each belt's path.


- X-axis belt - at the **top position**
- Y-axis belt - at the **bottom position**
- Let's guide the belts step by step...

ÉTAPE 46 Y belt guiding: Y motor pulley

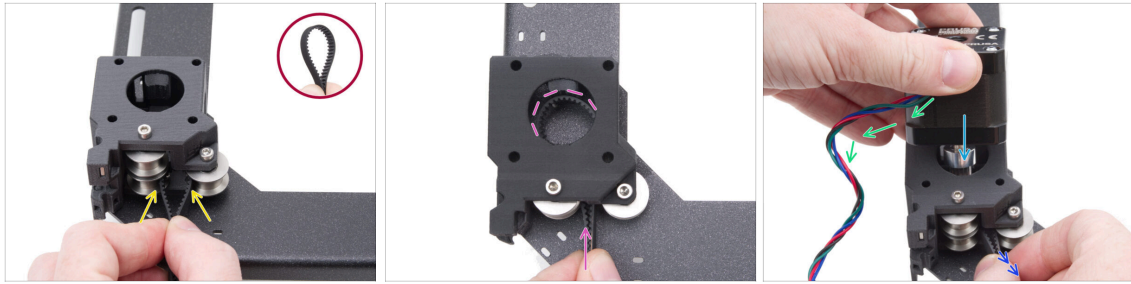


- From the back of the CoreXY, focus on the motor-mount on the **left** side.
- Create a loop anywhere on the belt so the **belt teeth are pointing inside** the loop.
- Push this loop through the space between the lower pulleys inside the motor mount.
- Push through enough to make the loop follow the top round hole of the motor-mount as closely as possible.
- Insert the **Y** motor into the motor holder, the pulley must be in the middle of the belt loop.
- Insert the Y motor pulley into the motor mount, ensuring the pulley is centered within the belt loop.
Fully attach the motor to the motor-mount with the motor cable facing you.
- Pull lightly on the belt loop to encircle the pulley.

ÉTAPE 47 Securing the Y-axis motor

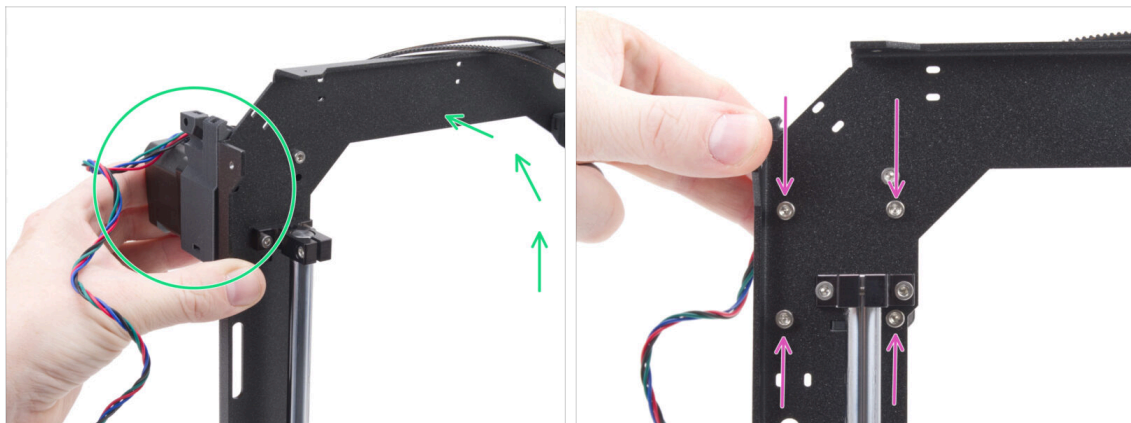

- Firmly grasp the Y-axis motor assembly and position the CoreXY assembly vertically. **Do not drop the motor!**
- ⚠ Be careful not to pull the entire belt out of the motor.
- Keep holding the motor with one hand. With the other hand, secure the motor using four M3x35 screws on the underside of the frame. **Tighten firmly.**
- Place the CoreXY assembly back into the horizontal position.

ÉTAPE 48 Y belt guiding: Y motor mount

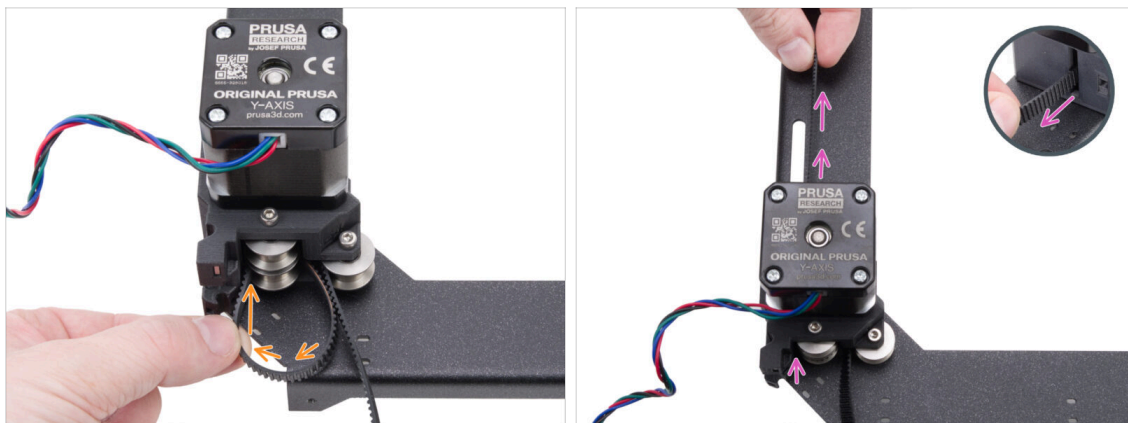


- 🟠 Guide the left end of the belt around the lower left pulley.
- 🟡 Push the belt through the part and guide it to the front of the CoreXY plate.
- ⚠️ **Don't pull too long so you don't pull the whole belt out.** Remember that the other end is loose. The whole process would then have to be repeated.

ÉTAPE 49 Y belt guiding: belt tensioner




- 🟠 Guidez la courroie autour de la poulie dans le tendeur de courroie.
- 🟡 Push the belt around the front pulley in the linear assembly.
- 🟢 Prepare the Nextruder holder in the same orientation as in the picture. Note the holes for securing the belts.
- 🟢 Push the end of the belt through the middle hole into the left hole in the bottom row - leave 4-5 teeth sticking out.
- 📄 The belt is secured on this end. You can leave it free for now.

ÉTAPE 50 Y belt guiding: X motor mount

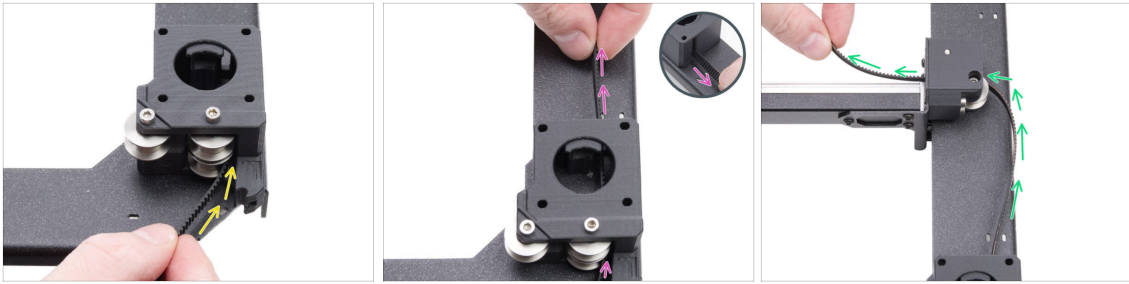


- Back to the other end of the Y belt.
- Take the other end of the belt and guide it around the lower pulley in the X motor mount.
- Push it through the motor mount to the front.
- Route the belt around the lower right pulley in the linear rail holder.

ÉTAPE 51 Y belt guiding: securing the belt

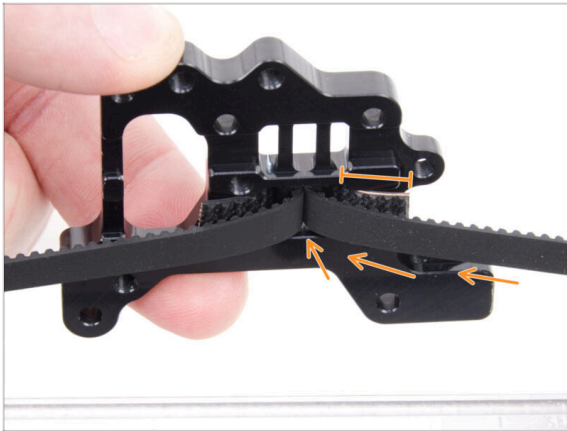


- Push the end of the belt through the middle hole to the right hole in the bottom row of the Nextruder holder - leave 4-5 teeth sticking out.
- ⓘ If it is difficult to reach the Nextruder holder with the belt, try loosening the belt tensioner screw on the front of the assembly.
- 📌 Don't forget to adjust it back after securing the belt.

ÉTAPE 52 X belt guiding: X motor pulley

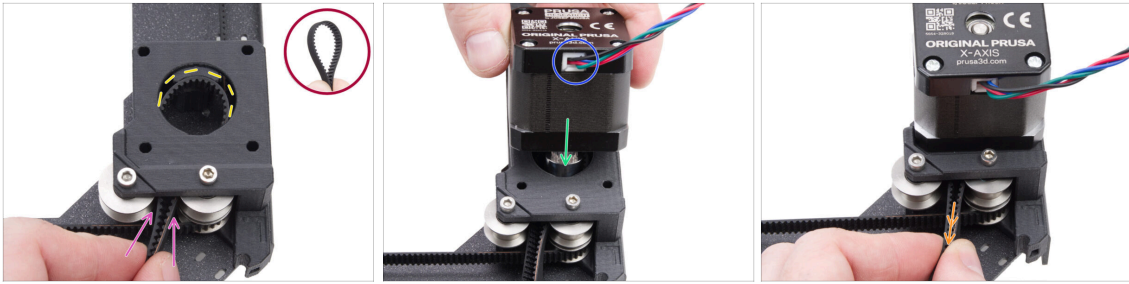

- From the back of the CoreXY, focus on the motor-mount on the **right** side.
- Create a loop anywhere on the second belt so the belt teeth are pointing inside the loop.
- Push this loop through the space between the upper pulleys inside the motor mount.
- Push through enough to make the loop follow the top round hole of the motor-mount as closely as possible.
- Insert the **X** motor pulley into the motor mount, ensuring the pulley is centered within the belt loop.
- Ensure the motor cable is facing you (rear).
- Pull lightly on the belt loop to encircle the pulley.

ÉTAPE 53 Securing the X-axis motor

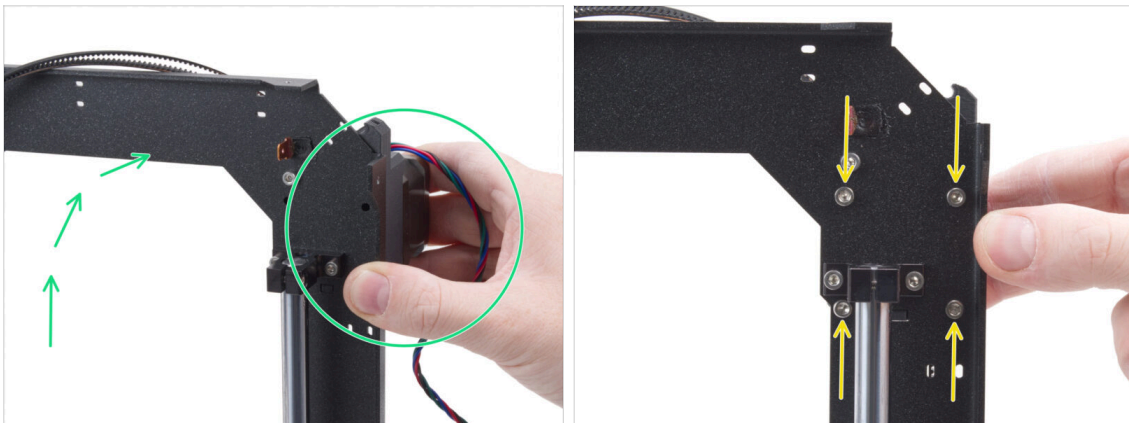

- Saisissez fermement l'assemblage du moteur de l'axe X et positionnez l'assemblage du CoreXY verticalement. **Ne faites pas tomber le moteur !**
- ⚠ **Be careful not to pull the entire belt out of the motor.**
- Keep holding the motor with one hand. With the other hand, secure the motor using four M3x35 screws on the underside of the frame. **Tighten firmly.**
- Place the CoreXY assembly back into the horizontal position.

ÉTAPE 54 Y belt guiding: X motor mount




- Guide the right end of the belt around the upper right pulley.
- Push the belt through the part and guide it to the front of the CoreXY plate.
- ⚠ **Don't pull too long so you don't pull the whole belt out.** Remember that the other end is loose. The whole process would then have to be repeated.

ÉTAPE 55 X belt guiding: belt tensioner




- Guidez la courroie autour de la poulie dans le tendeur de courroie.
- Push the belt around the front upper pulley in the linear assembly.
- Route the end of the belt through the middle hole into the right hole - leave 4-5 teeth sticking out.
- ⓘ The belt is secured on this end. You can leave it free for now.

ÉTAPE 56 X belt guiding: Y motor mount

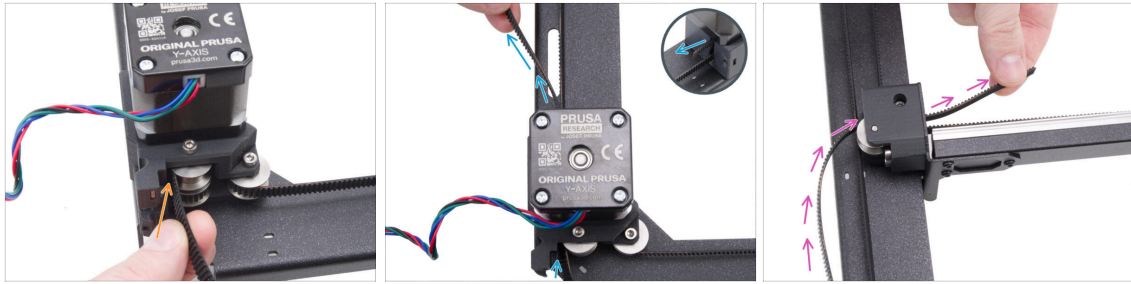

- Back to the other end of the X belt.
- Take the other end of the belt and guide it around the upper pulley in the Y motor mount.
- Push the belt through the motor mount.
- Route the belt around the upper front pulley in the linear rail holder.

ÉTAPE 57 X belt guiding: securing the belt

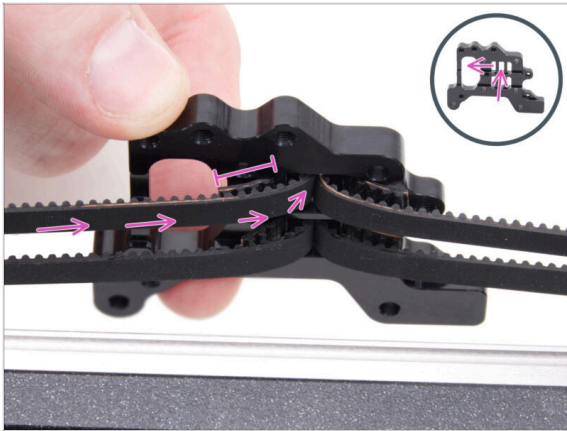



- Push the end of the belt through the middle hole to the left hole in the upper row of the Nexttruder holder - leave 4-5 teeth sticking out.

ÉTAPE 58 Checking the belt guidance



Before proceeding, recheck the belt routing according to the illustration.


ÉTAPE 59 Bowden guide: parts preparation

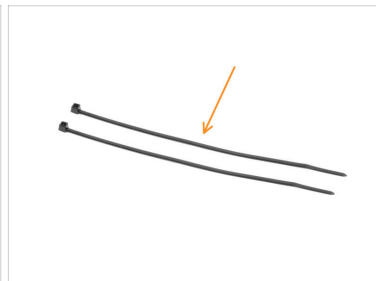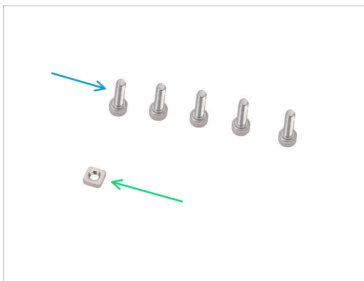

● For the following steps, please prepare:

- Bowden-guide (1x) *found in the Printed parts package*
- Vis M3x10 (5x)
- Écrou M3nS (1x)
- Collier de serrage (2x)


ÉTAPE 60 Securing the Nextruder holder

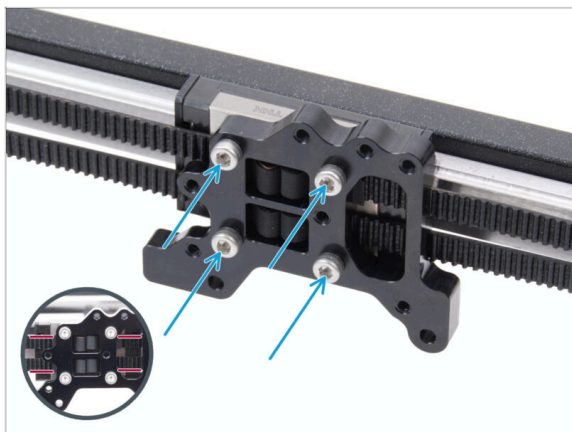

- Attach the Nextruder holder to the linear rail carriage and secure it using four M3x10 screws.


CAUTION: Ensure no belt obstructs the screw. Avoid screwing through the belt!

ÉTAPE 61 Securing the Y motor cable

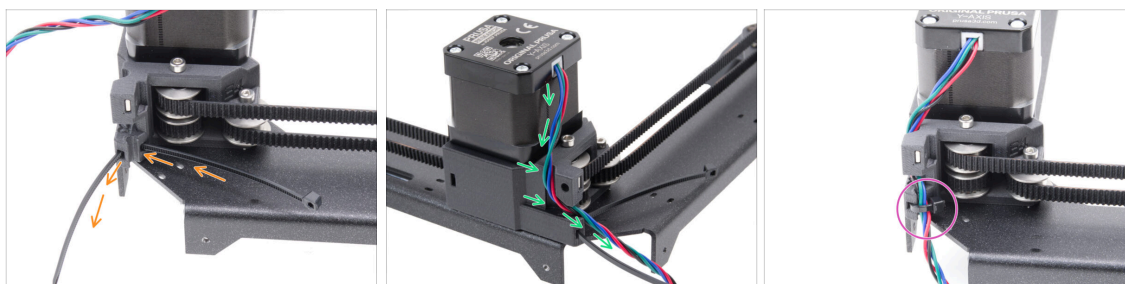


- Push the zip tie through the motor-mount-right.
- Route the Y motor cable through the cable channel in the motor-mount-right and over the zip tie.
- Secure the cable with a zip tie and trim the excess.

ÉTAPE 62 Securing the X motor cable

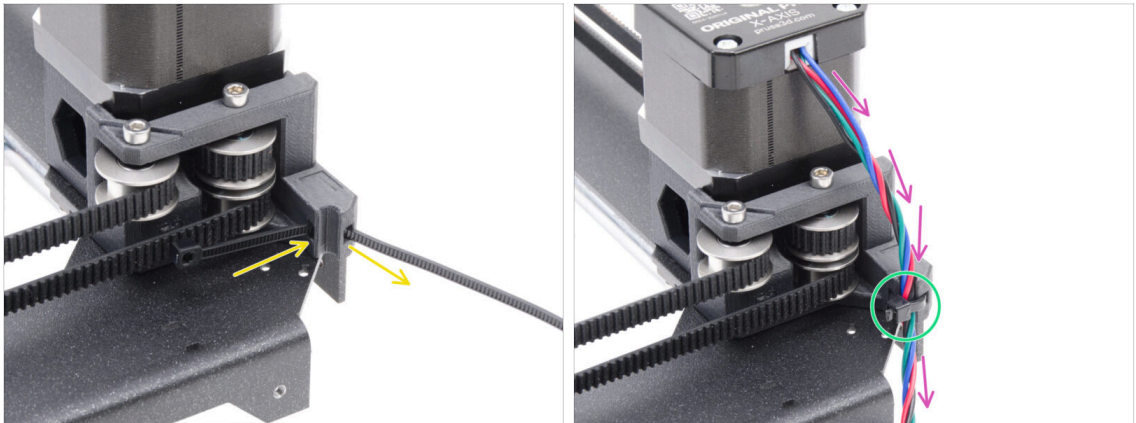

- ✚ Push the zip tie through the motor-mount-left.
- ✚ Route the X motor cable through the cable guide in the motor-mount-left and over the zip tie.
- ✚ Secure the cable with a zip tie and trim the excess.

ÉTAPE 63 Installing the bowden guide

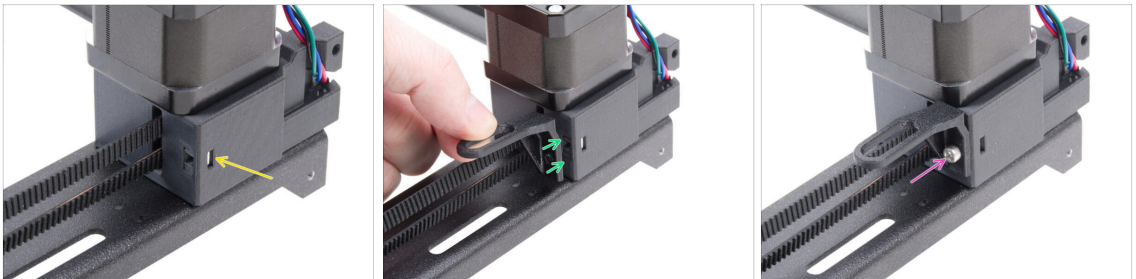

- ✚ Insert the M3nS nut into the motor-mount-right.
- ✚ Attach the bowden-guide to the motor-mount-right.
 **Note the correct orientation of the part.**
- ✚ Fix the bowden-guide in place using the M3x10 screw.

ÉTAPE 64 White LED strip: parts preparation



● For the following steps, please prepare:

● White LED strip (1x) found in the Electronics & Fasteners package

● CoreXY strut (1x) found in the Metal parts 1/3 package

ⓘ The part is inserted in a foam cutout and may not be immediately visible at first glance.

● Vis M3x4rT (2x)

ÉTAPE 65 Sticking the White LED strip



● Carefully peel off the protective (paper) layer from the White LED strip.

⚠ After removing the protective layer, the LED strip is adhesive.


● Position the White LED strip near the CoreXY strut to check alignment, but **do not attach it yet**.

⚠ Note the rectangular cutout on the strut, orient the strip cable to the same side.

● Stick the White LED strip evenly to the strut - on the side with the rectangular cutout.

● After sticking, press lightly on the blank areas of the strip to ensure adhesion. **Do not touch LEDs and resistors!**

ÉTAPE 66 Installing the white LED assembly

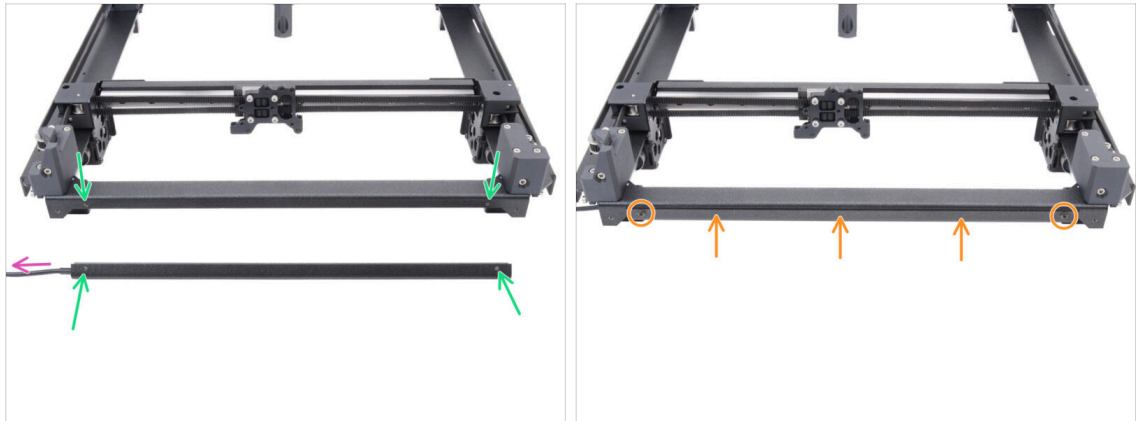


- Take the white LED assembly and attach it to the front of the CoreXY assembly. Align the holes of both parts.
- **The white LED strip cable must point to the left.**
- Attach the LED assembly to the CoreXY plate and secure it with two M3x4rT screws.

ÉTAPE 67 Door sensor & White LED strip: parts preparation



- **For the following steps, please prepare:**
- Door sensor (1x) found in *Electronics and fasteners package*
- M2.5x10 screw (1x) *silver*
- Collier de serrage (4x)

ÉTAPE 68 Inserting the zip ties

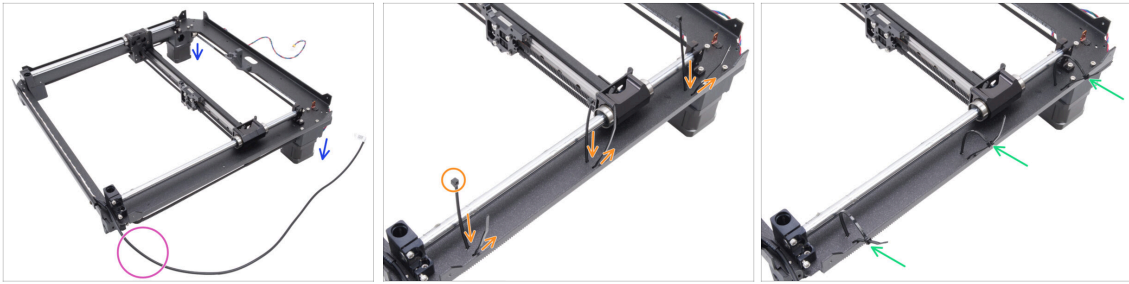


- ◆ Flip the CoreXY assembly upside down and rest it on the motors.
- ◆ Position it with the white LED strip cable facing toward you.
- ◆ Thread three zip ties through the CoreXY plate, ensuring the zip tie heads point inward. **Make sure that the zip ties do not catch the belts from the other side.**
- ◆ Partially tighten the zip ties—just enough to catch the first few teeth.
- ⚠ **Do not fully secure them yet, as we will route cables through them later.**
- ◆ Flip the assembly back with the motors facing upwards.

ÉTAPE 69 Installing the door sensor



- ◆ Place the door sensor on the left belt tensioner. The lever of the door sensor must face forward.
- ◆ Secure the door sensor with the M2.5x10 screw.
 - ◆ Tighten the bolt fully and then loosen 1/4 turn. The sensor must be allowed to move.
- ◆ From the rear of the belt tensioner, tighten the M3x12 screw so that it touches the door sensor.

ÉTAPE 70 Securing the door sensor cable

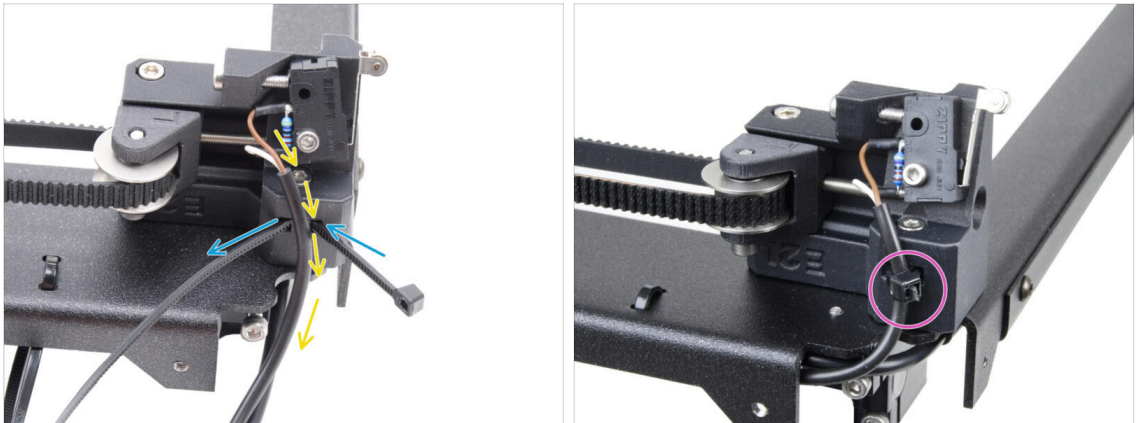


- ◆ Push the zip tie through the hole in the left belt tensioner.
- ◆ Guide the door sensor cable through the zip tie.
- ◆ Tighten the zip tie to secure the door sensor cable. Cut off the excess.

ÉTAPE 71 Guiding the cables: LED and door sensor



- ◆ Prepare a cardboard box. You can use any box from the kit. *The box used in the picture is for illustrative purposes only.*
- ◆ Flip the CoreXY assembly upside down, positioning the smooth rods on top.
- ◆ Slightly lift and support the front side of the CoreXY assembly with the cardboard box.
- ⚠ **Be careful not to damage the door sensor.**
- ◆ Route the white LED strip cable and the door sensor cable through the zip ties.
- ◆ Tighten all the zip ties to secure the cables. Cut off the excess zip ties.
- ⓘ **If you plan on adding the Buddy camera, do not tighten the zip ties all the way.** As you will be adding another USB-C cable to the zip ties soon.
- ◆ **Cables must be slightly taut and straight.** Excess slack or bends may cause collisions with the Y-axis and lead to damage.

ÉTAPE 72 Remarque sur la caméra Buddy3D

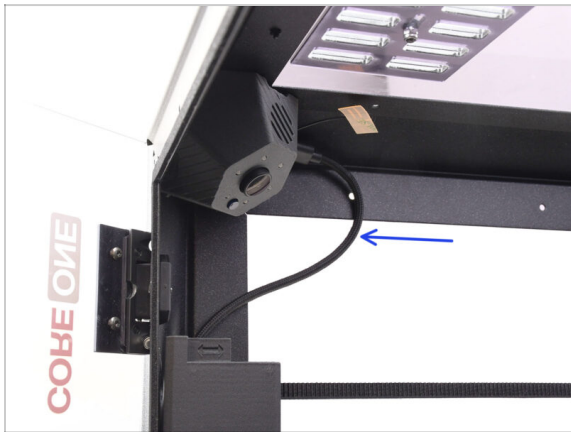

- For future Buddy3D Camera users only. **Skip this step if you are not planning to install the Buddy3D Camera.**



⚠ Disclaimer: Typically, the printer must be fully assembled and tested before any add-ons can be installed. Choosing to install the Buddy3D Camera USB cable now will save you time later on.



For detailed information on cable placement, refer to the separate guide **Buddy3D Camera for CORE One Installation**


- The above-mentioned guide on how to install the Buddy3D Camera shows the printer in a further stage of assembly.
- Pour l'instant, utilisez le guide pour vous assurer que le câble est correctement installé et serrez les colliers de serrage.
- i** We will let you know later on when to return to the guide and finish the Buddy camera installation.

ÉTAPE 73 Smooth rods: parts preparation

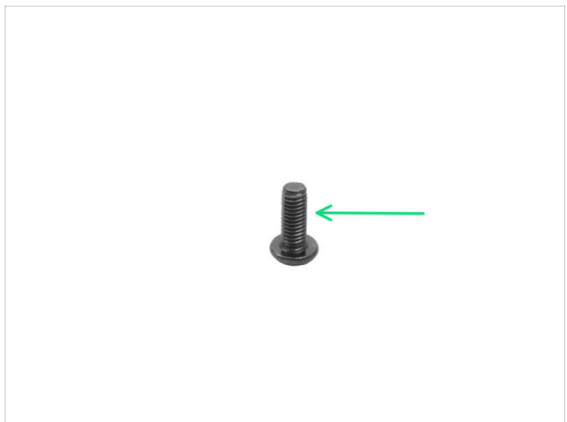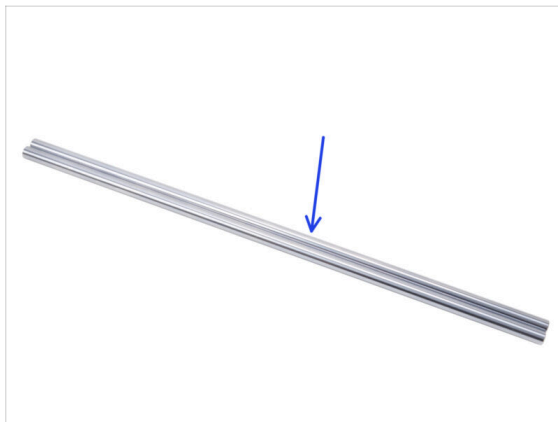


- For the following steps, please prepare:**
- Smooth rod 330 x 8 mm (2x) *found in the Rods box*
- Vis M3x8rT (1x)

ÉTAPE 74 Installing the CoreXY assembly

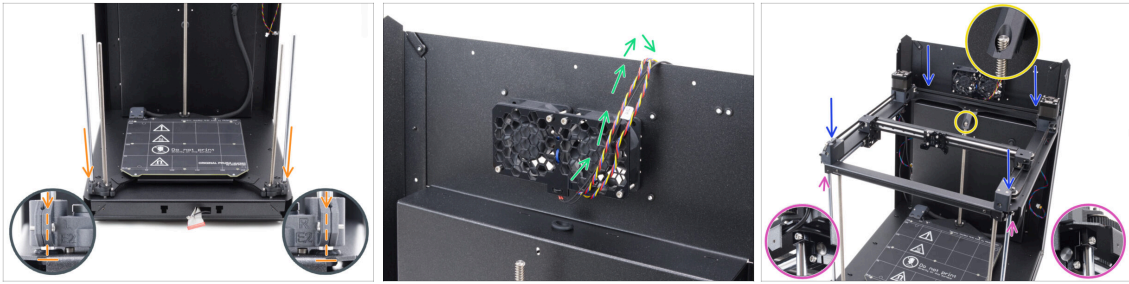


- ❖ Carefully insert both smooth rods through the heatbed assembly bearings and into the rod mount part in the base assembly.
 - ⚠ **It is a requirement to insert the smooth rod in the axis with the bearing very slowly to prevent the balls from shooting out of the bearing.**
- ❖ Temporarily hang the cables from the cooling fans over the rear panel. **There must be a space between the cables and the back panel pocket.**
- ❖ Exercise extreme caution when placing the assembly on the smooth rods and back panel assembly.
 - ⚠ **Assurez-vous qu'aucun câble n'est pincé.**
 - ❖ Ensure both smooth rods are properly seated in the rod holders.
 - ❖ The threaded rod of the rear Z motor must pass through the bed-stop-rear part.
- ⚠ **WARNING: When handling the printer, DO NOT lift it by the CoreXY assembly.**
 Always lift it by the base of the entire assembly.

ÉTAPE 75 Securing the smooth rods

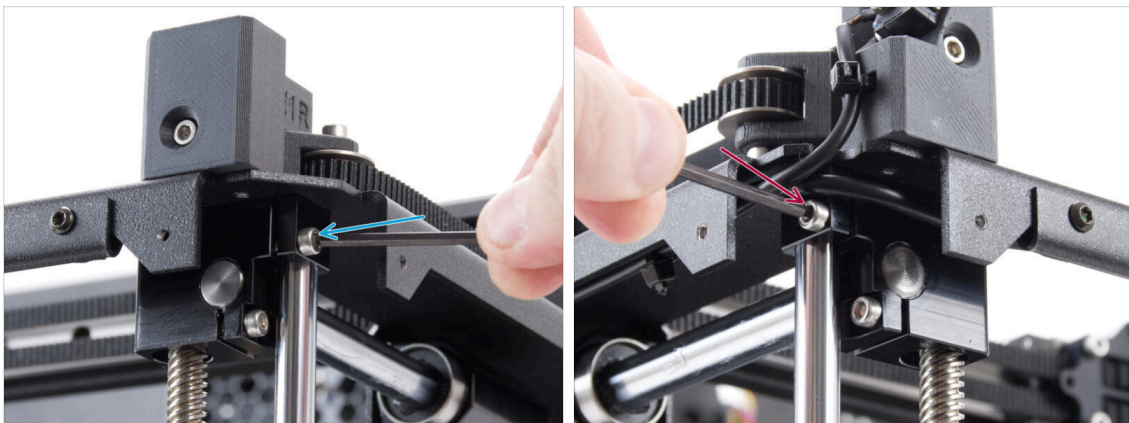


- ⚠ **Check that both smooth rods are seated correctly in the holders.**
- ❖ Firmly tighten the right M3x10 screw to secure the smooth rod.
- ❖ Firmly tighten the left M3x10 screw to secure the smooth rod.

ÉTAPE 76 Aligning the linear rail

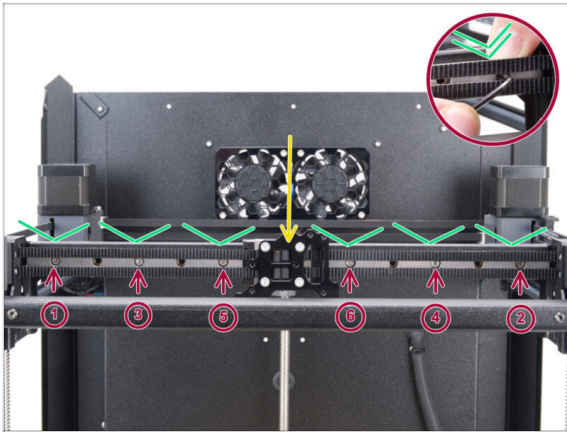


- ✦ Move the linear rail carriage to the center.
- ⚠ Firmly tighten all screws **in the order shown in the picture**.
- ✦ Push the linear rail down while tightening.

ÉTAPE 77 Guiding the corexy cables

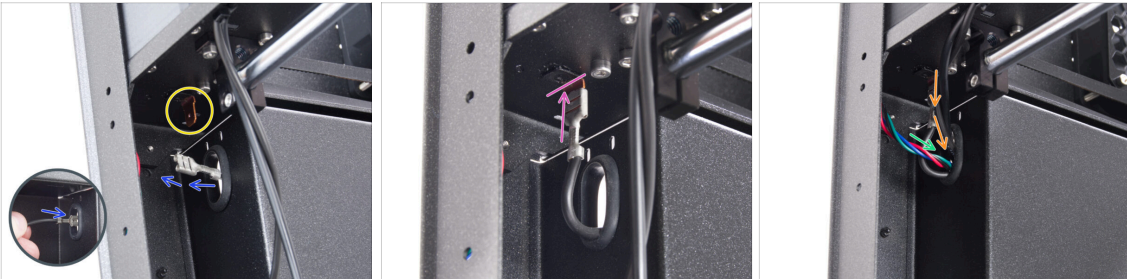


- ✦ From the back of the printer, push the FE connector through the oval hole.
- ✦ Locate the FE cable connector (number 5) in the rear left corner - under the CoreXY assembly.
- ✦ Plug the FE connector onto the Faston on the underside of the CoreXY plate.
- ✦ On the same side, push the X motor cable through the oval hole in the back panel.
- ✦ Push the White LED strip and Door sensor cables through the oval hole in the back panel.

ÉTAPE 78 Guiding the cooling fan cables

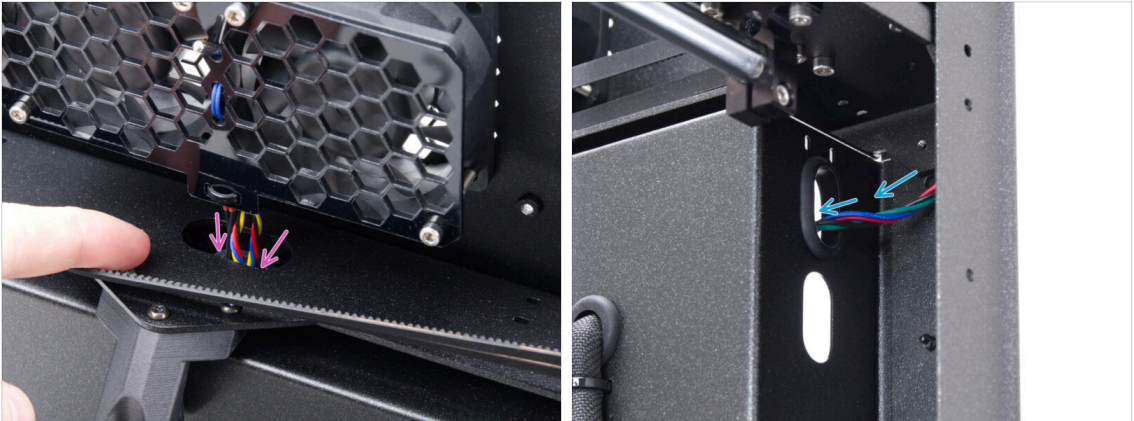



- Push the cooling fan and thermistor cables through the oval hole in the back panel.
- On the right back corner, locate the Y motor cable and push it through the upper oval hole in the back panel.

ÉTAPE 79 Fixation du bed-stop

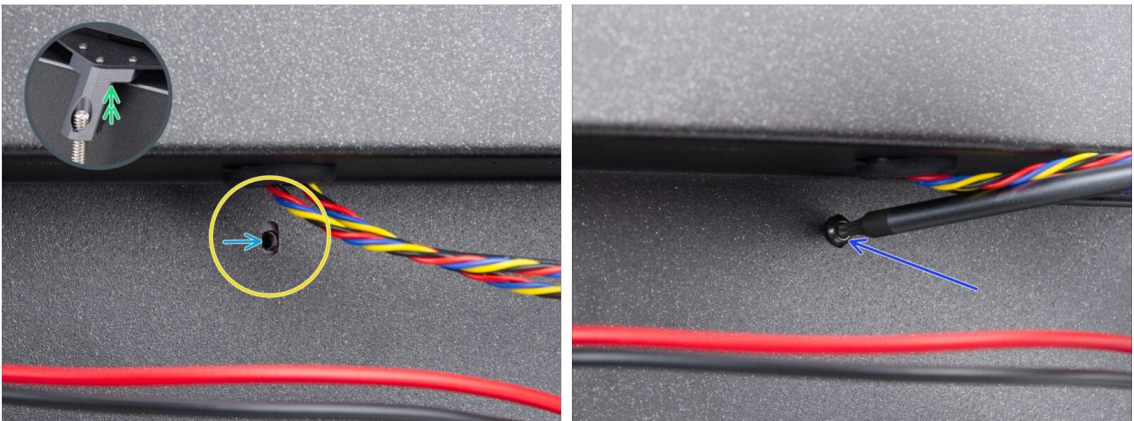



- From the back side, locate the oval screw hole under the cooling fans.
- The oval hole must be flush with the hole in the bed-stop part on the opposite side.
- To compensate, slightly raise the rear of the CoreXY assembly - just a few millimeters.
- After aligning the holes, secure them with an M3x8rT screw.

ÉTAPE 80 Connecting the cooling fans cables

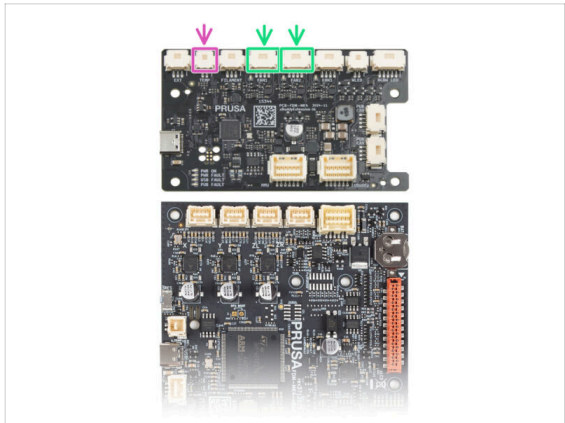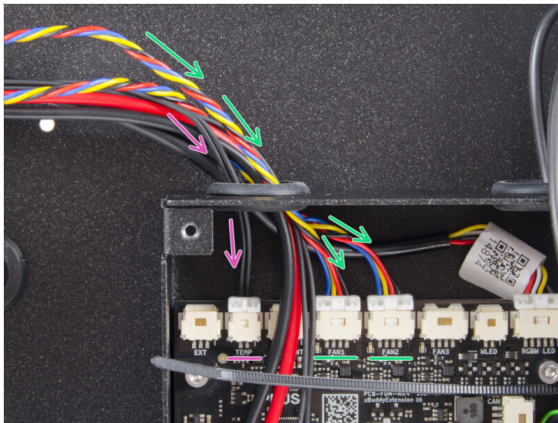


- Route the cooling fan cables through the left hole in the xBuddy box and plug them into the fourth and fifth slots on the xBuddy extension board labeled FAN 1 and FAN 2.
- ❗ The connection order does not matter, both cables are the same.
- Guide the chamber thermistor cable together with the cooling fan cables.
- Connect it to the second slot from the left on the xBuddy extension board labeled TEMP.

ÉTAPE 81 Connecting the corexy cables

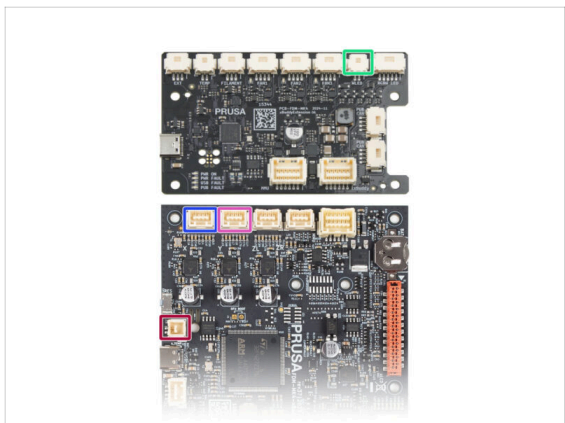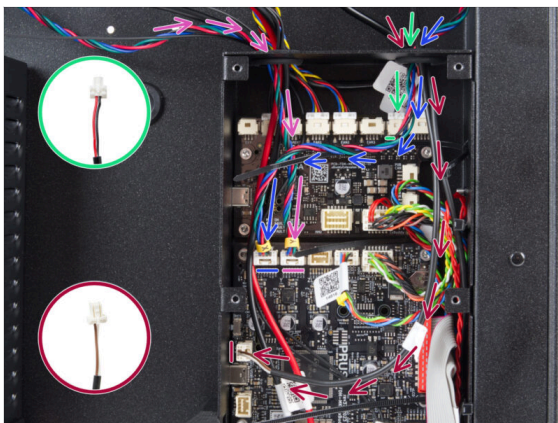

- Guide the X motor cable through the right hole in the xBuddy box. Connect it to the first slot from the left on the xBuddy board.
- Guide the door sensor cable through the right hole in the xBuddy box. Connect it to the lower slot on the left side of the xBuddy board.
- Guide the white LED strip cable through the right hole in the xBuddy box. Connect it to the second slot from the right on the xBuddy extension board.
- Guide the Y motor cable through the left hole in the xBuddy box. Connect it to the second slot from the left on the xBuddy board.

ÉTAPE 82 C'est l'heure des Haribo

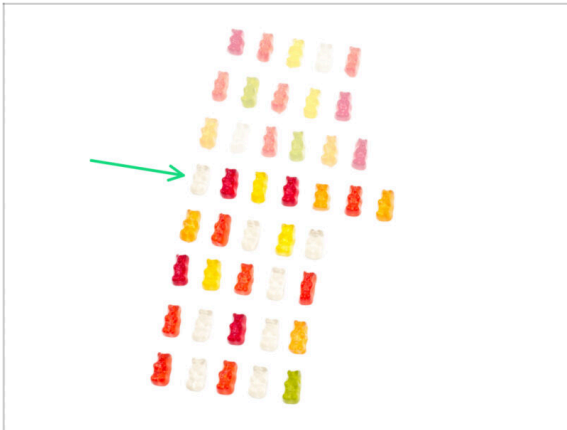


- Think it's snack o'clock again.
- You deserve to eat the whole bag, but keep... Eat just the fourth row.

ÉTAPE 83 Fini




- Congratulations! You have just assembled and installed the CoreXY assembly.
- Let's go to the next chapter.

6. Assemblage du Nextruder

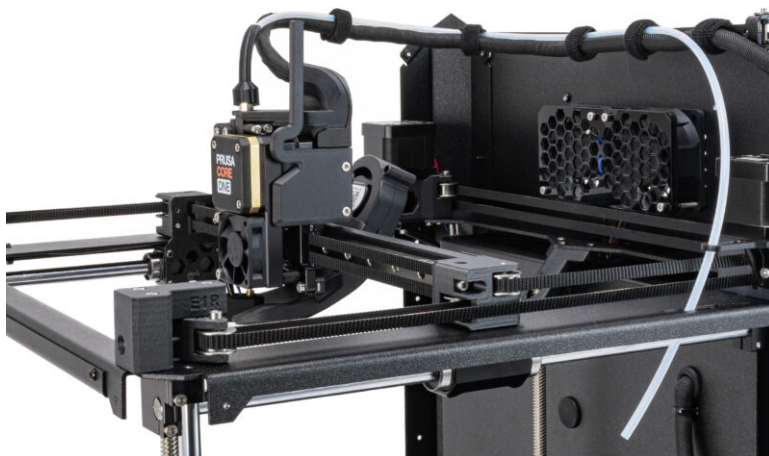


ÉTAPE 1 Tool necessary for this chapter

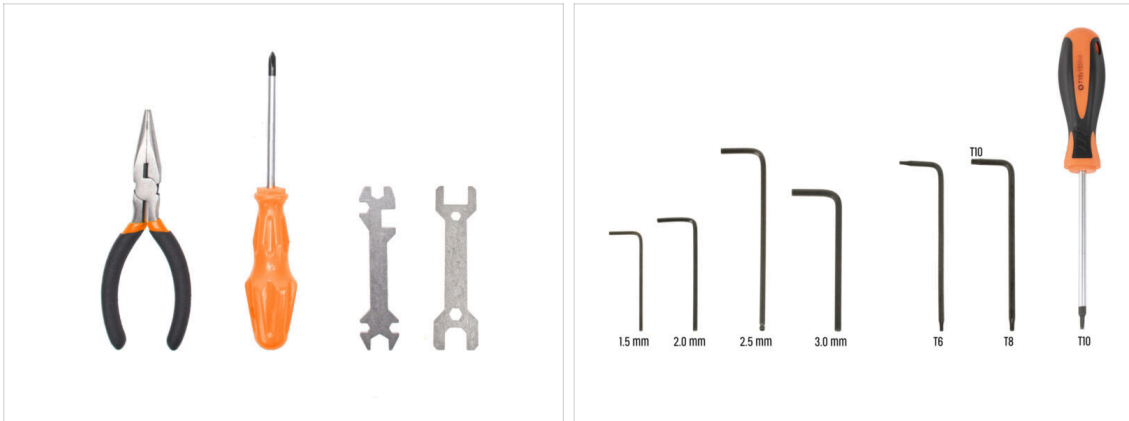

● **For this chapter, please prepare:**

- Clé universelle
- Clé Allen de 1,5 mm
- Clé Allen de 2,5 mm
- Clé Torx T6
- T10 torx key / T10 torx screwdriver

ÉTAPE 2 Nextruder idler assembly: parts preparation

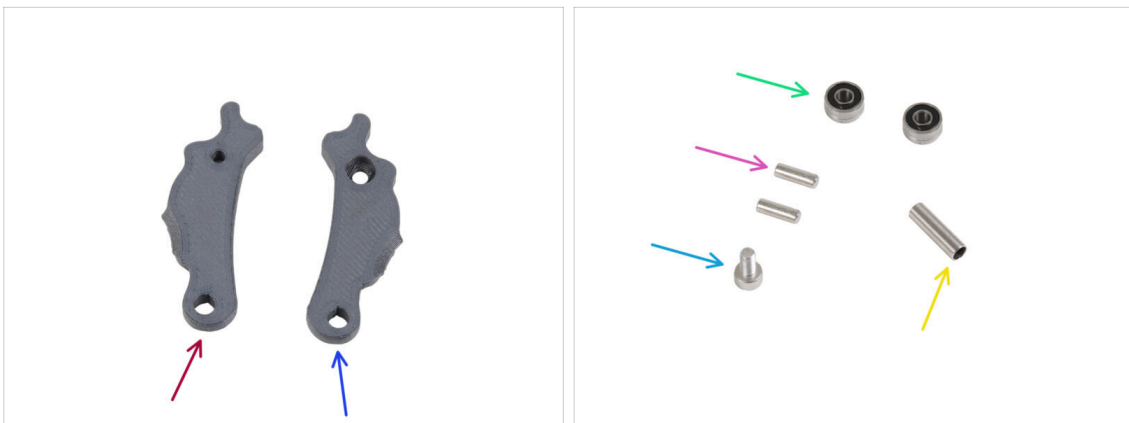

● **For the following steps, please prepare:**

- Idler-lever-a (1x) *found in the Electronics package*
- Idler-lever-b (1x) *found in the Electronics package*
- Bearing 693 2RS (2x) *found in the Electronics package*
- Pin 2.9x8.5 (2x) *found in the Electronics package*
- Vis M3x6 (1x)
- Tubular spacer 13.2x3.8x0.35 (1x) *found in the Electronics package*

ÉTAPE 3 Assembling the extruder idler




- Place both bearings into the Idler-lever-a.
- Insert the pin 2.9x8.5 into each bearing 693 2RS, as seen in the picture.
- Close it up with the Idler-lever-b part and secure it with the M3x6 screw. **Do not overtighten the screw.** Both bearings must be able to rotate without significant resistance.
- From the same side, push the tubular spacer into the assembly. The "bottom" of the tubular spacer must be flush with the bottom part of the Idler assembly.

ÉTAPE 4 Assembling the extruder: parts preparation I.



- **For the following steps, please prepare:**
- PG-assembly (1x) *found in the Electronics package*
- Heatsink assembly (1x) *found in the Electronics package*
- Main-plate (1x) *found in the Electronics package*
- PG-ring (1x) *found in the Electronics package*
- PG-assembly-adapter (1x) *found in the Electronics package*
- ① The list continues in the next step...

ÉTAPE 5 Assembling the extruder: parts preparation II.

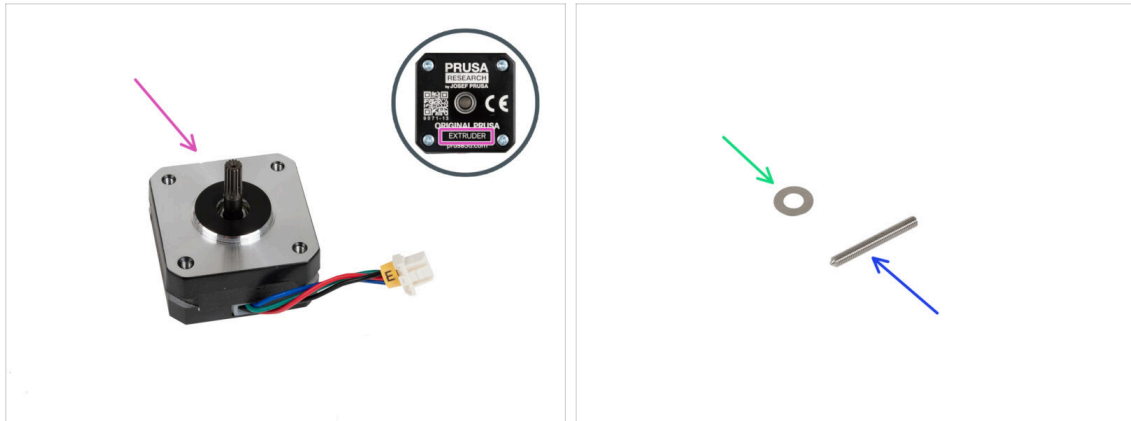

- ◆ Extruder motor (1x) *found in the Motors package*
- ◆ Spacer 5x10x0.1 mm (1x) *found in the Electronics package*
- ◆ Socket set screw M3x25 (1x) *found in the Electronics & Fasteners package*


ÉTAPE 6 Assemblage de l'extrudeur



- ◆ Place the 5x10x0.1 spacer over the shaft on the extruder motor.
- ◆ Place the heatsink on the extruder motor. Note the orientation of both parts.
 - ◆ The motor cable must be facing "up".
 - ◆ The heatsink cables must be on the right side.
- ◆ Place the main-plate on the heatsink. Note the orientation of the part. Use the cutout as a guide.


⚠ **Before proceeding to the next step, make sure that the 5x10x0.1 spacer is placed on the extruder motor.**

ÉTAPE 7 Assemblage du réducteur

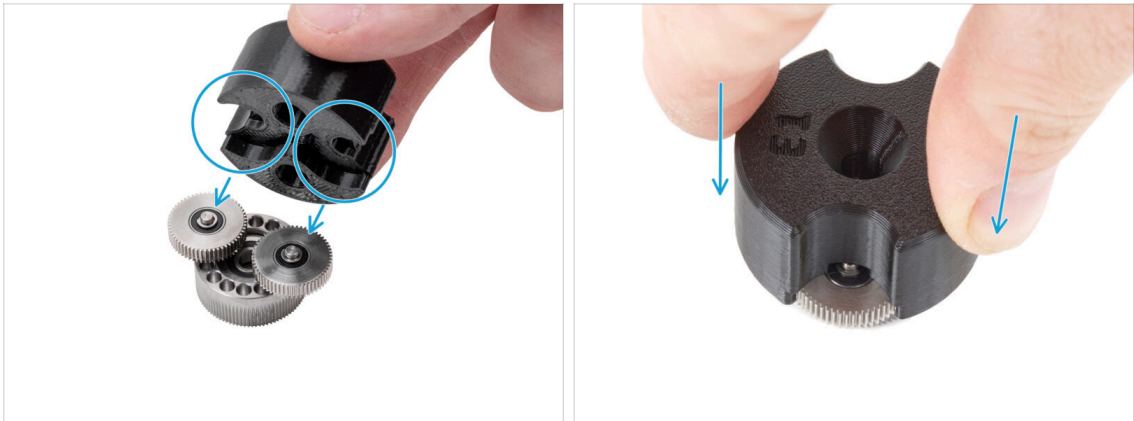


- i** The following instructions need to be done correctly and carefully. Achieve better understanding and successful assembly by watching the video alongside the guide: prusa.io/PG-assembly
- After watching the video, follow the steps in this guide.
 - Attach the PG-assembly-adapter on the PG-assembly. Note the pockets for the gears in the adapter.

ÉTAPE 8 Assemblage de PG-ring

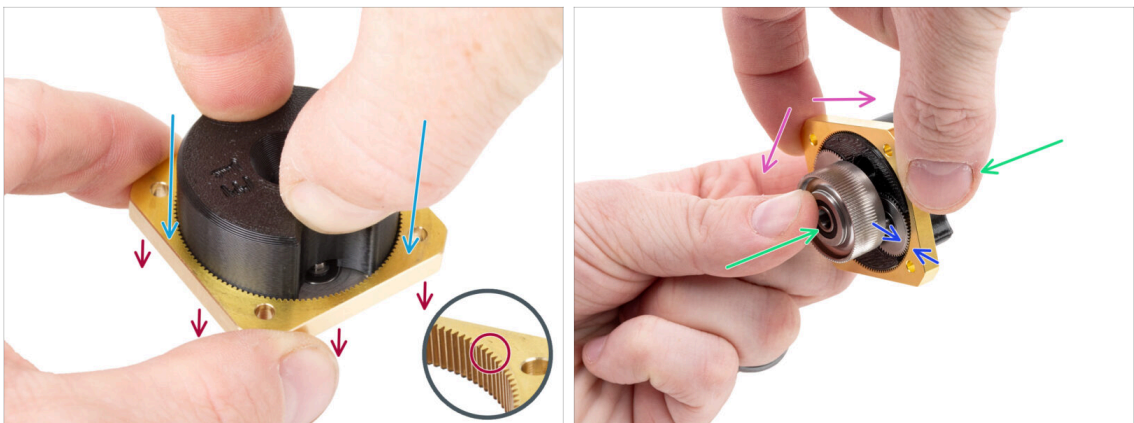

- ⚠ Do not assemble the gearbox without the PG-assembly-adapter.** This tool is intended to ensure that the gears are correctly fit together.
- Slide the PG-ring onto the adapter.
 - Note there is a chamfer on one side of the PG-ring teeth. This side must be facing down (to the PG-assembly).
 - Grasp the entire assembly in one hand so that it can be rotated with the PG-ring.
 - With the other hand, slide the PG-ring onto the PG assembly in a wobbling motion (move the PG-ring left and right repeatedly) - a quarter turn is enough.
 - Stop when the surfaces of the gears are approximately flush with the surface of the PG ring.

ÉTAPE 9 Assemblage du PG-assembly

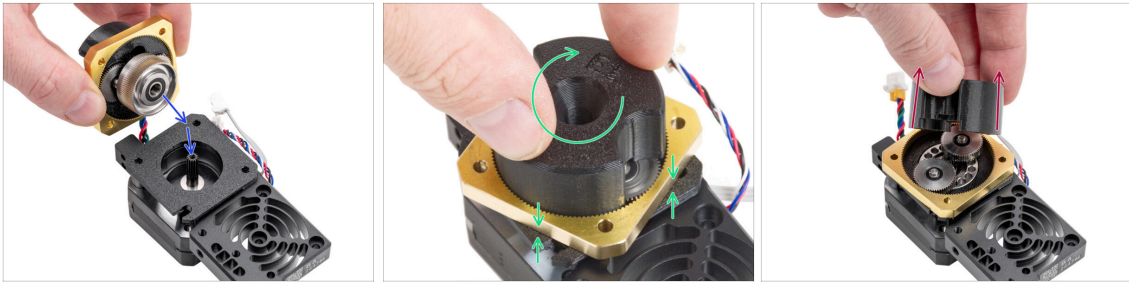

 **Proceed very carefully in this step.**


-  Maintain the position of the PG-assembly and attach it on to extruder motor shaft.
-  Very gently and freely rotate with the whole PG assembly (PG-assembly-adapter, PG-assembly and PG-ring) until it drops down so that there is no gap between the assembly and the main-plate. **Do not push on the assembly.**
-  Retirez le PG-assembly-adapter.

ÉTAPE 10 Vérification du PG-assembly



-  Attach the PG-assembly-adapter back on the PG-assembly again to verify that all parts are properly seated.
-  Rotate with the PG-assembly-adapter. **The PG assembly must be easy to rotate without having to exert much force.**
-  Remove the PG-adapter. You will no longer need it during assembly. We recommend keeping it for maintenance.
-  Ensure that the PG-assembly is not sticking out above the PG-ring. It should be positioned lower than the level of the PG-ring's surface or at the same level as the ring.
-  Ensure that the gap between the PG-ring and the Main-plate is minimal. If a significant gap is observed, disassemble the planetary gear assembly and reposition it.

ÉTAPE 11 Assembling the Nextruder idler

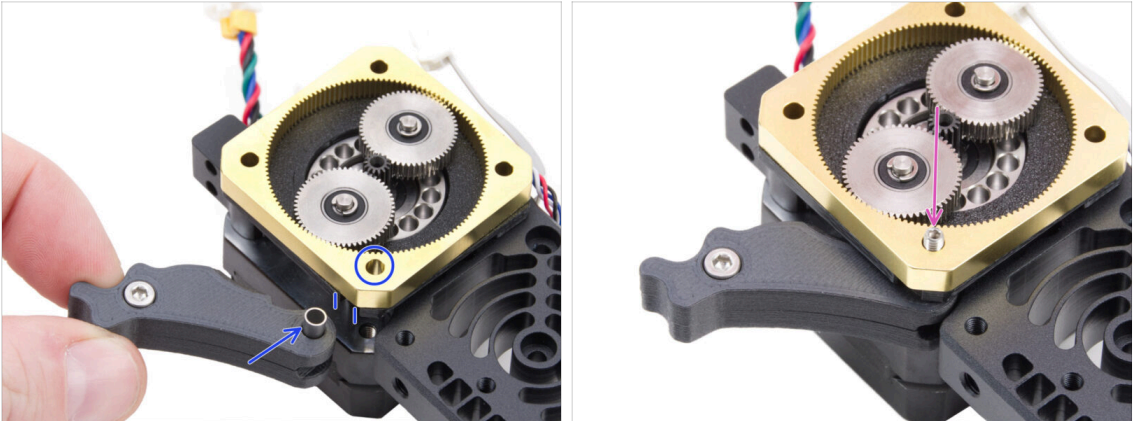

- Insert the idler assembly between the PG-ring and the extruder motor. There is a cutout for the spacer in the main-plate. Line up the idler spacer with the hole in the PG-ring.
- Secure both parts with the socket set screw 3x25. **Do not overtighten the screw! The screw protrudes from the PG-ring after tightening.**

ÉTAPE 12 Gear lubrication: parts preparation



- **For the following steps, please prepare:**
- Front Case (1x) *found in the Printed parts package*
 - ① Le logo sur le boîtier avant du Nextruder restera **PRUSA CORE ONE**.
- Vis M3x25 (3x)
- Lubricant (1x) *found in the Electronics & Fasteners package*
- Several paper towels to wipe grease from your hands.

ÉTAPE 13 Lubrification de l'engrenage




- Remove the cap from the lube. Use the spike on the opposite side of the cap to pierce a hole in the lube tube opening.
- Squeeze a small amount of lubricant onto the tip of the zip tie, then spread it over the gears.
- Apply a small amount of Prusa Lubricant **all around** the PG-ring and PG-assembly teeth.
- Close the lubricant; it is no longer needed for the assembly.

ÉTAPE 14 Covering the planetary gear



- Using the paper towel, wipe off the lubricant residue from the face surface of the PG-ring.
- Place the front case onto the gearbox and secure it with three M3x25 screws. **Do not tighten them completely** at this moment.
- ① The screws on the front case will be completely tightened during the self-test in the final chapter.

ÉTAPE 15 Assembling the Idler-swivel: parts preparation

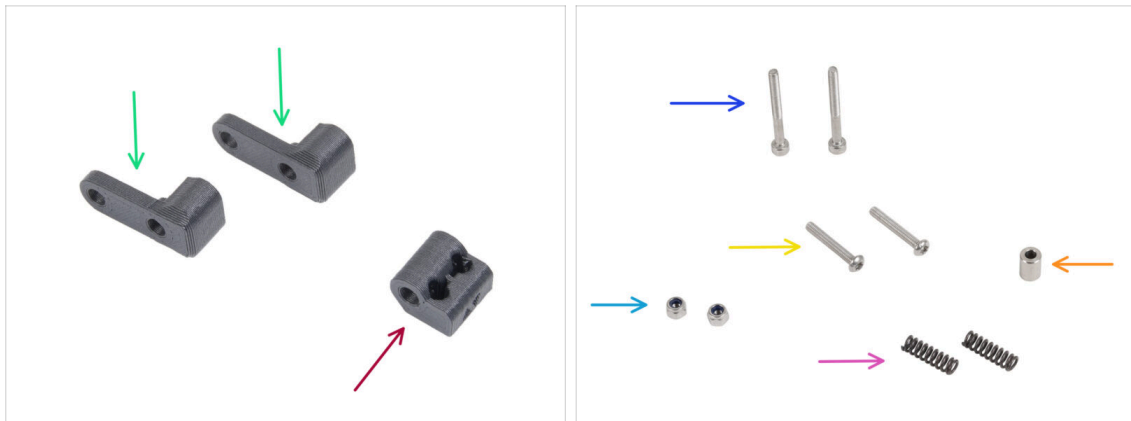

● For the following steps, please prepare:

- Idler-swivel (2x) found in the Electronics package
- Idler-nut (1x) found in the Electronics package
- Vis M3x30 (2x)
- Vis M3x20rT (2x)
- Écrou M3nN (2x)
- Spring 15x5 (2x) found in the Electronics package
- Spacer 6x3.1x8 (1x) found in the Electronics package

ÉTAPE 16 Assemblage de l'idler-swivel



- Push the M3x20rT screw all the way through one of the idler-swivel.
- Slide the spacer onto the screw.
- Place the second idler-swivel from the opposite side on the screw.
- From the other side, attach the M3nN nut onto the screw. Hold the nut using the universal wrench and tighten the screw. **Tighten just lightly!** The spacer must rotate freely.

ÉTAPE 17 Assemblage de l'Idler-nut




- ✚ Insert the Idler-nut into the Idler-swivel assembly. Make sure that both parts are oriented correctly according to the picture.
- ✚ Secure both parts together by inserting the M3x20rT screw from the same side, like the first screw.
- ✚ Secure the screw with M3nN nut. **Do not overtighten the nut.** It must be possible to move with the Idler-swivel on the Idler-nut.

ÉTAPE 18 Mounting the Idler-swivel assembly




- ✚ Attach the spring 15x5 on both M3x30 screws.
- ✚ Push the two screws with the springs through the holes in the protrusion on the heatsink. There are no threads inside.
- ✚ Attach the Idler-swivel assembly on the screws. See the correct orientation of the Idler-nut. The side with version marking must be visible. See the picture.
- ✚ Tighten both screws. **Stop tightening as soon as the screw tips reach the front face of the idler nut.**

ÉTAPE 19 NTC thermistor: parts preparation

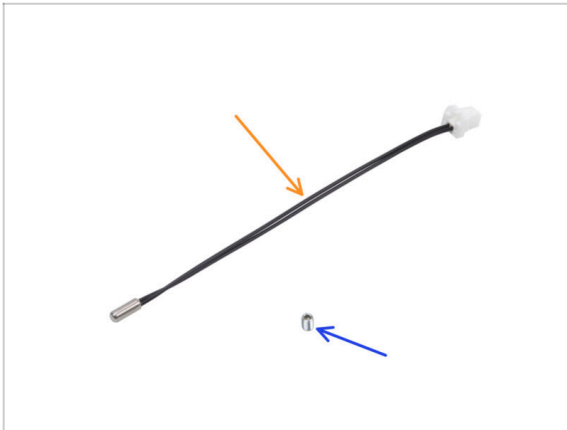


- For the following steps, please prepare:
- NTC thermistor 90 mm (1x) *found in the Electronics package*
- M3x4T grub screw (1x)

ÉTAPE 20 Assembling the NTC thermistor

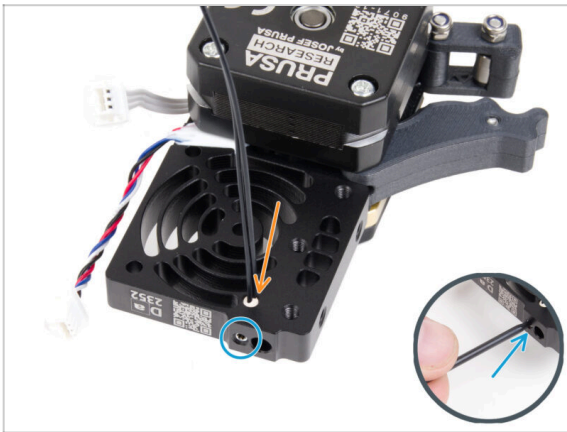

- On the **extruder motor side**, insert the NTC thermistor into the hole in the heatsink.
- Secure it with the M3x4T grub screw. Screw it all the way in. **Tighten gently, but firmly** using two fingers and the short side of the T6 Torx key. Applying more force may cause permanent damage to the thread.

ÉTAPE 21 Mounting the Nextruder: parts preparation

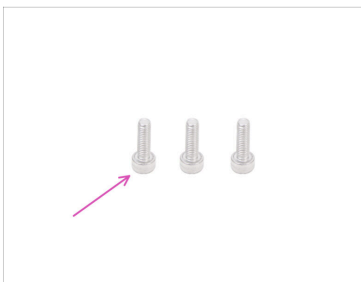


- For the following steps, please prepare:
- Nextruder spacer (3x) *found in the Electronics & Fasteners package*
- Vis M3x10 (3x)
- Cardboard box (1x) *used as temporary heatbed protection*
- ① Hint: You can use any cardboard box from the kit package.

ÉTAPE 22 Protection du plateau chauffant



- Place an empty cardboard box on the heatbed, ensuring it covers as much of the surface as possible.
- ⓘ This will protect the heatbed from falling parts.

ÉTAPE 23 Montage du Nextruder

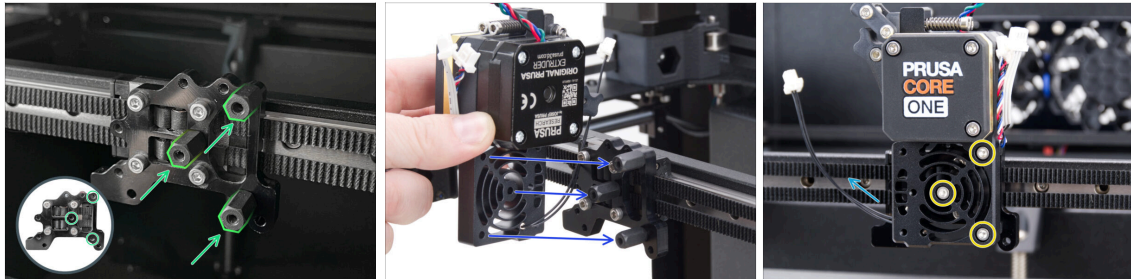

- Screw three Nextruder spacers to the Nextruder holder. Tighten the spacers firmly.
- Place the Nextruder assembly on the spacers.
- Align the holes in the Nextruder with the spacers and secure it with three M3x10 screws. **Do not overtighten the screws.**
- Ensure the NTC cable is pointing to the left.


ÉTAPE 24 Ventilateur de la Hotend : préparation des pièces



◆ For the following steps, please prepare:


- ◆ Hotend fan (1x) found in the Electronics package
- ◆ Hotend-cable-clip (1x) found in the Printed parts package
- ◆ Vis M3x4rT (2x)
- ◆ Vis M3x18 (2x)

ÉTAPE 25 Installation du ventilateur de la Hotend

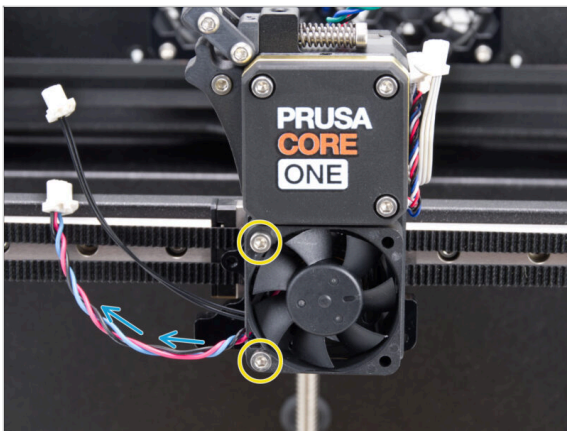

- ◆ Attach the hotend fan onto the heatsink with two M3x18 screws on the left side. **Tighten the screw gently, but firmly, otherwise the plastic housing may crack.**
- ⚠ There is a sticker on the hotend fan, the sticker must be on the rear side of the fan - not visible.
- ◆ The cable must be pointing towards the lower-left corner.

ÉTAPE 26 Guidage des câbles du ventilateur de la Hotend

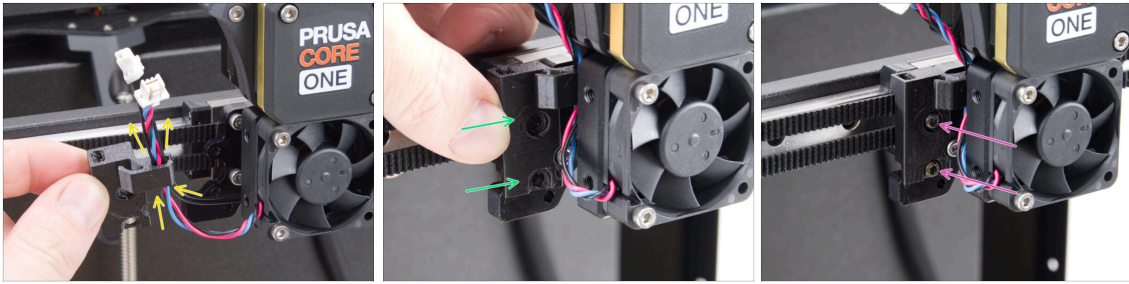


- ✦ Take the Hotend-cable-clip in the same position as shown and guide the **heatsink fan cable** together with the **NTC thermistor cable** through the right cable hook.
- ✦ Attach the Hotend-cable-clip to the Nextruder holder.
- ✦ Secure it using two M3x4rT screws.

ÉTAPE 27 LoveBoard: parts preparation I.




- ✦ **For the following steps, please prepare:**
 - ✦ Printhead-cover (1x) *found in the Printed parts package*
 - ✦ Loveboard-mount (1x) *found in the Printed parts package*
 - ✦ Main cable (1x) *found in the Electronics & Fasteners package*
- ⓘ Note: Cable color may vary depending on the batch. This does not affect the procedure.
- ✦ Vis M3x10 (4x)
- ✦ Vis M3x8rT (1x)
- ✦ Écrou M3nS (5x)
- ⓘ The list continues in the next step...

ÉTAPE 28 LoveBoard: parts preparation II.

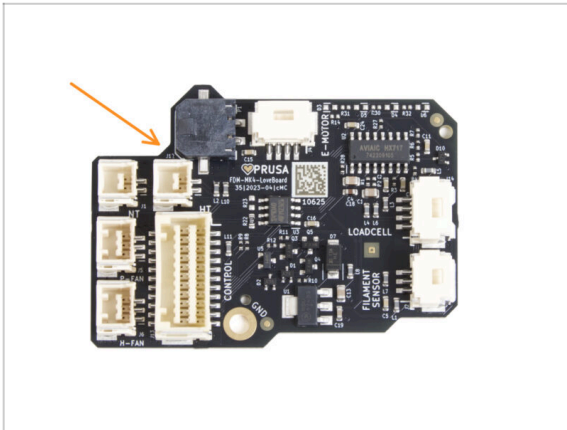


- For the following steps, please prepare:
- LoveBoard (1x) found in the Electronics package

ÉTAPE 29 Assemblage du Loveboard-mount

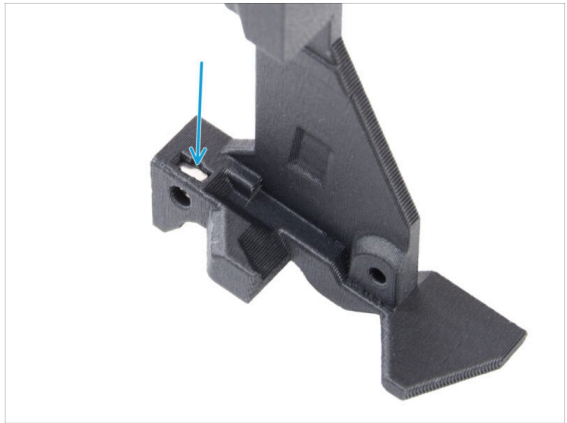


- Locate the U-shaped cable channel on the Loveboard-mount and insert an M3nS nut into the nearby hole.
- Use a 2.5mm Allen key to push the nut all the way in.
- On the opposite side of the part, insert an M3nS nut and push it into place.

ÉTAPE 30 Assemblage du Printhead-cover

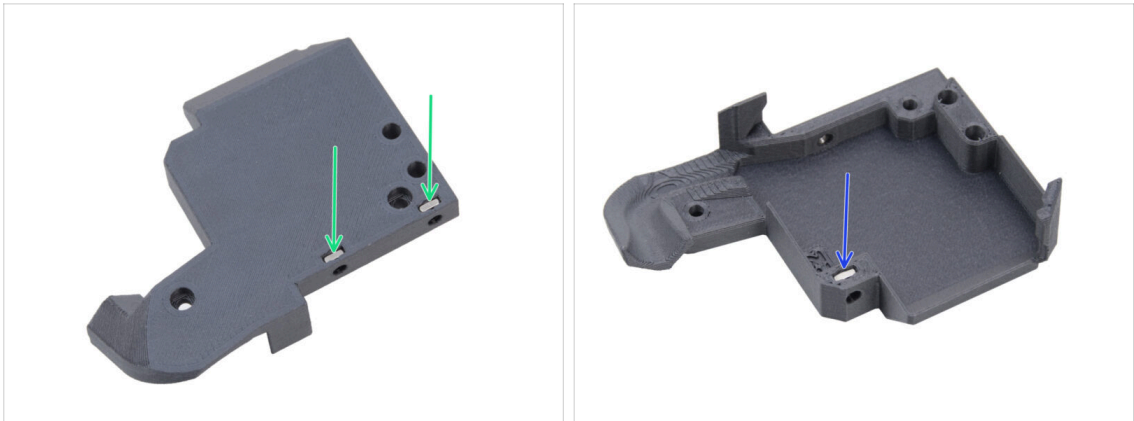


- From the back of the printhead-cover, insert two M3nS nuts into the part.
- From the other side of the printhead-cover, insert one M3nS nut into the part.

ÉTAPE 31 Assemblage de la LoveBoard

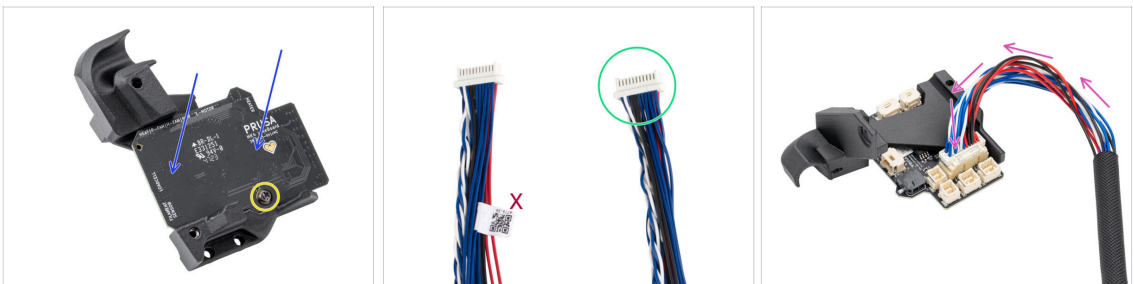

- Place the LoveBoard to the Loveboard-mount. Note the correct orientation - the connectors must be facing downwards.
- Align the holes with both parts and secure the board with the M3x8rT screw. **Do not overtighten it**, it might damage the part.
- Take the end of the extruder main cable without the white label.
- Turn the Loveboard-mount upside down and connect the Main cable to the LoveBoard.

ÉTAPE 32 Guidage du câble principal

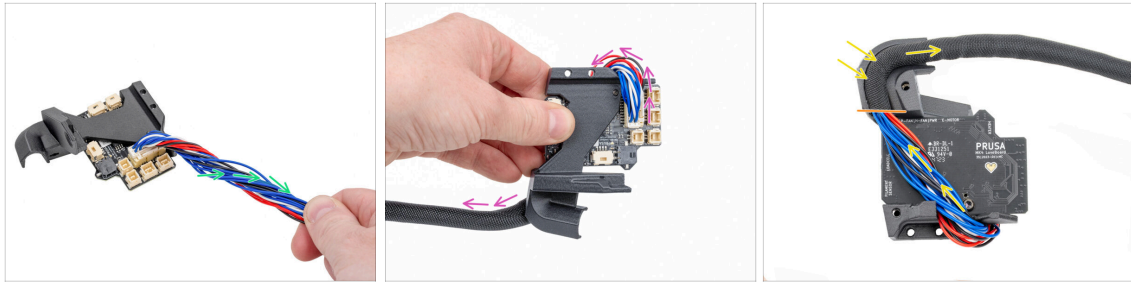


- ✚ Twist the main cable half a turn.
- ✚ Fold the main cable over the LoveBoard to its opposite side.
- ⬛ Turn the LoveBoard assembly upside down.
- ✚ Guide the main cable over the LoveBoard through the cable channel in the Loveboard-mount.
- ✚ L'extrémité de la gaine textile doit être alignée avec le bord de la pièce en plastique.

ÉTAPE 33 Mise en place du cache de la LoveBoard



- ✚ Insert two M3x10 screws into the Loveboard-holder.
 - ⚠ Ensure you insert the screws from the correct side. Use the LoveBoard logo on the board as a reference.
- ✚ Cover the LoveBoard with the Printhead-cover.
 - ⚠ **Avoid pinching any wires in the main cable.**
- ✚ Fix both parts together using two M3x10 screws.
- ✚ Check that there is no large gap or pinched textile sleeve between the parts.

ÉTAPE 34 Swingarm: parts preparation I.

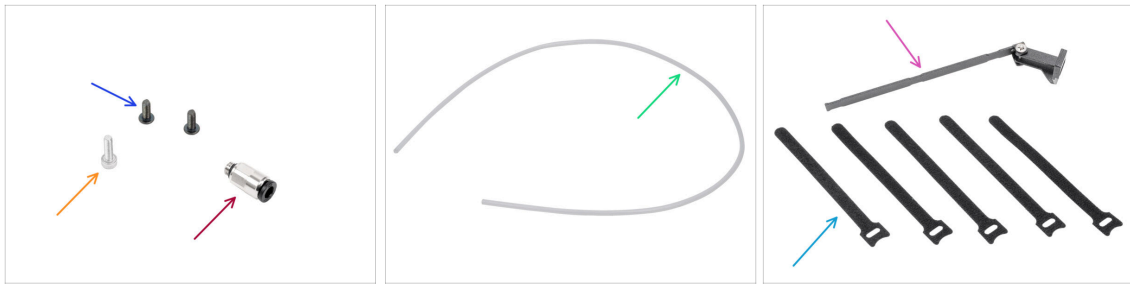

● **For the following steps, please prepare:**

- Vis M3x8rT (2x)
- Vis M3x10 (1x)
- Fitting M5-4 (1x) *found in the Electronics & Fasteners package*
- PTFE tube 710 x 4 x 2.5 (1x) *found in the CoreXY parts + Hinges set package*
- Swingarm assembly (1x) *found in the Metal parts 3/3 package*
- Cable tie (5x) *found in the Electronics & Fasteners package*
- ① Packed in a stack and must be separated.
- ① The list continues in the next step...


ÉTAPE 35 Swingarm: parts preparation II.



● **For the following steps, please prepare:**


- Bowden-bend (1x) *found in the Printed parts package*
- Main-cable-clip (1x) *found in the Printed parts package*

ÉTAPE 36 Guidage du câble principal

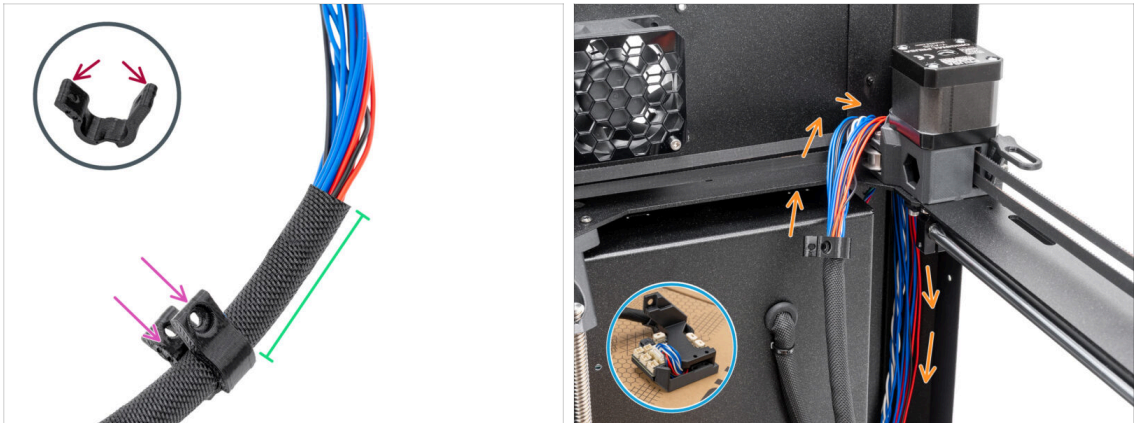


- Carefully open the Main-cable-clip. Be careful not to crack the part.
- Insert the main cable into the Main-cable-clip.
- Placez le Main-cable-clip à environ 5-15 cm (2-6 pouces) de l'extrémité de la gaine textile et fermez le clip.
- Place the LoveBoard assembly on the cardboard box on the heatbed.
- Push the main cable behind the CoreXY assembly in the right rear corner.

ÉTAPE 37 Mounting the main cable

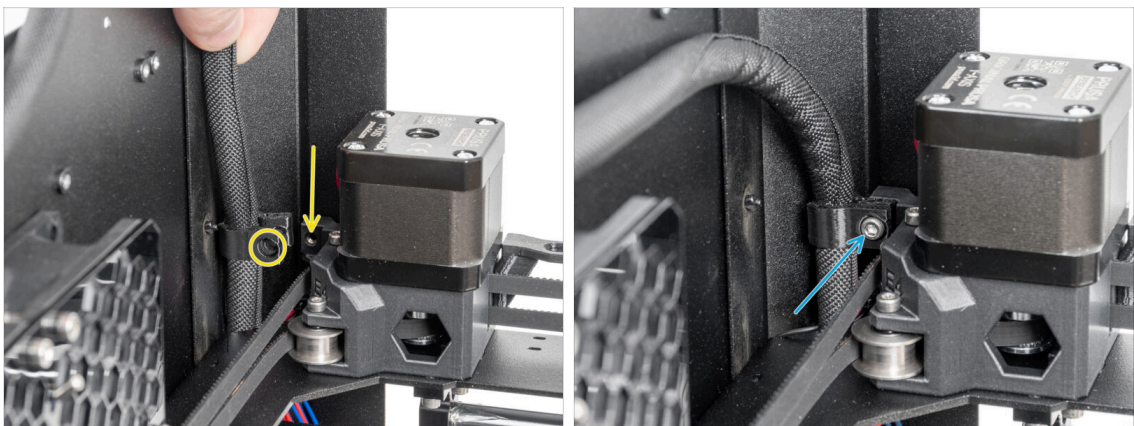


- In the right corner of the printer on the Y motor assembly, locate the hole in the plastic part and align it with the main-cable-clip.
- Fix the main-cable-clip with the cable to the hole using the M3x10 screw.

ÉTAPE 38 Attaching the LoveBoard assembly

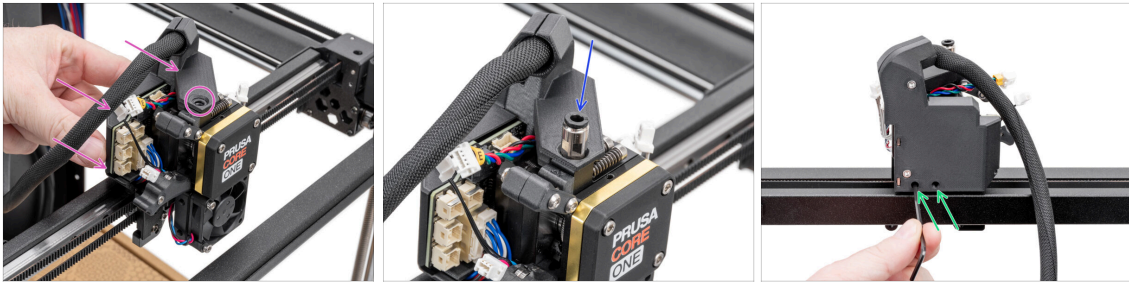


- ◆ From the back of the Nextruder, attach the LoveBoard assembly to the Nextruder.
- ◆ Align the hole in the Loveboard-mount with the threaded hole in the top of the heatsink (Nextruder).
- ◆ Insert and tighten the fitting M5-4 to the heatsink. Use the universal wrench.
- ◆ From the back of the Nextruder, tighten the two M3x10 screws to secure the LoveBoard assembly.

ÉTAPE 39 Montage du SwingArm

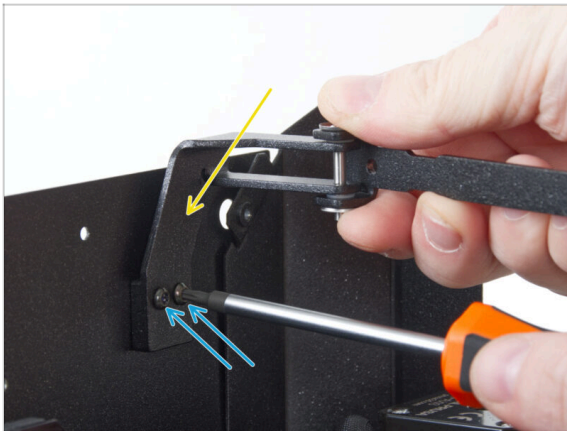


- ◆ Attach the swingarm assembly to the pair of threaded holes on the back panel near the top right corner.
- ◆ Secure it with two M3x8rT screws.
- ⚠ Do not overtighten the screws, as this may strip the threads.

ÉTAPE 40 Attaching the main cable

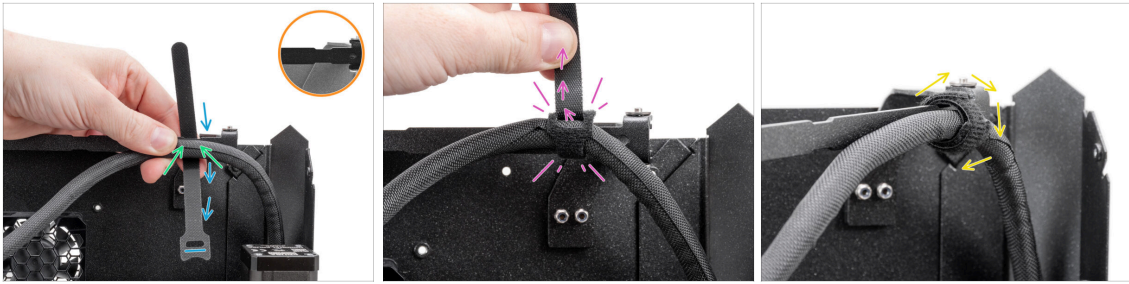


- 🟠 Notice the cutouts on the swingarm.
- 🟢 Position the main cable at the first cutout on the swingarm.
- 🟡 Place one cable tie behind the first cutout on the swingarm, ensuring the correct orientation of the zip strip.
- 🟣 Thread the cable tie through its eyelet, wrapping it around the swingarm and main cable.
- ⬛ Tighten the cable tie as much as possible.
- 🟡 Wrap the cable tie around.

ÉTAPE 41 Inserting the PTFE tube

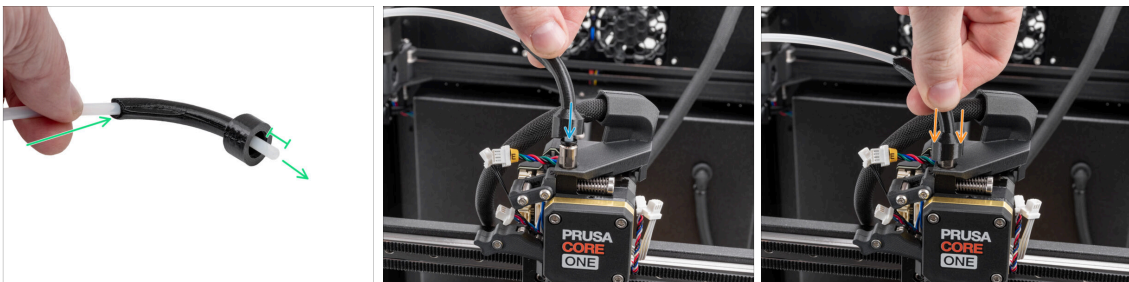


- 🟢 Push one end of the PTFE tube through the bowden-bend and keep protruding at least 1 cm (0.39 in) of the tube.
- 🟡 Insert the PTFE tube into the fitting M5-4 on the Nextruder. Push it all the way down.
- 🟠 Slide bowden-bend down to cover the fitting M5-4.

ÉTAPE 42 Securing the PTFE tube

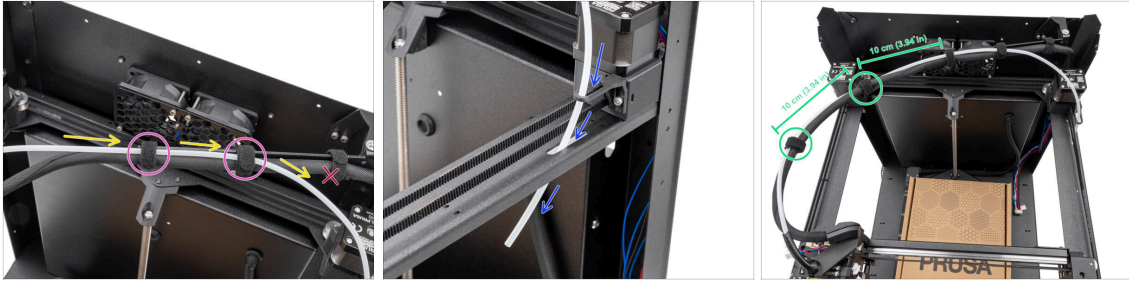


- ✦ Route the PTFE tube in parallel with the main cable, ensuring the PTFE tube stays above the main cable.
- ✦ Secure the PTFE tube and main-cable to the swingarm using two cable ties to the remaining cutouts.
- ⚠ Do not pass the PTFE tube through the first cable tie on the swingarm.
- ✦ Push the free end of the PTFE tube through the Bowden guide and CoreXY plate downward. Leave the end hanging freely.
- ✦ Merge the PTFE tube and main-cable with the remaining two cable ties, leaving a 10 cm (3.94 in) distance between them.

ÉTAPE 43 Vérification du mouvement

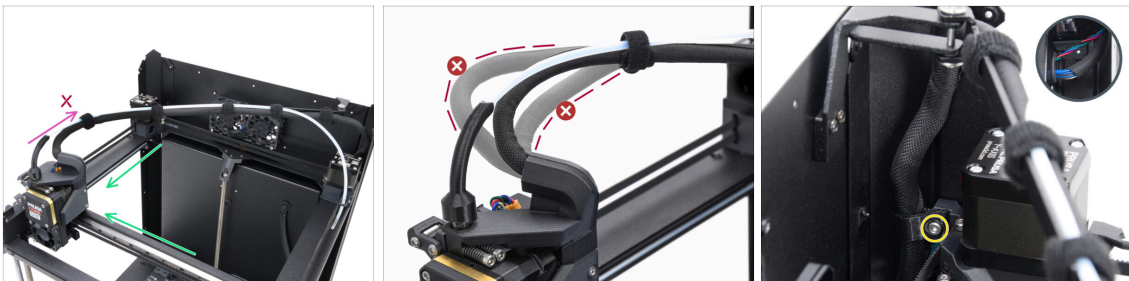

- ✦ Manually move the XY axes to their end positions several times and ensure that:
 - ✦ The main cable is not too tight and does not pull the Nextruder backward.
 - ✦ Le câble principal ne forme pas un arc excessivement grand.
 - ✦ Si le câble est trop tendu ou forme un grand arc, desserrez légèrement la vis du main-cable-clip et tirez le câble vers le haut ou vers le bas de quelques millimètres. Ensuite, serrez la vis et testez à nouveau.

ÉTAPE 44 Print fan: parts preparation

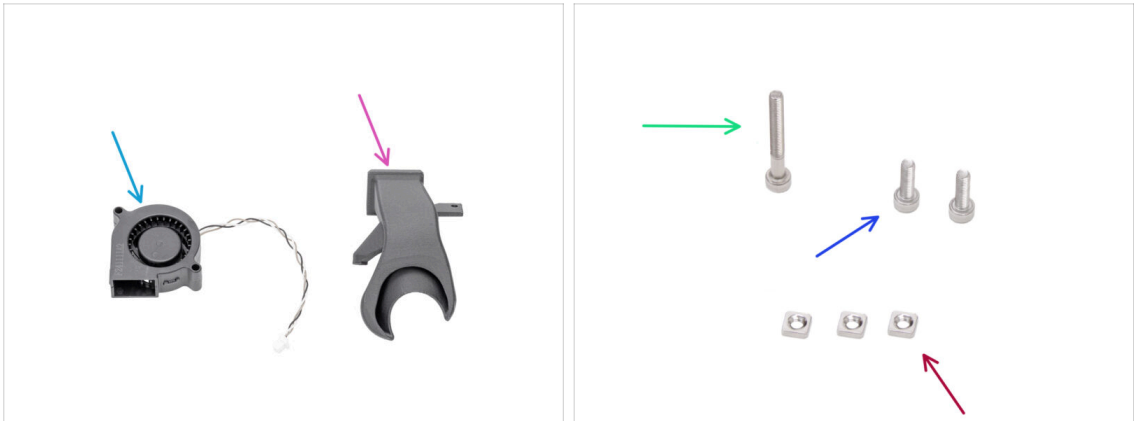

● For the following steps, please prepare:

- Print fan (1x) found in the Electronics package
- Fan-shroud (1x) found in the Printed parts package
- Vis M3x25 (1x)
- Vis M3x10 (2x)
- Écrou M3nS (3x)


ÉTAPE 45 Assemblage du fan-shroud



- Insert two M3nS nuts from one side into the fan-shroud.
- From the other side, insert one M3nS nut into the fan-shroud.
- Insert the print fan into the fan-shroud as shown. See the correct orientation of the parts.
- Secure both parts together with one M3x25 screw.

⚠ Do not overtighten the screws to avoid damaging the fan housing.

ÉTAPE 46 Installing the print fan assembly

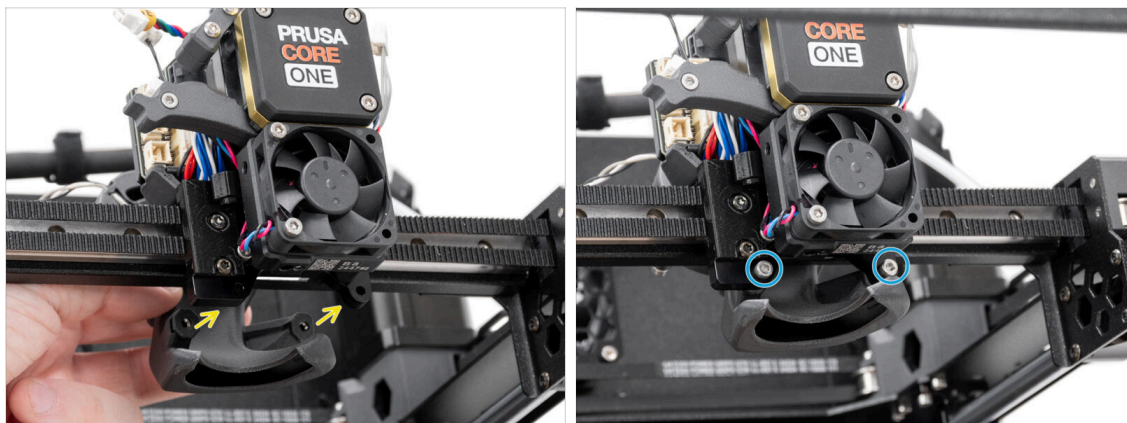


- Attach the print fan assembly to the back of the Nextruder.
- Align the holes in the Nextruder bracket with the holes in the fan-shroud.
- Secure the fan-shroud to the Nextruder holder using two M3x10 screws.

ÉTAPE 47 Hotend : préparation des pièces




- **For the following steps, please prepare:**
- Thumb screw (2x) found in the Electronics package
- Prusa Hotend assembly (1x) found in the Electronics package

ÉTAPE 48 Installation de la hotend

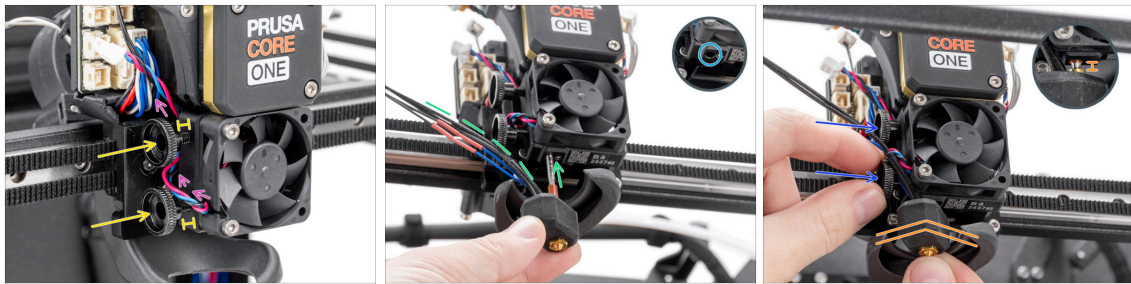




- ✿ Route the heatsink fan cable above the first threaded hole in the heatsink.
 - ✿ Insert two thumb screws into the heatsink. **Do not tighten them completely.** Two turns are enough for now.
 - ✿ Look closely at the underside of the heatsink and find the hole for the hotend assembly.
 - ✿ Insert the hotend assembly tube in the hole and slide the whole thing into the heatsink.
 - ✿ Point the cables to the left according to the photo.
 - ✿ Push the hotend assembly all the way into the heatsink. There should be approximately a 2 mm (0.08 in) gap between the heatsink and the brass part of the nozzle.
 - ✿ While pushing the hotend assembly in, **firmly tighten both thumb screws.**
- ⚠ **Avoid pinching any cable between the screws and the heatsink!**

ÉTAPE 49 Connecting the heatsink cables

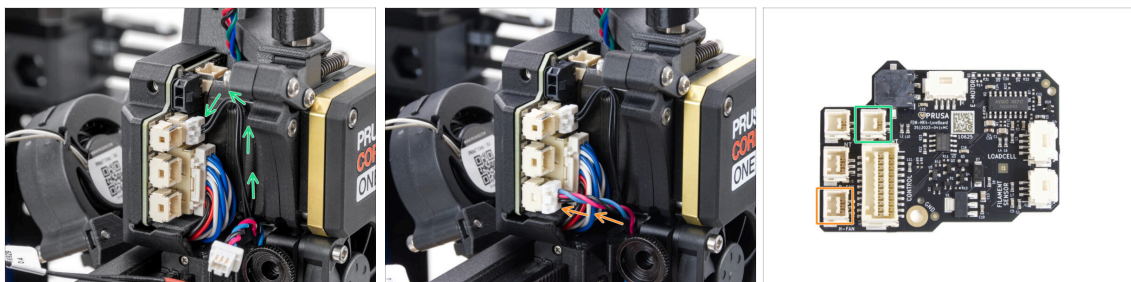




- ✿ Plug the NTC thermistor cable into the connector above the main cable on the LoveBoard.
- ✿ Branchez le câble du ventilateur de la Hotend sur le connecteur inférieur de la rangée gauche de la LoveBoard.

ÉTAPE 50 Connecting the hotend cables

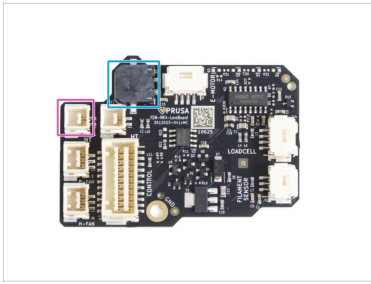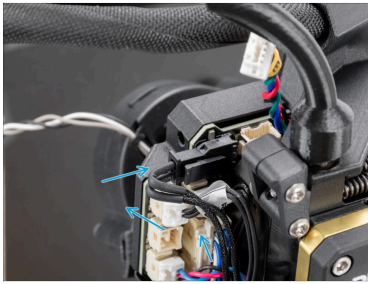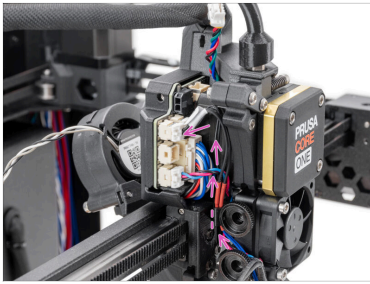



- ◆ Guide the hotend thermistor through the cable-clip on the Nextruder and connect it to the LoveBoard.
- ◆ Guide the hotend heater through the cable-clip on the Nextruder and connect it to the LoveBoard.

ÉTAPE 51 Connecting the print fan cable

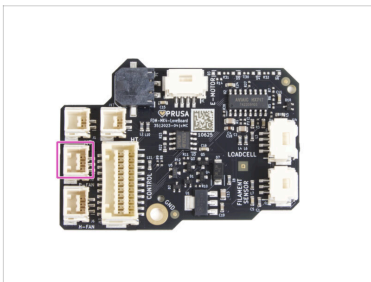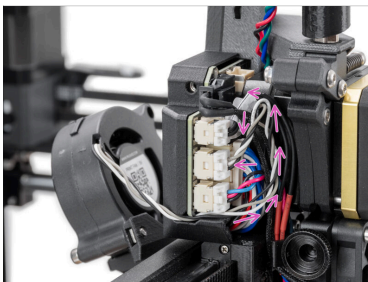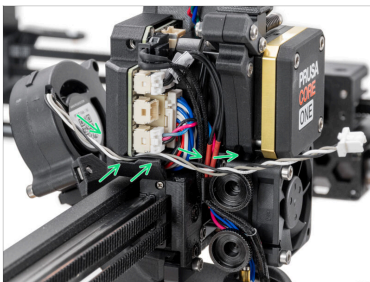


- ◆ Guide the print fan cable through the channel in the plastic cover.
- ◆ Create a loop with the print fan cable in the cable area and plug it into the middle connector in the LoveBoard.

ÉTAPE 52 Connexion du câble du moteur E

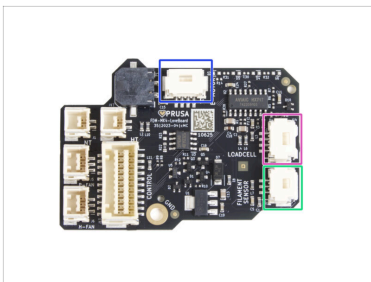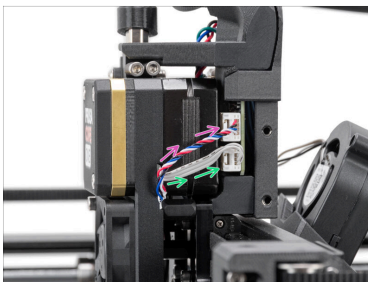

- ◆ Plug the Nextruder motor (labeled E) to the top-facing connector.
- ◆ Plug the loadcell cable (lower cable) to the upper connector on the right side of the Nextruder.
- ◆ Plug the filament sensor (upper cable) to the lower connector.


ÉTAPE 53 LoveBoard covers: parts preparation

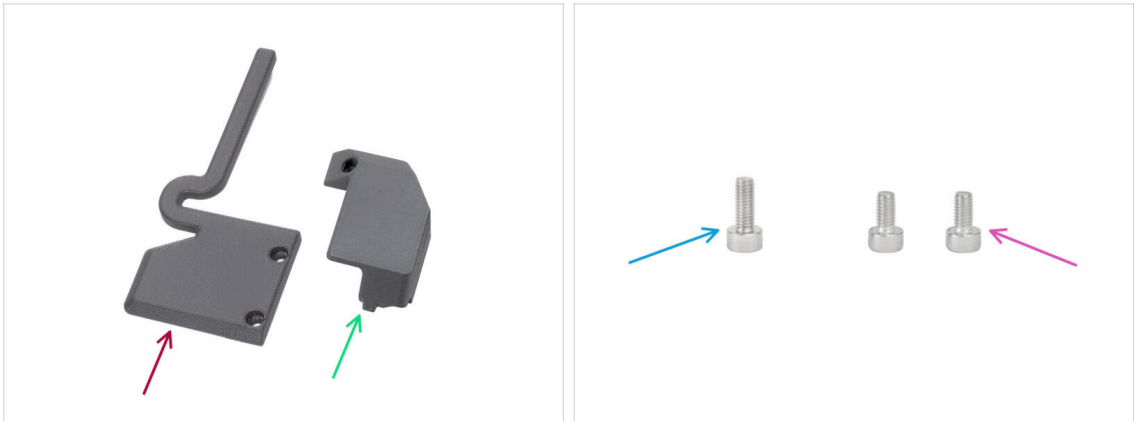

● For the following steps, please prepare:


- Printhead-cover-right-lever (1x)
- Print-head-cover-right (1x) *found in the Printed parts package*
- Vis M3x10 (1x)
- Vis M3x6 (2x)

ÉTAPE 54 Mise en place du cache de la LoveBoard

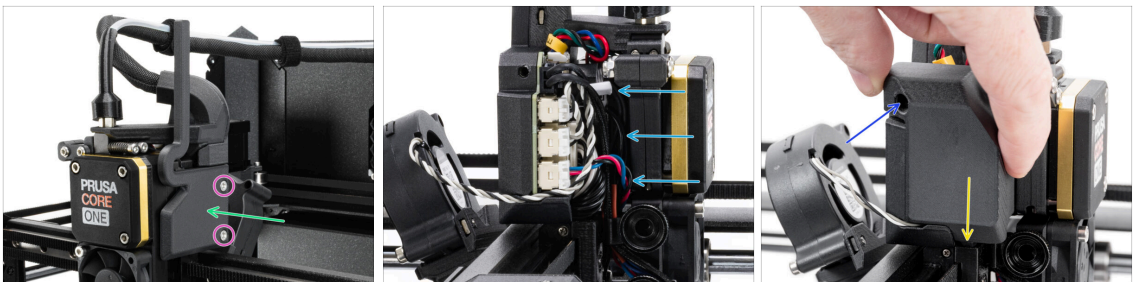

- Placez le Printhead-cover-right-lever sur le côté droit du Nextruder.
- ⚠ Do not pinch the cables!
- Secure the cover with two M3x6 screws.
- Squeeze the wiring harness as far inward to the LoveBoard as possible so that it does not protrude out and interfere with the fitting of the cover.
- Attach the Print-head-cover-left on the left side of the Nextruder.
- **Note the protrusion on the underside of the cover - the protrusion must fit into the counterpart on the Nextruder.**
- Secure the cover with one M3x10 screw.

ÉTAPE 55 LoveBoard : vérification du câblage : vérification du câblage

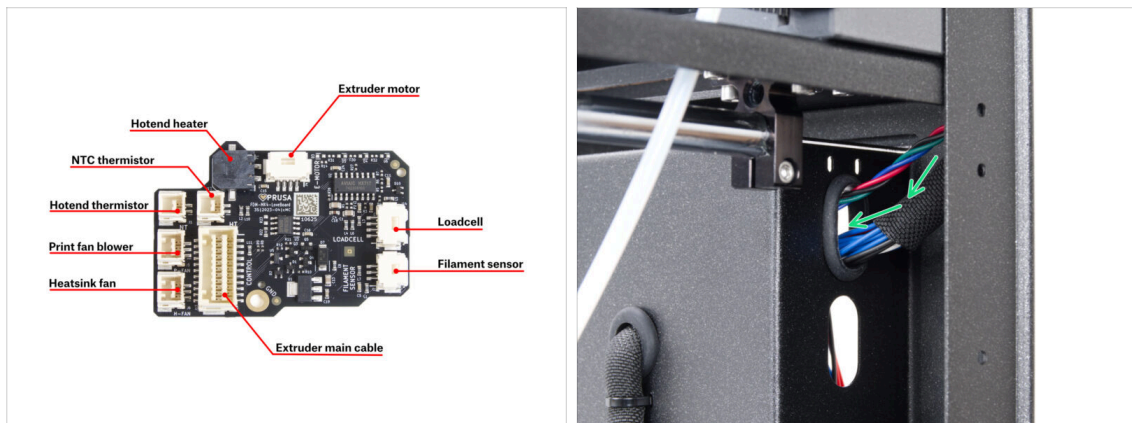


⚠ Before covering the electronics, check the connection of all cables.

i Click on the picture to open it in the high-resolution preview.

➡ Guide the main-cable through the upper hole on the right side of the back panel assembly.

⬛ Leave the end of the cable hanging freely for now.

ÉTAPE 56 Guiding the main cable

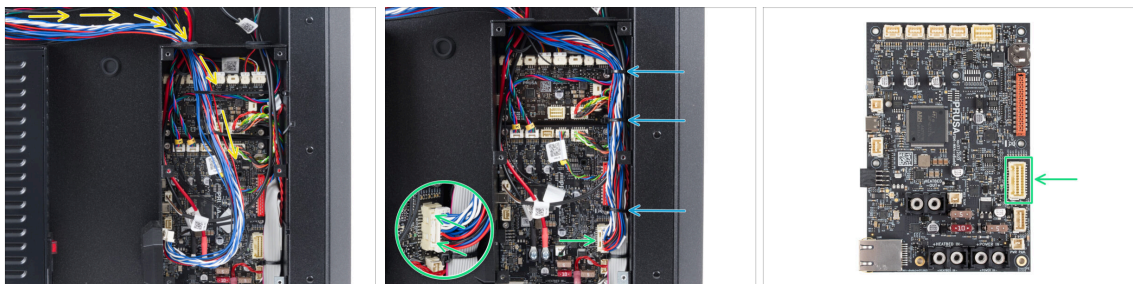

⬛ Rotate the printer so that the backside faces you.


➡ Faites passer le câble principal à travers le trou de gauche dans le boîtier de la xBuddy.

➡ Plug the main-cable to the slot on the right side of the xBuddy board.

i If the cable does not reach the connector or is too tight, go back to step **Guiding the main cable** and pull the cable slightly downward from the main-cable-clip.


➡ Fixez les câbles avec les colliers de serrage pré-installés dans le boîtier de la xBuddy. Coupez soigneusement l'excédent, **évit**ez de couper les câbles.

ÉTAPE 57 C'est l'heure des Haribo

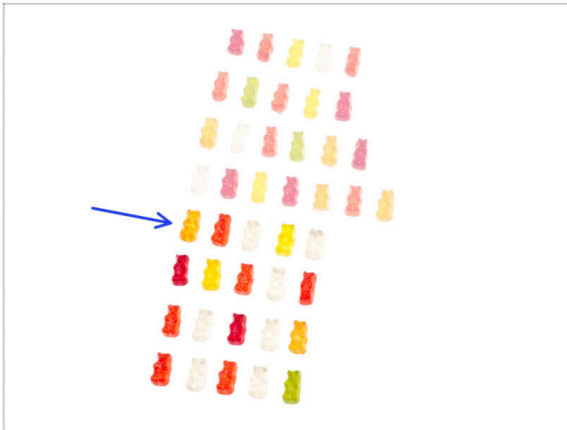

- ⬢ Power up and push forward!
- ⬢ Eat the fifth row.
- ⬢ Encore faim ?

ÉTAPE 58 Fini

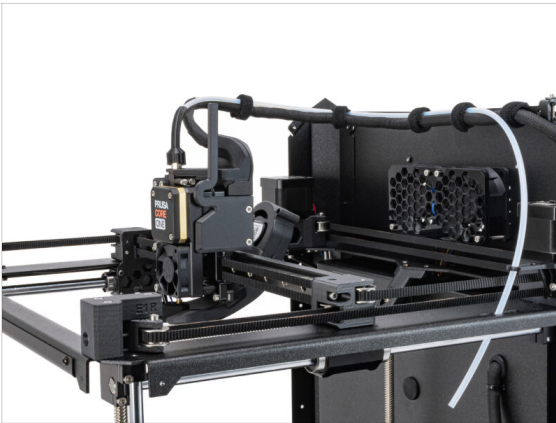


- ⬢ Congratulations! You just successfully assembled the Nextruder.
- ⬢ Let's move to the next chapter.

7. Bodywork & Electronics




ÉTAPE 1 Tools necessary for this chapter

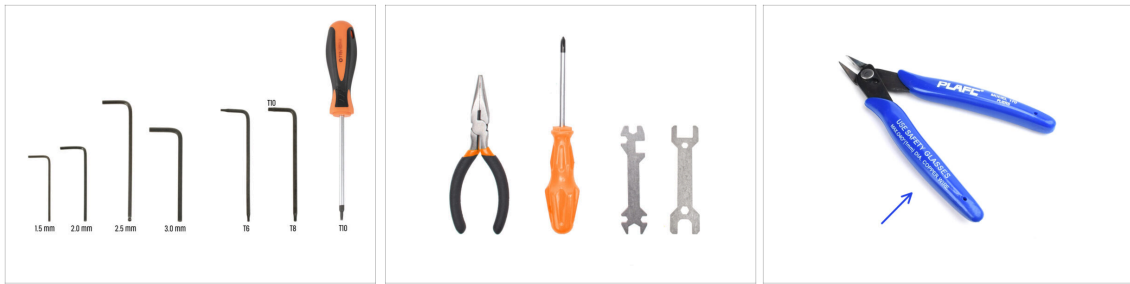

● For the following steps, please prepare:

- Clé Allen de 2,5 mm
- Clé Allen de 1,5 mm
- Clé Torx T10
- Pince à bec fin
- Pince coupante (optionnelle)


ÉTAPE 2 Front profiles: parts preparation

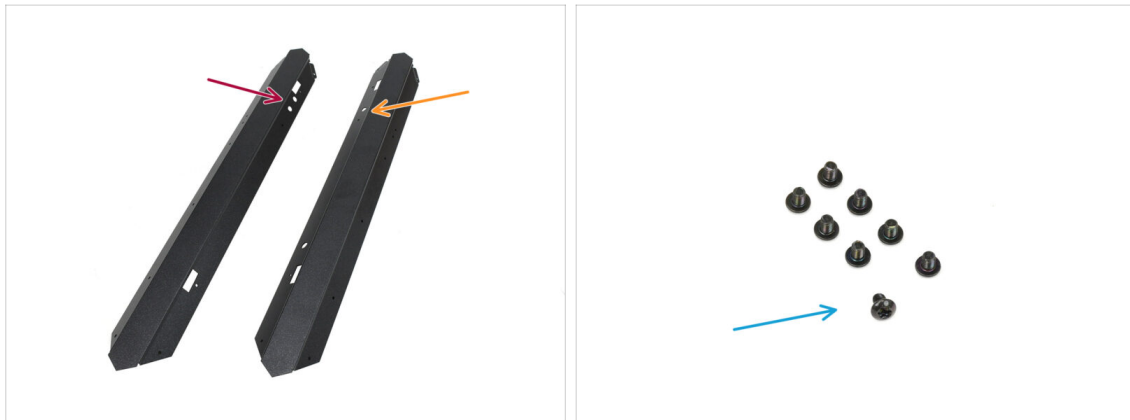

● For the following steps, please prepare:


- Front Left Profile (1x) *found in the Metal parts 1/3 package*
 - ① Celui avec les deux ouvertures circulaires sur le dessus.
- Front Right Profile (1x) *found in the Metal parts 1/3 package*
 - ① The one with one circular opening on top.
- Vis M3x4rT (8x)

ÉTAPE 3 Installation du profilé avant droit

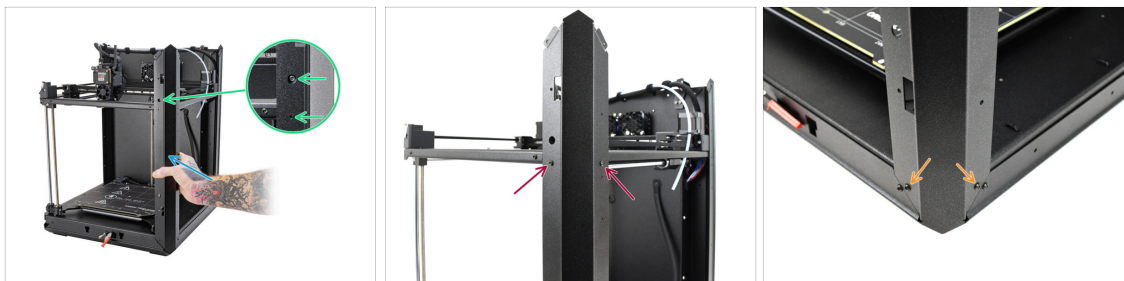


- Attach the Front Right Profile to the printer.
 - i Ensure you are using the correct profile—it should have **one large round opening** for the belt tensioning screw.
- Alignez le profilé de sorte que l'ouverture de la vis de calibration et l'ouverture du boulon plus petit soient alignées avec le filetage.
- Secure the profile to the CoreXY assembly using two M3x4rT screw
- Fix the profile at the bottom using the two M3x4rT screws.

ÉTAPE 4 Installing the front left profile

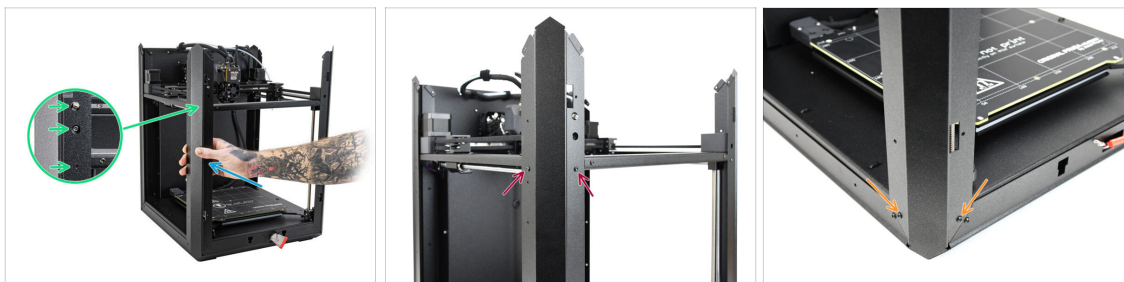

- Attach the Front Left Profile to the printer.
 - i Ensure you are using the correct profile—it should have **two large round openings** for the door sensor and the belt tensioning screw.
- Alignez le profilé de manière à ce que les ouvertures correspondent. **Attention à ne pas tordre le levier du capteur de porte !**
- Secure the profile to the CoreXY assembly using two M3x4rT screw
- Fix the profile at the bottom using the two M3x4rT screws.

ÉTAPE 5 Top profiles: parts preparation

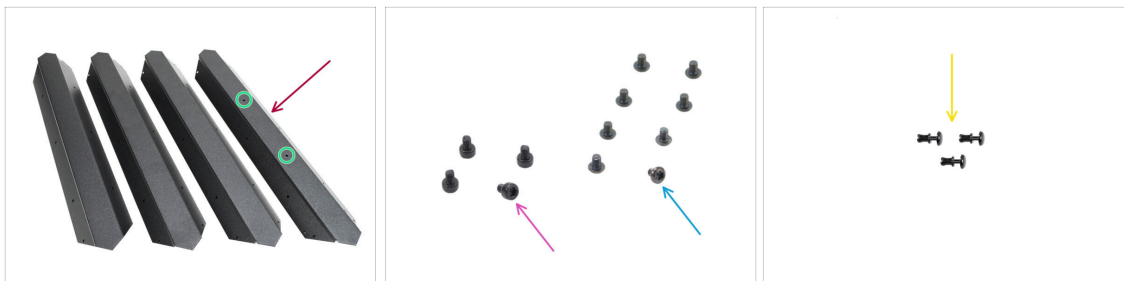

- Top Profile (4x) *found in the Metal parts 1/3 package*
- Note that one of the profiles has two openings in the middle—this one belongs at the back.
- Vis M3x4rT (8x)
- M3x4 screw (4x) *with the different head type*
- Rivet en nylon (3x)

ÉTAPE 6 Assembling the top profiles I.




- ⚠ Be very careful when handling sharp sheet metal parts to avoid injury or damage.
- According to the picture, place the top profile with two holes on the flat side.
 - Orientez la pièce comme sur l'image. **Utilisez la bride comme guide.**
- Place any other of the top profiles on the left side. Orient the part according to the picture. **Use the flange as a guide.**
- Attach the two profiles together.
 - ⚠ The flange of the front plate (blue arrow) must be inserted **under** the left universal profile (green arrow), not on top of it.
- Align the holes in both parts and join both parts together with the M3x4 screw.
- Using the same procedure, join the other two profiles to form a corner, securing them with an M3x4 screw.

ÉTAPE 7 Assembling the top profiles II.



- ✦ Attach the corner profile assembly to the first one, aligning the holes on the flanges with the holes in the profiles.
- ⚠ **Ensure the flanges are positioned underneath the profiles.**
- ✦ Joignez les deux assemblages de profilés à l'aide de deux vis M3x4.

ÉTAPE 8 Aligning the top profiles

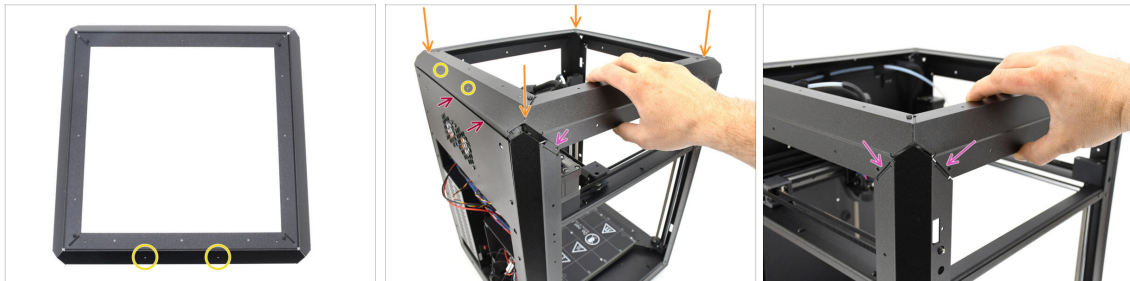

- ✦ Find the profile with **two openings in the middle**—this part should be positioned at the **rear of the printer**.
- ✦ Add the top profile assembly onto the printer, making sure the two openings are facing the back.
- ✦ La partie saillante du profilé arrière doit être positionnée derrière la tôle arrière.
- ✦ On the sides and front, the profiles must sit on top of the tabs with threaded openings.

ÉTAPE 9 Installing the top profiles



- Once all the top profiles are properly aligned, fix them in place using the remaining 8 M3x4rT screws in the corners.
- Attach the back panel to the top profile with three nylon rivets.

ÉTAPE 10 CoreXY fixing screws: parts preparation



- For the following steps, please prepare:
- Vis M3x4rT (4x)

ÉTAPE 11 Fixing the CoreXY assembly



- Align the CoreXY assembly so the threaded holes match the screw openings in the rear profiles. You may need to push the assembly upward to align the holes.
- Fix the CoreXY assembly using the four M3x4rT screws in the marked openings.

ÉTAPE 12 Side sensor base: parts preparation



- **For the following steps, please prepare:**
- Filament-sensor-body (1x)
- Filament-sensor-lever (1x)
- Filament-sensor-switch (1x)
- Vis M3x10 (1x)
- 10x6x2mm magnet (2x) *found in the Electronics & Fasteners package*
- 7mm Ferromagnetic Ball (1x) *found in the Electronics & Fasteners package*
- Rondelle M3w (1x)

ÉTAPE 13 Assembling the side sensor base



- ✚ Insert one of the magnets into the dedicated opening in the Lever.
- ✚ Insert the ball into the corresponding opening on the inside of the sensor base.
- ✚ Insérez le levier avec l'aimant dans la base.

i The part with the magnet should be positioned next to the ball.

Note that the ball will be attracted to the magnet—ensure it stays securely in place.

- ✚ Fixez le levier en place à l'aide de la rondelle M3w et de la vis M3x10. Serrez-le juste quelques tours pour l'instant - suffisamment pour le maintenir en place.

⚠ Ne serrez pas complètement la vis. Sinon, le levier ne bougera pas et le capteur ne fonctionnera pas !

ÉTAPE 14 Test du levier



- ✚ Verify the lever is able to move freely.
- ✚ Si le levier ne bouge pas librement ou ne peut pas bouger du tout, desserrez la vis d'un quart de tour et testez à nouveau son mouvement.


⚠ La vis ne doit pas être complètement serrée ; sinon, le levier ne pourra pas bouger librement.

ÉTAPE 15 Assemblage du commutateur




- Insérez le deuxième aimant 10x6x2 dans le filament-sensor-switch.
- Installez le filament-sensor-switch dans le filament-sensor-body.
- Déplacez le filament-sensor-switch vers la position d'extrémité gauche de sorte que les aimants se fassent face.
- Assurez-vous que **les aimants se repoussent** - ils devraient s'éloigner l'un de l'autre.
- **S'ils s'attirent** - se tirent l'un vers l'autre : retirez l'aimant du filament-sensor-switch et inversez sa polarité. Vérifiez-le à nouveau.
- ❗ *Conseil de pro : Utilisez une clé hexagonale fine ou une clé Torx pour retirer l'aimant du filament-sensor-switch*

ÉTAPE 16 IR Sensor: parts preparation

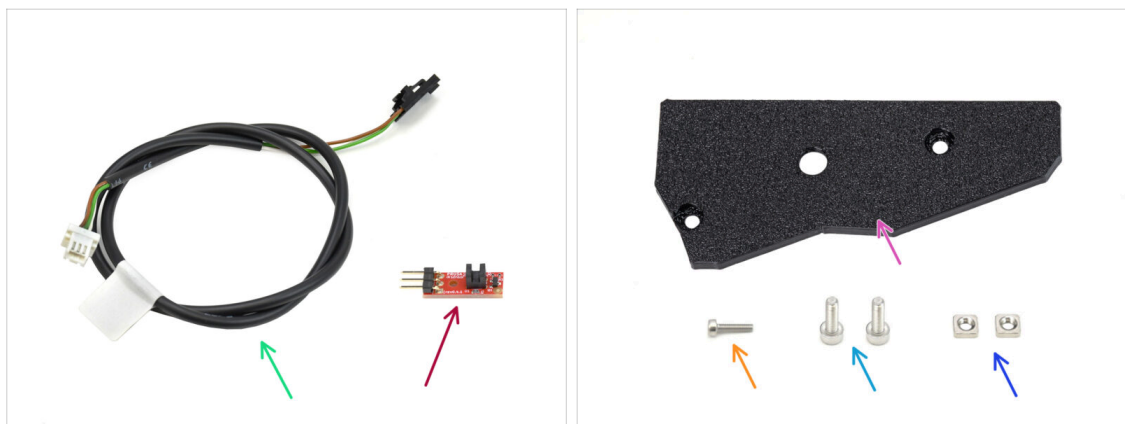

- **For the following steps, please prepare:**
- Side Filament Sensor Cable (1x) *found in the Electronics & Fasteners package*
- Capteur de filament IR (1x) *qui se trouve dans le paquet Électronique & Pièces de la chambre*
- Side Filament Sensor Cover (1x) *found in the Printed package*
- Vis M2x8 (1x)
- Vis M3x10 (2x)
- Écrou M3nS (2x)

ÉTAPE 17 Connecting the IR sensor

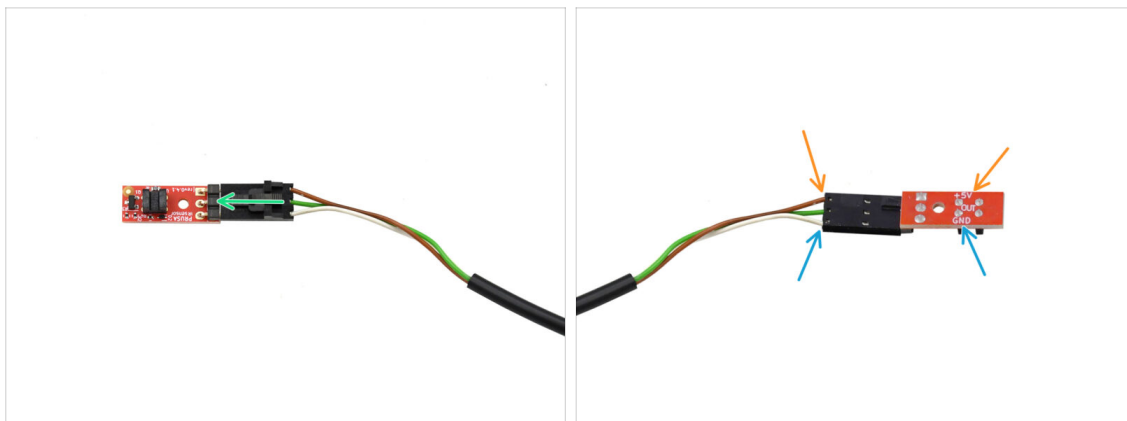


- 🟢 Plug the cable into the IR filament sensor.
- ⚠️ **Ensure the connector is oriented correctly before plugging it in!**
- 🟠 Sur la CORE One, le câble marron doit se connecter à la broche +5V.
- 🔵 The white cable connects to the GND pin.

ÉTAPE 18 Installing the IR sensor



- 🟢 First, insert the cable into the groove. The black connector should be approximately in the middle of the sensor base.
- 🔴 Insert the IR sensor itself into the dedicated groove.
- 🟡 Le levier doit s'insérer dans la pièce de porte optique du capteur.
- 🟠 Make sure neither the connector nor the cables touch the lever, as this could prevent the sensor from functioning correctly.
- 🔵 Using the 1.5mm Allen key, fix the sensor in place with the M2x8 screw.

ÉTAPE 19 Installing the side sensor cover

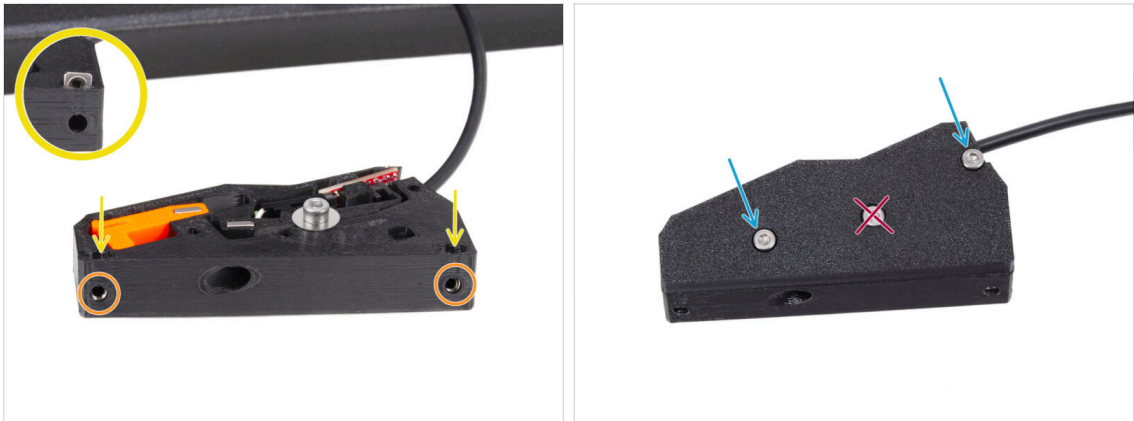

- ✚ Insert the two M3nS nuts into the designated openings. Use a 1.5mm Allen key to **push them all the way in**.
 - ✚ Look from the side to ensure the threads in the nuts align with the openings.
 - ✚ Ajoutez le capot sur l'assemblage.
 - ✚ Fix the cover in place using two M3x8 screws on the sides.
- ⚠ **Ne serrez pas la vis du milieu ! Sinon, le capteur cesserait de fonctionner.**

ÉTAPE 20 Side filament sensor: parts preparation



- ⬛ **For the following steps, please prepare:**
- ✚ Side Filament Sensor Assembly (1x) *you assembled earlier*
- ✚ Collet (1x) *qui se trouve dans le paquet Électronique & Visserie*
- ✚ Collier de serrage (3x)

ÉTAPE 21 Installing the side filament sensor




- Install one zip-tie into the marked openings. We will use it to attach a cable underneath the metal profile.
 - Insérez le collet dans l'ouverture marquée sur l'assemblage du capteur.
 - Fixez l'assemblage du capteur sur le tube PTFE de l'imprimante.
- ⚠ Make sure to push the tube all the way in!

ÉTAPE 22 Guide the filament sensor cable




- Move the sensor assembly up, roughly to the middle of the printer's frame, to align the cable properly.
- Once in position, secure the cable underneath the metal profile using a zip-tie. Tighten the zip-tie lightly, allowing for cable adjustments if needed later. Cut off the excess zip-tie.
- Guidez le câble du capteur à travers l'ouverture dédiée à l'arrière de l'imprimante.
- À l'arrière de l'imprimante, guidez le câble dans le boîtier de la xBuddy. Laissez-le pendre librement pour le moment.

ÉTAPE 23 Connecting the side filament sensor

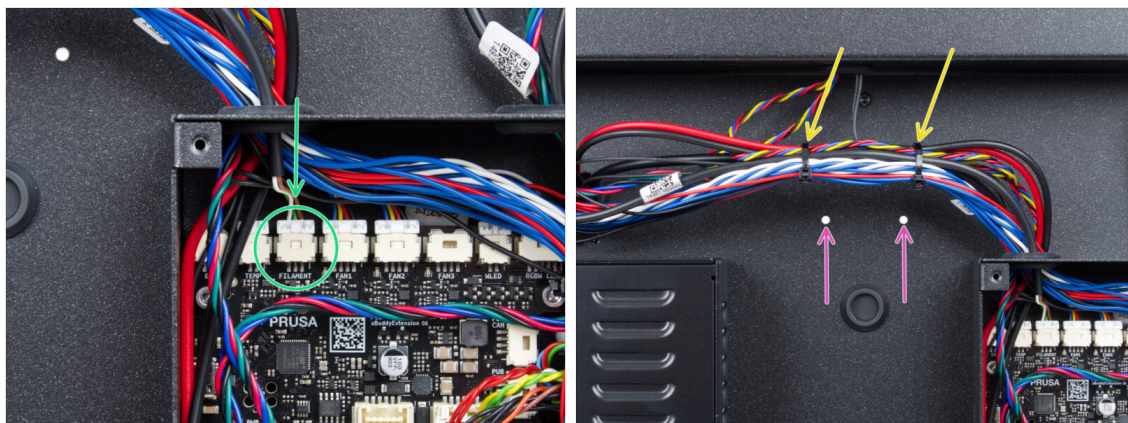

- Connect the Side Filament Sensor cable into the connector labeled FILAMENT on top of the xBuddy extension board.
 - i You can use needle-nose pliers to assist you, but be careful not to damage the cables.
- Utilisez deux colliers de serrage pour fixer le faisceau de câbles ensemble dans la zone marquée.
 - Secure the cables in the **highest possible position** to ensure they clear the two openings on the sheet metal below.
- ⚠ Do not over-tighten the zip ties or strain the cables too much!

ÉTAPE 24 NFC Antenna: parts preparation

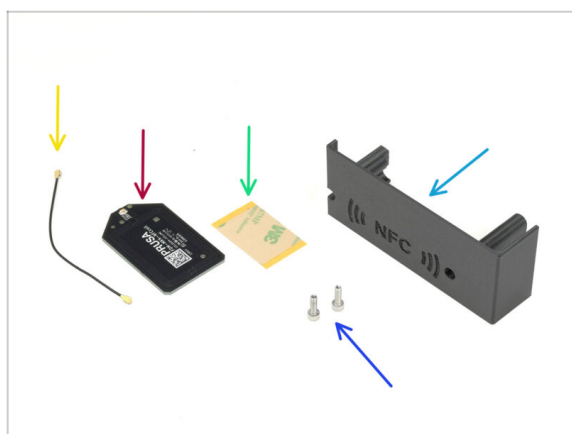


- For the following steps, please prepare:
 - El-box-cover (1x) found in the Printed parts package
 - Vis M3x10 (2x)
 - NFCcoil (1x) found in the Electronics & Chamber parts package
 - Adhesive film 32 x 25 mm (1x) found in the Electronics & Chamber parts package
 - NFC coil cable (1x) found in the Electronics & Chamber parts package

ÉTAPE 25 Applying the adhesive film




- Peel off the yellow protective film from the adhesive tape.
- Apply the film to the flat side of the NFC coil, ensuring it adheres properly.
- Décollez la couche protectrice restante de l'antenne NFC.

ÉTAPE 26 Installing the NFC Coil

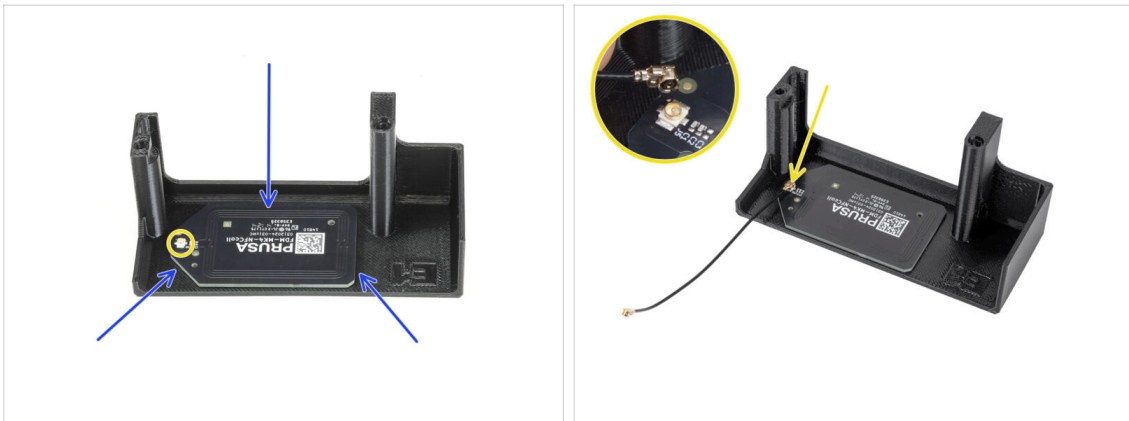


- Stick the NFC coil onto the inner side of the EI-box cover, approximately as shown in the picture.
- ⓘ The small round connector should be positioned closer to the edge of the cover.
- Connectez le câble à la carte en alignant les connecteurs et en appuyant légèrement jusqu'à ce que vous sentiez un clic, assurant une connexion sécurisée.
- ⚠ Be careful when connecting the NFC coil cable. Misalignment or excessive pressure can cause irreversible damage.

ÉTAPE 27 Connecting the NFC Coil

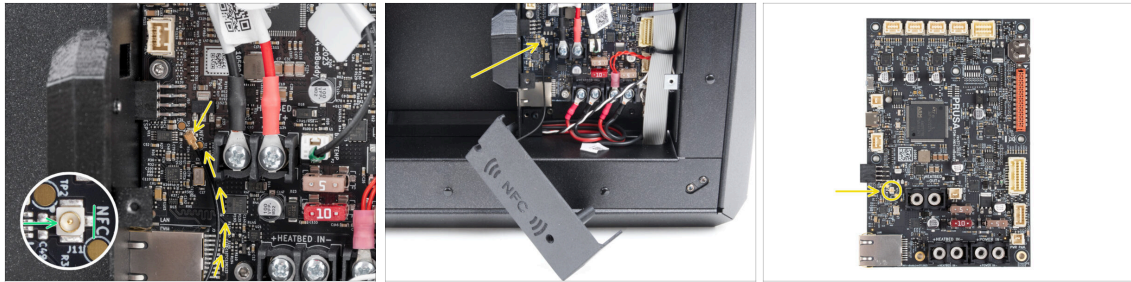

- 🟢 Locate the small round connector labeled NFC on the bottom left side of the xBuddy board.
- 🟡 Connect the NFC coil cable to the board by aligning the connectors and pressing lightly until you feel a click.

ÉTAPE 28 Vérification du câblage

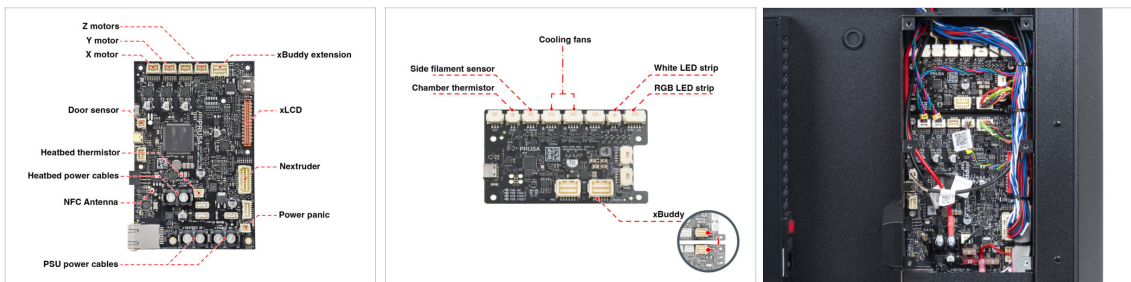

- 🟡 Use the pictures as a reference to verify your electronics connections.
- ⚠️ Make sure that all connectors are fully inserted and PSU cables properly tightened. Otherwise, there is a risk of damage to the printer!

ÉTAPE 29 Preparing the electronics cover




- Push two M3x10 screws through the EI-box-cover.

ÉTAPE 30 Installing the electronics cover





- Ensure the threaded holes on the bottom of the xBuddy box are not obstructed by cables.
- If so, rearrange the cables to allow clear access.
- Alignez le capot avec l'ouverture du boîtier de la xBuddy et fixez-le en place en serrant les vis.
- Route the NFC cable through the space between the Ethernet connector and the PSU power cables.
- ⚠ Avoid running it through the Ethernet connector or the power cables. The cable may be damaged when covering the xBuddy box.**

ÉTAPE 31 Remarque sur la caméra Buddy3D

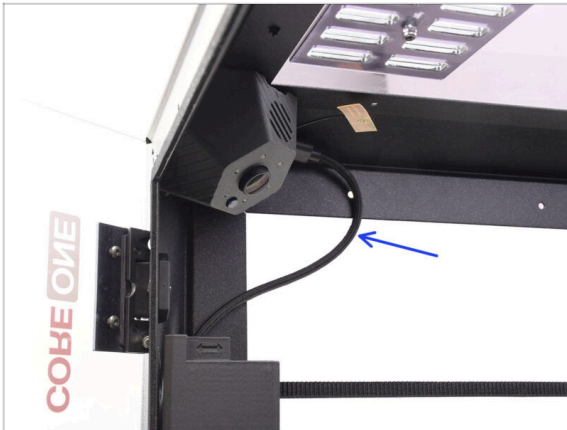


- i** Pour les futurs utilisateurs de la caméra Buddy3D :
- Si vous prévoyez d'utiliser la caméra Buddy3D, le câble USB est déjà installé.
 -  Pour obtenir des informations détaillées sur la façon de monter et de connecter la caméra Buddy3D, reportez-vous à ce guide : **Installation de la Caméra Buddy3D pour la CORE One**

ÉTAPE 32 xBuddy cover: parts preparation

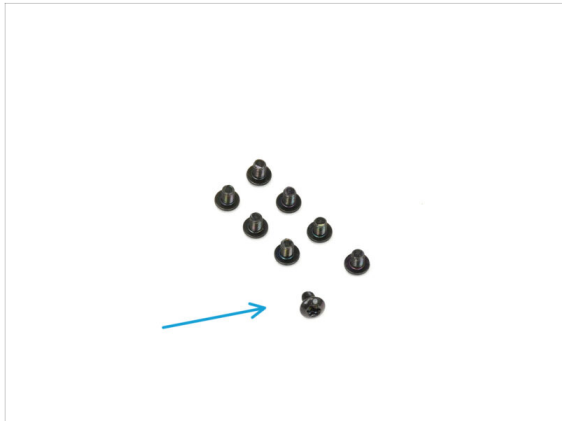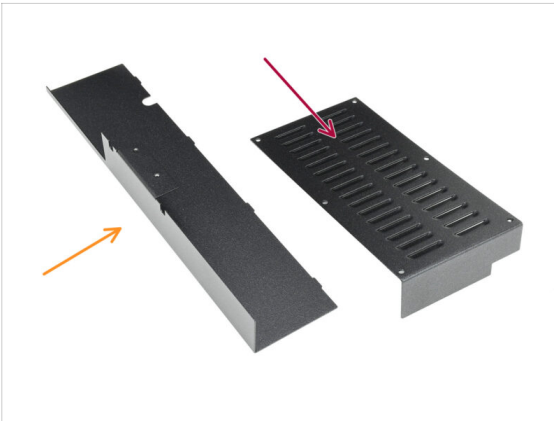

- For the following steps, please prepare:**
- Sheet metal back cover (1x) *found in the Metal parts 2/3 package*
 - Capot de la xBuddy (1x) *qui se trouve dans le paquet des pièces métalliques 3/3*
 - Vis M3x4rT (8x)

ÉTAPE 33 Installing the xBuddy cover

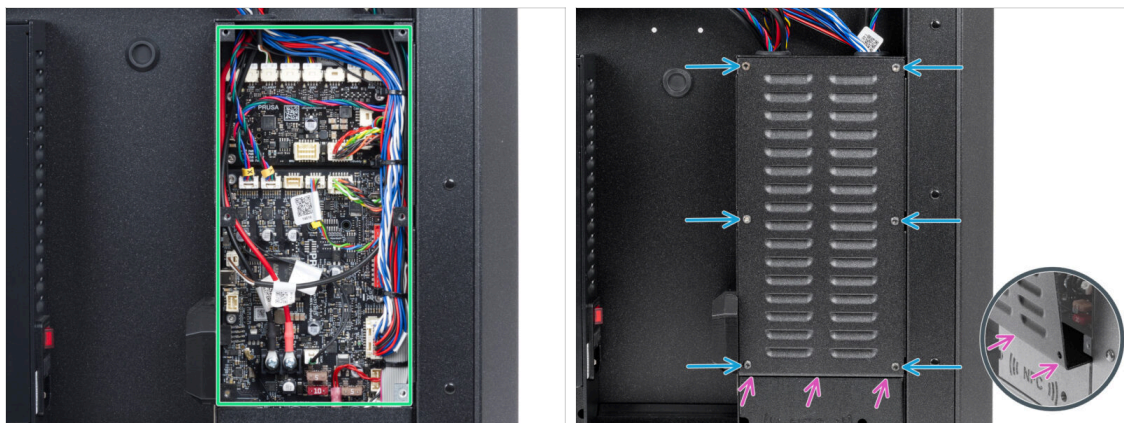


- Agencez les câbles à l'intérieur du boîtier de la xBuddy comme indiqué sur l'image.
- Carefully cover the xBuddy box by first sliding the bent part of the cover into the box.
- ⚠ **Évitez de pincer les câbles. Vérifiez à nouveau la position du câble de l'antenne NFC.**
- Secure the xBuddy box cover using the six M3x4rT screws.

ÉTAPE 34 Installing the rear cover



- Align the rear sheet metal cover so that the cables can run through the "tray".
- Place the rear sheet metal cover into the recess. Push it toward the printer, then move it upward to engage it.
- Il y a quatre languettes qui doivent s'engager dans le châssis de l'imprimante.
- Secure the rear cover in place using two M3x4rT screws from inside the printer.

ÉTAPE 35 Right side: parts preparation

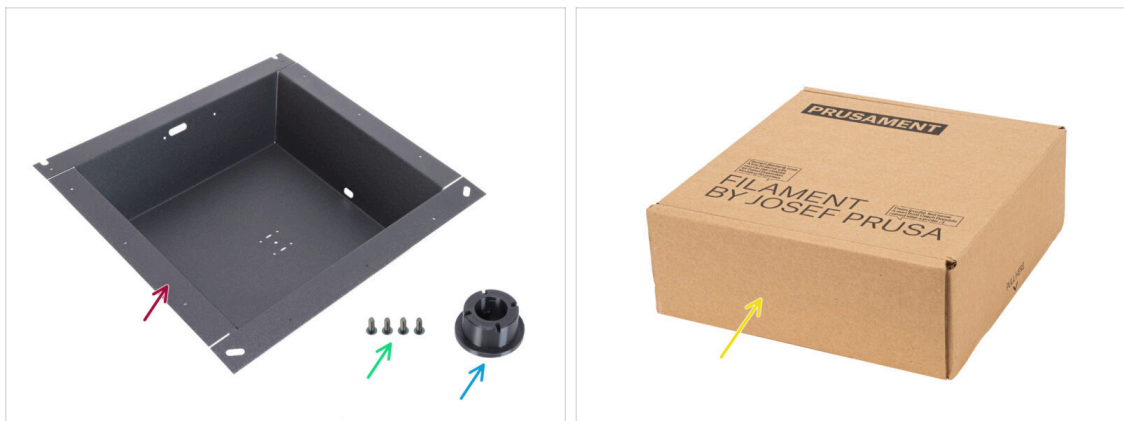

● For the following steps, please prepare:

● Right side sheet metal (1x) found in the Metal parts 2/3 package

⚠ Le bon **côté droit** de la pièce peut être facilement identifié par les ouvertures de vis au milieu.


● Vis M3x8rT (4x) qui se trouve dans le paquet Électronique & Visserie

● Puck-universal (1x)

● N'importe quelle boîte en carton (1x)

📌 Astuce : Une boîte de Prusament convient parfaitement.

ÉTAPE 36 Installation du puck du support de bobine

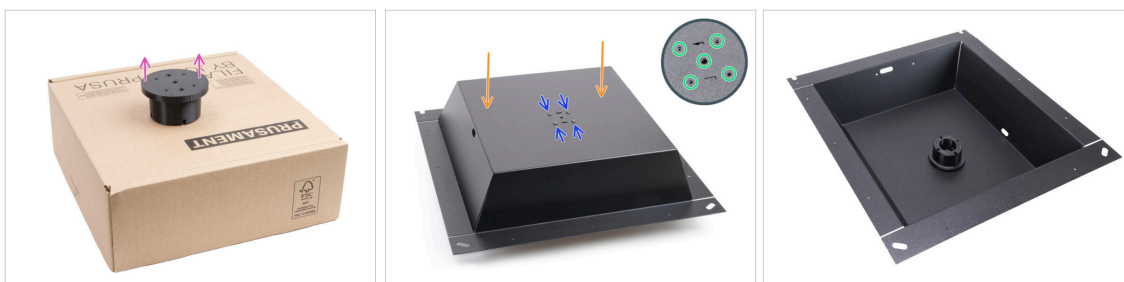

● Placez le Puck-universal sur la boîte en carton de manière à ce que les trous de vis soient orientés vers le haut.


● Placez soigneusement le panneau droit sur le Puck-universal, en le positionnant au centre de la boîte.

● Alignez les trous du Puck-universal avec les trous du panneau de droite.

● Fixez le Puck-universal à l'aide de quatre vis M3x8rT.

ⓘ Les vis peuvent offrir une certaine résistance lors du serrage, car elles créent leur propre filetage à l'intérieur de la pièce.


ÉTAPE 37 Right handle: parts preparation

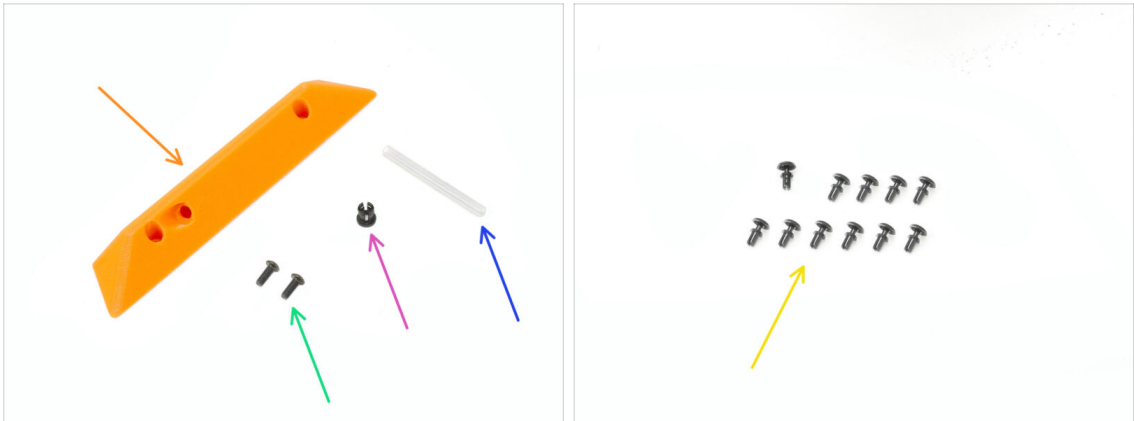

For the following steps, prepare:


- Side Handle (1x) *found in the Printed parts package*
- Vis M3x8rT (2x)
- Collet (1x) *found in the Electronics & Fasteners package*
- PTFE Tube 4 x 2.5 x 45 mm (1x) *found in the CoreXY parts + Hinges set package (together with hinges parts)*
- Rivets en nylon (11x)

ÉTAPE 38 Installation du collet

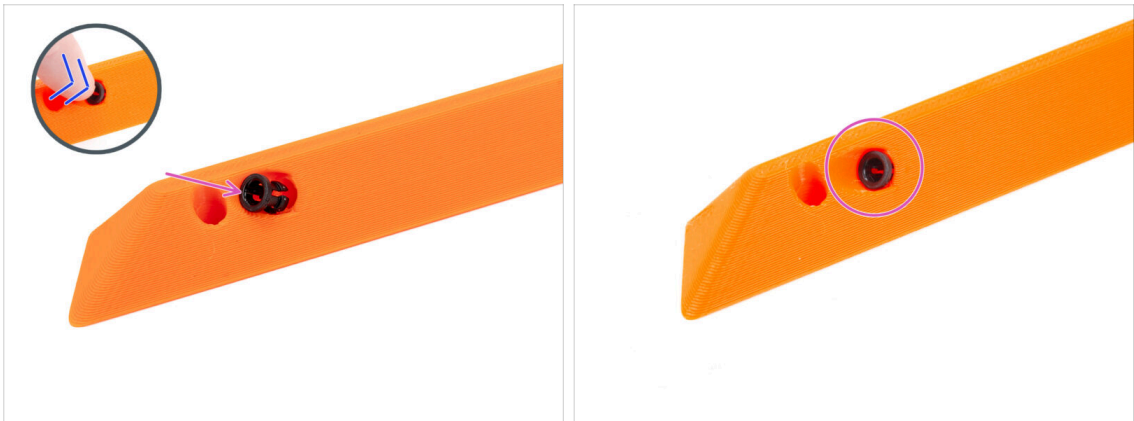


- Insert the collet into the handle.
- Push it all the way in.

ÉTAPE 39 Montage de la poignée

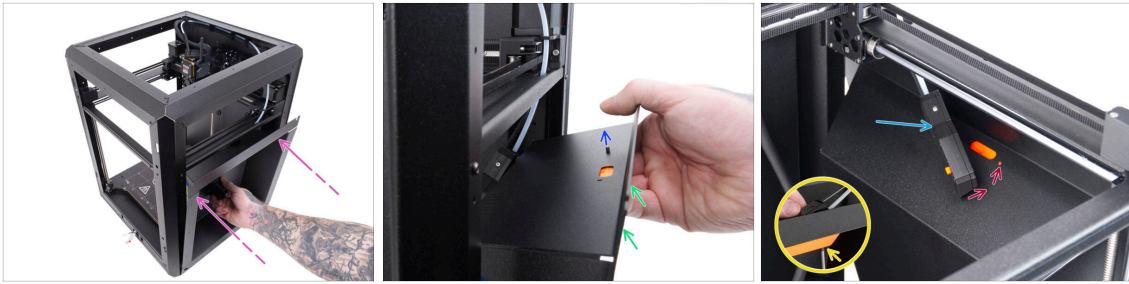


- ✿ Place the right-side metal sheet assembly on the right side of the printer. Ensure the U-shaped cutouts are facing upwards.
- ✿ Attach the right handle to the right metal sheet.
- ✿ Poussez une vis M3x8rT à travers le trou arrière de la poignée et la tôle.
- ✿ Attach the side filament sensor assembly on the screw.
- ⚠ **Do not pull the side sensor assembly too far; bring the right side metal sheet as close as possible.**
- ✿ Tighten the screw just slightly—the nut must remain free to move.
- ✿ Align the side filament sensor with the front screw hole in the metal sheet and the handle.

ÉTAPE 40 Fixing the right side

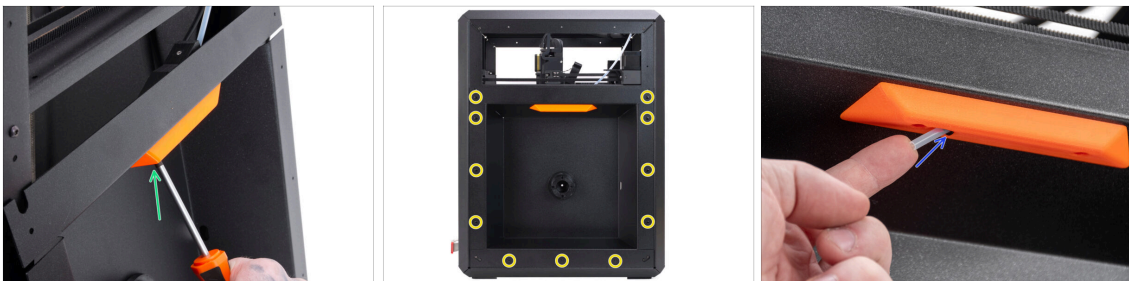

- ✿ Using the second M3x8rT screw, secure the right handle and the side filament sensor to the right metal sheet.
- ✿ Secure the side sheet metal to the printer using the 11 Nylon rivets.
- ✿ Insérez le tube court en PTFE 4 x 2,5 x 45 dans le collet. Poussez-le à fond.
- ⓘ Part of the PTFE tube will remain protruding from the handle.

ÉTAPE 41 Left side: parts preparation

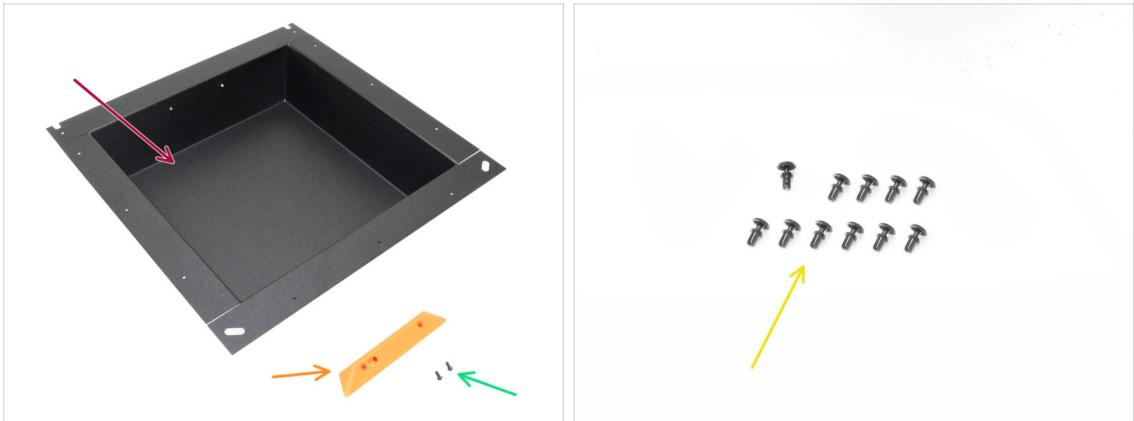

● **For the following steps, prepare:**


- Left side sheet metal (1x) *found in the Metal parts 2/3 package*
- Side Handle (1x) *found in the Printed parts package*
- Vis M3x5rT (2x)
- Rivet en nylon (11x)

ÉTAPE 42 Installing the left side



- Align the handle with the threaded openings in the sheet metal.
- Attach the handle using the two M3x5rT screws.
- Secure the side sheet metal to the printer using 11 nylon rivets.

ÉTAPE 43 C'est l'heure des Haribo

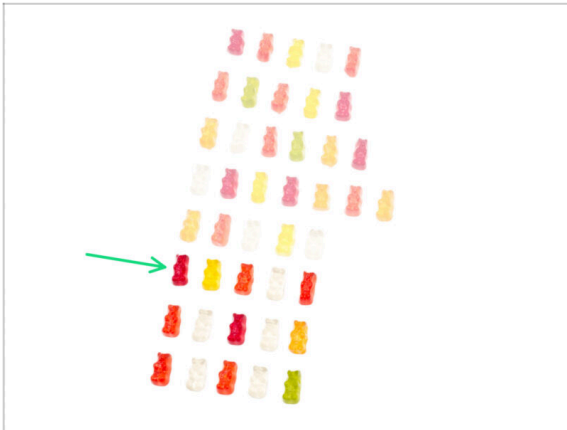

- Well done—fuel up for the next challenge!
- Mangez la sixième rangée.
- So close! But **hands off those last gummies!**

ÉTAPE 44 Fini




- Congratulations! You've successfully assembled the entire body.
- Passons au chapitre suivant.

8. Trim, Door & xLCD



ÉTAPE 1 Tools necessary for this chapter

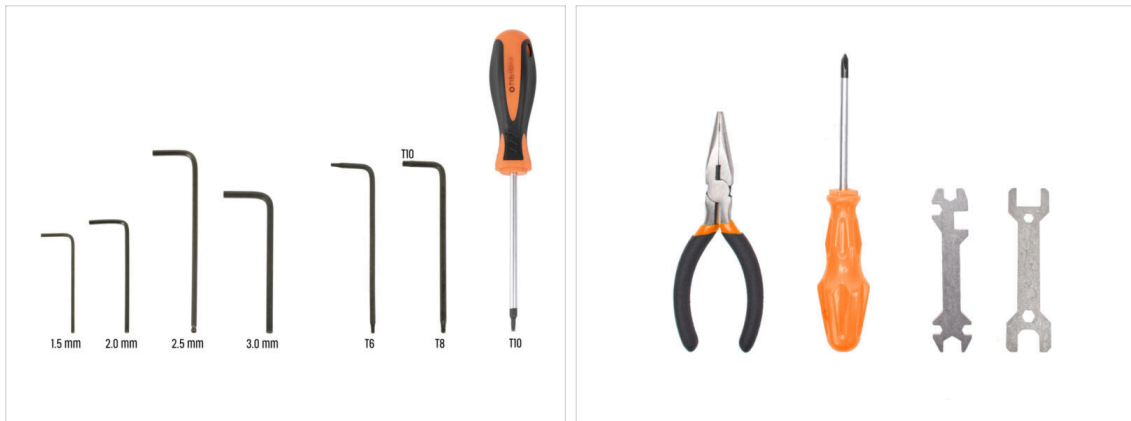

● **For the following steps, prepare:**

- Clé Allen de 2,5 mm
- Clé Torx T10
- Pince à bec fin

ÉTAPE 2 Top cover: parts preparation




● **For the following steps, prepare:**

- Top cover (1x) *found in the Plexi set package*
- Vent cover (1x) *found in the Plexi set package*
- Écrou M3nN (3x)
- Insulating insert (3x) *found in the Electronics & Fasteners package*

i Cette pièce peut être disponible en gris ou en noir. Cependant, la forme est identique et cela n'affecte pas la procédure.


- Vis M3x12rT (3x)
- Rivet nylon (4x)
- Upg-vent-block

ÉTAPE 3 Retrait du film

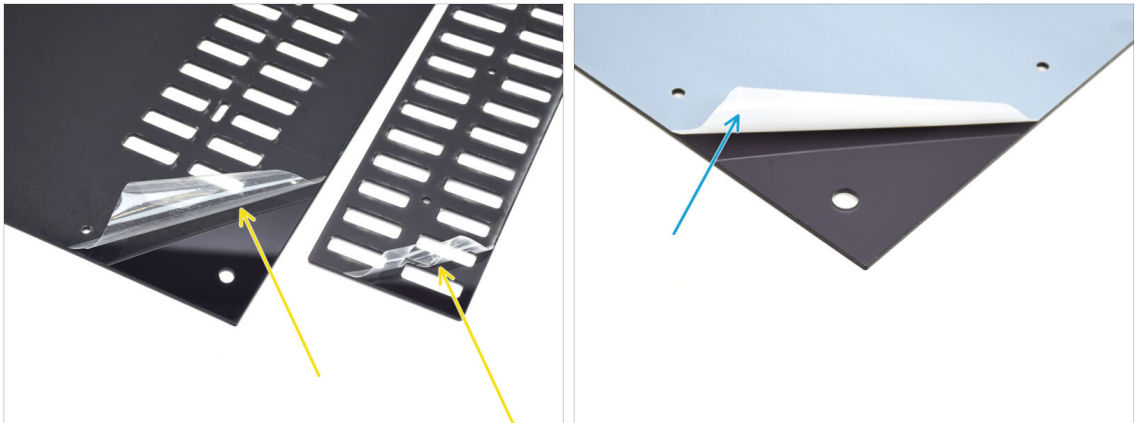

- First, remove the protection foil from both the plastic sheets.
- Flip the parts around and remove the protective foil from the other sides.


ÉTAPE 4 Test-fitting the top cover

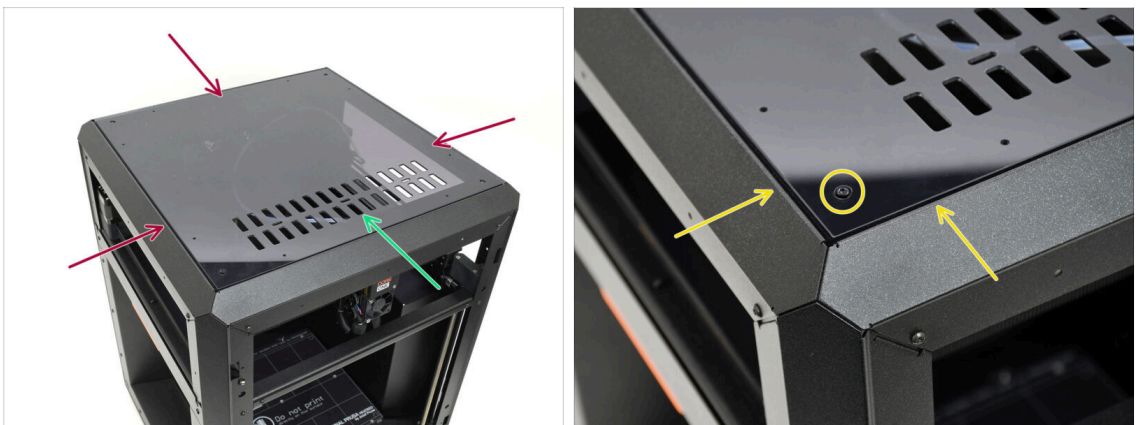

- Lay down the top cover onto the printer.
- The part with the vent openings should be oriented towards the front of the printer.
- If oriented correctly, the cover will align with the recess, and the bolt heads in the corners will fit into the cutouts.
- i** If the bolt openings don't align, flip the cover.


Spoiler alert: The cover isn't symmetrical!

ÉTAPE 5 Assembling the top cover I.

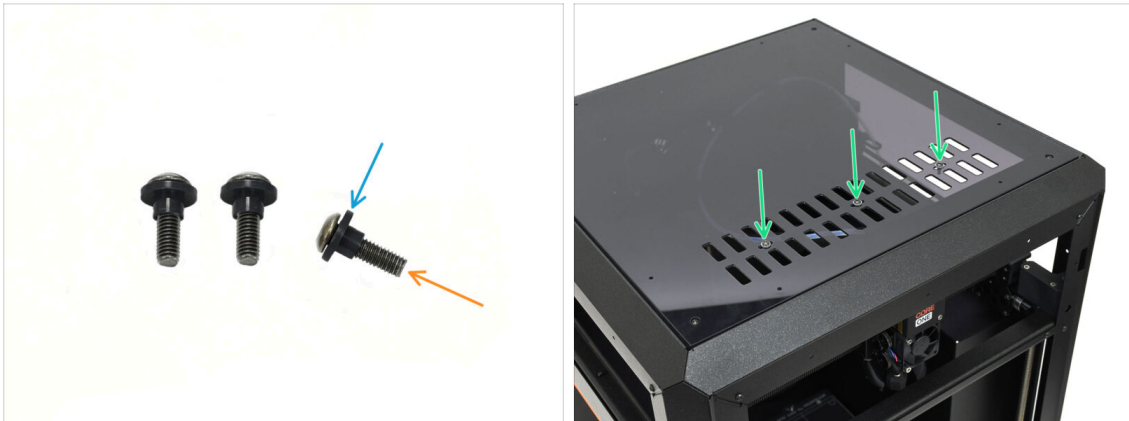

- Run all three M3x12rT screws through the insulating inserts.
- Make sure the flanged part of the insert is oriented toward the screw head.
- Insert the screws with the inserts through the three slot openings in the vent.

ÉTAPE 6 Assembling the top cover II.

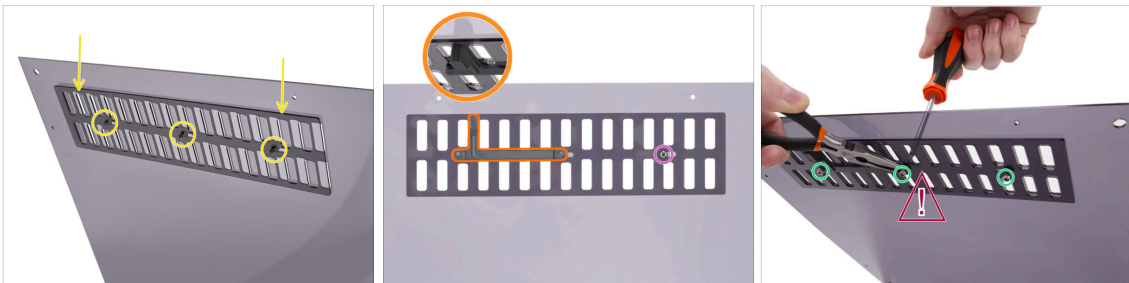

- Align the vent cover with the screw ends on the bottom.
 - Serrez à la main l'écrou M3nN le plus à droite sur la vis M3x12rT pour fixer le capot en place.
 - Fixez l'Upg-vent-block au capot de la ventilation. Assurez-vous qu'il est correctement positionné.
 - Fixez l'Upg-vent-block sur le capot de la ventilation avec des écrous M3nN. Utilisez la pince à bec fin pour maintenir les écrous pendant que vous serrez les vis.
- ⚠ The screw must be tight enough just to remove the slack. It must remain loose, or the ventilation cover won't open and close properly.

ÉTAPE 7 Test de la ventilation




- Try moving one of the three screws with your hand.
- ① The vent openings must open and close smoothly without effort.
- ⚠ If movement is difficult, loosen the screw that is restricting it.

ÉTAPE 8 Installing the top cover




- Alignez le capot avec l'encoche sur l'imprimante, en veillant à ce que l'orifice de ventilation soit orienté vers l'avant.
- Secure the cover to the frame using four nylon rivets in the marked openings.
- ① There are eight openings, but four rivets should be sufficient.

ÉTAPE 9 Side covers: parts preparation

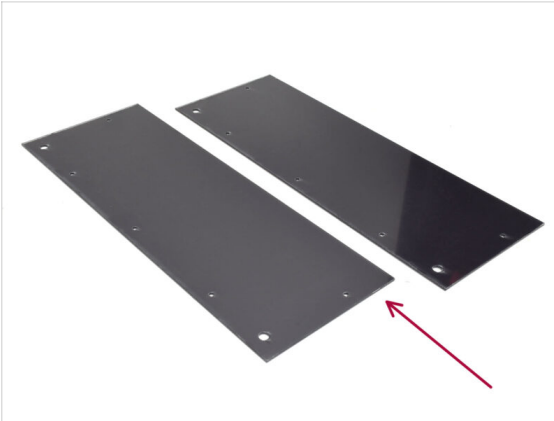

- For the following steps, prepare:
- Side Cover (2x) *found in the Plexi set package*
- Rivet en nylon (10x)

ÉTAPE 10 Retrait du film

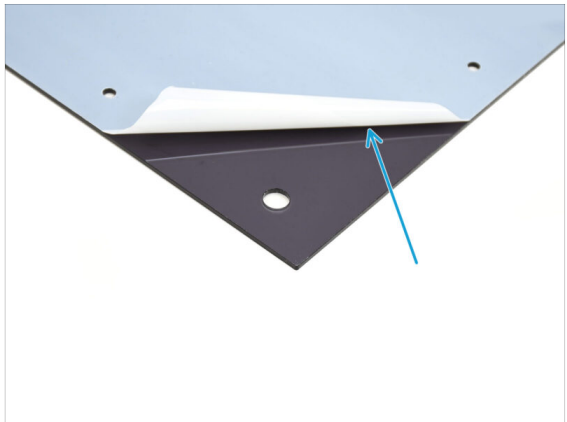

- Remove the protective foil from both the side covers.
- Remove the protective foil from the other sides of both the side covers.

ÉTAPE 11 Covering the left side



- Align the cover with the recess on the left side of the printer.
- The protruding screws on the printer must align with the larger openings in the cover.
- Secure the cover to the frame using five nylon rivets in the marked openings.

ÉTAPE 12 Covering the right side



- Align the other cover with the recess on the right side of the printer.
- Secure the cover to the frame using five nylon rivets in the marked openings.

ÉTAPE 13 xLCD : préparation des pièces : préparation des pièces



- **For the following steps, prepare:**
- xLCD (1x) found in the *Electronics package*
- xLCD Front Cover (1x) found in the *Printed parts package*
- xLCD Display-mount (1x) found in the *Printed parts package*
- Knob (1x) found in the *Printed parts package*
- Vis 3x8sT (4x)
- Faston connector (1x) found in the *Electronics package*

ÉTAPE 14 Assembling the xLCD I.



- Nous vous recommandons de placer le capot avant face vers le bas sur le bord d'une boîte en carton ou sur un bureau pour créer de l'espace pour le bouton de l'encodeur.
- Remove the protective foil from the xLCD.
- Insert the xLCD into the front cover.

ÉTAPE 15 Assembling the xLCD II.



- Cover the assembly with the rear part.

Si vous avez une ancienne version du capot arrière imprimé, il doit s'accrocher au xLCD lui-même dans le coin. Avec la version actuelle, la partie arrière peut être simplement posée.

- Fix the parts together using **JUST THREE** 3x8sT screws in the marked openings.

⚠ N'insérez pas la vis dans la quatrième ouverture à côté du long connecteur pour le connecteur xLCD, visible à travers la découpe. Laissez-la vide pour le moment.

ÉTAPE 16 Installing the FE Faston connector




- Let's move on to the fourth screw opening—this is where we will attach the grounding faston connector.

- Using needle-nose pliers, carefully maneuver the grounding faston connector over the screw opening, ensuring the holes line up.

- Secure the connector in place using one 3x8sT screw, making sure it stays lined up as indicated.

⚠ To prevent damaging some of the surrounding electronic components, be careful and make sure the connector doesn't spin, while tightening it.

ÉTAPE 17 Installing the LCD knob

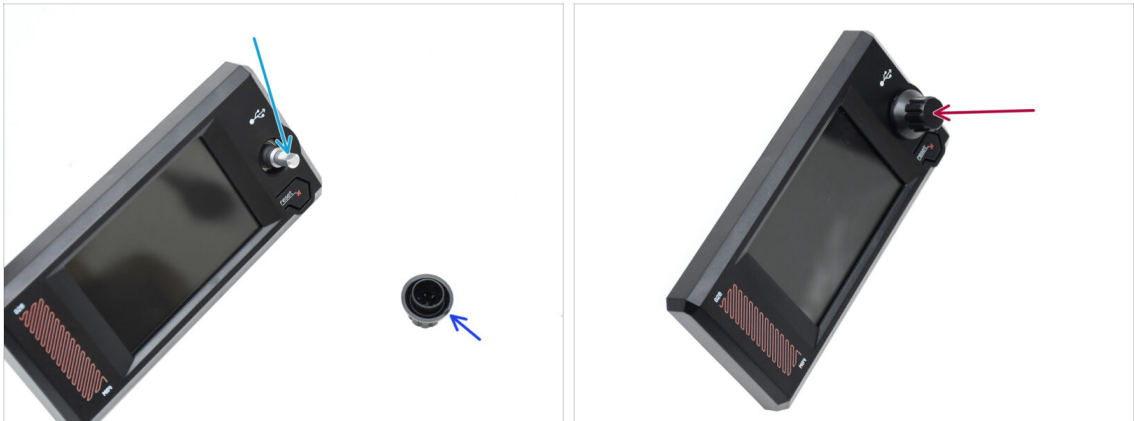

- There is a flat part on the encoder shaft. Rotate the encoder so that the flat part is facing up.
- There is a small gate scar on the injection-molded knob, which can serve as an orientation mark.
- Attach the knob onto the shaft, making sure the mark on the knob is facing up.

ÉTAPE 18 xLCD bezel: parts preparation




- **For the following steps, prepare:**
- xLCD (1x) *found in the Electronics package*
 - Écrou M3nS (2x)
 - Vis M3x6 (2x)
 - Bezel (1x) *found in the Metal parts 2/3 package*

ÉTAPE 19 Mounting the xLCD I.




- Insert the two M3nS nuts into the dedicated openings on the back of the xLCD assembly,
- Push the nuts all the way in until the threads line up with the screw openings.
- Attach two M3x6 screws into the openings. Do not screw them all the way in.
- Leave a gap under the screw heads.

ÉTAPE 20 Mounting the xLCD II.

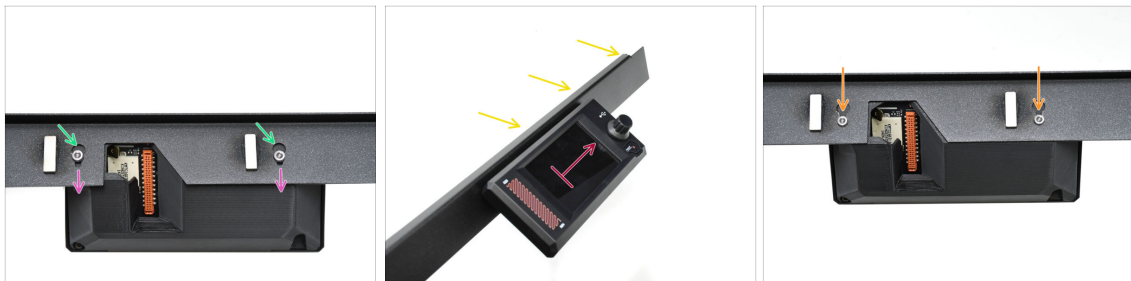


- Hook up the xLCD assembly onto the Bezel.
- Insert the screw heads into the keyhole openings.
- Slide the xLCD assembly so that the screw heads engage into the narrower parts of the keyholes.
- If assembled correctly, the LCD should be pointing up...
 - ...While the bent lip on the Bezel is on top.
- Push the screws all the way into the narrow part of the keyhole on both sides. Then, tighten the screws.

ÉTAPE 21 Installing the xLCD assembly

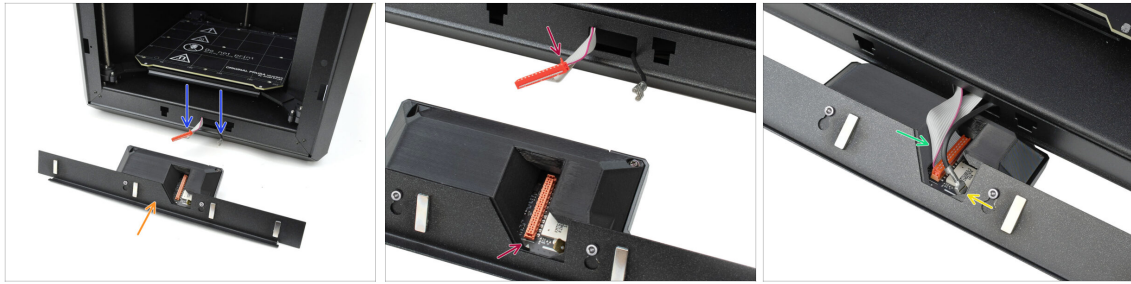


- ✦ Put the xLCD assembly in front of the printer, as pictured.
- ✦ Pull the appropriate cables out from the front of the printer to make connecting them easier.
- ✦ There is a small red tab on the main connector. This tab must be oriented towards the triangle symbol on the PCB.
- ✦ Connect the main connector into the xLCD.
- ✦ Connect the grounding faston connector.

ÉTAPE 22 Securing the xLCD assembly

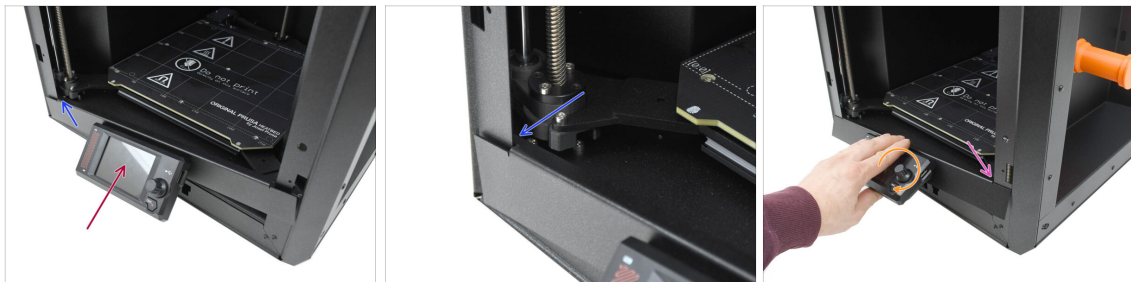

- ✦ Gently lift the xLCD assembly into the upward position.
⚠ **Proceed carefully to ensure none of the cables get pinched or disconnected.**
- ✦ Hook the tiny tab on the left side of the bezel behind the left vertical profile of the printer.
- ✦ Gently lift the bottom part of the xLCD assembly to allow for smoother tab engagement and extra wiggle room.
- ✦ Hook the tab on the right side into the printer's right profile.

ÉTAPE 23 Door seal: parts preparation

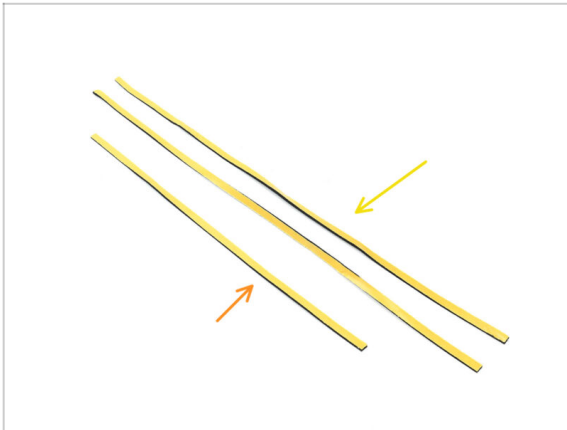


● For the following steps, prepare:

- Side door seal, a longer one (2x) found in the *Electronics & Fasteners* package
- Top door seal, a shorter one (1x) found in the *Electronics & Fasteners* package

ⓘ The color of the protective layer may vary.

ÉTAPE 24 Attaching the top seal

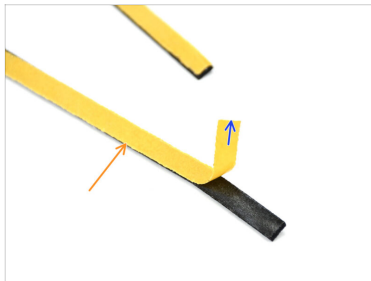


- Take the **SHORTER** seal.
- Peel off the start of the protective foil. No need to remove it entirely yet.
 - ⓘ No need to remove it entirely yet. For easier installation, you can peel it off gradually as you go.
- Start applying the seal along the top edge of the printer's frame.
 - Begin offset from the corner by a distance equal to the seal thickness.
- Apply the seal along the top edge, leaving the end offset from the corner, just like on the other side.

ÉTAPE 25 Attaching the side seals



- Apply the longer door seal, starting from the end of the seal on top.
- Work your way from the top down.
- ① With needle-nose pliers, trim the excess.
- Using the same technique, apply the remaining long seal along the left edge of the printer's frame.

ÉTAPE 26 Magnet holders: parts preparation

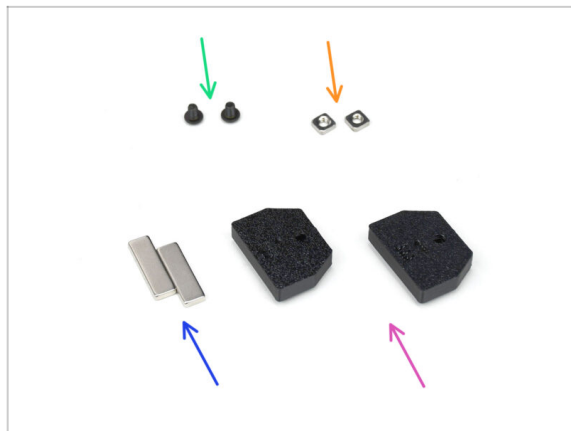

● For the following steps, prepare:

- Vis M3x5rT (2x)
- Écrou M3nS (2x)
- 20x6x2 Magnet (2x) *found in the Electronics & Fasteners package*
- ⚠ **Keep the magnets apart at a sufficient distance. They can break each other!**
- Magnet Holder (2x) *found in the Printed parts package*

ÉTAPE 27 Assembling the magnet holders




- ✚ Insert the M3nS nuts into the corresponding openings in the magnet holders.
- ✚ Push the nuts all the way in, until the thread aligns with the screw opening.
- ✚ Insert the magnets into the corresponding pockets in the holders. Push them all the way in.
- ⓘ The orientation of the magnets does not matter.

ÉTAPE 28 Installing the magnet holders



- ✚ From the inside of the printer, insert the magnet holder assembly into the corresponding bottom opening in the right-side metal profile.
- ⚠ Ensure the protruding rectangular pocket fits into the cutout.
- ✚ Secure the assembly in place using the M3x5rT screw.
- ✚ Using the same technique, install the other magnet holder into the top opening on the right side.


ÉTAPE 29 Charnières : préparation des pièces

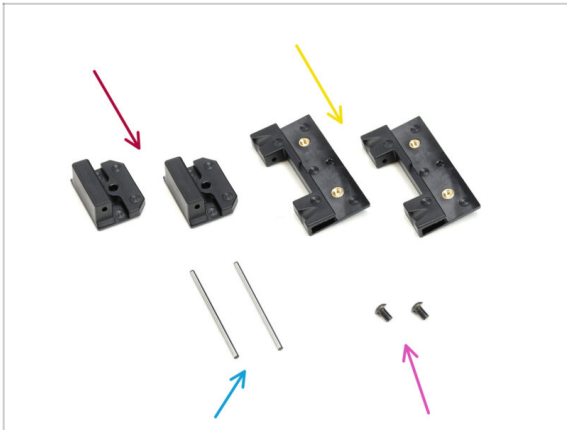

For the following steps, prepare:


- Door-hinge-in (2x) found in the CoreXY + Hinges set package
- Door-hinge-out (2x) found in the CoreXY + Hinges set package
- Hinge Pin 2 x 40 mm (2x) found in the Electronics & Fasteners package
- Vis M3x5rT (2x)

ÉTAPE 30 Installing the door-hinge-in parts

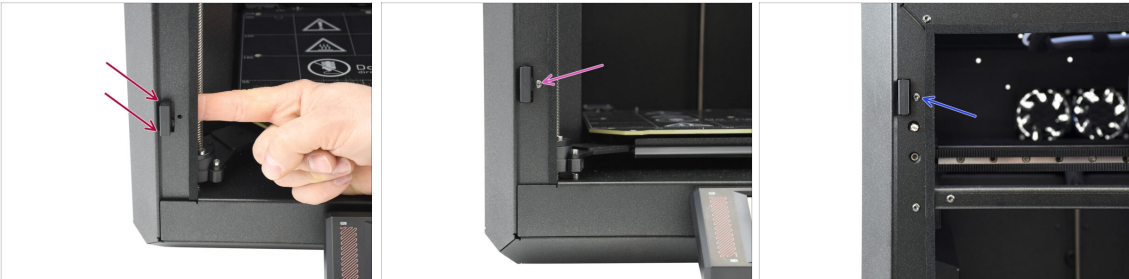


- From the inside of the printer, insert the door-hinge-in into the bottom rectangular opening in the left-side profile. The protruding part should pass through to the front.
- Fix the door-hinge-in in place using the M3x5rT screw.
- Using the same technique, install the other door-hinge-in into the opening on top.

ÉTAPE 31 Installing the door-hinge-out I.

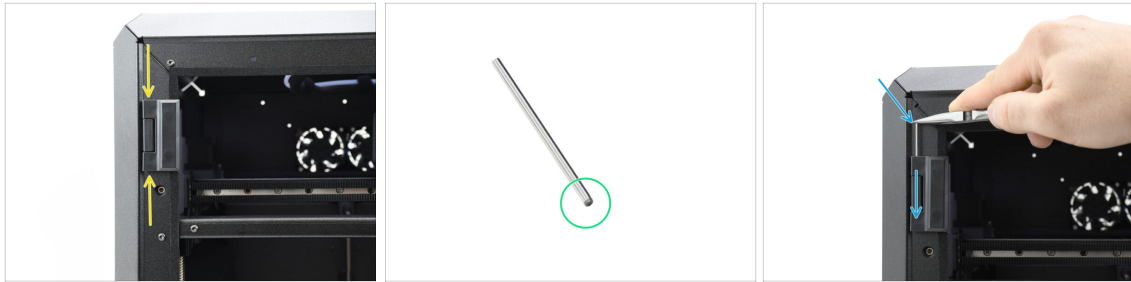

- ✦ Align the door-hinge-out with the door-hinge-in.
- ✦ The chamfered end of the hinge pin should be inserted first to make assembly easier.
- ✦ Insert the pin from the top of the door-hinge-out, guiding it through the door-hinge-in until it is fully inserted.
- ❗ Use the tip of needle-nose pliers to press the pin in securely.

ÉTAPE 32 Installing the door-hinge-out II.

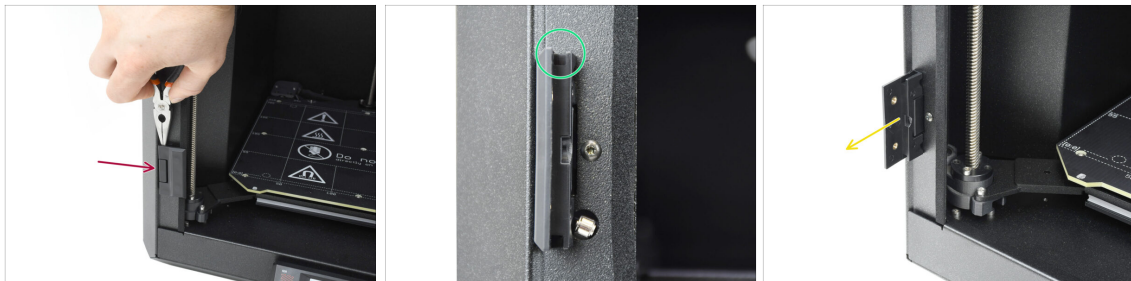


- ✦ Using the same technique, install the bottom door-hinge-out to complete the hinge assembly.
- ✦ Look into the grooves on the door-hinge-out parts and verify that the pins are fully inserted.

No part of the pin should be visible above the bottom surface in the groove.

- ✦ Open up both the hinges.

ÉTAPE 33 Door panel: parts preparation

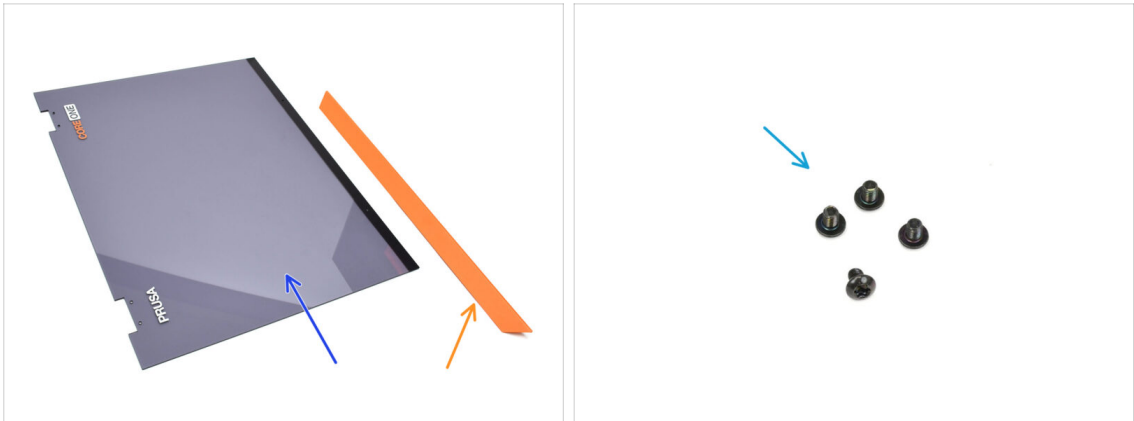


● **For the following steps, prepare:**

- Door (1x) found in the Plexi set package

① Le panneau de porte est pré-marqué **CORE ONE**. Ne vous inquiétez pas, **c'est voulu !** Vous appliquerez l'autocollant + de mise à niveau à la dernière étape.

- Door handle (1x) found in the Metal parts 2/3 package
- Vis M3x5rT (4x)

ÉTAPE 34 Door panel: removing the protective film

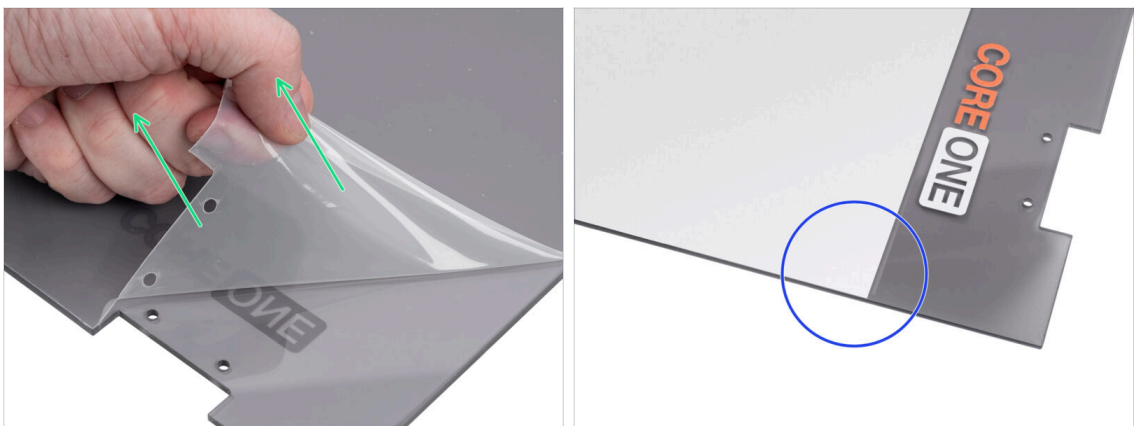

- **The door panel has protective film on both sides.** One covers the entire surface, the other just the center area.

- Peel off the film covering the entire door; it's lightly transparent.

- You can remove the center protective film (white) now or after mounting the panel to protect the surface during handling.

① This protective film does not interfere with the installation of the hinges or handle.

ÉTAPE 35 Installing the door panel



- Align the door with the hinges. The cutouts on the door should fit into the grooves on top and bottom of the leaves.
- Make sure the door is oriented so that the signs on the door are pointing outward.
- Slide the door all the way into both the hinges.
- Fix the door to the hinges using four M3x5rT screws. Start with the top one. Then, do the bottom.


ÉTAPE 36 Assembling the door handle



- Let's move onto the handle. Remove the protective foil from both the adhesive strips on the inside.
- The part with the adhesive strip will go onto the back of the door. But do not attach the handle yet!

⚠ Wait for the upcoming step! We have to align the handle first!

ÉTAPE 37 Securing the door handle

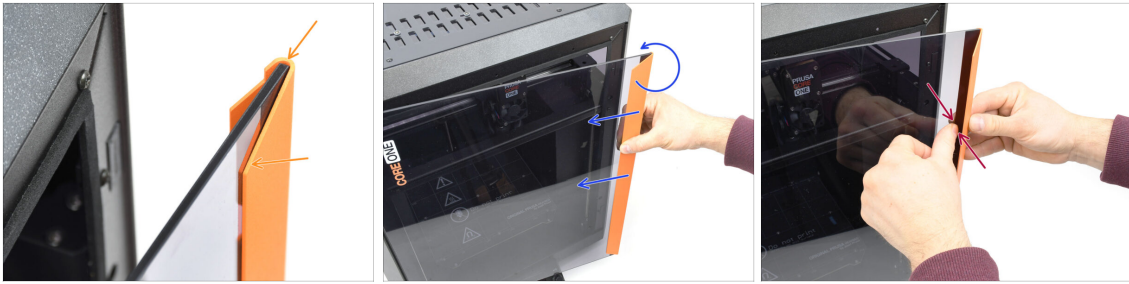

- Align the handle so that the front chamfered part is flat to the door. The top of the handle must be flush with the door.
- While pushing the handle against the door to keep it aligned, slowly rotate it counterclockwise until the adhesive strips bond to the door.
- Push the door and handle together firmly in the adhesive strip areas to ensure a secure attachment.

ÉTAPE 38 Pose de l'autocollant : Préparation des pièces : Préparation des pièces




- Pour l'étape suivante, préparez :
 - Autocollant du plexi de la CORE One+
- i L'autocollant du plexi de la CORE One+ se trouve dans la boîte de mise à niveau vers la CORE One+.

ÉTAPE 39 Pose de l'autocollant



- ◆ Retirez l'autocollant de la base bleue.
- ◆ Alignez l'autocollant avec le **ONE** et appliquez une pression douce mais ferme sur l'autocollant.
- ◆ Décollez délicatement la couche transparente et assurez-vous que le + ne se décolle pas.

ÉTAPE 40 C'est l'heure des Haribo

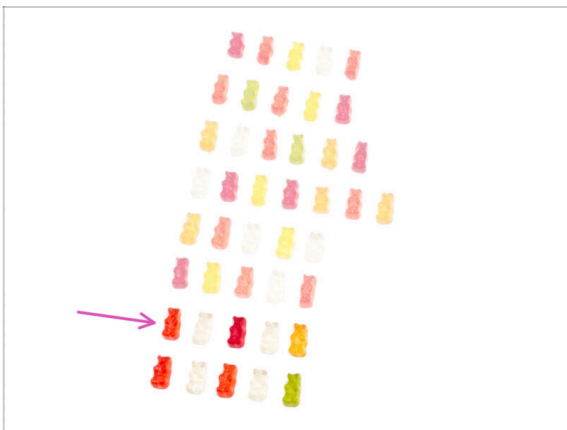


- ◆ Hard work deserves sweet results!
- ◆ Eat the seventh row.
- ⚠ But don't eat the rest yet.

ÉTAPE 41 Fini



- Félicitations ! Vous avez assemblé avec succès votre Prusa CORE One+.
- Let's move to the final chapter.

9. Calibration & First run

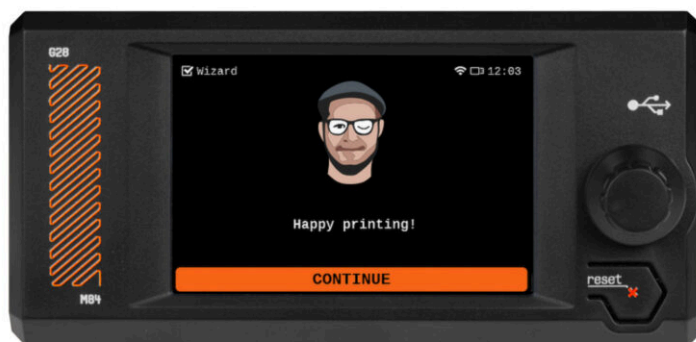

ÉTAPE 1 Tension de la courroie



- i** This chapter will guide you through calibrating and preparing the printer for its first run.
- Calibrate the belt tension. See the following article for more info:
 - [Adjusting belt tension \(CORE One\)](#)
- !** Don't forget to come back here after adjusting the belts.

ÉTAPE 2 Installation du support de bobine : Préparation des pièces : Préparation des pièces



- For the next step, prepare:
 - Joint torique
 - Spoolholder-static
- i** Le support de bobine et le joint torique se trouvent dans le même sachet.


ÉTAPE 3 Fixation de la plaque d'impression et du support de bobine



⚠ Make sure there is nothing on the heatbed. The heatbed must be clean. Any dirt can damage the surface of both the heatbed and the print sheet.

- **Attach the sheet by first aligning the rear cutout with the locking pins on the back of the heated bed.** Hold the sheet by the front two corners and slowly lay it down onto the heated bed - **watch your fingers!**
 - ⬛ Keep the **print sheet** clean for optimum performance.
 - ⬛ #1 cause of prints detaching from the print surface is a greasy print sheet. **Use IPA (Isopropyl alcohol) to degrease it** if you have touched its surface before.
- Put the O-ring onto the Spoolholder-static.
- Enfoncez le support de bobine sur le support et verrouillez-le en le tournant dans le sens des aiguilles d'une montre.

ÉTAPE 4 Mise à jour du firmware

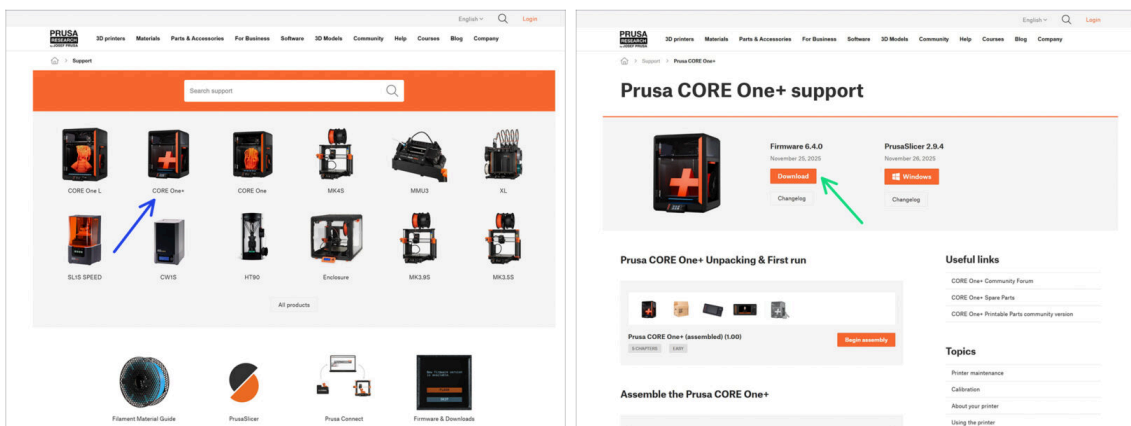


- ⓘ All printers come with a USB drive containing the latest firmware. However, it is recommended to check and possibly upgrade the firmware version every few weeks.
- ⬛ Visit the help.prusa3d.com page.
- Navigate to the Prusa CORE One+ page.
- Download the latest firmware version.
- ⬛ Save the firmware file (*.bbf*) onto the *bundled USB drive*.

ÉTAPE 5 Allumage de l'imprimante



- ✿ Insert the USB drive included in your kit into your printer.
 - ❗ The included USB drive contains the latest firmware file.
- ✿ Connect the power cable and plug the printer into a wall outlet.
- ✿ Turn the printer on using the switch on the back.
- ❗ The printer will now detect if a new firmware file is available on the USB drive.
- ✿ If the "New firmware available" screen appears, hit **FLASH** by pressing the rotary knob to upgrade to the latest firmware.
 - ✿ If no such message appears, the printer is running the latest firmware already. Proceed to the next step.

ÉTAPE 6 Setting up the printer: Intro

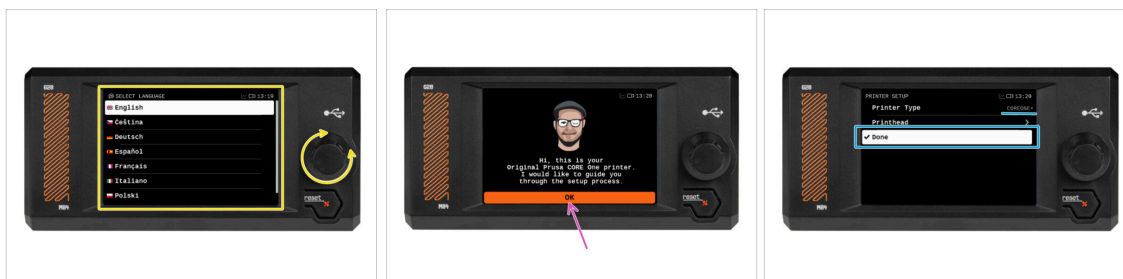

- ✿ The printer displays on the screen a prompt to select your language. Use the control knob or touchscreen to set your preference.
- ✿ After selecting your language, the printer will display the welcome screen. Hit **OK** to continue through the setup process.
- ✿ The next screen will prompt you to select your printer model COREONE+. Hit **Done** to continue.

ÉTAPE 7 Setting up the printer: Network setup



- The Network Setup screen will ask you to connect to a Wi-Fi network using our official Prusa mobile app.
- ① Read more on prusa.io/app.
- If you select **No**, the printer will show alternative ways to connect to Wi-Fi. This step is optional and can be done later.
- ① You can skip this screen and set up the network connection later.

ÉTAPE 8 Assistant : Introduction



- ① The printer will prompt you to run self-tests and calibrations for all important components. The entire process takes a few minutes, with some parts requiring direct user interaction.
- Hit **YES** to begin the self-test and follow the instructions on screen.
- ⚠ During the self-test, **keep the door closed** until you are prompted. Opening the door will interrupt the process.
- There are **HOT** and moving parts inside during the self-test.
- The printer will begin by testing all the fans. **Be aware—it can get quite noisy for a while!**

ÉTAPE 9 Wizard: Door Sensor Calibration




- ✿ The first part that requires your interaction is the door sensor calibration. To begin, hit **Calibrate** and follow the on-screen instructions.
- ✿ You'll be prompted to gradually tighten the sensor tension screw from its default loose position - usually in half-turn steps, possibly several times during calibration.
 - ✿ After each adjustment, observe the door sensor switch emerging from the front profile hole.
- ✿ Repeat the procedure until the door sensor is correctly adjusted - meaning it switches at a hand-gap distance. Then hit **Continue**.
- ❗ Once the sensor is properly calibrated, you should hear an audible click from the door sensor area when opening and closing the door.

ÉTAPE 10 Assistant : Test du capteur de force



- ✿ The next step of the wizard will prompt you to touch the nozzle to test and calibrate the Loadcell. During this procedure, the **parts of the printer are not heated up** so that you can touch them. Hit **Continue**.
- ❗ Loadcell calibration requires the door to be open, as you must interact directly inside the printer.
 - ✿ Do not touch the nozzle yet, wait until prompted by the **Tap nozzle NOW** message.
 - ✿ Tap the nozzle from below. In case the Loadcell does not detect the touch, you will be prompted to repeat the step. Otherwise, you will see **Loadcell test passed OK** when it succeeds.
 - ✿ To allow the printer to continue with the Wizard, **close the door**.

ÉTAPE 11 Assistant : Alignement du réducteur

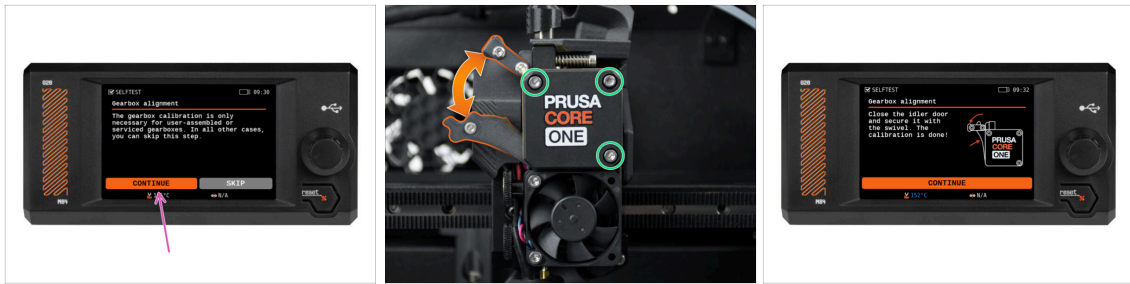


- ✦ Once you get to the Gearbox Alignment part, select **Continue** and follow the on-screen instructions.
- ✦ Make sure the idler lock (swivel) is unlocked from the idler door.
- ✦ Loosen the three screws on the front of the gearbox by 1.5 turns.
- ❗ The printer will go through the automatic gearbox alignment. This process can't be seen from the outside.
- ⬛ Once prompted, tighten the three screws in the pattern indicated on the screen.

ÉTAPE 12 Wizard: Filament Sensor Calibration




- ✦ Vérifiez le commutateur manuel du capteur de filament. **Assurez-vous qu'il est activé.**
- ✦ During the filament sensor calibration, you will need to use a short piece of filament. Prepare the filament and select **Continue**.
- ❗ There should be no filament inside the extruder before the calibration process starts.
- ✦ Place a spool of filament onto the spool holder on the right side of the printer.
- ✦ When prompted, begin inserting the filament into the PTFE tube located beneath the right handle.
- ⬛ Remove the filament after the calibration finishes.

ÉTAPE 13 Assistant terminé

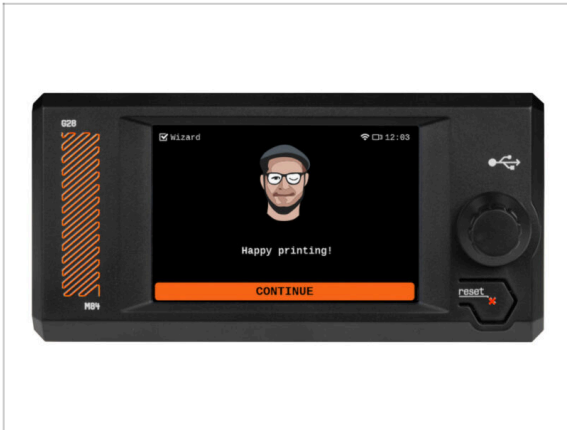

- ◆ Congratulations! The Wizard is complete. Now it's time to test some prints.

ÉTAPE 14 C'est l'heure des Haribo

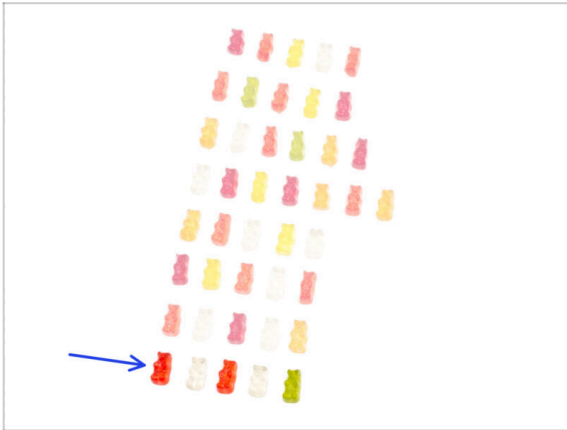

- ◆ Victory tastes like gummy bears!
- ◆ Enjoy the rest. You've earned this.

ÉTAPE 15 Manuel



- Read the **3D Printing Handbook** dedicated to your printer and follow the instructions to set up the printer and prepare it for your first print.




The latest version is always available at help.prusa3d.com.



Read the Disclaimer and Safety instructions chapters.

ÉTAPE 16 Base de connaissances Prusa

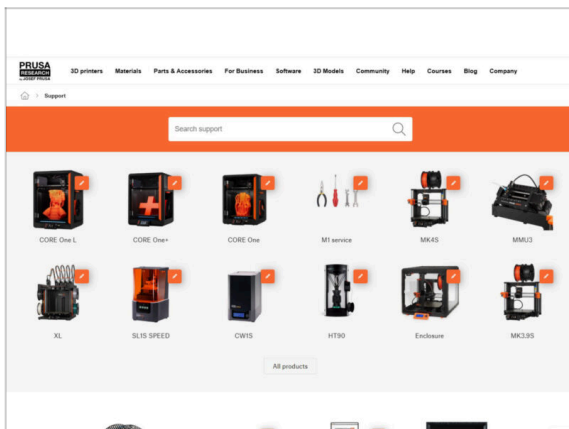


If you encounter any problems at all, don't forget you can always check out our knowledge base at help.prusa3d.com



We're adding new topics every day!

ÉTAPE 17 Rejoignez Printables !

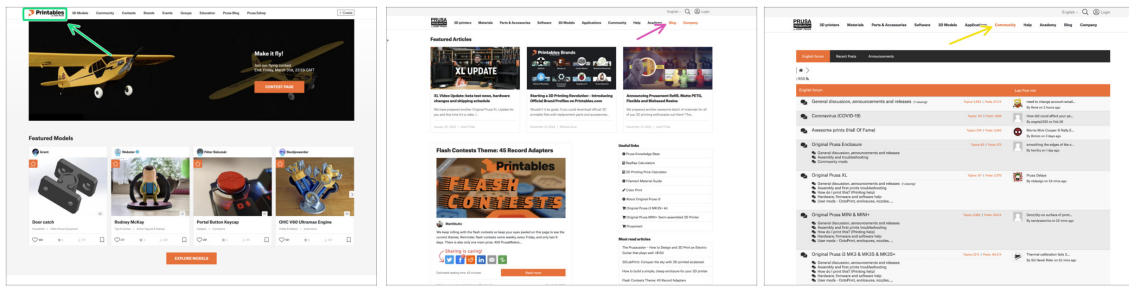

- Don't forget to join the biggest Prusa community! Download the latest models in STL or G-code tailored for your printer. Register at [Printables.com](https://www.printables.com)
- Looking for inspiration on new projects? Check our blog for weekly updates.
- If you need help with the build, check out our forum with a great community :-)
- i All Prusa services share one user account.

Journal des modifications



ÉTAPE 1 Historique des versions



- **Versions du manuel du kit Prusa CORE One+ :**
- 11/2025 - Version initiale 1.00

This image shows a full page of blank, lined paper. It features approximately 20 horizontal blue or grey lines spaced evenly apart, typical of notebook paper. The lines extend across the entire width of the page, leaving small margins at the top and bottom. There are no vertical lines, text, or other markings on the page.

[illegible]

[illegible]

This image shows a full page of blank, lined paper. It features approximately 20 horizontal blue or grey lines spaced evenly apart, typical of notebook paper. The lines extend across the entire width of the page, leaving small margins at the top and bottom. There are no vertical lines, text, or other markings present.