

Indice

1. Introduzione	7
Passo 1 - How to navigate through the manual	8
Passo 2 - View high resolution images	8
Passo 3 - Prima di iniziare	9
Passo 4 - All the required tools are included	10
Passo 5 - Guida alle etichette	11
Passo 6 - Busta di componenti di scorta	11
Passo 7 - Printed parts - versioning	12
Passo 8 - We are here for you!	13
Passo 9 - Pro tip: inserting the nuts	14
Passo 10 - Protezione dell'Elettronica (ESD)	15
Passo 11 - Aggiornamento opzionale a CORE One+ Gen 2	16
Passo 12 - Rimozione della MMU	16
Passo 13 - Datti una ricompensa	17
Passo 14 - Prepara la scrivania	18
2. Preparazione e smontaggio della stampante	19
Passo 1 - Tools necessary for this chapter	20
Passo 2 - Important: Update the firmware	20
Passo 3 - Spostare l'asse Z	21
Passo 4 - Scaricare il filamento	21
Passo 5 - Powering off & protecting the printer	22
Passo 6 - Disconnect the Buddy3D camera	22
Passo 7 - Do not discard removed parts	23
Passo 8 - Removing the top nylon rivets	23
Passo 9 - Removing the top panel	24
Passo 10 - Removing the top profile	24
Passo 11 - Rimuovere lo sportello	25
Passo 12 - Accesso all'elettronica	25
Passo 13 - Accessing the buddy board	26
Passo 14 - Unplugging the cable I.	26
Passo 15 - Unplugging the cables II.	27
Passo 16 - Rimuovere i cavi	27
Passo 17 - Pushing the cables in	28
Passo 18 - Guiding the heatbed cables in	28
Passo 19 - Releasing the main cable	29
Passo 20 - Removing the LoveBoard cover	29
Passo 21 - Disconnecting the Nextruder cables - left	30
Passo 22 - Disconnecting the Nextruder cables - top	30
Passo 23 - Disconnecting the Nextruder cables - right	31
Passo 24 - Disconnecting the PTFE tube	31
Passo 25 - Removing the Nextruder fitting	32
Passo 26 - Rimozione del Nextruder	32
Passo 27 - Removing the print fan	33
Passo 28 - Rimuovere la LoveBoard	33
Passo 29 - Removing the fan shroud	34
Passo 30 - Removing the side handle	34
Passo 31 - Removing the side filament sensor	35
Passo 32 - Rimozione del porta bobina	35
Passo 33 - Riepilogo parti I.	36
Passo 34 - Riepilogo parti II.	36

Passo 35 - È l'ora delle Haribo!	37
Passo 36 - Fase finale	37
3. Aggiornamento dell'asse Z	38
Passo 1 - Tools necessary for this chapter	39
Passo 2 - Optional: Installing the Buddy3D Camera USB-C cable	39
Passo 3 - Removing the heatbed cable cover	40
Passo 4 - Sbloccare il piano riscaldato	40
Passo 5 - Rimuovere il piano riscaldato	41
Passo 6 - Heatbed spacers: parts preparation	41
Passo 7 - Inserting the spacer - left	42
Passo 8 - Securing the bed spacer - left	42
Passo 9 - Inserting the spacer - right	43
Passo 10 - Securing the bed spacer - right	43
Passo 11 - Rimozione del distanziatore posteriore del piano	44
Passo 12 - Montaggio della parte INDX-bed-spacer-rear	44
Passo 13 - Montaggio del INDX-bed-spacer-rear	45
Passo 14 - Offset sensor: parts preparation	45
Passo 15 - Mounting the INDX offset sensor	46
Passo 16 - Connecting the offset sensor cable	46
Passo 17 - Securing the offset sensor assembly	47
Passo 18 - Guiding the offset sensor cable	47
Passo 19 - Securing the offset sensor cable	48
Passo 20 - Rimuovere la copertura Bed-cable-cover-bottom.	48
Passo 21 - Coperture dei cavi del piano riscaldato: preparazione dei componenti	49
Passo 22 - Assemblare la copertura Bed-cable-cover-bottom	49
Passo 23 - Fissaggio del piano riscaldato: preparazione dei componenti	50
Passo 24 - Inserimento del piano riscaldato	50
Passo 25 - Fissare il piano riscaldato	51
Passo 26 - Wrapping the heatbed cables	52
Passo 27 - Covering the heatbed cables	52
Passo 28 - Guiding the heatbed cable bundle I.	53
Passo 29 - Guiding the heatbed cable bundle II.	53
Passo 30 - Securing the textile sleeve	54
Passo 31 - Rimuovere il finecorsa Bed-stop-rear	54
Passo 32 - INDX-C1-Bed-stop-rear: preparazione dei componenti	55
Passo 33 - Montaggio del finecorsa del piano Bed-stop-rear	55
Passo 34 - Installing the new Bed-stop-rear	56
Passo 35 - Assicurare il Bed-stop-rear	56
Passo 36 - Connecting the RGB LED + offset sensor cables	57
Passo 37 - Connecting the heatbed cables	57
Passo 38 - È l'ora delle Haribo	58
Passo 39 - Completato	58
4. Sensore filamento laterale & Testina INDX	59
Passo 1 - Tools necessary for this chapter	60
Passo 2 - Allentare le cinghie	60
Passo 3 - Rilascio delle cinghie	61
Passo 4 - Gantry aligner tool: parts preparation	61
Passo 5 - Installing the Gantry-aligner-tool - right	62
Passo 6 - Installing the Gantry-aligner-tool - left	62
Passo 7 - Aligning the linear rail	63
Passo 8 - Rimozione dello strumento di allineamento del Gantry	63
Passo 9 - Montaggio della testina: preparazione dei componenti	64
Passo 10 - Fissare le cinghie	64

Passo 11 - Montare la piastra Head-mounting-plate	65
Passo 12 - Lubrificare la vite del tendicinghia	65
Passo 13 - Regolazione delle cinghie	66
Passo 14 - INDX Toolhead assembly: Parts preparation	66
Passo 15 - Attaching the head cable cover front	67
Passo 16 - INDX Toolhead: parts preparation	67
Passo 17 - Mounting the INDX Toolhead	68
Passo 18 - Fan shroud: parts preparation	68
Passo 19 - Montaggio del convogliatore della ventola	69
Passo 20 - Inserimento del dado	69
Passo 21 - Print fan: parts preparation	70
Passo 22 - Installing the print fan	70
Passo 23 - Connecting the print fan	71
Passo 24 - INDX head cable: parts preparation I.	71
Passo 25 - INDX head cable: parts preparation II.	71
Passo 26 - Guiding the head cable	72
Passo 27 - Inserting the nylon string	73
Passo 28 - Connecting the head cable	74
Passo 29 - Attaching the head cable	75
Passo 30 - Securing the swing arm clip	76
Passo 31 - Fissaggio del cavo della testina	76
Passo 32 - Installing the Head cable clip	77
Passo 33 - Connecting the head cable: parts preparation	77
Passo 34 - Inserting the zip ties	78
Passo 35 - Connecting the head cable	78
Passo 36 - Fissare i cavi	79
Passo 37 - Ora delle Haribo!	79
Passo 38 - INDX PTFE holders: parts preparation	80
Passo 39 - Installazione del supporto PTFE-holder-left	80
Passo 40 - Installazione del supporto PTFE-holder-right	81
Passo 41 - Side filament sensors: parts preparation	81
Passo 42 - Inserimento delle guaine	82
Passo 43 - Inserimento dei colletti	82
Passo 44 - Installare i magneti	83
Passo 45 - Assembling the FS: parts preparation I	83
Passo 46 - Assembling the FS: parts preparation II	84
Passo 47 - Inserting the steel balls	84
Passo 48 - Fissare i magneti	85
Passo 49 - Assembling the FS-top left	85
Passo 50 - Covering the FS - left	86
Passo 51 - Assembling the FS-top right	86
Passo 52 - Covering the FS - right	87
Passo 53 - PTFE tubes - left side: parts preparation	87
Passo 54 - Preparing the FS - left	88
Passo 55 - Mounting the FS - left	88
Passo 56 - Connecting the PTFE tube - left	89
Passo 57 - PTFE measurement: parts preparation	90
Passo 58 - Attaching the PTFE tubes - left	90
Passo 59 - Informazioni sulle misure	91
Passo 60 - Inserting the PTFE tubes (position 1,2)	91
Passo 61 - Inserting the PTFE tubes (position 3,4)	92
Passo 62 - PTFE tubes - right side: parts preparation	92
Passo 63 - Preparing the FS - right	93
Passo 64 - Mounting the FS - right	93
Passo 65 - Connecting the PTFE tube - right	94

Passo 66 - Attaching the PTFE tubes - right	94
Passo 67 - Inserting the PTFE tubes (position 8,7)	95
Passo 68 - Inserting the PTFE tubes (position 5,6)	95
Passo 69 - Connecting the filament sensor cable	96
Passo 70 - È l'ora delle Haribo!	96
Passo 71 - Fatto	97
5. Portabobine e gruppo di dock degli strumenti	98
Passo 1 - Tools necessary for this chapter	99
Passo 2 - Removing the side cover - right	100
Passo 3 - Side handle: parts preparation	100
Passo 4 - Installing the side handle	101
Passo 5 - Nozzle cleaner: parts preparation I.	101
Passo 6 - Nozzle cleaner: parts preparation II.	102
Passo 7 - Assemblaggio del Wiper-lock	102
Passo 8 - Fissaggio del blocco del raschietto	103
Passo 9 - Installare il Wiper-adjuster (Supporto Raschietto)	103
Passo 10 - Inserting the wiper blocks	104
Passo 11 - Montaggio del gruppo del raschietto	104
Passo 12 - Dock fan cable: parts preparation	105
Passo 13 - Attaching the dock fan cable	105
Passo 14 - Leading the dock fan cable I.	106
Passo 15 - Passaggio del cavo della ventola Dock	106
Passo 16 - Fissaggio delle fascette	107
Passo 17 - Securing the zip ties II.	107
Passo 18 - Electronics covers: parts preparation	108
Passo 19 - Fissare i cavi	108
Passo 20 - Controllo del cablaggio	109
Passo 21 - Covering the xBuddy box	109
Passo 22 - Installing the rear cover	110
Passo 23 - Montaggio del pannello laterale: preparazione dei componenti	110
Passo 24 - Mounting the right side panel	111
Passo 25 - Bottom puck holders: parts preparation	112
Passo 26 - Assembling the bottom puck holders	112
Passo 27 - Removing the screws - left	113
Passo 28 - Mounting the bottom puck holders - left	113
Passo 29 - Fissare il porta disco anteriore, parte inferiore - sinistra I.	114
Passo 30 - Fissare il porta disco anteriore, parte inferiore - sinistra II.	115
Passo 31 - Fissare il porta disco posteriore, parte inferiore - sinistra I.	115
Passo 32 - Securing the rear puck holder bottom - left II.	116
Passo 33 - Top puck holders: parts preparation	116
Passo 34 - Assembling the puck holder top	117
Passo 35 - Rimozione dei rivetti in nylon superiori - sinistra	117
Passo 36 - Mounting the front puck holder top - left	118
Passo 37 - Securing the front puck holder top - left	119
Passo 38 - Mounting the rear puck holder top - left	120
Passo 39 - Securing the rear puck holder top - left	121
Passo 40 - Removing the screws - right	121
Passo 41 - Mounting the bottom puck holders - right	122
Passo 42 - Securing the front Puck-holder bottom - right I.	123
Passo 43 - Securing the front Puck-holder bottom - right II.	123
Passo 44 - Securing the rear Puck-holder bottom - right I.	124
Passo 45 - Securing the rear Puck-holder bottom - right II.	124
Passo 46 - Come inclinare la stampante	125
Passo 47 - Finishing the rear puck holder bottom - left I.	126


Passo 48 - Finishing the rear puck holder bottom - left II.	126
Passo 49 - Finishing the front puck holder bottom - left I.	127
Passo 50 - Finishing the front puck holder bottom - left II.	127
Passo 51 - Finishing the rear puck holder bottom - right I.	128
Passo 52 - Finishing the rear puck holder bottom - right II.	128
Passo 53 - Finishing the front puck holder bottom - right I.	129
Passo 54 - Finishing the front puck holder bottom - right II.	129
Passo 55 - Mounting the front puck holder top - right	130
Passo 56 - Securing the front puck holder top - right	131
Passo 57 - Mounting the rear puck holder top - right	131
Passo 58 - Securing the rear puck holder top - right	132
Passo 59 - Dock fan: parts preparation	132
Passo 60 - Assembling the dock fan	133
Passo 61 - Attaching the Dock fan splitter board	133
Passo 62 - Attaching the dock fan	134
Passo 63 - Securing the dock fan	134
Passo 64 - È l'ora delle Haribo!	135
Passo 65 - Tooldock: preparazione dei componenti	135
Passo 66 - Assembling the tool holder	136
Passo 67 - Installing the tool holders	136
Passo 68 - Nozzle seal holder: parts preparation	137
Passo 69 - Assembling the nozzle seal	137
Passo 70 - Assemblaggio del supporto Nozzle-seal-holder	138
Passo 71 - Installing the nozzle parking plates	138
Passo 72 - Ventilation lever: parts preparation	139
Passo 73 - Assembling the ventilation lever	139
Passo 74 - Top cover: parts preparation I.	140
Passo 75 - Top cover: parts preparation II.	140
Passo 76 - Attaching the hinge covers	141
Passo 77 - Montaggio della griglia	141
Passo 78 - Attaching the left cover lock	142
Passo 79 - Attaching the right cover lock	142
Passo 80 - Top cover back: parts preparation	143
Passo 81 - Attaching the top cover back	143
Passo 82 - Attaching the hinge base - left	144
Passo 83 - Attaching the hinge base - right	144
Passo 84 - Attaching the top cover I.	145
Passo 85 - Attaching the top cover II.	145
Passo 86 - INDX Nozzle tool: parts preparation	146
Passo 87 - Come fissare il dock per gli strumenti	146
Passo 88 - Fissare il tooldock	147
Passo 89 - Attaching the LED panel	147
Passo 90 - Optional: Installing the Buddy3D Camera	148
Passo 91 - Connecting the INDX Nozzle tools (positions 1-4)	148
Passo 92 - Docking the tools (positions 1-4)	149
Passo 93 - Connecting the INDX Nozzle tools (positions 5-8)	149
Passo 94 - Docking the tools (positions 5-8)	150
Passo 95 - Controllo dei tubi	150
Passo 96 - Offset sensor cover: parts preparation	151
Passo 97 - Covering the offset sensor	151
Passo 98 - Door panel: parts preparation	152
Passo 99 - Mounting the door panel	152
Passo 100 - Applicare l'adesivo: preparazione dei componenti	153
Passo 101 - Come applicare l'adesivo di aggiornamento	153
Passo 102 - Come attaccare l'adesivo SN	154

Passo 103 - È l'ora delle Haribo!	154
Passo 104 - Questo è tutto	155
6. Controllo finale	156
Passo 1 - Montaggio del porta bobina: preparazione dei componenti	157
Passo 2 - Bloccaggio dei porta bobina	157
Passo 3 - Porta bobina telescopico	158
Passo 4 - Fissare la piastra di stampa	159
Passo 5 - Aggiornamento Firmware	159
Passo 6 - Accendere la stampante	160
Passo 7 - Impostazione della stampante: Introduzione	160
Passo 8 - Configurazione della stampante: Configurazione della rete	161
Passo 9 - Configurazione guidata: Introduzione	161
Passo 10 - Wizard: Calibrazione del sensore dello sportello	162
Passo 11 - Wizard: Tensionamento della cinghia	162
Passo 12 - Wizard: Calibrazione del dock I.	163
Passo 13 - Wizard: Calibrazione del dock II.	163
Passo 14 - Wizard: Calibrazione del dock III.	164
Passo 15 - Configurazione guidata - Test della cella di carico	165
Passo 16 - Wizard: Test della ventola	165
Passo 17 - Wizard: Calibrazione degli offset degli strumenti	166
Passo 18 - Wizard: Calibrazione del pulitore degli ugelli	166
Passo 19 - Wizard: Calibrazione del Pulitore ugello sull'asse Z/X	167
Passo 20 - Wizard: Calibrazione del Pulitore ugello sull'asse Y	168
Passo 21 - Wizard: Calibrazione dei sensori di filamento	169
Passo 22 - Configurazione guidata completata	169
Passo 23 - È l'ora delle Haribo!	170
Passo 24 - Nozioni base Prusa	170
Passo 25 - Dacci il tuo feedback	171
Passo 26 - Unisciti a Printables!	171

1. Introduzione




PASSO 1 How to navigate through the manual

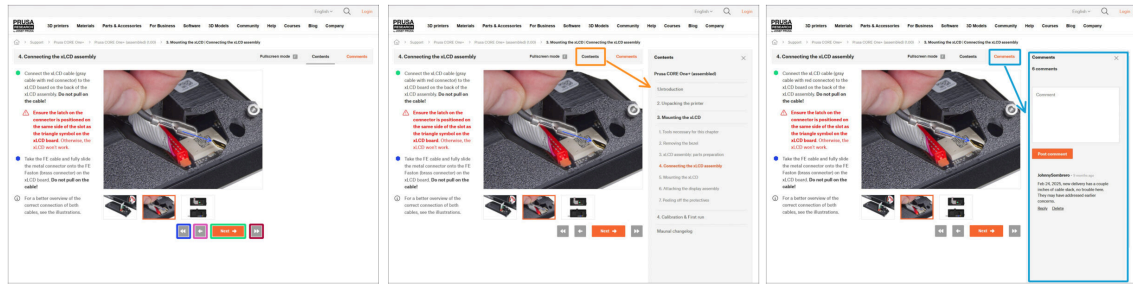

- Usa i pulsanti grafici di navigazione nell'angolo in basso a destra o i tasti freccia della tastiera:
- **Play backward button / Up arrow key** - Moves to the previous step.
- **Left arrow button / Left arrow key** - Moves to the previous image, or to the previous step if it's the first image in the step.
- **Next button / Right arrow key** - Moves to the next image, or to the next step if it's the last image in the step.
- **Play forward (Next) button / Down arrow key** - Moves to the next step.
- Click on **Contents** to expand the full list of steps in this guide. This allows you to jump to any step regardless of the sequence.
- Click on **Comments** to open the discussion for a specific step and leave your feedback.

PASSO 2 View high resolution images

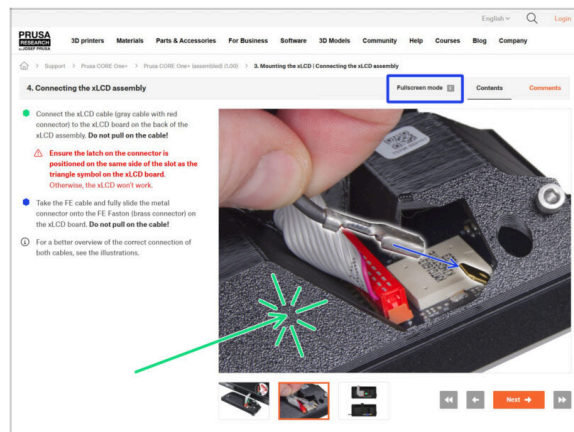

- Quando sfogli la guida su help.prusa3d.com, per maggiore chiarezza puoi vedere le immagini originali in alta definizione.
- Just click on the image to open it in high resolution for a detailed view.
- Click on **Fullscreen mode** or press the F key to maximize your screen space and focus entirely on the instructions.

PASSO 3 Prima di iniziare



- ❶ Se hai intenzione di installare l'aggiornamento **Prusa CORE One+ Gen 2** insieme alla conversione Prusa INDX, segui le istruzioni che trovi qui: **Conversione di PRUSA INDX Core One alla Gen 2**



The **INDX Conversion kit is compatible with the Prusa CORE One and CORE One+**. This guide uses the CORE One+; some disassembly steps may vary between models.



The required steps depend on your printer's current state:

- **Se la tua CORE One+ è nuova di zecca** e non è ancora stata disimballata, segui prima la **Guida al disimballaggio e alla prima configurazione della CORE One+** prima di installare la conversione INDX.
- **If you already use the CORE One+** and purchased only the INDX Conversion kit (Founders Edition) you can continue with this guide.




Do not discard any removed parts until instructed. Some parts will be reused later in the upgrade.



Questa guida è valida sia per il kit di conversione **PRUSA Core One/+ INDX a 4 strumenti** che per quello a 8 strumenti.

- Alcune foto potrebbero mostrare la versione a 8 strumenti. Questo non influisce sul processo di conversione per la versione a 4 strumenti.

PASSO 4 All the required tools are included

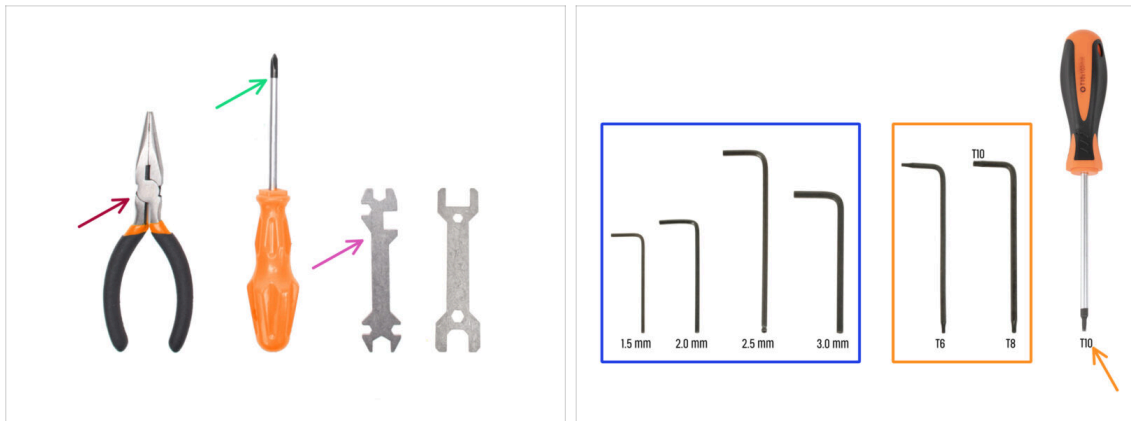

Tools required for this upgrade:




Use the tools originally included with your CORE One+ / CORE One printer.

-  Pinza a becchi lunghi (1x)
-  Philips (PH2) screwdriver (1x)
-  Chiave universale (1x)
-  Set di chiavi a brugola
-  Set di chiavi Torx

 The **T10 screwdriver** is included only with kit versions and may not be available with fully assembled printers. It is not required, but may be more convenient in some steps.

-  We also recommend printing out the community-made **Snap-rivet-remover**

PASSO 5 Guida alle etichette

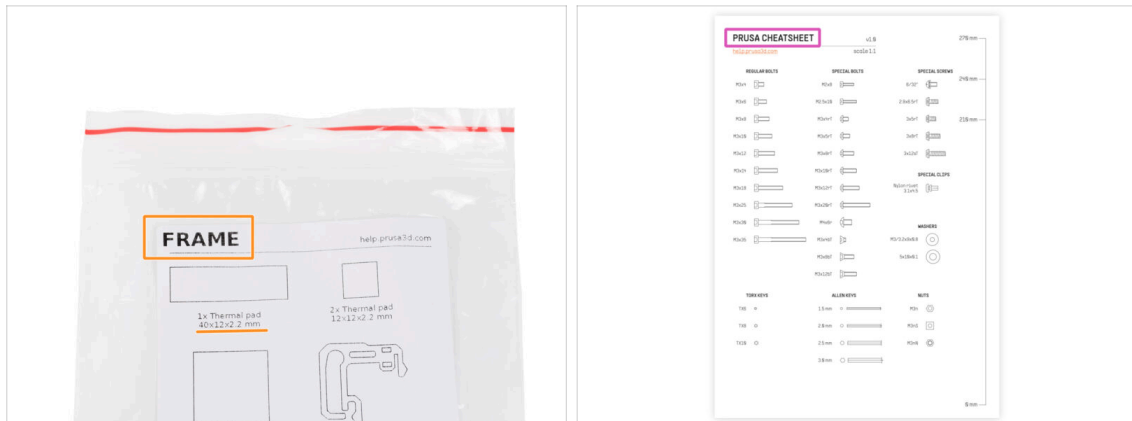

- All the boxes and bags including parts for the build are labeled.
- The labels include the list of contents and part count.
- You can download a **Cheatsheet** with 1:1 fastener drawings from our site prusa.io/C1-INDX-cheatsheet. Print it at 100 % on A4 paper, don't rescale it, otherwise, it won't work.
- ❗ For PRUSA veterans: Fasteners are divided into individual bags according to its type. Not into packages for individual chapters, as it was with previous printers.
- 📌 The instructions will specify the package for each part, with the exception of fasteners, which are always located in the Fasteners package.

PASSO 6 Busta di componenti di scorta



- Spare fasteners are included in each bag of fasteners. The amount of spare is always included in the total number shown on the bag.
- Similarly, some parts may include one extra piece in the same bag.

PASSO 7 Printed parts - versioning



- ◆ Most of the 3D printed parts are marked with their version.
 - ◆ **E, F and Gx series** (e.g. E1) - those parts are printed on Prusa Research farm and are distributed with the kit.
 - ◆ **R, S and Tx series** (e.g. R1) - those parts are available for download at <https://www.printables.com/model/1758233-core-one-indx-printed-parts>. They are identical to the factory ones.
 - ◆ The numbers indicate minor revisions that usually involve small design tweaks. A different label in the manual (e.g., a different version shown in photos) does not affect the assembly – all versions are fully compatible.
- ① if you have issues while assembling the printer with a specific printed part, find the label and share it with our support team.

PASSO 8 We are here for you!

The screenshot shows the Prusa 3D printer manual interface for step 4: Connecting the xLCD assembly. The interface includes a list of instructions, a video player, and a comments section. A red arrow points from the 'Chat now' button in the bottom right corner to the 'SUBMIT' button in the comments section.

4. Connecting the xLCD assembly

- Connect the xLCD cable (gray cable with red connector) to the xLCD board on the back of the xLCD assembly. Do not pull on the cable!
- Ensure the latch on the connector is positioned on the same side of the slot as the triangle symbol on the xLCD board. Otherwise, the xLCD won't work.
- Take the FE cable and fully slide the metal connector into the FE Fasten (brass connector) on the xLCD board. Do not pull on the cable.
- For a better overview of the correct connection of both cables, see the illustrations.

Comments

5 comments

Oh look at the detail!

Post comment

JohnyBlanders · 7 days ago

Feb 24, 2025, new delivery had a couple inches of cable slack, no trouble here. They may have addressed earlier concerns.

Reply · Delete


Powered by TRY

SUBMIT

Chat now


- Lost in the instructions, missing screw or cracked printed part? **Let us know!**
- You can contact us using the following channels:
 - Using comments under each step.
 - Using our 24/7 live chat here at help.prusa3d.com
 - Writing an email to info@prusa3d.com

PASSO 9 Pro tip: inserting the nuts

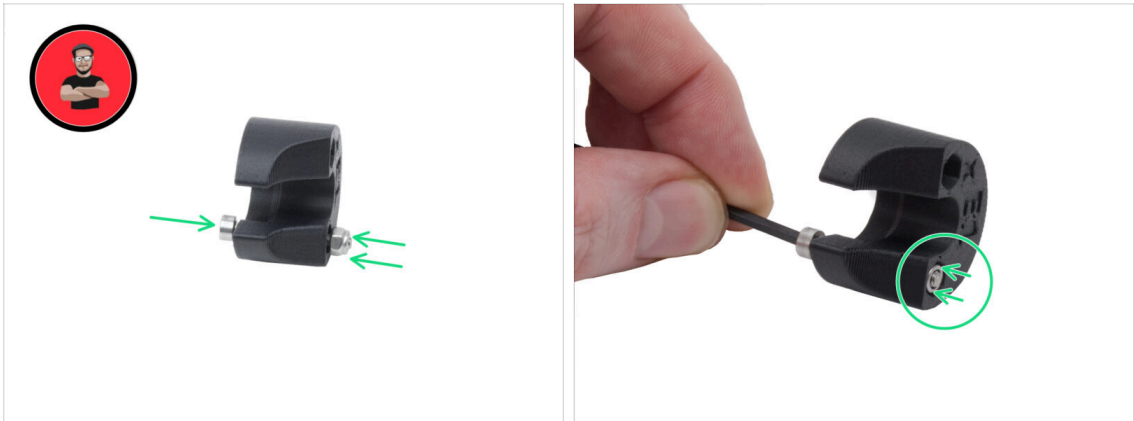

- Le parti stampate in 3D sono molto precise, tuttavia esiste una tolleranza, e lo stesso vale per la dimensione del dado.
- Therefore it might happen, that the nut won't fit easily in or might be falling out. Let's see, how to fix it:
 - **Nut won't fit in:** use a screw with a thread along its entire length (typically: M3x10, M3x18) and screw it from the opposite side of the opening. While tightening the screw, the nut will be pulled in. Remove the screw afterwards.
 - **Nut keeps falling out:** Use a piece of tape to fix the nut temporarily in place, as soon as you insert the screw in, you can remove the tape. *Using glue isn't recommended as it can partly reach into the thread and you won't be able to tighten the screw properly.*
- Every time we recommend using the "screw pulling technique", you will be reminded with Joe's avatar ;)
- ① Parts in the pictures are used as an example.

PASSO 10 Protezione dell'Elettronica (ESD)

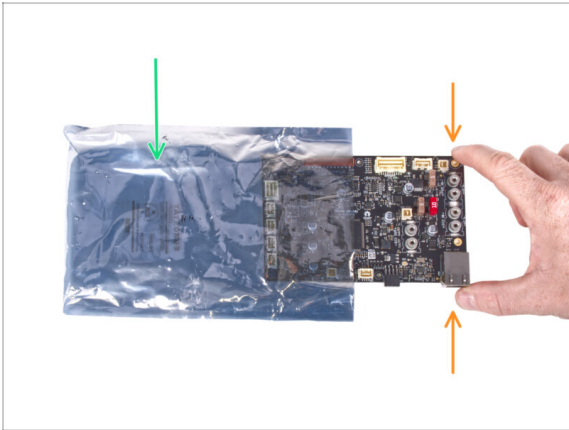

⚠ ATTENZIONE: Accertati di **proteggere l'elettronica dalle scariche elettrostatiche (ESD)**. Spacchetta sempre l'elettronica solo non appena ti serve!

● Here are some **tips to prevent damage to the electronics**:

- **Keep the electronics inside the ESD bag** right until you are asked to install them.
- **Always touch the sides of the board only** while handling it. Avoid touching the components on the surface.
- **Before you touch the electronics** use any conductive (metal) structure nearby to neutralize the possible static charge from your hands.
- Be extra cautious **in rooms with carpets**, which are often a source of electrostatic energy.
- Clothes made of wool or certain synthetic fabrics can easily gather static electricity too. It is safer to wear cotton clothing for the assembly.

PASSO 11 Aggiornamento opzionale a CORE One+ Gen 2



- ① Il **kit di conversione Prusa INDX per CORE One+** include i componenti necessari per l'aggiornamento opzionale **CORE One+ Gen 2**.
- **L'aggiornamento Gen 2 non è obbligatorio** per l'aggiornamento Prusa INDX.
- Se vuoi installare i componenti della Gen 2, segui l'articolo di approfondimento qui sotto. Ti spiega quando passare da questa guida alla guida all'aggiornamento del CORE One+ Gen 2.
- **Conversione di PRUSA INDX Core one alla Gen 2**
- Ti consigliamo di tenere aperto l'articolo di approfondimento per tutta la durata del montaggio.

PASSO 12 Rimozione della MMU



Se la tua stampante è dotata di MMU3, è **necessario rimuoverla prima di continuare**.

- ① This step applies to both the MMU3 **Lite** (left) and the MMU3 **Enclosed** (right).



Turn off the printer and disconnect it from the power.


- To remove the MMU3, follow the MMU3 assembly guide in reverse order. The guide is available on the MMU3 product page prusa.io/mmu3.
- Once the MMU3 has been removed, return to this guide and continue with the next step.

PASSO 13 Datti una ricompensa



- Trasformare la tua CORE One+ in INDX CORE One+ è un'esperienza davvero gratificante. Dopo aver completato ogni capitolo, concediti una piccola ricompensa. **Nella confezione c'è infatti una bustina di orsetti Haribo proprio per questo!**
- Do not eat all the bears before you start or at once! Not following instructions will have serious consequences. We are currently assembling the Prusa Haribo tactical squad for this matter.
- After years of scientific research, we came up with a solution. **Throughout the guide, we will tell you exactly how many bears to consume.**
- Eating an incorrect amount than prescribed in the manual might lead to a sudden boost of energy. Please consult a professional in the closest candy store.
- ⚠ **Cut open** the bag of the Prusa Haribo carefully so the gummy bears don't spill onto the table. This step is very important!
- ⚠ **Hide the Haribo for now!** From our experience, an unattended bag with sweets might suddenly disappear. This phenomenon is confirmed by multiple cases all around the world.

PASSO 14 Prepara la scrivania

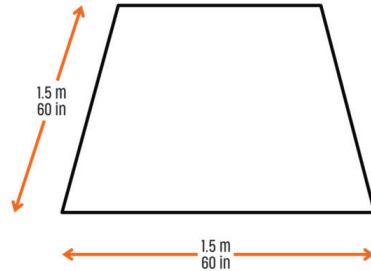


- **Clear your workspace.** Make sure you have enough room. A nice clear flat workbench will get you the results you are aiming for.
- **Let there be light!** Make sure you are in a well-lit environment. Another lamp or even an extra flashlight will probably come in handy.
- Prepare something to contain the plastic bags and the removed packing materials so you can recycle them afterwards. Make sure there are no important parts being discarded.
- A minimum working space of 1.5×1.5 meters (60×60 inches) is recommended.
- ⚠ **We highly recommend placing a soft pad on your workbench.** Some sheet metal parts have sharp edges that could scratch the surface.
- ① You can use a piece of cardboard as a protective pad.
- Let's start with chapter 2. **Printer preparation & dissassembly.**

2. Preparazione e smontaggio della stampante



PASSO 1 Tools necessary for this chapter

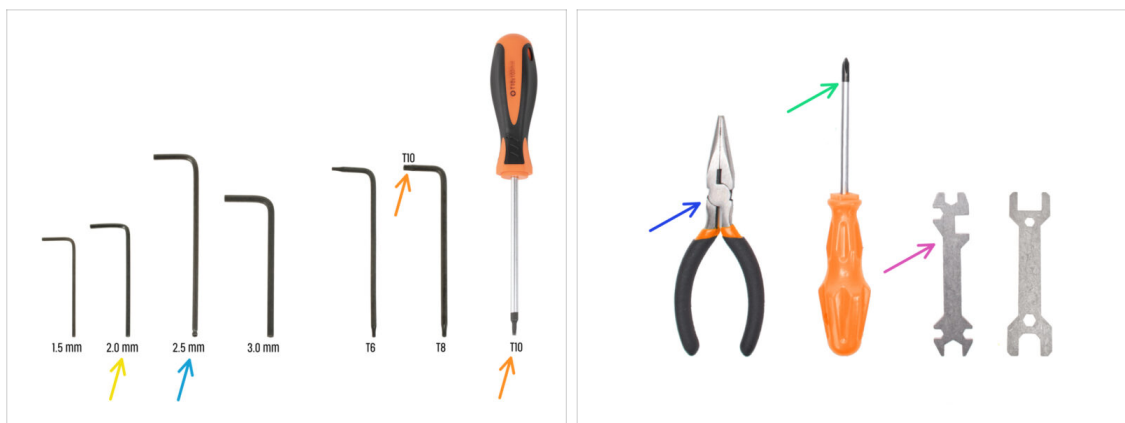

For this chapter, please prepare:

- Chiave a brugola da 2.0mm
- Chiave a brugola da 2.5mm
- T10 key / screwdriver
- Needle-nose pliers or flush cutters for cutting zip ties
- Cacciavite a stella PH2
- Chiave universale

PASSO 2 Important: Update the firmware



Complete this step before disassembling the printer.



Before you begin, make sure your printer is running **firmware version 6.5.3** or newer.

- On the printer display, go to **Info** -> **Version Info** -> **Firmware Version** to check your current version.
 - If your printer is already running **firmware 6.5.3 or newer**, continue to the next step.
- If your **firmware is older**, update it before starting the upgrade.
 - Segui la nostra guida dedicata all'aggiornamento del firmware per istruzioni dettagliate **Come aggiornare il firmware**.

- Once the firmware update is complete, return to this guide and continue.

PASSO 3 Spostare l'asse Z



-  Before you begin, move the heatbed to an accessible position.
-  During this step, **keep the printer door closed** and do not reach inside.
-  In the printer menu, go to **Control -> Auto Home**.
-  After Auto Home, move the heatbed down via **Control -> Move Axis -> Move Z** until the highlighted screws and the underside of the heatbed are accessible (minimum **200 mm**).
-  This ensures both areas will be comfortably accessible during the procedure, as they will need to be handled later in the manual.

PASSO 4 Scaricare il filamento



-  Make sure no filament is loaded in the printer.
-  Unload the filament. Visit the menu **Filament** and select **Unload filament**.
-  Unload the filament from the printer.
-  Remove the filament spool from the printer.

PASSO 5 Powering off & protecting the printer



- ⚠ Before you begin, make sure the **printer has cooled down** to ambient temperature.
- 🟢 Turn the printer off using the switch on the back.
- 🟡 Disconnect the printer from power.
- 🟠 Remove the steel sheet.
- 🟣 Place an empty cardboard box (e.g., a Prusament box) on the heatbed to protect it in case any parts fall.
- ⬛ Remove the **USB drive** to prevent damage while handling the printer.

PASSO 6 Disconnect the Buddy3D camera



- ⬛ If your printer is equipped with a Buddy3D camera, remove it before starting this procedure.
- 📘 The Buddy3D camera is magnetically attached.
 - 🔵 Scollega il cavo.
 - 🟠 Rimuovi la fotocamera.
- ⬛ Place the camera in a safe location during the procedure. We recommend covering the lens with a protective cap that was included with the camera.

PASSO 7 Do not discard removed parts



⚠ Do not discard any printer parts during this procedure.

● **Some of the removed printer parts will be reused later** and are listed at the end of this chapter in the Parts recap steps.

● Regarding the fasteners, **we recommend keeping all removed screws.**

ⓘ Some of the removed screws will be reused during the conversion. We recommend labeling these as you set them aside.

PASSO 8 Removing the top nylon rivets



● There are four nylon rivets on the top panel that secure it. Remove these nylon rivets as follows:

● Using needle-nose pliers, carefully grasp the rivet head with the tip of the pliers and pull it out.

ⓘ You can also use the previously mentioned **Core-one-snap-rivet-remover**

⚠ Be careful not to damage the top panel.

● If the lower part of a rivet remains in the panel, grasp it with pliers and remove it as well.

PASSO 9 Removing the top panel




- Remove the top panel from the printer.
- i** You will not need the top panel for this upgrade.

PASSO 10 Removing the top profile



- Using the 2.5mm Allen key, remove the two M3x4 screws from the top front panel.
- From the front, use a T10 key to remove the two M3x4rT screws.
- Carefully remove the top profile from the printer.

PASSO 11 Rimuovere lo sportello

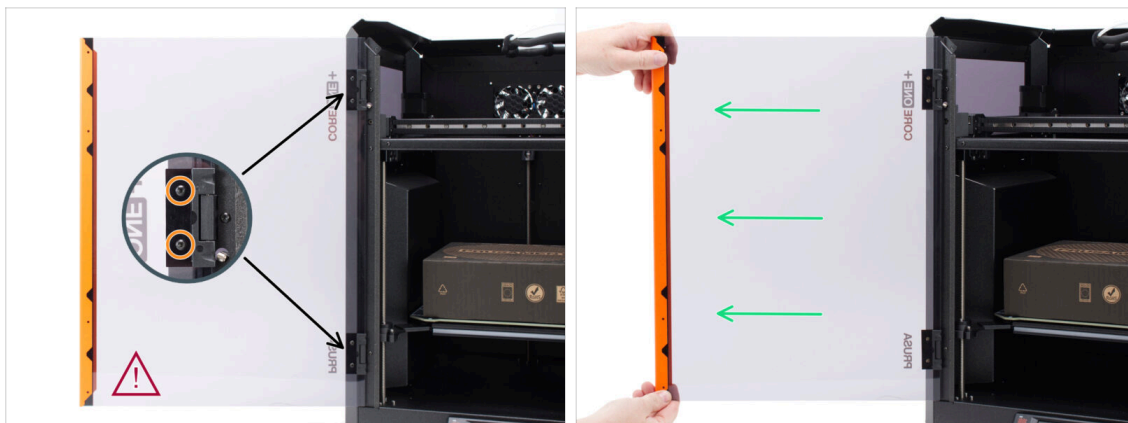

- ❗ We highly recommend that you remove the door. This will make moving and turning the printer a lot easier and safer during the INDX conversion.
- 🔧 Loosen and remove two M3x5rT screws securing the door panel in both hinges.
- ⚠️ It is essential to **hold the door panel securely** while loosening the screws to prevent it from falling.
- 🔧 Start removing the screws from the lowest.
- 🟢 Carefully slide the door panel out of the hinges.
- ⬛ Place the door panel and the four screws in a **clean and safe area** to avoid any damage.
- 🔧 Ensure that the shaft that is inside the hinge does not fall out. If the shaft falls out, insert it back in, or set it aside along with the hinge part. We will mount these back on at the end of the assembly.

PASSO 12 Accesso all'elettronica




- 🟡 On the inside of the printer, remove the two M3x4rT screws holding the back cover.
- 🔴 On the back of the printer, slide the center cover downwards.
- 🔧 If it's difficult to move, use a screwdriver as a lever through the opening to assist.
- 🟡 Ensure the four hooks on top of the cover have disengaged from the metal chassis.
- 🟢 Remove the cover from the printer.

PASSO 13 Accessing the buddy board




- ✦ Unscrew all six M3x4rT screws securing the electronics sheet (xBuddy box cover).
- ✦ Slide the xBuddy box cover out of the electronics box and remove it from the printer.

PASSO 14 Unplugging the cable I.

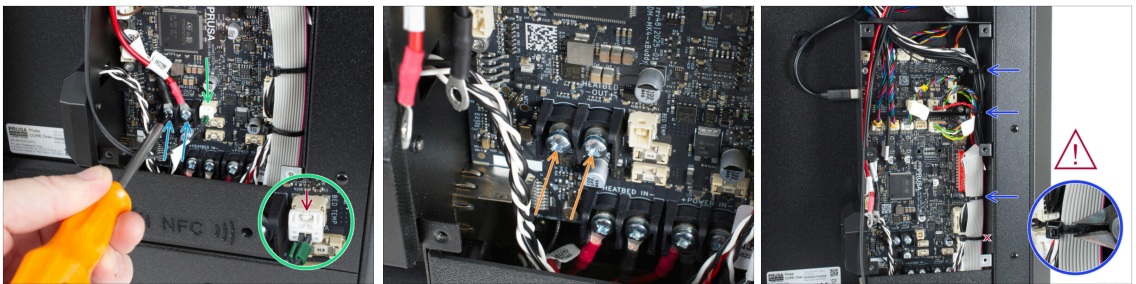

- ✦ Using a PH2 screwdriver, unscrew the two 6 32 screws and disconnect the heatbed power cables from the xBuddy.-32 screws and disconnect the heatbed power cables from the xBuddy.
- ✦ Pro tip: After disconnecting the cables, loosely thread both screws back in by at least three turns so they are not lost.
- ✦ Disconnect the heatbed thermistor cable from the xBuddy board.
 - ⚠ The cable connector has a safety latch. It is necessary to **press the latch before disconnecting** the cable.
- ✦ Carefully cut the zip ties along the right side of the xBuddy box. Do not cut the lower cable tie.
 - ⚠ **Avoid cutting any cables.**
 - ℹ Cable ties can be cut using flush cutters, if available.


PASSO 15 Unplugging the cables II.

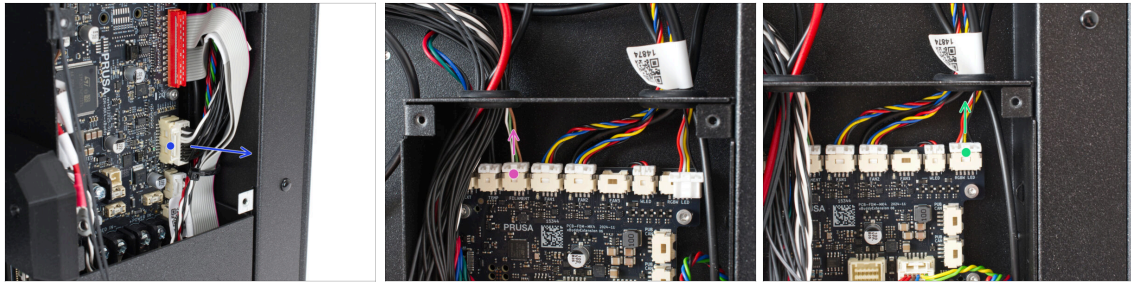

⚠ The cable connector has a safety latch. It is necessary to **press the latch before disconnecting the cable.**

- 🔵 Disconnect the Nextruder main cable from the xBuddy board.
- 🟡 Disconnect the side filament sensor from the xBuddy extension board.
- 🟢 Disconnect the RGB LED cable from the xBuddy extension board.

PASSO 16 Rimuovere i cavi

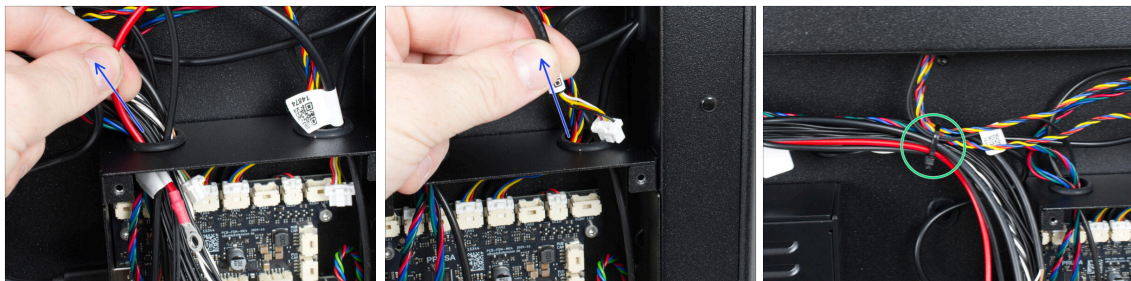


- 🔵 Route the disconnected cables out of the xBuddy box through the corresponding openings at the top.
- ⚠ **Do not pull on the cables if you feel any resistance.**
- 📄 The Nextruder main cable may pass through either the right or left opening, depending on when the printer was assembled.
- ⬛ Be careful not to remove the grommets - but don't worry, they can be easily reinserted.
- 🟢 Cut the zip ties securing the cable harness.
- ⚠ **Avoid cutting the cables.**

PASSO 17 Pushing the cables in



- Slide the upper grommet slightly out of the opening to prevent it from falling into the printer while routing the cables.
 - Route the Nextruder main cable through the upper oval opening completely into the printer.
 - Reinsert the grommet into the oval opening.
 - Route the side filament sensor cable through the lower oval opening into the printer.
- i** Alcune delle nostre stampanti non sono dotate del gommino sull'apertura inferiore. Ciò non influisce sul processo.

PASSO 18 Guiding the heatbed cables in

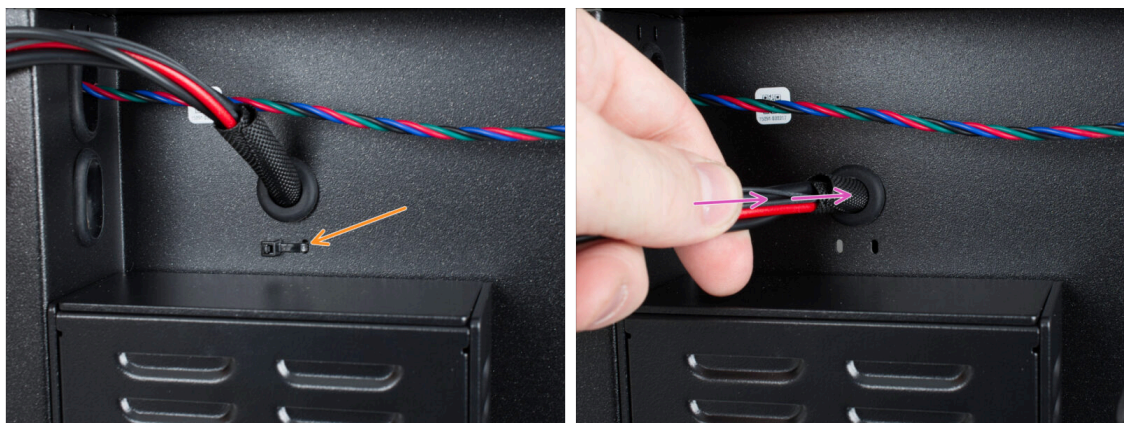

- Cut and remove the zip tie securing the heatbed cable bundle.
- Guide the heatbed cable bundle into the printer.
- Leave all loosened cables freely inside the printer. You will return to them later.

PASSO 19 Releasing the main cable





- Turn the printer so that its left side faces you (the side without the spool holder).
- Release the five cable straps.
- Focus on the area behind the Y-axis motor.
- Using a 2.5 mm Allen key, loosen the M3 screw securing the cable clip.
- No need to remove the screws from the part. Let the Nextruder main cable hang freely together with the cable clip.

PASSO 20 Removing the LoveBoard cover



- Let's move onto the left side of the Nextruder.
- Using the 2.5mm Allen key, remove the M3x10 screw holding the side cover.
- Togli la copertura.
- Sblocca la leva Idler-swivel.
- Open the idler assembly fully.



PASSO 21 Disconnecting the Nextruder cables - left

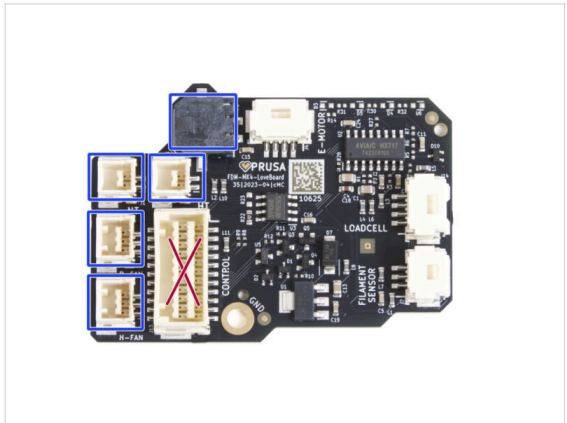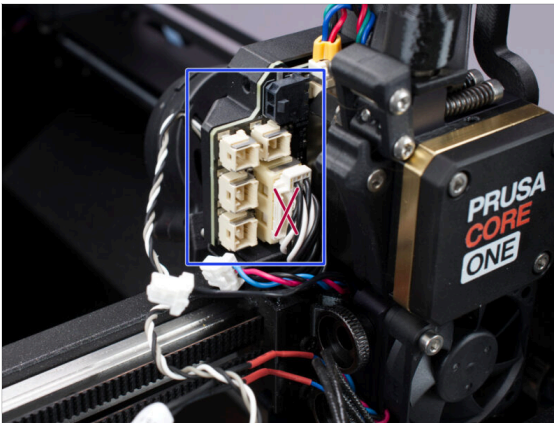

⚠ Each connector has a safety latch. **It is necessary to press the latch before disconnecting.** Otherwise, the connector may get damaged.

- 🔵 Disconnect all cables on the left side of the LoveBoard.
- 🔴 Do not disconnect the Nextruder main cable connector.


PASSO 22 Disconnecting the Nextruder cables - top

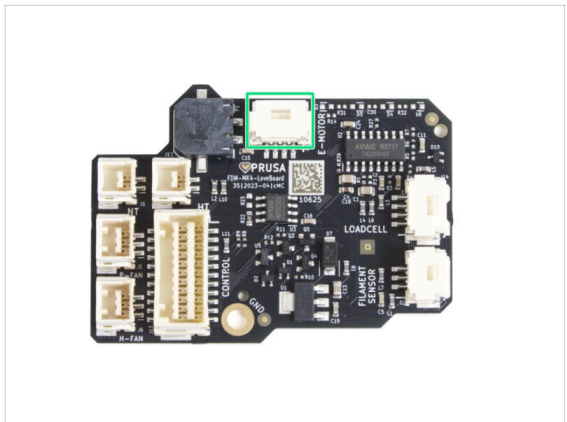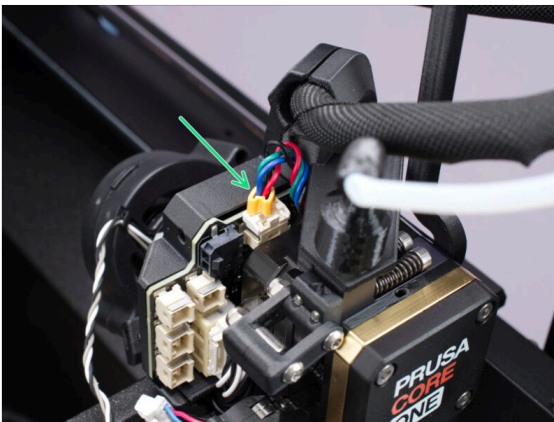

⚠ Each connector has a safety latch. It is necessary to **press the latch before disconnecting.** Otherwise, the connector may get damaged.


- 🟢 Disconnect the extruder motor cable.

PASSO 23 Disconnecting the Nextruder cables - right

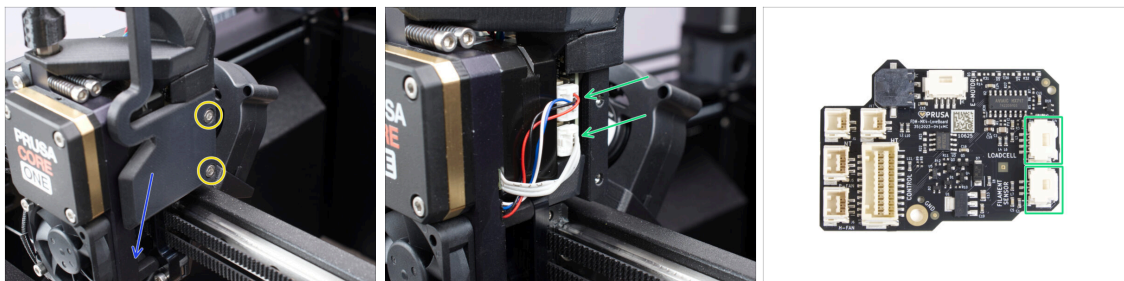


- ✦ Using the Allen key, remove two M3x6 screws securing the right cover on the Nextruder.
- ✦ Togli la copertura.
- ⚠ Each connector has a safety latch. It is necessary to **press the latch before disconnecting**. Otherwise, the connector may get damaged.
- ✦ Disconnect both cables from the right side of the LoveBoard.

PASSO 24 Disconnecting the PTFE tube

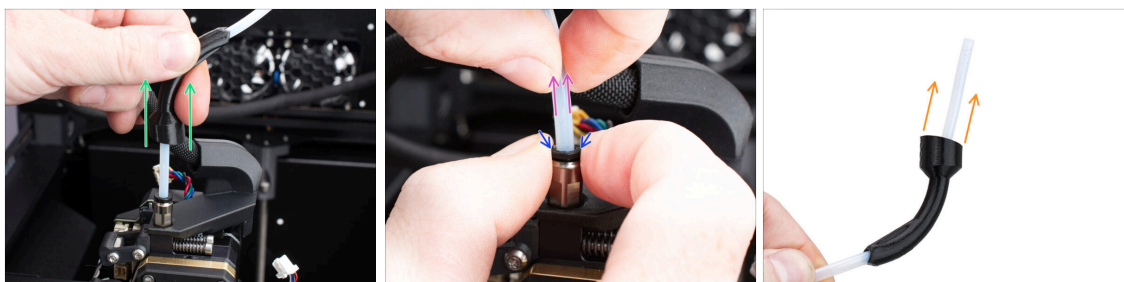


- ✦ Slide the bowden-bend over the fitting in the Nextruder.
- ✦ Press the black collet in the fitting down, preferably using two fingers.
- ✦ Pull the PTFE tube out of the fitting.
- ✦ Remove the bowden-bend from the PTFE tube.

PASSO 25 Removing the Nextruder fitting

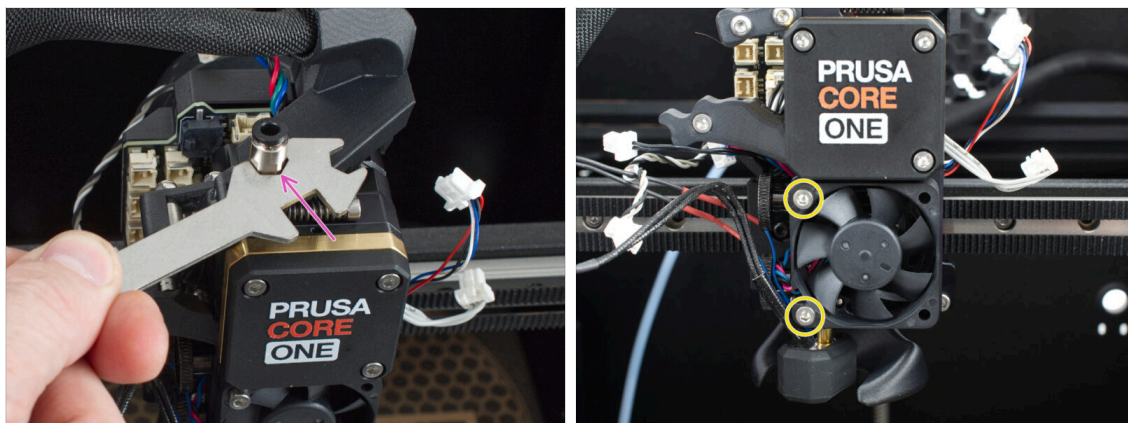


- ✎ Using the 8mm cutout on the Universal wrench, remove the M5-4 fitting.
- ✎ Using the Allen key, remove two M3x18 screws securing the heatsink fan.
- 🔗 After being released, the heatsink fan will likely hang on the cable. Leave it as it is for now.

PASSO 26 Rimozione del Nextruder

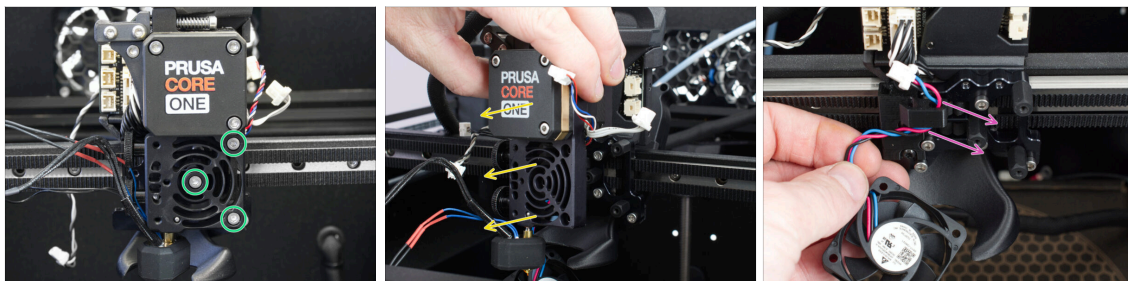

- ✎ Remove three M3x10 screws securing the Nextruder assembly to the X-axis.
- ⚠ **CAUTION:** While loosening the last screw, **hold the Nextruder to prevent it from falling** and damaging the printer.
- ✎ Remove the Nextruder assembly from the printer.
- ✎ Unhook the heatsink fan cable from the cable hook and remove the fan from the printer.

PASSO 27 Removing the print fan

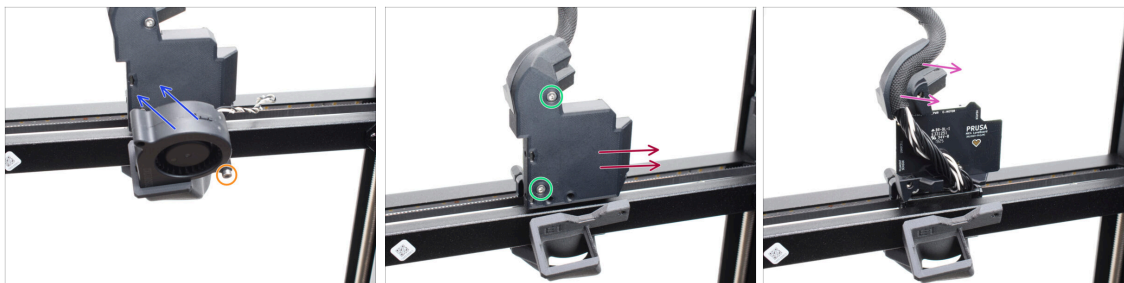


- Focus on the rear X-axis assembly.
- On the back of the print head, remove the M3x25 screw holding the print fan.
- Remove the print fan by lifting it up.
🔧 Set the print fan aside. It will be needed later for the new toolhead.
- Remove the two M3x10 screws holding the cover on the back of the print head.
- Togli la copertura.
- Dislodge the extruder main cable from the dedicated groove.

PASSO 28 Rimuovere la LoveBoard




- Release and remove the M3x8rT screw securing the LoveBoard.
- Remove the LoveBoard with the Nextruder main cable completely from the printer.
- Loosen two M3x10 screws in the Loveboard-holder.
- Remove the Loveboard-holder from the printer.

PASSO 29 Removing the fan shroud

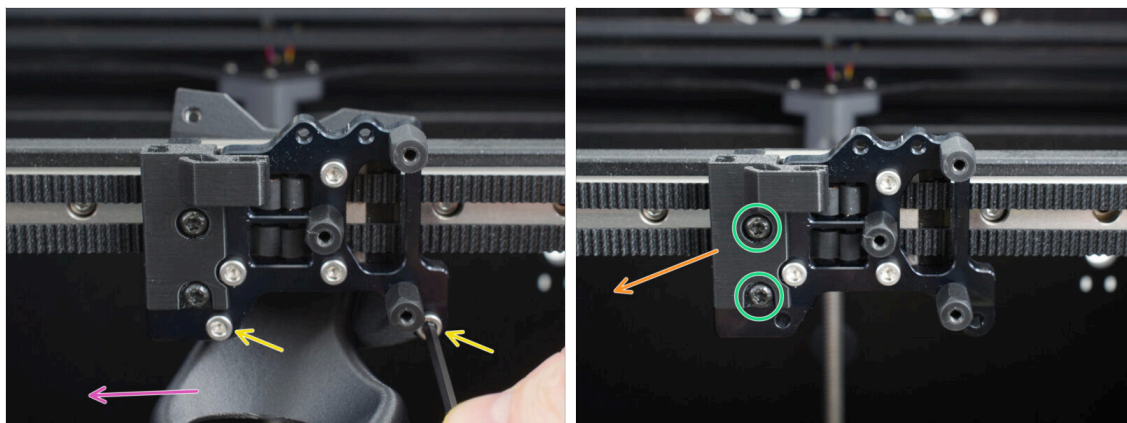

- ✚ Release and remove two M3x10 screws securing the Fan-shroud to the Nextruder holder.
- ✚ Remove the Fan-shroud from the printer.
- ✚ Using the T10 key, remove two M3x4rT screws mounting the Cable-clip.
- ✚ Remove the Cable-clip from the printer.

PASSO 30 Removing the side handle

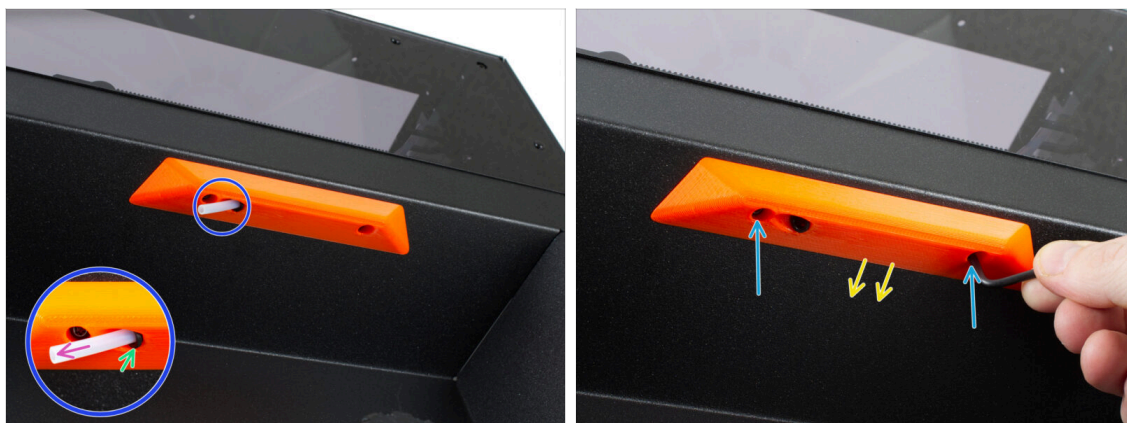

- ✚ Take a close look at the input PTFE tube in the handle on the right side panel.
- ✚ Push in the collet in the handle.
- ✚ Pull out the PTFE tube.
- ✚ Using the T10 screwdriver release two M3x8rT screws securing the handle and the filament sensor.
- ✚ Remove the handle from the printer.

PASSO 31 Removing the side filament sensor



- Shift your focus back inside the printer.
- Carefully cut and remove the zip tie near the PTFE tube.
 - This releases the side filament sensor cable from the underside of the CoreXY frame.
- Grasp the released side filament sensor on the inner side of the right side panel and remove it from the printer.

PASSO 32 Rimozione del porta bobina



- Using the T10 screwdriver, remove the four M3x8rT screws inside the printer securing the spoolholder.
 - ⚠ Be careful **not to scratch the heatbed.**
- While loosening the last screw, hold the spool holder in your hand and remove it from the printer.
 - ⚠ Place the protective cardboard box **back onto the heatbed.**

PASSO 33 Riepilogo parti I.



 **Keep the following parts for the next steps.**

 Any parts not listed can be set aside.

 Sheet metal back cover (1x)

 xBuddy box cover (1x)

 Ventola di stampa (1x)

 Piastra di stampa (1x)

 Fascetta (2x)

 From the fasteners, we recommend **keeping all removed screws.**

PASSO 34 Riepilogo parti II.



 Door panel assembly (1x)

PASSO 35 È l'ora delle Haribo!



⚠ Check the number in the circle carefully. It shows exactly how many gummy bears to eat in this step. **Do not eat more.**

- Eat six gummy bears.

PASSO 36 Fase finale




- The printer is now ready for the INDX upgrade.
- Proceed to the next chapter: **3. Z-axis upgrade.**

3. Aggiornamento dell'asse Z



PASSO 1 Tools necessary for this chapter

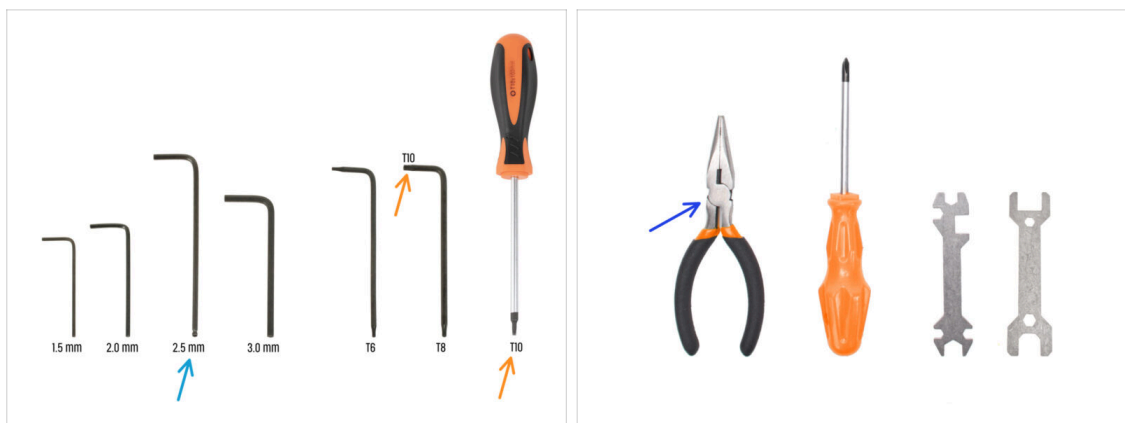

● For this chapter, please prepare:

- 2.5 mm Allen key
- T10 key / screwdriver
- Needle-nose pliers or flush cutters for cutting zip ties

PASSO 2 Optional: Installing the Buddy3D Camera USB-C cable



① This step applies only if you **purchased the Buddy3D Camera** and plan to install it.

● Now is the right time to install the USB-C cable included with the Buddy3D Camera.

● To install the cable, follow the dedicated **Buddy3D Camera for CORE One Installation** guide.




Do not connect or mount the camera itself at this stage. This will be done at the end of the assembly.

PASSO 3 Removing the heatbed cable cover




- Temporarily remove the protective cardboard box from the heatbed.
- Focus on the heatbed cable area at the rear left.
- Unscrew two M3x10 screws securing the CORE-One-bed-cable-cover-top.
- Rimuovi la copertura CORE-One-bed-cable-cover-top.
- ❗ You will no longer need the CORE-One-bed-cable-cover-top. We recommend removing it to avoid confusion with the new part.

PASSO 4 Sbloccare il piano riscaldato

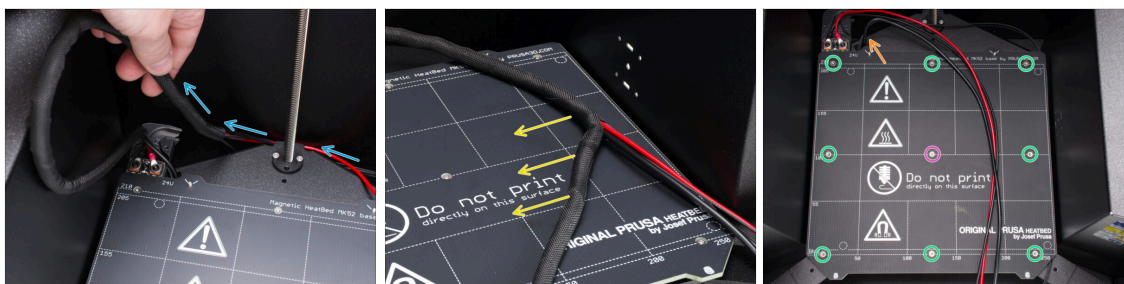

- Pull the heatbed cable bundle out from underneath the heatbed.
- ⚠ Be careful **not to snag the cables**. If you feel resistance, **stop pulling immediately**.
- Remove the textile sleeve from the entire length of the cable bundle.
- ❗ Set the sleeve aside, you will need this part again later.
- Ensure that the LED cable is removed from the CORE-One-bed-cable-cover-bottom before proceeding.
- Release and remove eight M3x4bT screws securing the heatbed.
- Release and remove the M3x12bT screw in the middle.

PASSO 5 Rimuovere il piano riscaldato

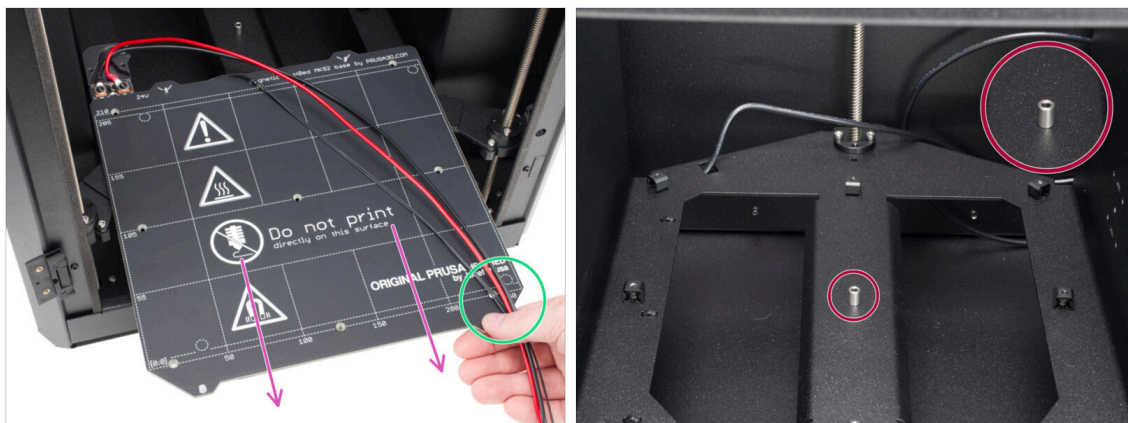

- ✿ Carefully remove the heatbed out of the printer.
 - ✿ Remove it together with the cables **leading from the heatbed**.
 - ✿ **Set the heatbed aside in a safe place**, it will be needed again later.
- ⚠ After removing the heatbed, a **spacer remains loose** on the Z-carriage. **Keep it in a safe place for later use.**

PASSO 6 Heatbed spacers: parts preparation



- ✿ **For the following steps, prepare:**
- ✿ INDX-C1-bed-spacer-rear (1x) *found in the Heatbed bag located in the INDX 4/8T box*
- ✿ INDX-C1-bed-spacer-front (2x) *found in the Heatbed bag located in the INDX 4/8T box*
- ✿ M3nN nut (2x) *found in the Fasteners 1/2 bag*
- ✿ M3x18 screw (4x) *found in the Fasteners 1/2 bag*

PASSO 7 Inserting the spacer - left




- Focus on the front left Z-axis.
- Remove the two M3x10 screws securing the Z-carriage to the Z-axis.
 - ⚠ Do not remove the screws from the trapezoidal nut.
- Gently lift the Z-carriage so that a gap of approximately 8 mm (0.3 inches) is created between it and the bed mount.
- Insert the Bed-spacer-front into the gap.
- Position the part so it fits around the bed mount, then align the holes.

PASSO 8 Securing the bed spacer - left



- ⓘ Make sure the two M3nN nuts inserted from below do not fall out of the bed mount.
- Secure the spacer with two M3x18 screws.
 - Tighten the inner screw first.
 - Then tighten the outer screw.

PASSO 9 Inserting the spacer - right

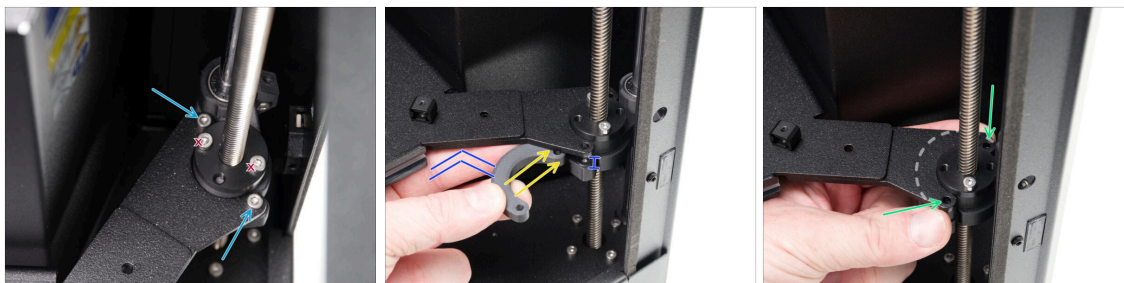

- Focus on the front right Z-axis.
- Remove the two M3x10 screws securing the Z-carriage to the Z-axis.
 - ⚠ Do not remove the screws from the trapezoidal nut.
- Gently lift the Z-carriage so that a gap of approximately 8 mm (0.3 inches) is created between it and the bed mount.
- Insert the Bed-spacer-front into the gap.
- Position the part so it fits around the bed mount, then align the holes.

PASSO 10 Securing the bed spacer - right



- ⓘ Note that there are two M3nN nuts inserted into the bed mount from below. Ensure that these do not fall out.
- Secure the spacer with two M3x18 screws.
 - Tighten the inner screw first.
 - Then tighten the outer screw.
- 📌 Se hai intenzione di installare l'aggiornamento **Prusa CORE One+ Gen 2** insieme alla conversione Prusa INDX, segui le istruzioni contenute in questo articolo: **Assemblaggio di Prusa INDX Core One con l'aggiornamento Gen 2.**

PASSO 11 Rimozione del distanziatore posteriore del piano




- Loosen two M3x18 screw securing the trapezoidal nut and the CORE-One-bed-spacer-rear (on the underside).
- While loosening the screws, hold the CORE-One-bed-spacer-rear in place and remove it once they are loose.
- 🔧 **Leave the screws in the trapezoidal nut.**
- ❗ Discard the CORE-One-bed-spacer-rear to avoid confusion with the new part. You will no longer need this part.

PASSO 12 Montaggio della parte INDX-bed-spacer-rear



- Insert two M3nN nuts into the Bed-spacer-rear and **push them in as far as possible.**
- Insert the nuts with the nylon insert (blue plastic ring) **facing up.**
- ❗ Pro tip: Use the screw-pulling technique.

PASSO 13 Montaggio del INDX-bed-spacer-rear

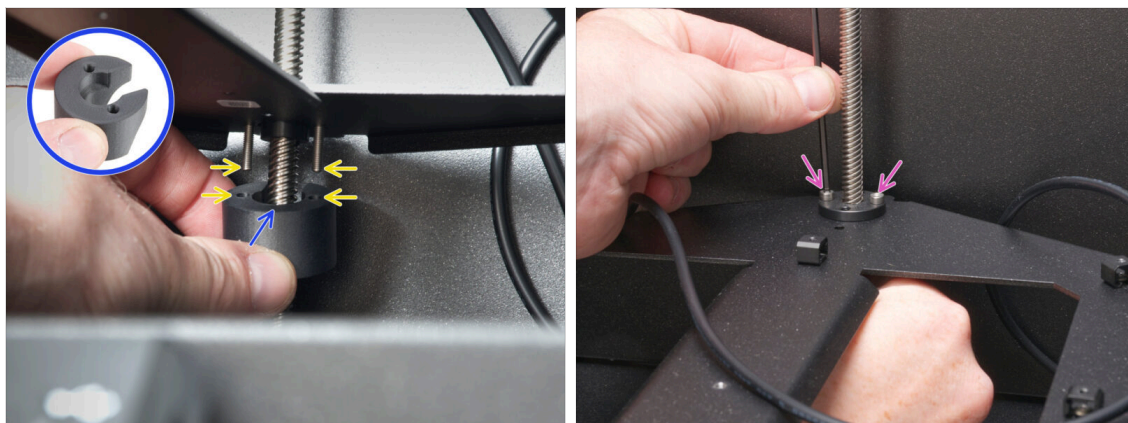

- Concentrati sulla parte inferiore posteriore del piano riscaldato, dove hai rimosso lo spessore Bed-spacer-rear originale.
- Hold the Bed-spacer-rear **in the same orientation as shown** and fit it **around** the rear Z-axis threaded rod.
- Align the holes in the bed spacer with the M3x18 screws that you kept in the trapezoidal nut.
- Secure the part by tightening the two M3x18 screws.

PASSO 14 Offset sensor: parts preparation




- **For following steps, prepare:**
- INDX-C1-offset-sensor-holder (1x) *found in the Heatbed bag*
- INDX offset sensor (1x) *found in the Filament Sensors box*
- Vite M3x8rT (1x) *si trova nella busta Fasteners 2/2*
- M3x10 screw (1x) *you removed earlier*
- Offset sensor cable (1x) *found in the Cables bag*
- Fascetta (4x)

PASSO 15 Mounting the INDX offset sensor




- i The printed parts shown may differ slightly from the parts included in your package.
- Mount the offset sensor onto the Offset-sensor-holder.
 - Align the screw holes with each other.
 - ⚠ **Make sure the PRUSA logo is facing up.**
 - Ensure that the offset sensor is correctly positioned.
 - Secure the offset sensor in place with the M3x8rT screw.
- Do not overtighten the screw** to avoid damaging the electronics.
- Lead the offset sensor cable between the Z-carriage and the right side panel of the printer.
- Take the end of the cable **without a label**.

PASSO 16 Connecting the offset sensor cable

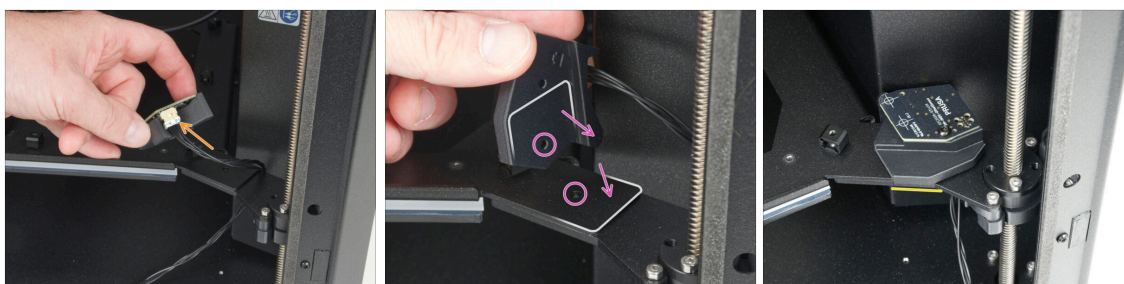


- Plug the offset sensor cable into the offset sensor board connector.
- On the underside of the Offset-sensor-holder, locate the pocket shaped for the Z-carriage.
 - Place the Offset-sensor-holder onto the Z-carriage so the shapes fit together and the screw holes align.
- Check the correct alignment. It must match the photo.

PASSO 17 Securing the offset sensor assembly

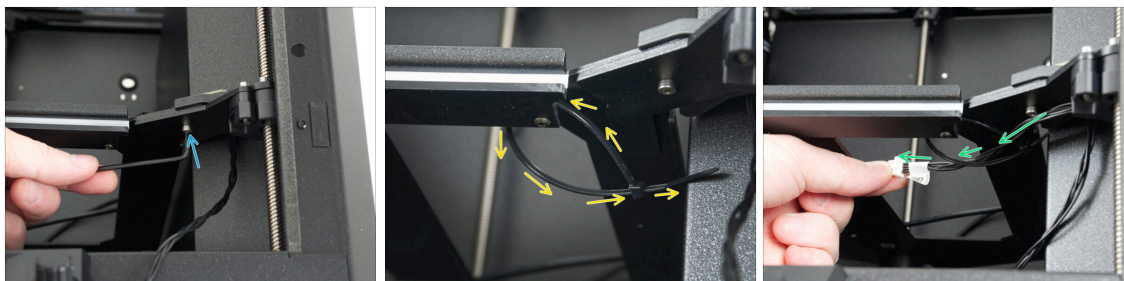


- Fissa il gruppo del sensore di offset al carrello Z dal lato inferiore usando la vite M3x10. La vite crea da sola la filettatura nella plastica. **Non stringere troppo.**
- ① Se stai installando l'aggiornamento **GEN 2** insieme alla conversione INDX, inserisci la vite M3x10 e avvitala solo di **qualche giro**.
- Ti faremo sapere più avanti quando fissare correttamente il gruppo del sensore di offset alla stampante.
- Loop a zip tie around the screw in the LED panel assembly and secure it, **but do not tighten it yet.**
- Lead the offset sensor cable through the zip tie. Tighten the zip tie and cut off the excess.

PASSO 18 Guiding the offset sensor cable

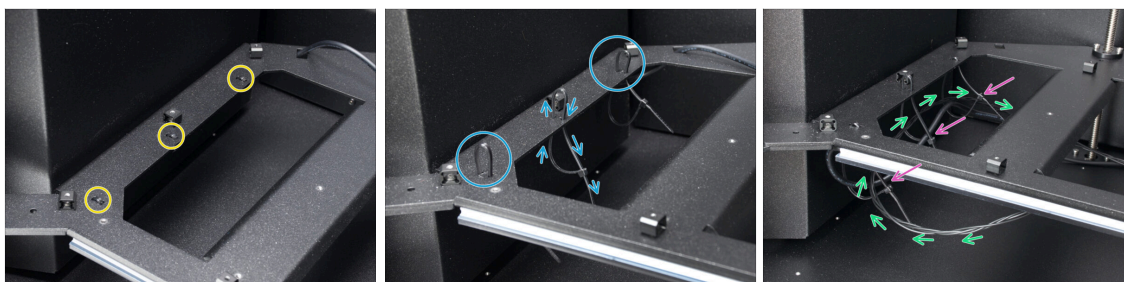


- On the left side of the Z-carriage, use side cutters to remove the three highlighted zip ties.
- ① Cutting the cable ties will release the RGB LED cable, which is secured by them.
- Thread three cable ties through the Z-carriage and connect their heads on the underside. Do not tighten them yet.
- Guide the offset sensor cable through the three zip ties.
- Guide the RGB LED cable through the three zip ties.

PASSO 19 Securing the offset sensor cable

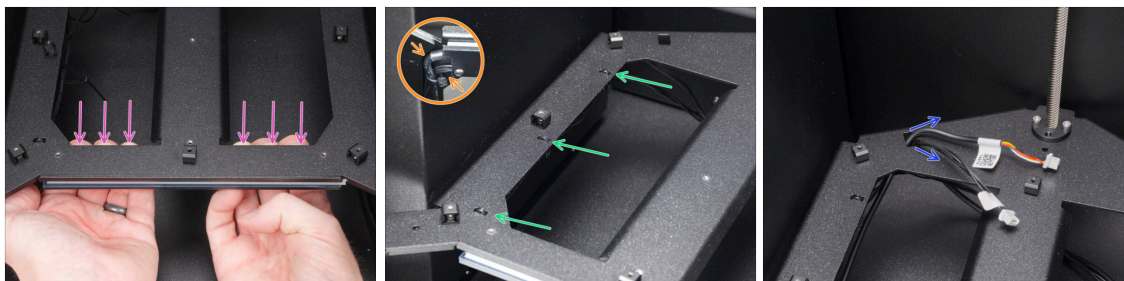


- ✿ Tuck the offset sensor cable in between the Z-carriage and the LED panel.
 - ✿ Tighten all three cable ties and cut off the excess ends.
 - ✿ The cables before the first cable tie **must not be sharply bent**; leave a slight slack.
 - ✿ Make sure the cables are properly tensioned and **not sagging** along their entire length.
 - ✿ Route the offset sensor and RGB LED cables upward through the rectangular cutout in the Z-carriage.
- 📌 Se stai installando l'aggiornamento GEN 2 insieme alla conversione Prusa INDX, **Assemblaggio Prusa INDX Core One con l'aggiornamento Gen 2.**

PASSO 20 Rimuovere la copertura Bed-cable-cover-bottom.

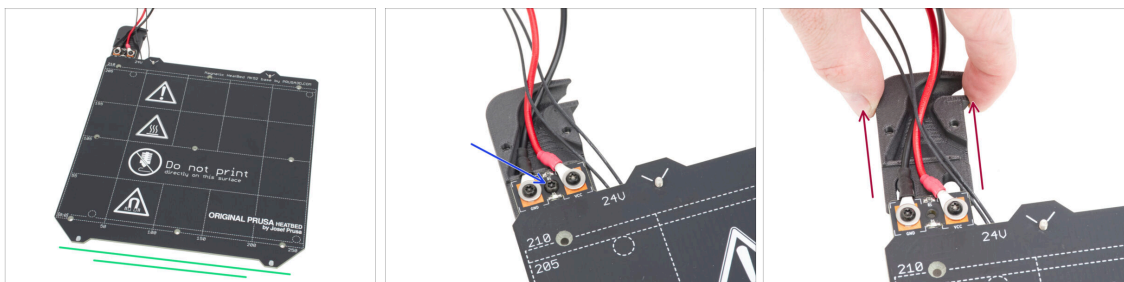

- ✿ Prepare the heatbed assembly.
- ✿ Using the Torx key, remove the M3x10rT screw that keeps the Bed-cable-cover-bottom attached.
- ✿ Rimuovi la copertura Bed-cable-cover-bottom.


PASSO 21 Coperture dei cavi del piano riscaldato: preparazione dei componenti

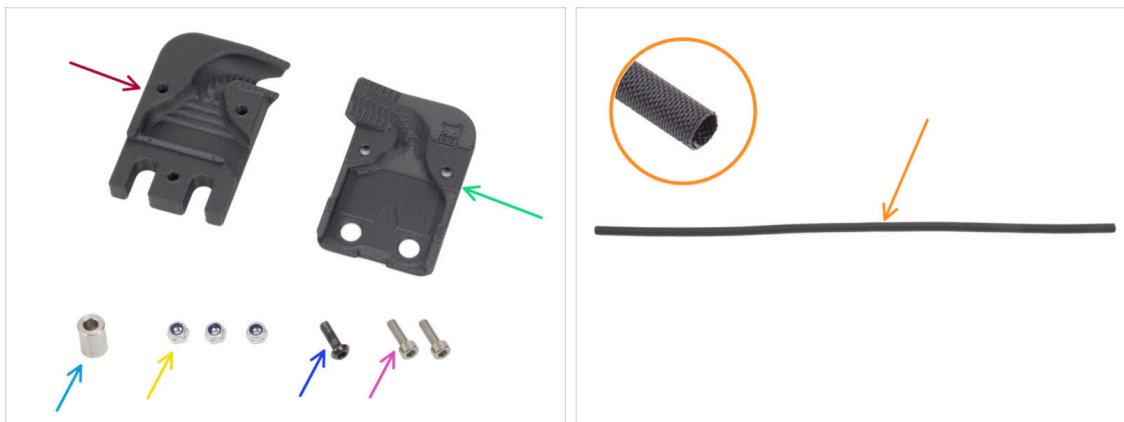

For the following steps, prepare:

- INDX-C1-bed-cable-cover-bottom (1x) *found in the Heatbed bag*
- INDX-C1-bed-cable-cover-top (1x) *found in the Heatbed bag*
- Heatbed spacer 6x3.1x8 mm (1x) *removed earlier*
- M3nN nut (3x) *found in the Fasteners 1/2 bag*
- M3x10rT (1x) *removed earlier*
- M3x10 screw (2x) *removed earlier*
- Textile sleeve 520 x 8 mm (1x) *removed earlier*

PASSO 22 Assemblare la copertura Bed-cable-cover-bottom

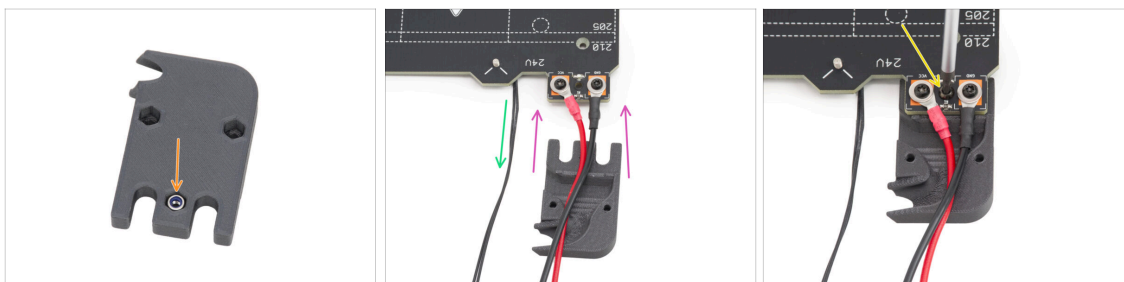

- Insert the M3nN nut into the bottom hole in the Bed-cable-cover-bottom.
- Route the heatbed thermistor cable outside the cover.
- Insert the Bed-cable-cover-bottom under the heatbed power cables and slide the cover beneath the heatbed.
- i** The M3nN nut may fall out during installation. You can hold it in place from the bottom with your finger.
- Secure the Bed-cable-cover-bottom in place with the previously removed M3x10rT screw.

PASSO 23 Fissaggio del piano riscaldato: preparazione dei componenti




● Vite M3x12bT (1x) *rimossa in precedenza*

● Vite M3x4bT (8x) *rimossa in precedenza*

● Fascetta (1x)

i Se stai installando l'**aggiornamento Gen 2** durante la conversione INDX, **ti servirà la nuova vite M3x14bT (1x)** che trovi nel kit di aggiornamento Gen 2.

PASSO 24 Inserimento del piano riscaldato

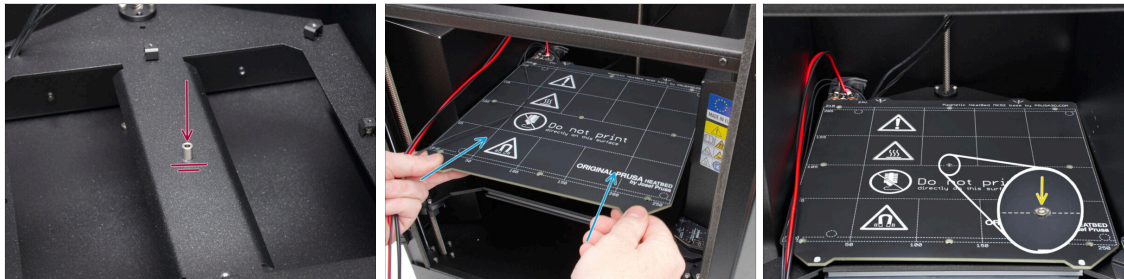

● Place the heatbed spacer directly over the threaded hole in the center of the Z-carriage.


● Carefully insert the heatbed assembly back into the printer.

● Ensure that the spacer in the middle stays in place.

● Fissa il piano riscaldato con la vite M3x12cT che hai messo da parte quando l'hai rimosso la prima volta. **Per il momento non stringere del tutto la vite.**


i Se stai installando l'**aggiornamento CORE One Gen 2**, usa la vite M3x14cT come indicato nel passaggio precedente.

PASSO 25 Fissare il piano riscaldato

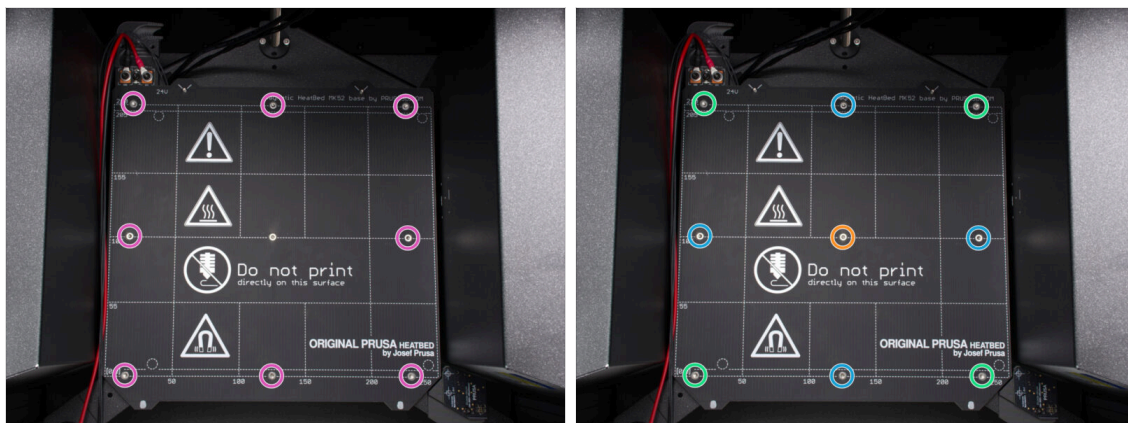


- ✿ Inserisci le otto viti M3x4bT nei fori rimanenti del piano riscaldato. **Non stringere ancora completamente le viti.**
- ① **Se stai installando l'aggiornamento Gen 2 insieme alla conversione INDX,** stringi le viti M3x4bT solo di due giri! Le stringeremo completamente più tardi. Per ora passa al passaggio successivo.
- ⚠ **IMPORTANT:** The heatbed must be tightened in a specific order. Repeat the sequence multiple times, ensuring the final tightening after at least two rounds.
- **After all screws are in place, tighten them in the following sequence:**
 - 🟠 Vite centrale
 - 🟡 First four screws (edges)
 - 🟢 Last four screws (corners)
- 📌 Tighten the screws gently, but firmly.

PASSO 26 Wrapping the heatbed cables

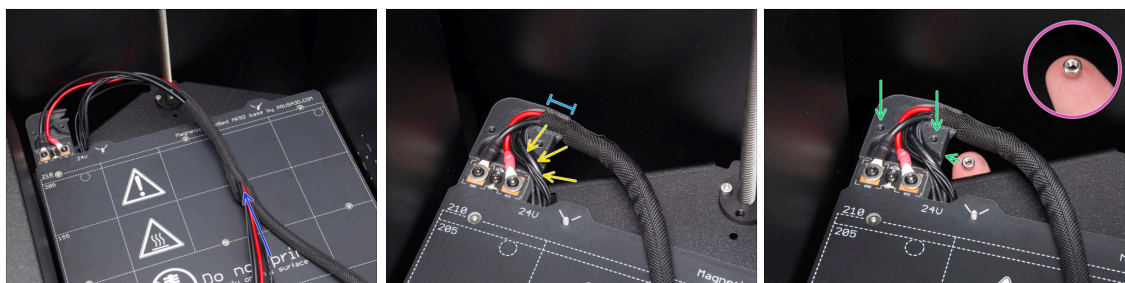


- Wrap the textile sleeve around the heatbed, RGB LED, and offset sensor cables.
- Route the RGB LED and offset sensor cables into the Heatbed-cable-cover-bottom **through the side channel**.
- Slide the textile sleeve at least 1 cm (0.39 in) into the cable channel.
- Place the M3nN nut on your finger with the nylon insert (blue plastic ring) facing down.
- **From below**, align it with the screw holes shown in the picture.
- Then **press the nut into the Bed-cable-cover-bottom** from underneath until it is fully seated.

PASSO 27 Covering the heatbed cables

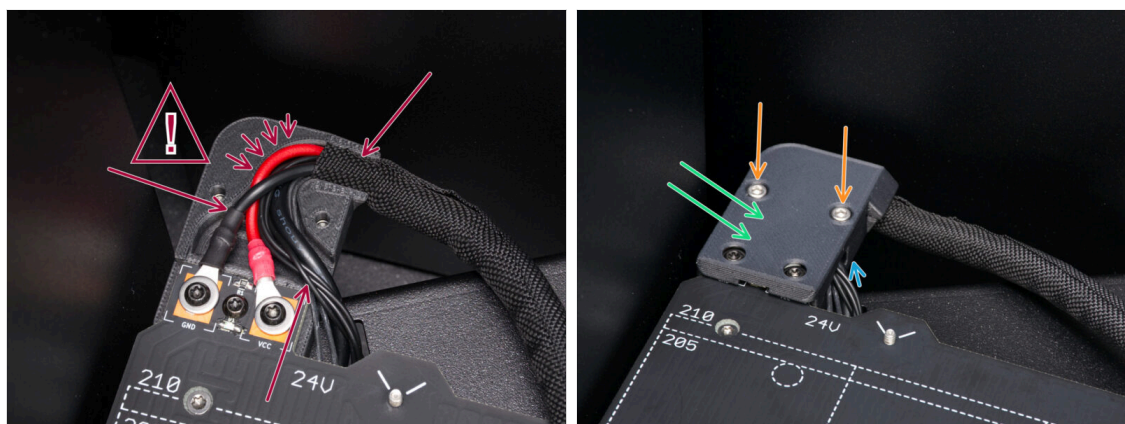

- ⚠ Before closing the cover, make sure **no wires are sticking out to prevent them from being pinched** by the top cover.
- Place the Bed-cable-cover-top over the heatbed cables and align it.
- Secure the Bed-cable-cover-top in place with the M3x10 screw.
- While tightening, **hold the M3nN nuts** in the lower part to prevent them from falling out.

PASSO 28 Guiding the heatbed cable bundle I.

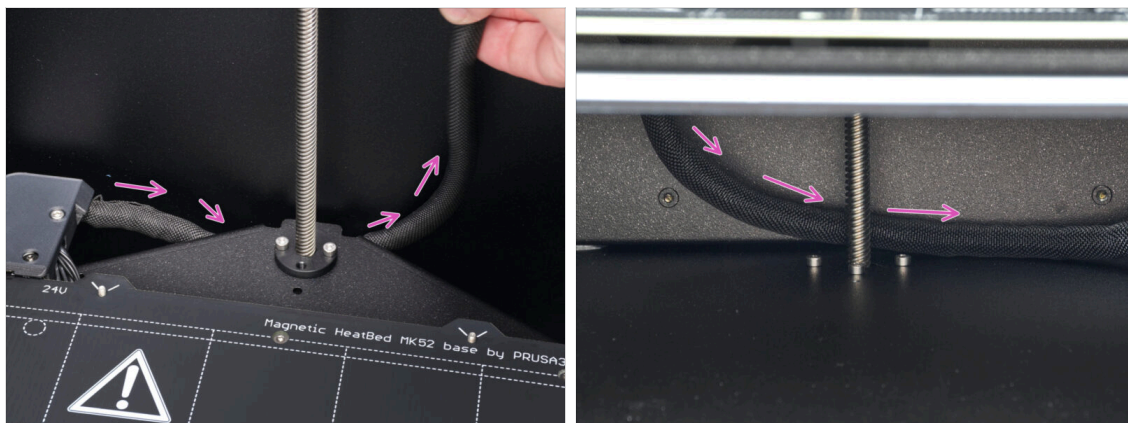


- Lead the heatbed cables under the heatbed and **behind the Z-axis threaded rod**.

PASSO 29 Guiding the heatbed cable bundle II.




- Route the cables through the rear panel one by one in the following order:
 - 1. Offset sensor cable
 - 2. LED RGB cable
 - 3. Heatbed thermistor cable
 - Finally, route the heatbed power cables (black and red).
- Push the heatbed cables and the textile sleeve through the grommet hole.
 - No more than 1 cm (0.39 in) of the textile sleeve should protrude from the back side.

PASSO 30 Securing the textile sleeve

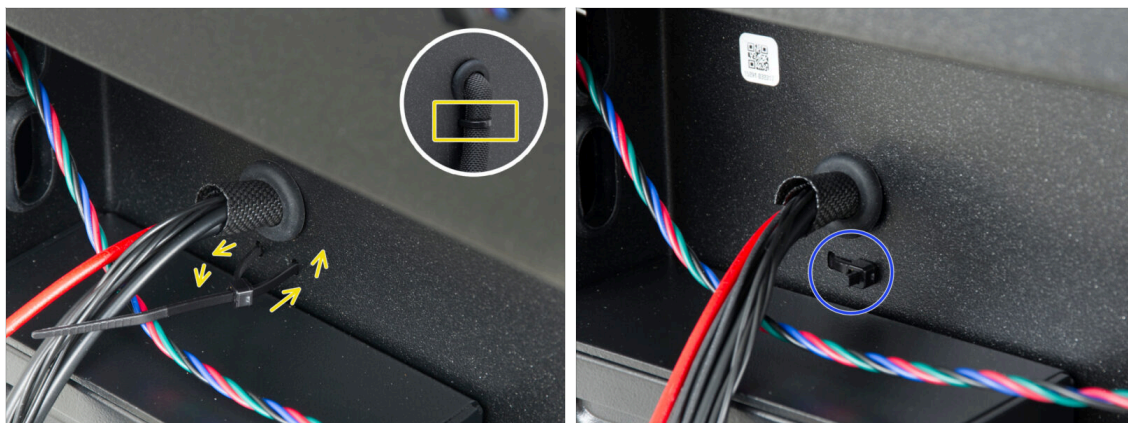


- 🟡 Guide the zip tie through the two holes under the heatbed cables and make a loop around the heatbed cable bundle (textile sleeve) on the inside.
- 🟢 Tighten the zip tie firmly and cut off the excess.

PASSO 31 Rimuovere il finecorsa Bed-stop-rear

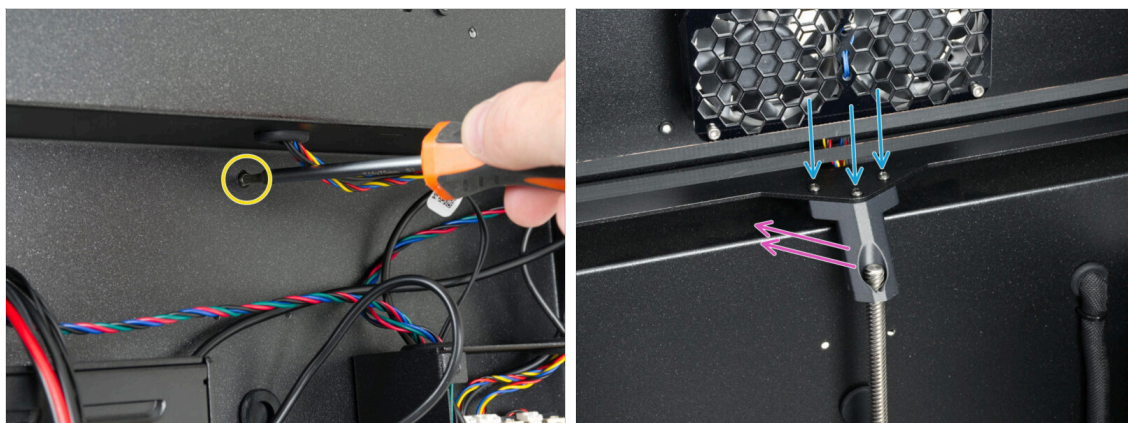

- 🟡 Use a Torx key to remove the M3x8rT screw on the rear side of the printer.
- 🟢 Remove the three M3x8rT screws.
- 🟣 Rimuovere la parte Bed-stop-rear.

PASSO 32 INDX-C1-Bed-stop-rear: preparazione dei componenti

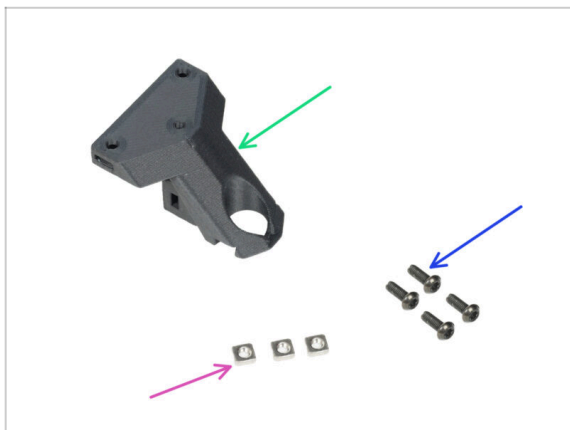

- **For the following steps, prepare:**
- INDX-C1-bed-stop-rear (1x) *si trova nella confezione Heatbed*
- M3x8rT screw (4x) *removed earlier*
- M3nS nut (3x) *found in the fasteners 2/2 bag*

PASSO 33 Montaggio del finecorsa del piano Bed-stop-rear




- The new Bed-stop-rear is labeled with an X.
- Insert the M3nS nut into the Bed-stop-rear and push it fully down.
 - Always check through the screw hole that the nut is properly aligned.
- From the same side, insert the second M3nS nut all the way into the part.
- From the opposite side, insert the third M3nS nut into the part.

PASSO 34 Installing the new Bed-stop-rear




- Place the Bed-stop-rear onto the rear Z motor threaded rod and rest it against the edge of the rear panel.
- Mount the Bed-stop-rear onto the Z-Axis threaded rod and secure it in place with three M3x8rT screws.
- ⓘ The middle screw threads into the plastic, not into a nut. Expect slight resistance while tightening.

PASSO 35 Assicurare il Bed-stop-rear

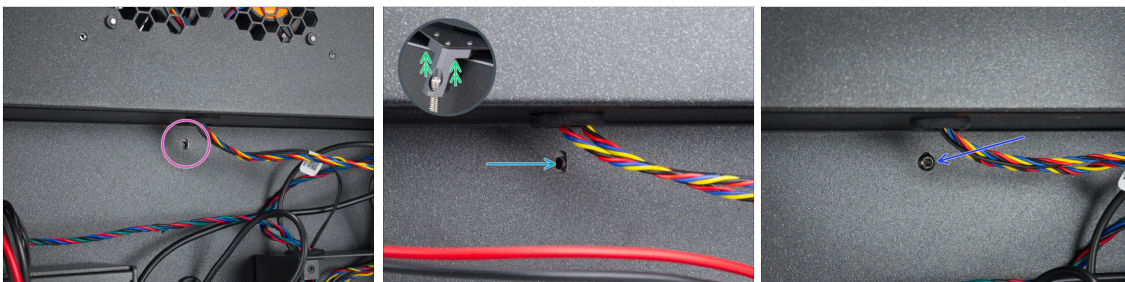


- Move to the back of the printer.
- Locate the oval screw hole under the cooling fans.
- The oval hole must be flush with the hole in the Bed-stop part on the opposite side.
- To compensate, slightly raise the rear of the CoreXY assembly - just a few millimeters.
- After aligning the holes, secure them with the M3x8rT screw.

PASSO 36 Connecting the RGB LED + offset sensor cables

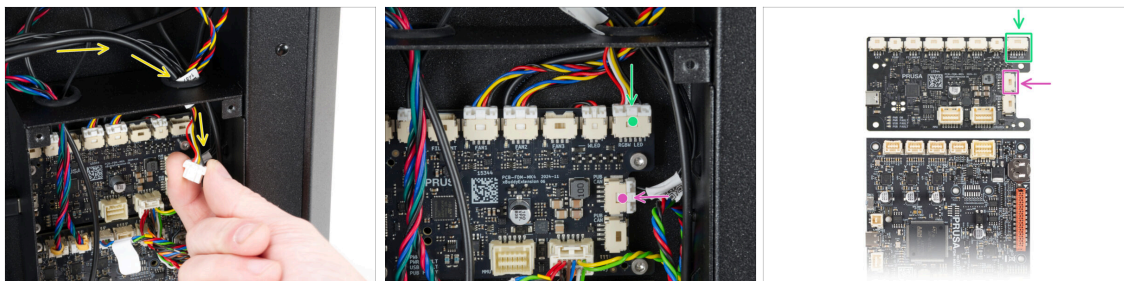


- Route the RGB LED cable and the offset sensor cable through the upper right opening in the xBuddy box.
- Plug the **RGB LED connector** into the **rightmost RGBW LED slot** on the xBuddy Extension board.
- Plug the **offset sensor cable** into the **upper right PUB CAN slot** on the xBuddy Extension board.

PASSO 37 Connecting the heatbed cables

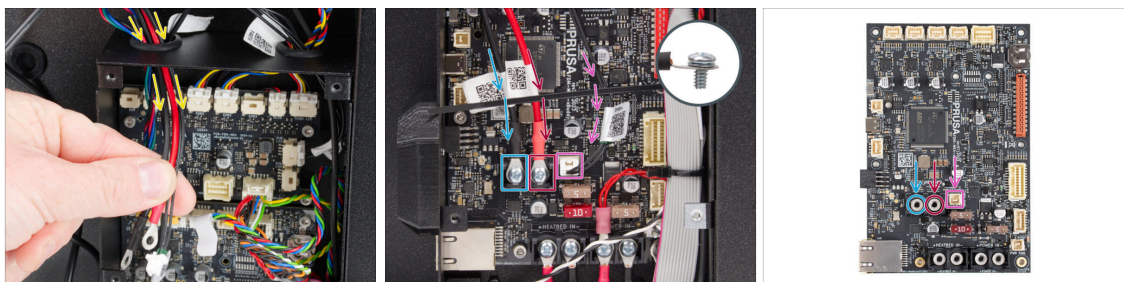

- Route the heatbed power cables and the heatbed thermistor cable through the **left opening** at the top of the xBuddy box.
- Using the 6-32 terminal screw connect the **black** power cable to the **left** terminal slot on the xBuddy board. Tighten firmly.
- Using the 6-32 terminal screw to connect the **red** power cable to the **right** terminal slot. Tighten firmly.
- Plug the heatbed thermistor connector to the slot next to the power terminals.

PASSO 38 È l'ora delle Haribo

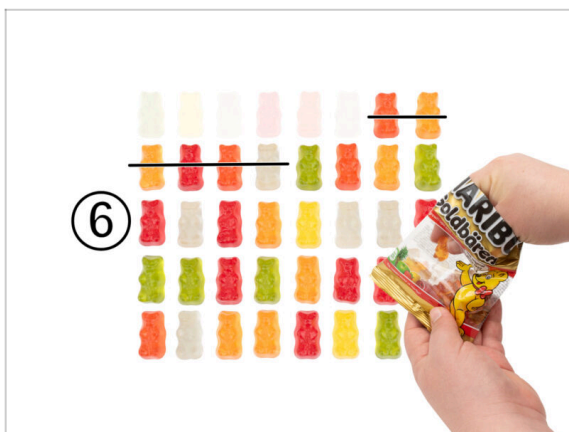

Now is the time for a well-deserved boost.



Eat six gummy bears.

PASSO 39 Completato




- Congratulations! You have just upgraded the Z-axis.
- Let's go to the next chapter.

4. Sensore filamento laterale & Testina INDX



PASSO 1 Tools necessary for this chapter

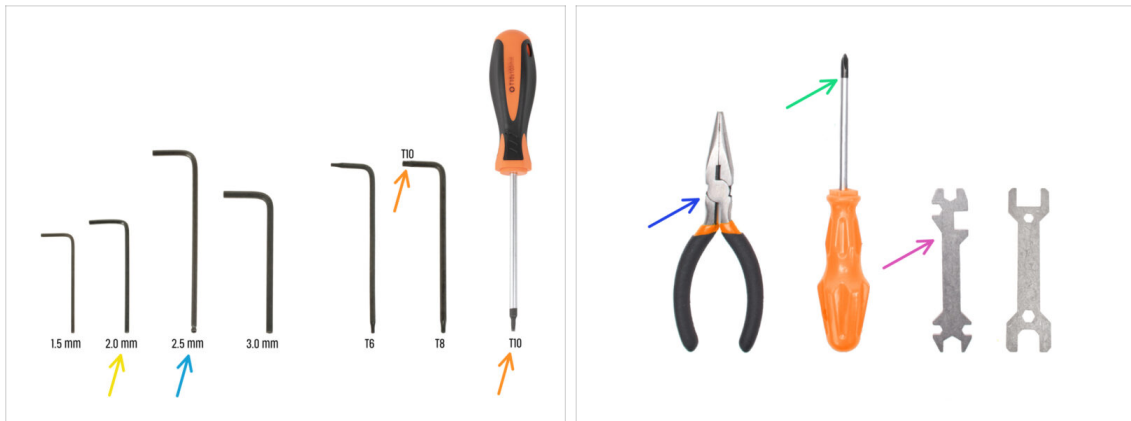

For this chapter, please prepare:

- Chiave a brugola da 2.0mm
- Chiave a brugola da 2.5mm
- T10 key / screwdriver
- Needle-nose pliers or flush cutters for cutting zip ties
- Cacciavite a stella PH2
- Chiave universale

PASSO 2 Allentare le cinghie



i In these steps, we will loosen the belts to make installing the Head-mounting-plate easier. We also need to lubricate the belt tensioner screw to prevent any issues in the future.


- Place the protective cardboard/box back onto the heatbed.
- The belt tensioning screws are located in the front profile under the upper hinge on both sides of the printer.
- Using a 2.5 mm Allen key, loosen the left tensioning mechanism until the M3x30 tensioning screw no longer holds the idler. Remove the screw.

⚠ Ensure the M3x30 nut in the Belt-tensioner-pulley does not fall out!

- Repeat the process on the right side of the printer.


Tieni a portata di mano le viti di tensionamento; ci serviranno più tardi.

PASSO 3 Rilascio delle cinghie

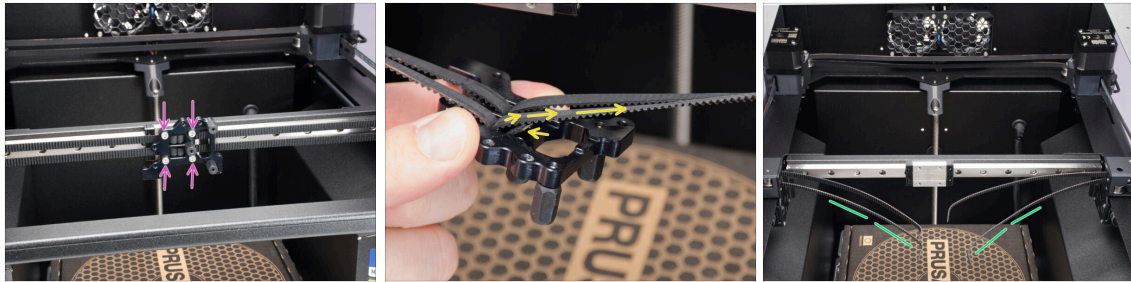


- ✦ Using the 2.5mm Allen key, remove four M3x10 screws securing the Nextruder holder.
- ✦ Disengage all four belt ends from the Nextruder holder slots.
- ⬛ Remove the Nextruder holder.
 - ⓘ This part will no longer be needed.
- ✦ Let the loosened belts hang freely.
- ⚠ **CAUTION: Do not pull on the belts, as they could slip out of the motor pulleys and require full disassembly for reinstallation.**
- 📌 Se stai installando l'aggiornamento GEN 2 insieme alla conversione Prusa INDX, torna adesso all'articolo Prusa INDX GEN 2.

PASSO 4 Gantry aligner tool: parts preparation

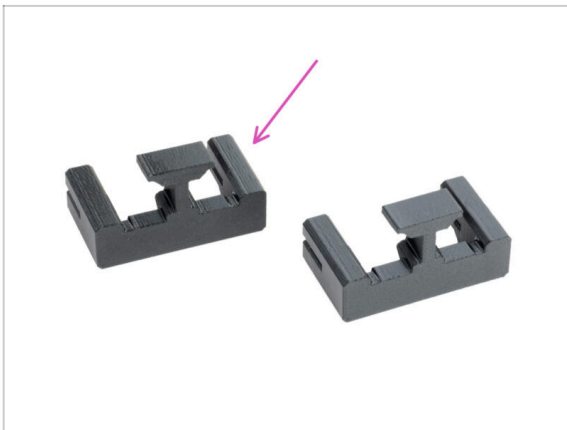


- ⬛ For the following steps, prepare:
- ✦ INDX-Gantry-aligner-tool (2x) found in the Position tools bag

PASSO 5 Installing the Gantry-aligner-tool - right

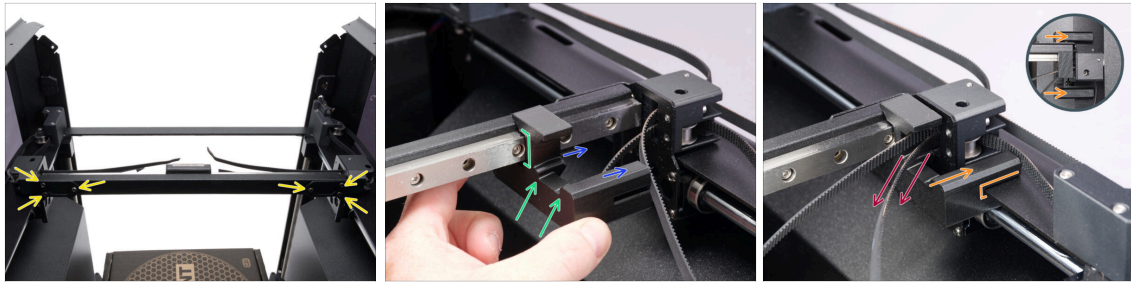


- ✦ Start by slightly loosening three screws on the back of the gantry on each side.
- ✦ Posiziona uno degli strumenti di allineamento Gantry-aligner-tool **sul lato anteriore destro** dell'asse X, allineando **la guida lineare con l'incavo corrispondente**.
 - ❗ Both Gantry-aligner-tools are identical.
- ✦ The fork must face the pulleys.
- ✦ Slide the Gantry-aligner-tool fully onto the gantry frame profile, ensuring the cutouts engage.
- ✦ Route both free belt ends through the open space above the tool.

PASSO 6 Installing the Gantry-aligner-tool - left

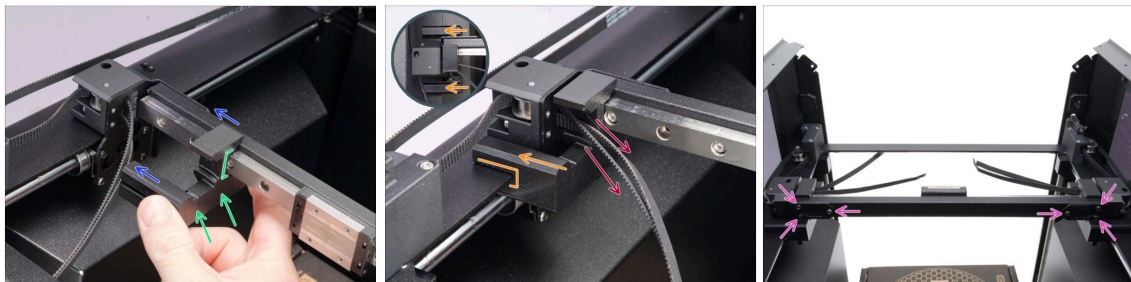


- ✦ Place the Gantry-aligner-tool on the **front left side** of the X-axis, aligning the **linear rail with the matching cutout**.
- ✦ The fork must face the pulleys.
- ✦ Slide the Gantry-aligner-tool fully onto the gantry frame profile, engaging the cutouts.
- ✦ Route both free belt ends through the open space above the tool.
- ✦ With each Gantry-aligner-tool in place, tighten the three screws on each side of the back of the gantry.

PASSO 7 Aligning the linear rail

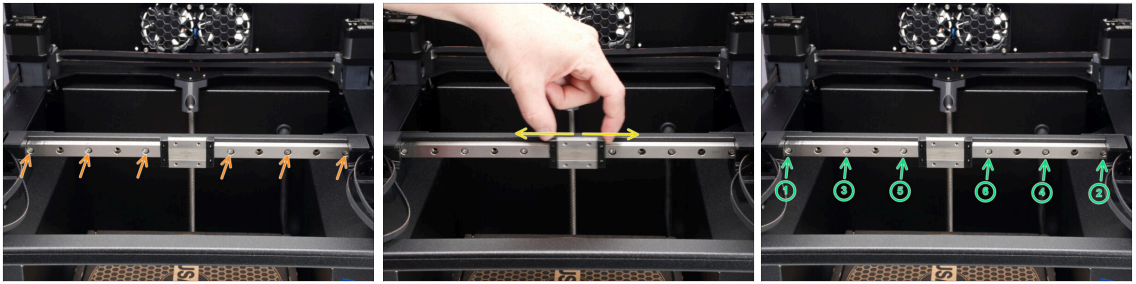


- 🔸 Using a 2.5 mm Allen key, loosen all six screws securing the linear rail.
- ⬛ **Do not fully loosen the screw.** 2-3 turns are sufficient.
- 🟡 Move the linear bearing back and forth along the full length of the axis.
- 🟢 **Firmly tighten** all six screws one by one in the **specified order**.

PASSO 8 Rimozione dello strumento di allineamento del Gantry

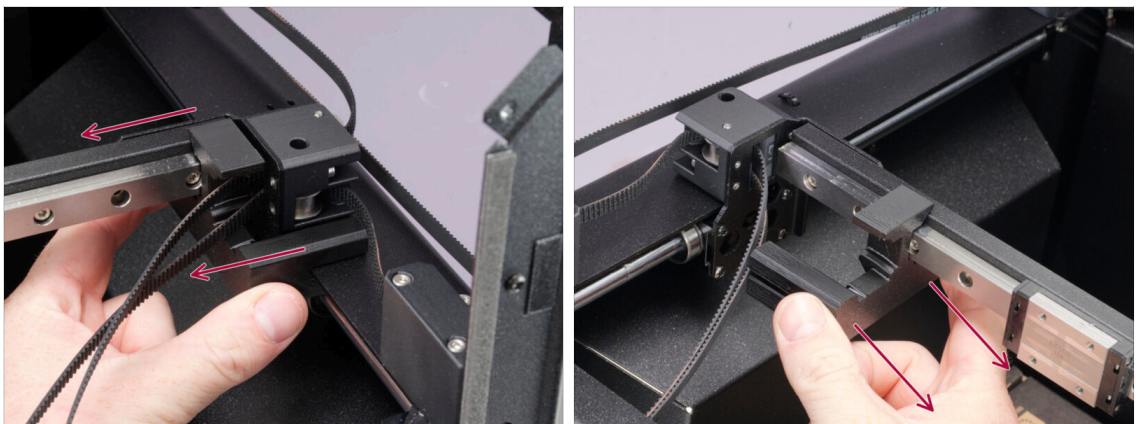

- 🔴 **Remove both Gantry-aligner-tools** from the printer.
- ⓘ This part will no longer be needed.

PASSO 9 Montaggio della testina: preparazione dei componenti

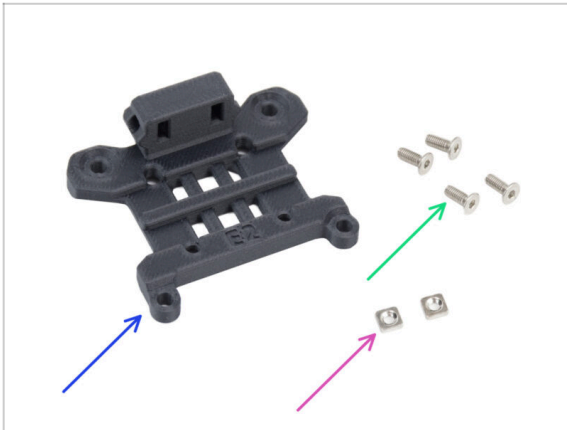


- For the following steps, prepare:
- Head-mounting-plate (1x) found in the Toolhead bag
- Vite M3x8b (4x) si trova nella busta Fasteners 1/2
- M3nS nut (2x) found in the Fasteners 2/2 bag

PASSO 10 Fissare le cinghie




- Hold the Head-mounting-plate in the correct orientation, using the protrusion as a guide.
- From the right side, route the **lower belt** through the **rear center opening** in the Head-mounting-plate, around the post, and back out. It must extend **4-5 teeth**.
- Route the **upper belt** through the **front center opening** in the Head-mounting-plate, around the post, and back out. It must extend **4-5 teeth**.
- ⚠ **Make sure the belts are not crossed.**
- **Hold the right belts in place with your thumb to prevent them from slipping out.**
- Route the **upper belt** through the **front center opening** out (down) of the Head-mounting-plate. It must extend **6-7 teeth**.
- From the left side, route the **lower belt** through the **rear center opening** out (down) of the Head-mounting-plate. It must extend **6-7 teeth**.
- Insert the **belt ends from the left side** into the **left opening** and press them in. Leave **4-5 teeth** protruding on from the rear side of the Head-mounting-plate.

PASSO 11 Montare la piastra Head-mounting-plate

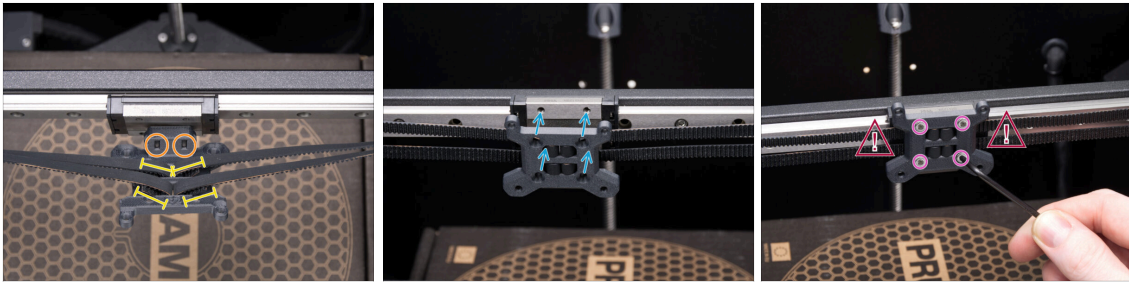

- Double-check that **all four belt ends protrude 4-5 teeth** inward.
- Insert two M3nS nuts into the protrusion of the Head-mounting-plate.
- Place the Head-mounting-plate against the linear bearing and align it with the holes.
- Con una chiave a brugola da 2,0 mm, fissa il componente con quattro viti M3x8b. Stringi le viti **con decisione, ma delicatamente**.
- ⚠ Check on both sides that the **belts are correctly routed through their channels** and are **not pinched** anywhere.

PASSO 12 Lubrificare la vite del tendicinghia

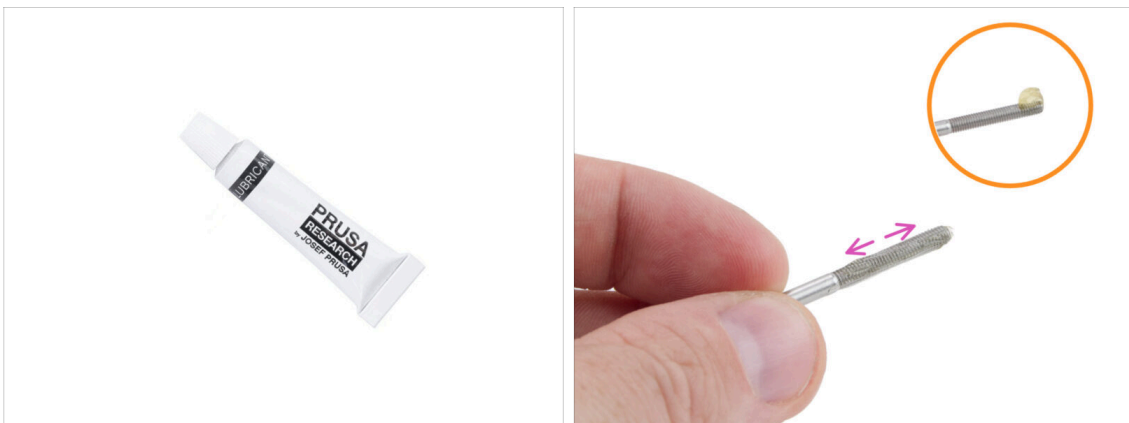

- Se la tua stampante è una **Prusa CORE One**, dovremo lubrificare le viti del tendicinghia.
- ① Questo passaggio non è necessario se hai la versione Prusa CORE One+.
- Prepare the Prusa lubricant (1x) *found in the Fasteners 2/2 bag*.
- Metti un po' di lubrificante Prusa sulla punta delle due viti di tensionamento M3x30 sinistra e destra che hai rimosso prima.
- Spread the lubricant evenly around the entire thread.
- 🔗 Tip: Use the tip of a zip tie to spread the lubricant.

PASSO 13 Regolazione delle cinghie



- ✦ Insert the lubricated tensioning screws in the front left and front right profiles.
- ✦ Using a 2.5 mm Allen key, connect the Belt-tensioner-pulley to the Belt-tensioner.
- ✦ Using the same process, connect the Belt-tensioner-pulley on the right side as well.
- ✦ Tension the belts so that both tensioning mechanisms are in approximately the same position as shown in the picture - about 8 mm (0.31 in) from the edge of the tensioner.

❗ Typically, this requires 8–10 turns.




Final fine-tuning will be done in the final chapter.

PASSO 14 INDX Toolhead assembly: Parts preparation



- ✦ **For the next step, prepare:**
- ✦ INDX Toolhead (1x) *found in the INDX Toolhead box*
- ✦ Head cable cover front (1x) *found in the Fasteners 1/2 bag*
- ✦ Vite M3x18 (1x) *si trova nella busta Fasteners 1/2*

PASSO 15 Attaching the head cable cover front

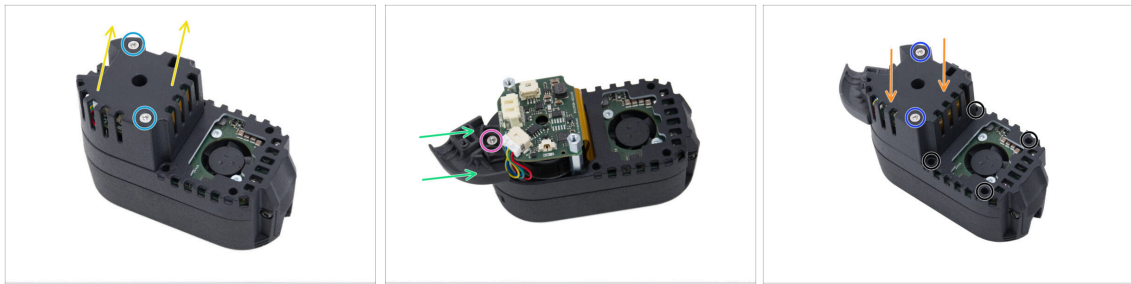


- Use the T10 key/screwdriver to remove two M3x6T screws.
- Remove the INDX Toolhead cover.
- Attach the head cable cover front to the INDX Toolhead.
- Fissa la copertura head-cable-cover-front con la vite M3x18.
- Carefully attach the INDX Toolhead cover. **Ensure that no cables are pinched.**
- Secure the cover in place with the two M3x6T screws you removed earlier.
- Assicurati che i quattro fori evidenziati siano vuoti. Se ci sono delle viti, rimuovile prima di montare la testina INDX in seguito.

PASSO 16 INDX Toolhead: parts preparation



- **For the following steps, prepare:**
- INDX Toolhead (1x) *that you assembled earlier*
- M3x14 screw (4x) *found in the Fasteners 1/2 bag*


PASSO 17 Mounting the INDX Toolhead

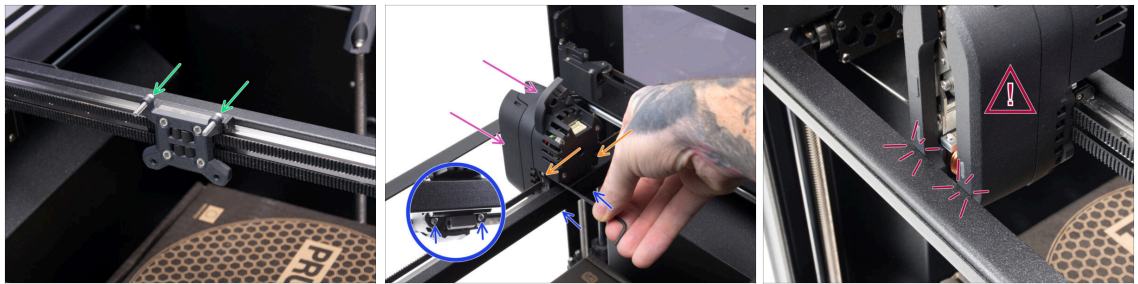

- From the rear side of the Head-mounting-plate, insert two M3x14 screws into the holes.
- From the front side, place the INDX Toolhead onto the Head-mounting-plate as shown in the picture.
- Secure it using the upper M3x14 screws and fully tighten them firmly.
- Secure the INDX Toolhead by inserting two M3x14 screws into the lower holes and tightening them firmly.


⚠ **WARNING:** Avoid contact with the front metal LED holder to prevent damage or scratches to the INDX Toolhead.

PASSO 18 Fan shroud: parts preparation

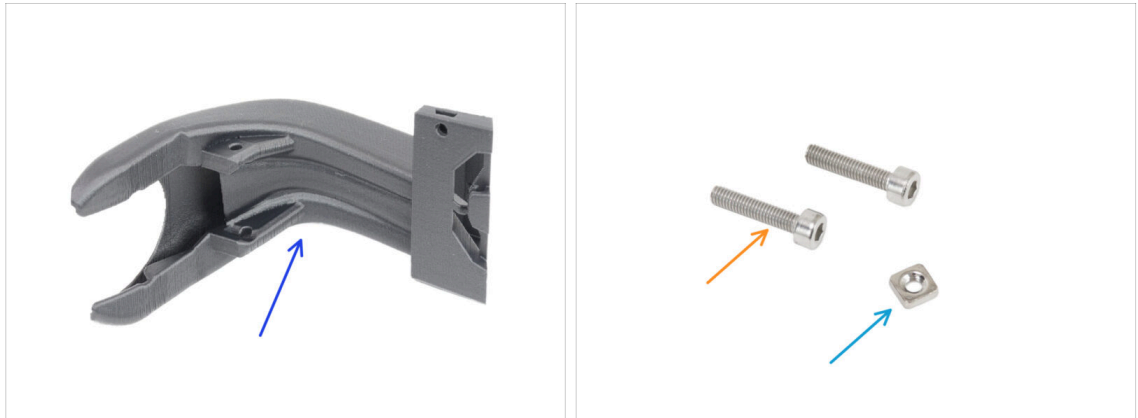


- ⬛ **For the following steps, please prepare:**
- INDX-C1-Fan-shroud (1x) *found in the Toolhead bag*
- M3x14 screw (2x) *found in the Fasteners 1/2 bag*
- M3nS nut (1x) *found in the Fasteners 2/2 bag*

PASSO 19 Montaggio del convogliatore della ventola

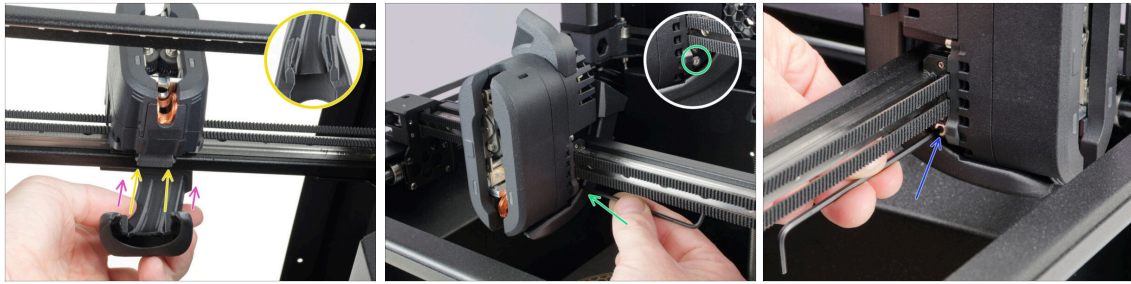


- Attach the Fan-shroud to the INDX toolhead from below.
- Note the ridge in the Fan-shroud. This ridge will slide onto the bottom part of the Head-mounting-plate.
- Secure the Fan-shroud using the M3x14 screw from the right side.
- Secure it from the left side using an M3x14 screw as well.

PASSO 20 Inserimento del dado

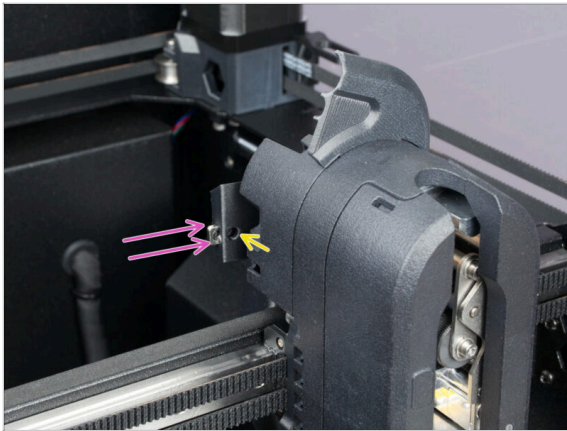

- Insert an M3nS nut into the protrusion on the left side of the INDX Toolhead.
- From the front, check through the screw hole that the nut is properly seated.

PASSO 21 Print fan: parts preparation

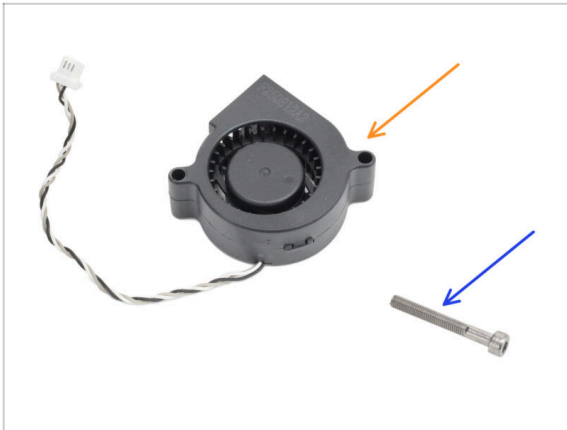

● For the following steps, prepare:


● Print fan (1x) *removed earlier*

● M3x25 screw (1x) *found in the Fasteners 1/2 bag*

ⓘ In case you **converted your CORE One from the MK4/S printer**, the cable on your print fan is much longer. Use the supplied Print fan blower (1x) *found in the Electronics box* here instead.

● The print fan you removed from your converted printer will be used in substitution for the Dock fan later on.

PASSO 22 Installing the print fan

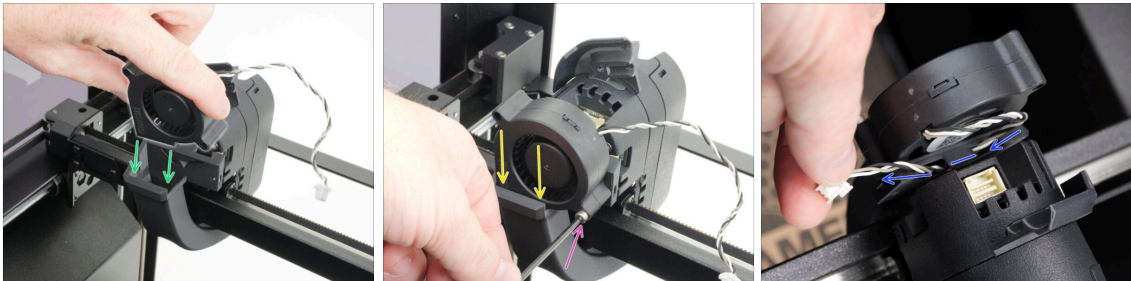

● Look at the INDX Toolhead from the rear side.

● Take the print fan as shown and align it with the Fan-shroud opening.

● Insert the print fan into the Fan-shroud opening.

● Secure it with one M3x25 screw.

⚠ Do not overtighten the screw to avoid cracking the fan housing.

● Guide the print fan cable under the cable hook on the Fan-shroud.

PASSO 23 Connecting the print fan





- Plug the print fan cable into the connector in the INDX Toolhead.
- Keep the cable from **protruding too far to the side**.

PASSO 24 INDX head cable: parts preparation I.



- For the following steps, prepare:**
- Head-cable-clip (1x) *found in the Toolhead bag*
- Swingarm-clip found in the Toolhead bag
- Head cable cover back (1x) *found in the Fasteners 1/2 bag*
- M3x10 screw (1x) *you removed earlier*
- M3x8rT screw (1x) *found in the Fasteners 2/2 bag*
- 3x8sT black screw (1x) *found in the Fasteners 1/2 bag*

PASSO 25 INDX head cable: parts preparation II.

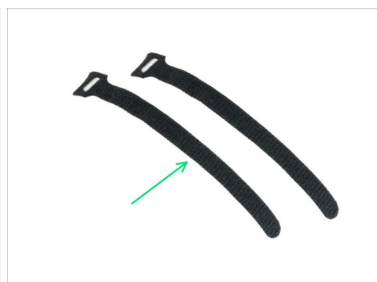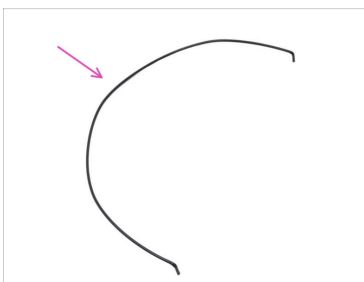

- INDX head cable (1x) *found in the Cables bag*
- Filo di nylon 4 x 2.5 x 450 (1x) *si trova nella scatola INDX Fasteners and Plastic parts*
- Cable tie (2x) *you removed earlier*

PASSO 26 Guiding the head cable




- Now move to the rear side of the printer.
- Pass the head cable connector through the lower oval opening on the left side of the rear panel.
 - ① Alcune delle nostre stampanti non sono dotate del gommino sull'apertura inferiore. Ciò non influisce sul processo.
- Insert most of the braided cable into the printer. The exact length will be adjusted later.
- 📌 Make sure the **grommet does not slide into the printer**. If needed, you can pull it outward for easier handling; it will be reinstalled later.
- Inside the printer, route the head cable upward through the corner behind the gantry assembly.

PASSO 27 Inserting the nylon string




- In this step, we will insert the nylon into the cable sleeve.
- Insert the nylon string into the cable sleeve near the head cable connector.
- ⚠ **Ensure that the nylon string is inserted as shown, with the end of the nylon pointing down.**
- 🔌 Assicurati che il cavo in nylon sia completamente avvolto all'interno della guaina, insieme al cavo della testina.
- Continue inserting the nylon string into the cable sleeve along the whole length.
- Leave the end of the nylon string sticking out from the cable sleeve as shown, with **the end of the nylon pointing down**.
- Tighten the cable sleeve around the head cable and the nylon string by gently twisting the sleeve.

PASSO 28 Connecting the head cable

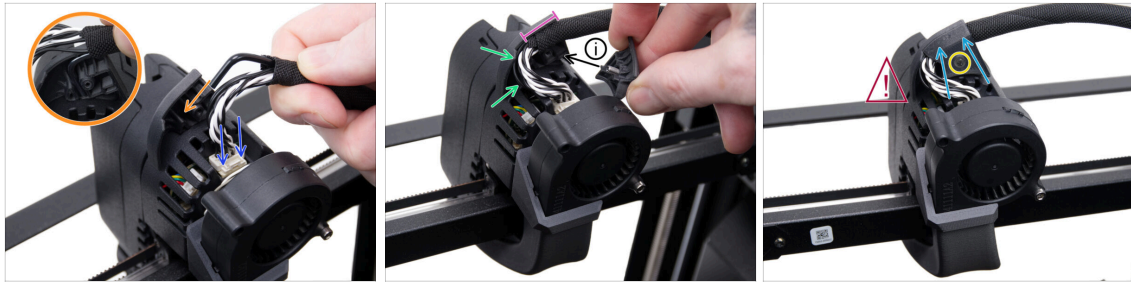


- Plug the head cable into the INDX Toolhead. Ensure that the safety latch clicks in place.
- Insert the nylon string into the slot in the head cable cover front. Ensure that the nylon is inserted all the way in.
- Insert the cables into the channel. Ensure that no cables are sticking out.
- Adjust the textile sleeve so that 1.5 cm (0.59 in) is inside the channel.
- Note the protruding bit on the head cable cover back. It will fit into the slot in the INDX Toolhead.
- Attach the head cable cover back.
- ⚠ **When attaching the Head-cable-cover, ensure you do not pinch or damage any cables.**
- Usa la vite autofilettante nera 3x8sT per fissare in posizione la copertura Head-cable-cover.

PASSO 29 Attaching the head cable

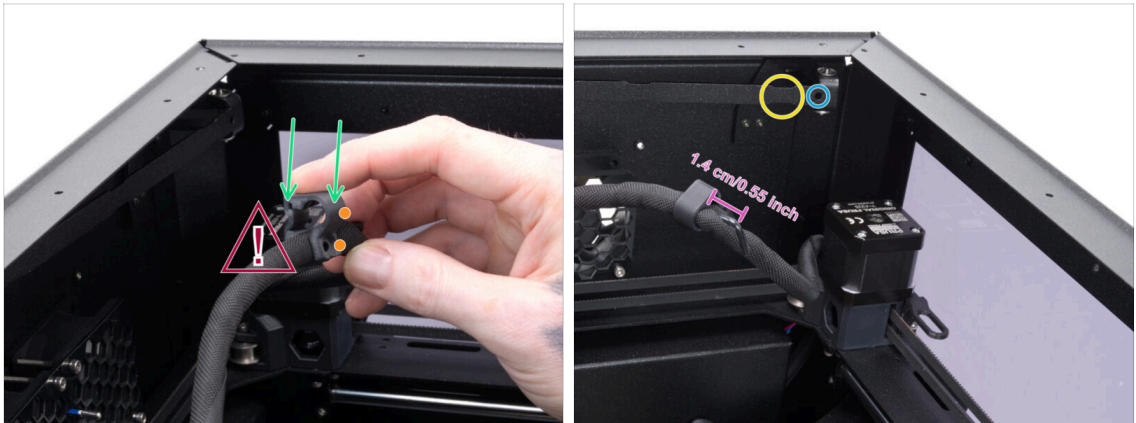

- **Gently open up the Swing-arm-clip** and attach it to the head cable with the nylon inside of the cable sleeve.
- ⚠ **Proceed carefully. Do not break the Swing-arm-clip when attaching it to the head cable.**
- Pay attention to the correct orientation; the protruding side of the clip and the side with the cut-out for the screw must face the front of the printer.
- Once the Swing-arm-clip is on the head cable, adjust it so the distance between the clip and the bend in the nylon is 1.4 cm / 0.55 inch
- Locate the rightmost narrowing on the swing arm. We will mount the Swing-arm-clip there in the next step.
- Note the hole in the swing arm. This is where we will insert the nylon end in the next step.

PASSO 30 Securing the swing arm clip

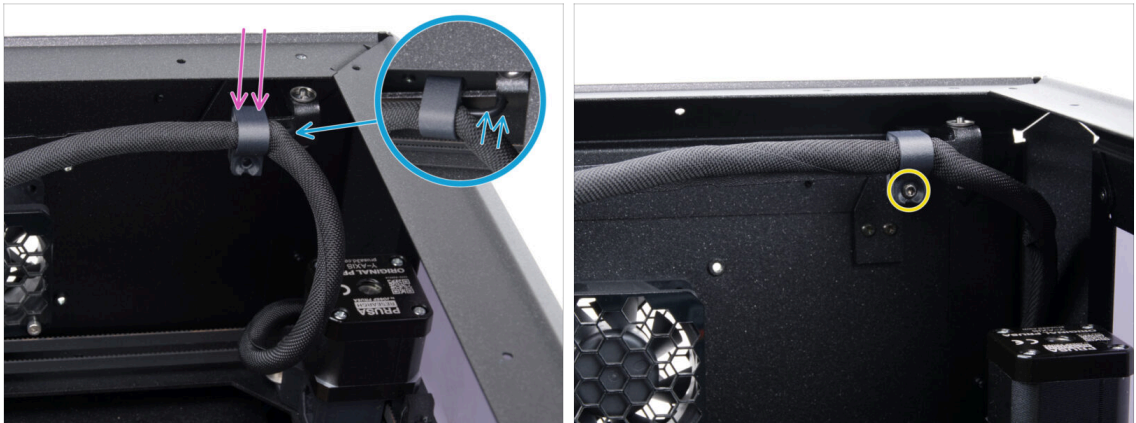


- ◆ Attach the Swing-arm-clip to the swing arm from the top. Ensure that the **clip is placed on the rightmost narrowing** on the swing arm.
- ◆ Insert the end of the nylon into the hole in the swingarm.
- 📌 Ensure that the cable sleeve is not pinched where the nylon is sticking out.
- ◆ With the Swing-arm-clip and the nylon in the correct positions, secure the clip in place with the M3x8rT screw.

PASSO 31 Fissaggio del cavo della testina




- ◆ Wrap the cable tie around the head cable and the middle narrowing of the swing arm.
- ◆ Tighten the cable tie and wrap the excess strap around it.
- ◆ Secure the head cable with the cable tie around the leftmost narrowing on the Swing arm.

PASSO 32 Installing the Head cable clip

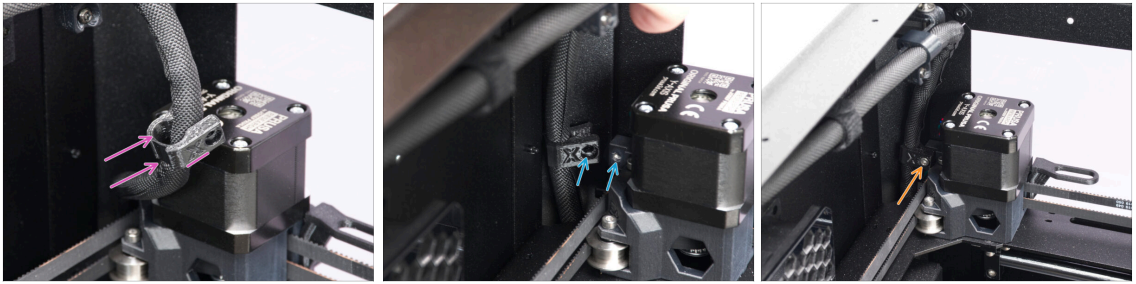


- Make sure that the cable sleeve is tightly wrapped around the cables. Twist the cable sleeve slightly to tighten it.
- Carefully open the Head-cable-clip and attach it to the head cable.
- 🔗 **Pay attention to the correct orientation**, using the "X" symbol and the cutout for the screw head as a guide.
- Align the Head-cable-clip with the hole on the Y motor mount protrusion.
- Secure the part using an M3x10 screw.
- 📌 *Pro tip:* Pre-thread the M3x10 screw into the part after snapping it onto the cable.

PASSO 33 Connecting the head cable: parts preparation

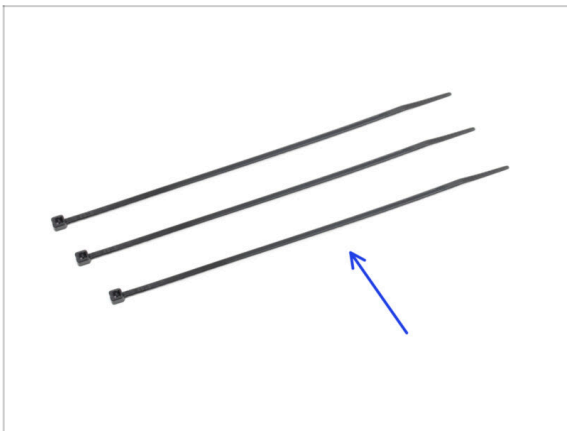

- **For the following steps, prepare:**
- Fascetta (3x)

PASSO 34 Inserting the zip ties

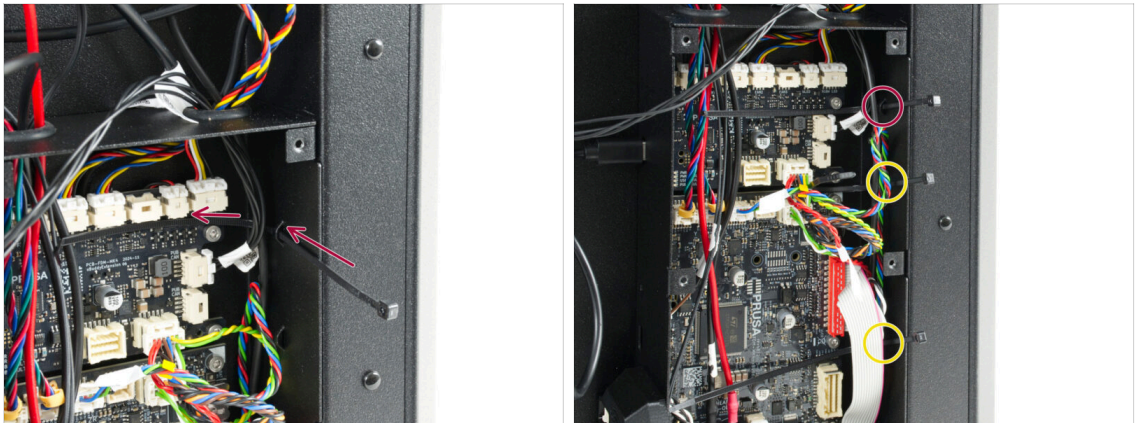

- Pass the zip tie through the upper perforation in the xBuddy box. The zip tie must run underneath all cables.
- Do the same for the other two perforations.

PASSO 35 Connecting the head cable



- Guide the head cable through the left opening in the xBuddy box.
- Plug the branched head cable connector as follows:
 - **Narrow connector:** plug it into the **MMU**-labeled slot on the **xBuddy Extension** board.
 - **Wide connector:** plug it into the **Nextruder**-labeled slot on the **xBuddy board**.

PASSO 36 Fissare i cavi




- Adjust the cable management according to the picture. Route all cables along the edges.
- Tighten the zip ties on the right side and trim the excess.
- ⚠ **Do not overtighten to avoid damaging the cables.**
- **Leave the last connector of the head cable unplugged.** This will be done later on when we connect the dock fan.
- We recommend hanging the cable on the other cables so it does not get damaged when turning the printer.

PASSO 37 Ora delle Haribo!



- 🍭 Time for a little yummy gummy break.
- Take a small reward break: eat five gummy bears.

PASSO 38 INDX PTFE holders: parts preparation

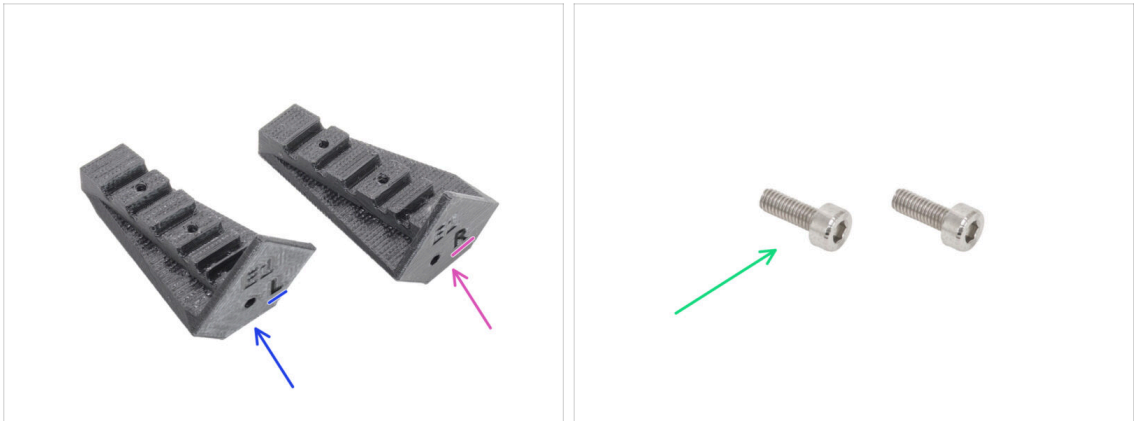

i Di seguito sono elencati i componenti necessari per la versione a 8 testine della stampante. Per la versione a 4 testine, saranno necessari solo il supporto in PTFE di sinistra e una vite.

For the following steps, prepare:


- L** INDX-PTFE-holder-left (1x) *marked "L" found in the Filament Holder Left bag*
- R** INDX-PTFE-holder-right (1x) *marked "R" found in the Filament Holder Right bag*
- G** M3x10 screw (2x) *you removed earlier*

PASSO 39 Installazione del supporto PTFE-holder-left



- O** Using the 2.5mm Allen key release and remove two M3x4 screws securing the top rear profile.
- L** Take the PTFE-holder-**left** and insert one M3x10 screw.
- Y** Align the PTFE-holder-left with the **left** hole on the top rear profile.
- G** Join both parts by fully tightening the M3x10 screw.

PASSO 40 Installazione del supporto PTFE-holder-right

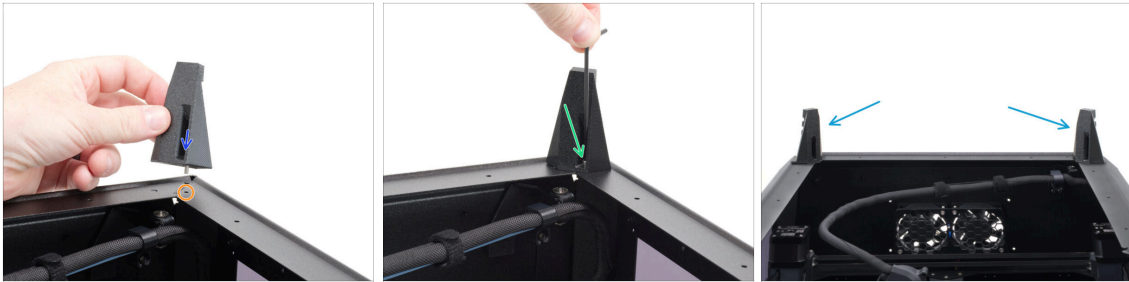

i Salta questo passaggio se hai la versione a 4 strumenti della Prusa CORE One/+ INDX.

- Take the PTFE-holder-**right** and insert one M3x10 screw.
- Align the PTFE-holder-right with the **right** hole on the rear profile.
- Join both parts by fully tightening the M3x10 screw.
- Visually compare both PTFE holders with the picture.

PASSO 41 Side filament sensors: parts preparation



i Di seguito sono elencati i componenti necessari per la versione della stampante a 8 testine. Per la versione a 4 testine, occorrerà la metà dei componenti.

- For the following steps, prepare:**
- INDX-C1-FS-top (1x) *found in the Filament holder L bag*
 - INDX-C1-FS-top (1x) *found in the Filament holder R bag*
 - i** Note that each part has a different position numbering.
 - Sleeve 2x5 (8x) *found in the Fasteners Tools INDX bag*
 - Collet (8x) *found in the Fasteners Tools INDX bag*
 - M3x12cT screw (4x) *found in the Fasteners 2/2 bag*
 - Magnet 3.2 x 5 (4x) *found in the Fasteners Tools INDX bag*

PASSO 42 Inserimento delle guaine



- Insert the 2x5 sleeves into the indicated positions in the square opening of the FS-top.
- Push each sleeve **fully into place** using a non-sharp tool. It will click when correctly seated.
- **Check from the side that each sleeve is in the correct position:**
 - The sleeve is in the correct position.
 - The sleeve needs to be pushed further.
- Repeat this procedure for all the sleeves on both FS-top parts.

PASSO 43 Inserimento dei colletti



- Position the FS-top with the square openings facing down.
- Insert the collets into the top openings.
- Use this procedure for both FS-top parts.

PASSO 44 Installare i magneti



- ✿ Insert the 5x2 magnet into the FS-top with the cut-out facing up.
- ✿ Secure the magnet with the M3x12cT screw.
- ❗ The magnet may stick to the T10 key during tightening; hold it in place by hand.
- ✿ Repeat the same process to install the remaining magnets on both FS-top parts.

PASSO 45 Assembling the FS: parts preparation I



- ❗ Di seguito sono elencati i componenti necessari per la versione della stampante a 8 testine. Per la versione a 4 testine, occorrerà la metà dei componenti.
- ✿ **For the following steps, please prepare:**
- ✿ Magnet 7x8 (8x) found in the Fasteners Tools INDX bag
- ✿ Steelball 7mm (8x) found in the Fasteners Tools INDX bag.

PASSO 46 Assembling the FS: parts preparation II



● For the following steps, please prepare:

- INDX-C1-FS-holder (1x) found in the Filament holder L bag
- INDX-C1-FS-holder (1x) found in the Filament holder R bag
- Filament sensor board Left (1x) found in the electronics box
- Filament sensor board Right (1x) found in the electronics box
- M3x12cT screw (8x) found in the Fasteners 2/2 bag


i Entrambi i supporti INDX-C1-FS-holders sono identici. Se possiedi la versione a 4 testine, hai ricevuto solo la scheda del sensore del filamento di sinistra con due connettori.

PASSO 47 Inserting the steel balls




- Insert one steelball 7mm into each round hole.
- Repeat the process with the second FS-top part.

PASSO 48 Fissare i magneti

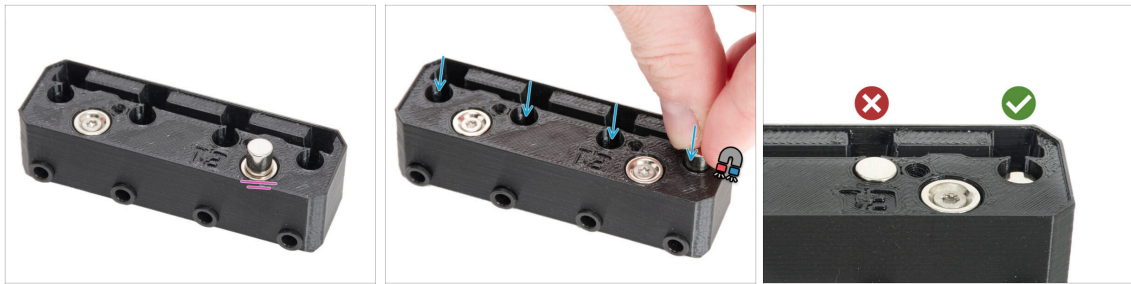

- ❗ **The magnets are quite strong.** Make sure that you keep both parts far from each other.
- 🟡 Place one of the 7x8 magnets onto the 5x2 magnet. Note which side **attracts the magnet**.
- 🔵 Insert the magnet in the same hole as you placed the steelball 7mm.
- ⚠️ **Make sure that you insert the magnet with the attracting side going first.**
- ⬛ **Check that you have the correct position of the magnets:**
 - 🔴 **NOT OK:** When the **magnet is poking out**, it needs to be flipped and inserted again correctly.
 - 🟢 **OK:** The **magnet is seated** in the hole.

PASSO 49 Assembling the FS-top left

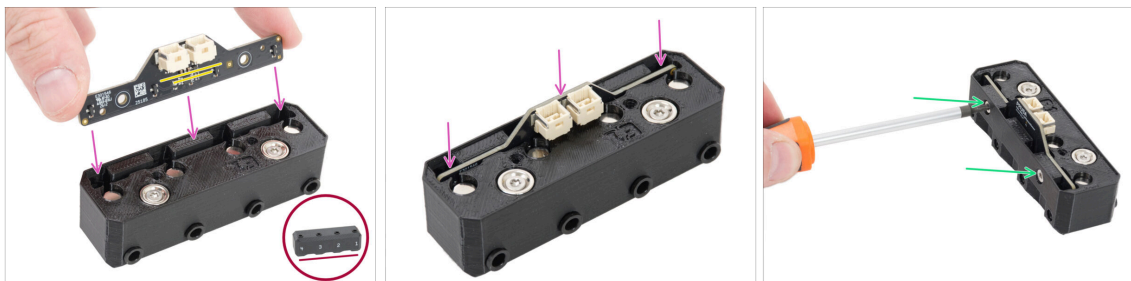


- 🔴 Prepare the FS-top assembly (**positions 4-1**).
- 🟡 Insert the filament sensor board **LEFT** (with two connectors) into the ridge in the filament sensor holder top.
- 🟡 Make sure the connectors are correctly oriented relative to the printed part.
- ⬛ Insert the part fully down.
- 🟢 Secure the part using two M3x12cT countersunk screws.

PASSO 50 Covering the FS - left



- Place the FS-holder onto the filament sensor assembly, ensuring the **connectors pass through the rectangular opening**.
- Use the two M3x12cT screws to secure the board in place. Tighten them firmly.
- i** Se hai la versione con 4 strumenti della Prusa CORE One/+ INDX, passa direttamente a questo passaggio: **Tubi in PTFE - lato sinistro: preparazione dei componenti**

PASSO 51 Assembling the FS-top right

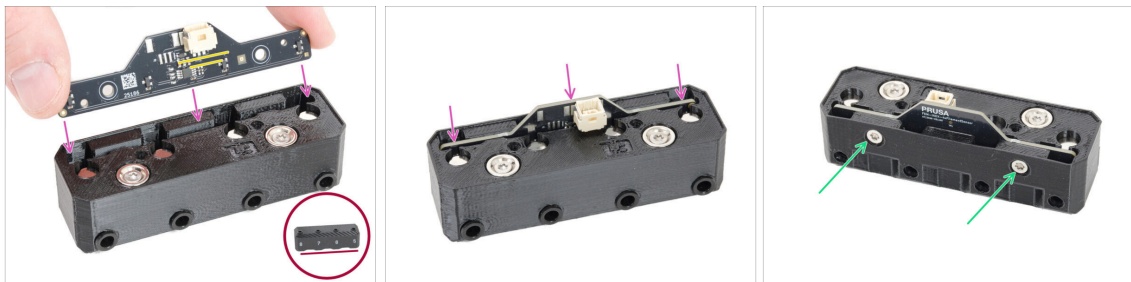

- Prepare the FS-top assembly with the **(positions 8-5)**.
- Insert the filament sensor board **RIGHT** (with one connector) into the ridge in the filament sensor holder top.
- Make sure the connector are correctly oriented relative to the printed part.
- Insert the part fully down.
- Secure the part using two M3x12cT countersunk screws.

PASSO 52 Covering the FS - right



- Prepare the filament sensor assembly right (positions 8-5).
- Place the FS-holder onto the filament sensor assembly, ensuring the **connector pass through the rectangular opening**.
- Use the two M3x12cT screws to secure the board in place. Tighten them firmly.
- 🔧 Se stai installando l'aggiornamento GEN 2 insieme alla conversione Prusa INDX, torna adesso all'articolo su Prusa INDX GEN 2.

PASSO 53 PTFE tubes - left side: parts preparation




- ① Di seguito trovi l'elenco dei componenti necessari per la versione a 8 strumenti della stampante. Per la versione a 4 strumenti, ti basta un solo cavo.
- **For the following steps, please prepare:**
- Filament sensor cable (2x) *found in the Cables bag*
- 3x12sT screw (2x) *found in the Fasteners 2/2 bag*
- PTFE tube 4 x 2.5 x 880 (4x) *found in the main box*

PASSO 54 Preparing the FS - left




- Remove the upper center nylon rivet from the left transparent side panel.
- Insert a 3x12sT screw from the inside into the rivet hole.
- Take the filament sensor assembly with the two connectors (positions 4-1) and connect the two filament sensor cables to it.
- ❗ **La versione a 4 strumenti della Prusa CORE One/+ INDX ha un cavo per il sensore del filamento.** Collegalo a uno qualsiasi dei connettori.
- ❗ Both ends of the filament sensor cable are identical and can be connected interchangeably.
- Guide the cables out through the cable channels on the left side.

PASSO 55 Mounting the FS - left

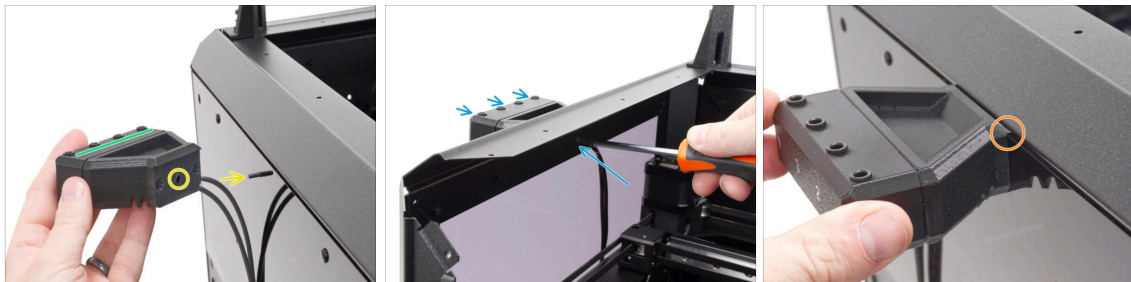


- Align the left filament sensor assembly with the protruding 3x12sT screw.
- Ensure correct orientation - the collets must face upward.
- Fully tighten the screw to secure the assembly. **Make sure that:**
 - The tab along the top edge is seated in the gap above the transparent side panel.

PASSO 56 Connecting the PTFE tube - left

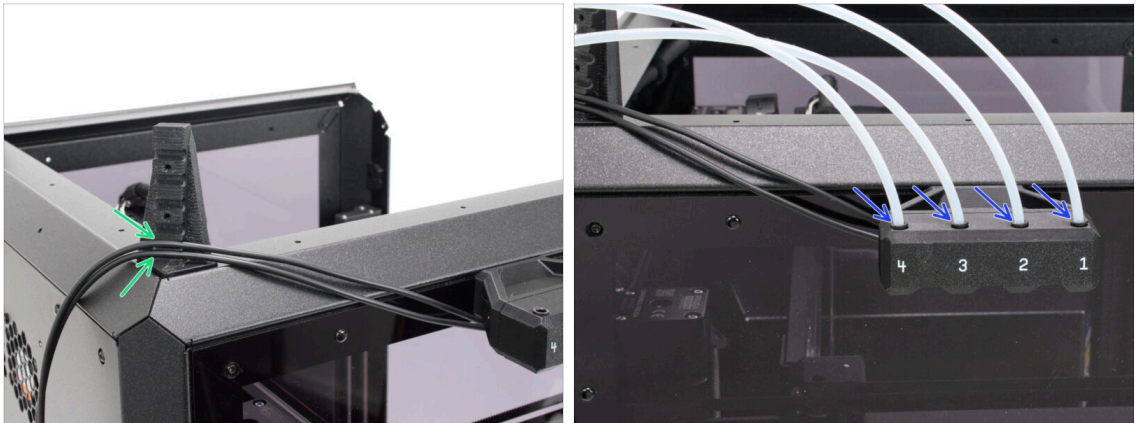

- Insert both filament sensor cables into the lower cable channels in the PTFE-holder.
- ① **La versione a 4 strumenti** della Prusa CORE One/+ INDX ha un cavo per il sensore del filamento. Fai passare il cavo attraverso il canale inferiore.
- The cables should neither sag nor be under tension along the route.
- Insert four PTFE tubes into the collets in the filament sensor.
- Once inserted, try to gently pull the tube out of the collet to verify it is locked in.

PASSO 57 PTFE measurement: parts preparation

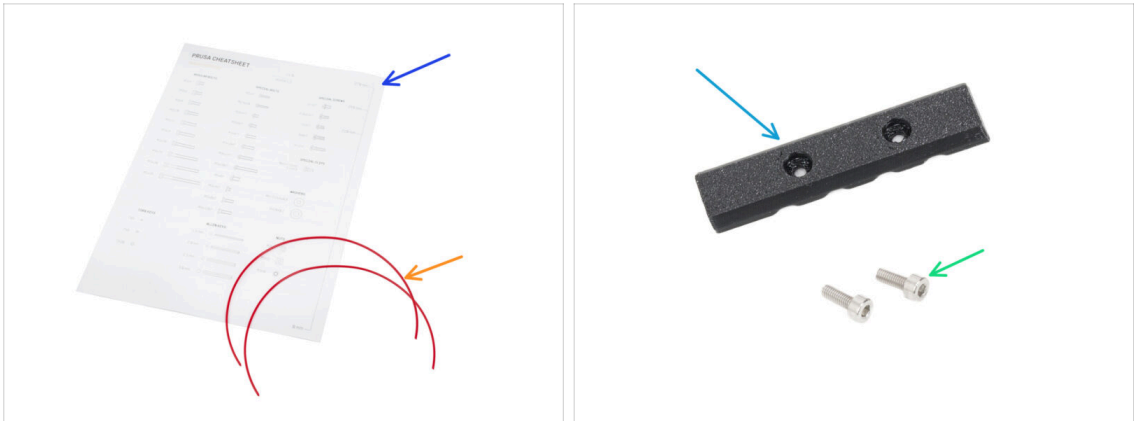

For the following parts, please prepare:

- Prusa Cheatsheet (1x)

i It is on the reverse side of the welcome letter you received at the beginning of the package.

- Filament 300 mm (2x)

✂ Cut two pieces of filament at least 300 mm long. We recommend using PETG, but it's not required.

i If you have a 300 mm gauge, you can use it as an alternative.

- INDX-PTFE-holder-cover (1x) *found in the Filament holder left bag*

- M3x10 screw (2x) *you removed earlier*

PASSO 58 Attaching the PTFE tubes - left



- Insert two M3x10 screws through the INDX-PTFE-holder-cover and keep the part nearby.

- Guide all four PTFE tubes through the channels in the PTFE-holder. Hold them in place by hand to prevent them from falling out.

⚠ Make sure the filament sensor cables are routed in the lower channels.

- Place the PTFE-holder-cover over the PTFE tubes and the cables. The part is not symmetrical, install it with the longer side facing down.

✳ Do not fully tighten it; the PTFE tubes must be able to move back and forth.

PASSO 59 Informazioni sulle misure



In the following steps, you will measure the correct PTFE tube length between the PTFE-holder and the filament sensor.



You can either use a measuring tape or the filament method described below:



Along the side of the **Prusa Cheatsheet** you received with your Prusa CORE One/+ INDX, note the scale in millimeters - these indicate the required PTFE tube lengths.



The initial length is 300 mm. **Do not shorten it yet.**



In the following steps, you will be instructed to shorten the filament to the required length.



Se hai la versione con 8 strumenti della Prusa CORE One/+ INDX, conserva il secondo pezzo di filamento per usarlo sul lato destro.

PASSO 60 Inserting the PTFE tubes (position 1,2)



Place one end of the filament at the filament sensor against the PTFE tube at **position 1**.



Place the other end against the same PTFE tube at the PTFE-holder.

Slide the filament in the PTFE-holder to match the PTFE tube length.



Cut the filament to **270 mm**.

Adjust the PTFE tube to **position 2** according to the shortened filament.




Fully tighten the upper screw.



This will lock the first PTFE tubes in place and prevent movement.

Prusa INDX Conversion kit for the Prusa CORE One/+ [Traduzione in corso]

PASSO 61 Inserting the PTFE tubes (position 3,4)

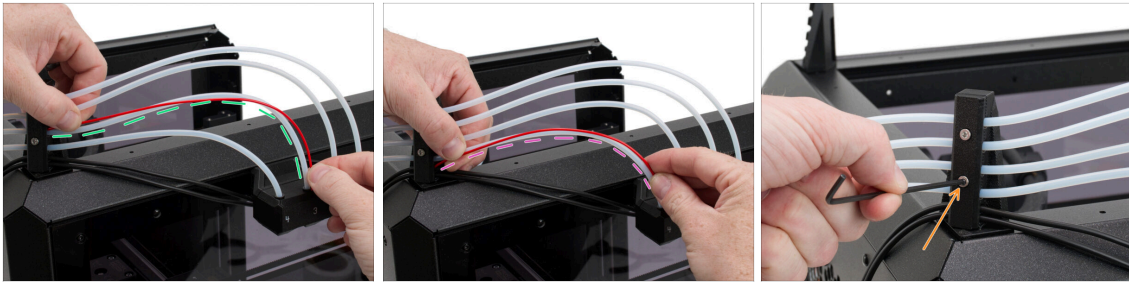

Cut the filament to **240 mm**.



Adjust the PTFE tube to **position 3** according to the shortened filament.



Cut the filament to **210 mm**.



Adjust the PTFE tube to **position 4** according to the shortened filament.




Fully tighten the lower screw.



Se hai la versione con 4 strumenti della Prusa CORE One/+ INDX, passa direttamente a questo passaggio: Collegamento del cavo del sensore del filamento

PASSO 62 PTFE tubes - right side: parts preparation

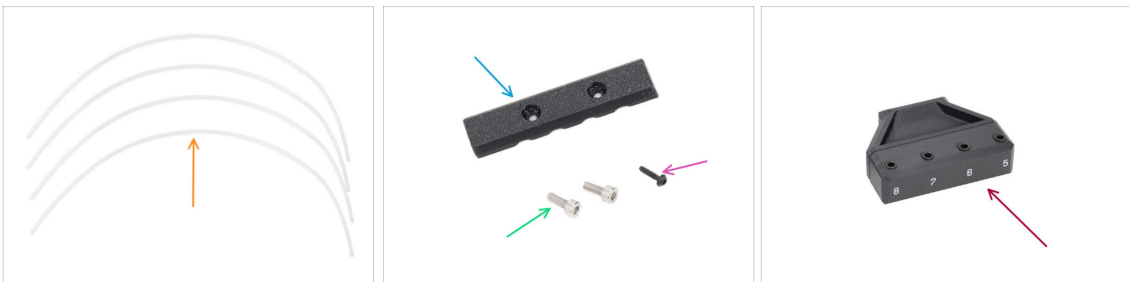

For the following steps, please prepare:



PTFE tube 4 x 2.5 x 880 (4x) *found in the main box*



INDX-PTFE-holder-cover (1x) *found in the Filament holder left bag*



3x12sT screw (2x) *found in the Fasteners 1/2 bag*



M3x10 screw (2x) *you removed earlier*



Right side filament sensor (1x) *scale 8-5*

PASSO 63 Preparing the FS - right



- Remove the upper center nylon rivet from the right transparent side panel.
- Insert a 3x12sT screw from the inside into the rivet hole.
- Take the filament sensor assembly with the one connector (positions 8-5) and connect the filament sensor cable to it.
-  The filament sensor cable we are connecting is one of the two cables plugged into the left filament sensor assembly.
-  It does not matter which of the two filament sensor cables you choose to plug into the right filament sensor assembly.
- Guide the filament sensor cable through any of the cable channels on the left side.

PASSO 64 Mounting the FS - right



- Align the right filament sensor assembly with the protruding 3x12sT screw.
- Ensure correct orientation - the collets must face upward.
- Fully tighten the screw to secure the assembly. **Make sure that:**
 - The tab along the top edge is seated in the gap above the transparent side panel.

PASSO 65 Connecting the PTFE tube - right



- Insert the filament sensor cable into the lower cable channel in the PTFE-holder.
- Let the excess cable hang freely at the back of the printer.
- Insert four PTFE tubes into the collets in the filament sensor.
- Gently pull the tube to verify it is locked in the collet.

PASSO 66 Attaching the PTFE tubes - right



- Insert two M3x10 screws through the INDX-PTFE-holder-cover and keep the part nearby.
- Guide all four PTFE tubes through the channels in the PTFE-holder. Hold them in place by hand to prevent them from falling out.
- ⚠ **Make sure the filament sensor cable is routed in the lower channel.**
- Place the PTFE-holder-cover over the PTFE tubes and the cables. The part is not symmetrical, install it with the longer side facing down.
- **Do not fully tighten it;** the PTFE tubes must be able to move back and forth.

PASSO 67 Inserting the PTFE tubes (position 8,7)




- Prepare the Prusa Cheatsheet and the second 300-mm filament.
- Place one end of the filament at the filament sensor against the PTFE tube at **position 8**.
- Place the other end against the same PTFE tube at the PTFE-holder.
- Slide the filament in the PTFE-holder to match the PTFE tube length.
- 📌 Cut the filament to **270 mm**.
- Adjust the PTFE tube to **position 7** according to the shortened filament.
- Fully tighten the upper screw.
- 📌 **i** This will lock the first PTFE tubes in place and prevent movement.

PASSO 68 Inserting the PTFE tubes (position 5,6)




- 📌 Cut the filament to **240 mm**.
- Adjust the PTFE tube to **position 6** according to the shortened filament.
- 📌 Cut the filament to **210 mm**.
- Adjust the PTFE tube to **position 5** according to the shortened filament.
- Fully tighten the lower screw.

PASSO 69 Connecting the filament sensor cable

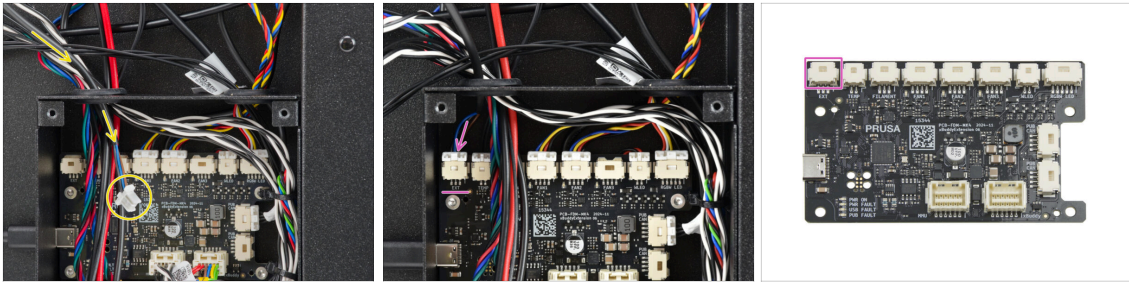

- Route the left filament sensor cable through the left opening in the xBuddy box.
- Plug the filament sensor cable into the first slot labeled **EXT** on the xBuddy Extension board.

PASSO 70 È l'ora delle Haribo!

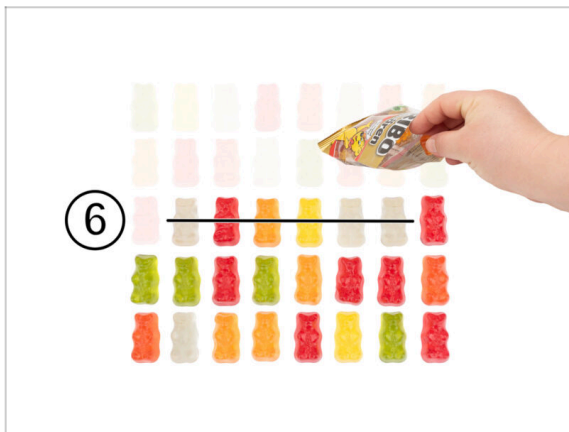

- Great job so far! Another dose of sugar is required.
- Eat six gummy bears.

PASSO 71 Fatto




- **Congratulations!** You have just assembled the INDX Toolhead and the side filament sensors.
- Let's go to the next chapter.

5. Portabobine e gruppo di dock degli strumenti



PASSO 1 Tools necessary for this chapter

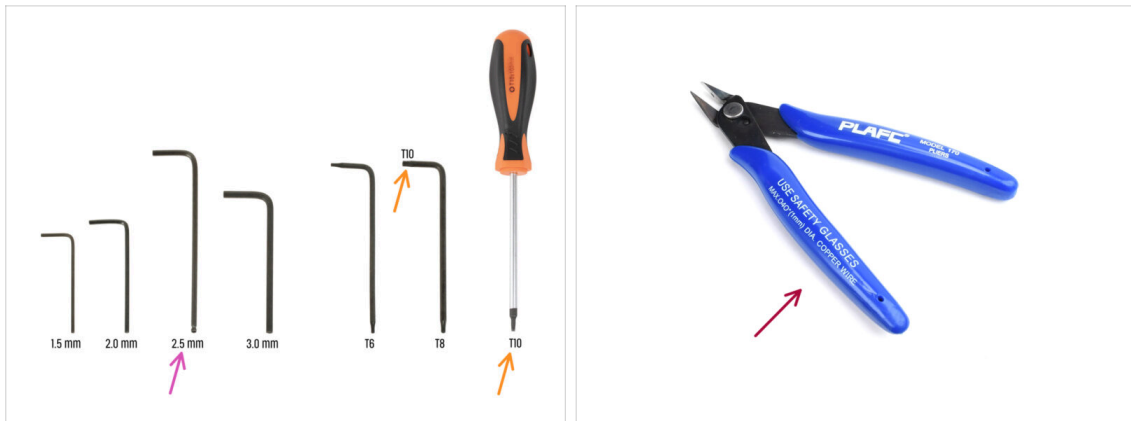

● **For this chapter, please prepare:**



● Chiave a brugola da 2.5mm

● T10 key / screwdriver

● Flush cutters - an optional tool, recommended to use for cutting the zip ties. It can be purchased from our e-shop prusa3d.com.



① Per questo capitolo, ti consigliamo anche di stampare lo strumento creato dalla community Snap-rivet-remover

PASSO 2 Removing the side cover - right

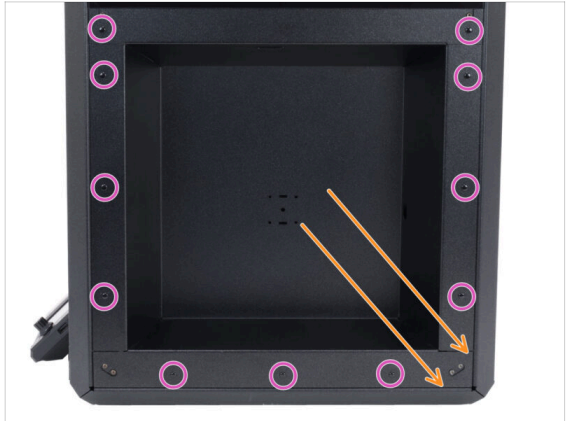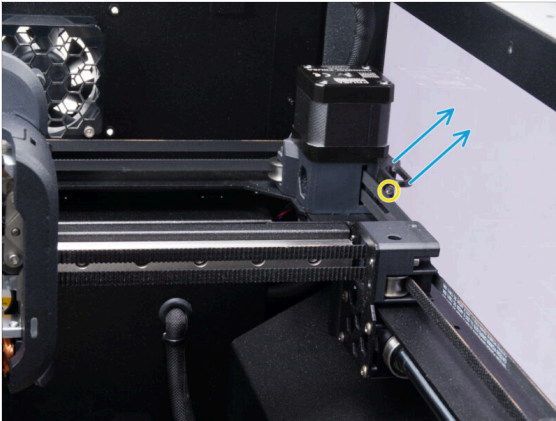

- ❶ Ti consigliamo di togliere la guida Bowden per facilitare l'inserimento della fascetta nel passaggio successivo.
- 🟡 Togli la vite M3x10 che fissa la guida del cavo Bowden nell'angolo posteriore destro della stampante.
- 🔵 Rimuovi la guida Bowden.
- 🟡 Remove the eleven nylon rivets that keep the right side cover attached to the printer.
 - ⬛ Puoi usare lo strumento core-one-snap-rivet-remover di cui si è parlato nel passaggio precedente.
- 🟠 Carefully remove the side cover and set it aside for now.
- ⬛ Set the side cover aside for now.

PASSO 3 Side handle: parts preparation

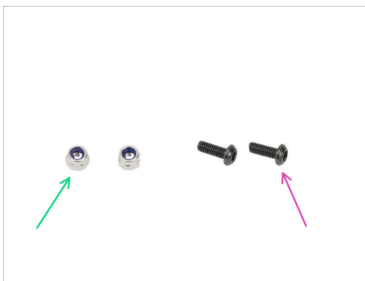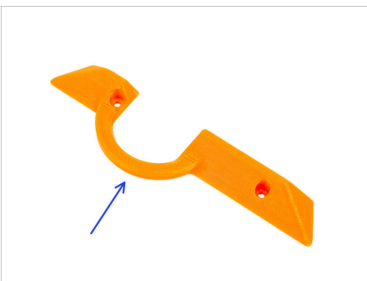


- ⬛ **For the following steps, prepare:**
- 🟡 Side-handle-right (1x) *found in the Wiper bag*
- 🟢 M3nN nut (2x) *found in the Fasteners 1/2 bag*
- 🟡 M3x8rT screw (2x) *you removed earlier*
- 🟠 Right side cover (1x) *you removed earlier*

PASSO 4 Installing the side handle



- Insert two M3x8rT screw into the Side-handle-right.
- Align the Side-handle-right with the holes in the right side panel and place it in position.
- Place M3nN nuts onto the screws and hold them with the universal tool.
- Firmly tighten the screws from the other side.

PASSO 5 Nozzle cleaner: parts preparation I.

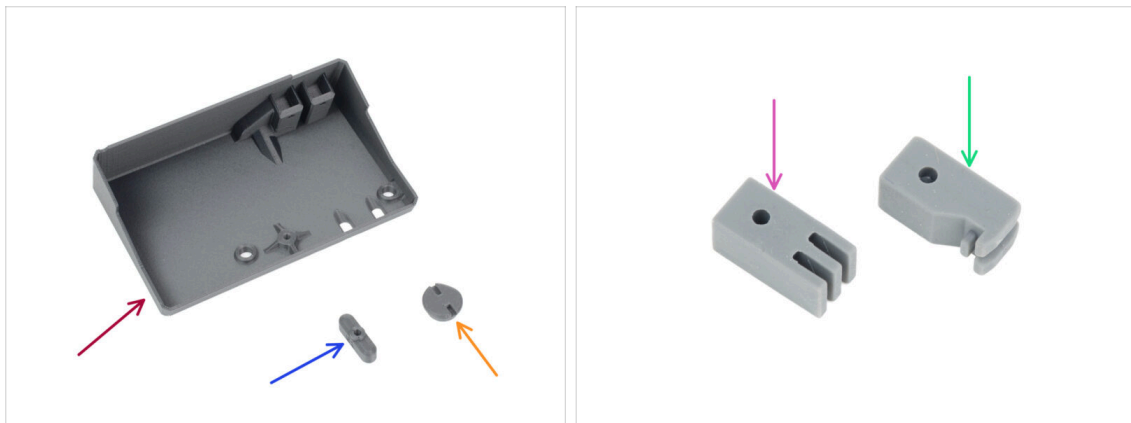

■ For the following steps, prepare:

- Wiper-base (1x) *trovato nella busta Wiper*


① Tieni presente che la base del raschietto Wiper-base che vedi nelle foto potrebbe differire leggermente dal pezzo che riceverai. Ciò non influisce né sul montaggio né sul funzionamento.

- Wiper-lock (1x) *si trova nella busta Wiper*
- Wiper-adjuster (1x) *si trova nella busta Wiper*
- Silicone wiper (1x) *found in the Fasteners 2/2 bag*
- Silicone priming block (1x) *found in the Fasteners 2/2 bag*



Nozzle cleaner is the name for the whole assembly.

PASSO 6 Nozzle cleaner: parts preparation II.

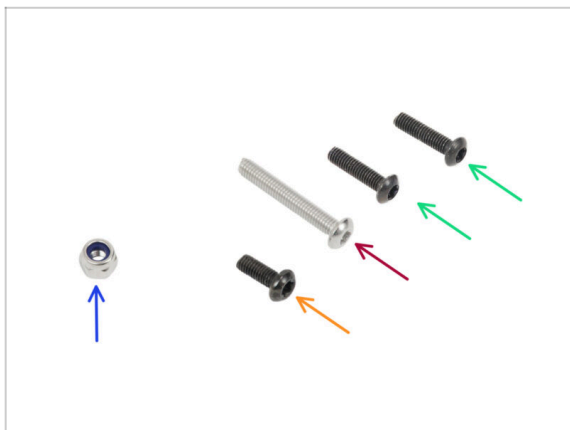

- M3nN nut (1x) found in the Fasteners 1/2 bag
- M3x8rT screw (1x) found in the Fasteners 2/2 bag
- M3x20rT screw (1x) found in the Fasteners 2/2 bag
- M3x12rT screw (2x) found in the Fasteners 2/2 bag

PASSO 7 Assemblaggio del Wiper-lock



- Push the M3x20rT screw through the Wiper-lock.
- Insert the Wiper-lock with the screw into the Wiper-base.

PASSO 8 Fissaggio del blocco del raschietto



- ✦ From the opposite side, place the M3nN nut onto the screw and tighten it using the universal wrench.
- ✦ Loosen it by a quarter to half a turn so the Wiper-lock can move.
- ✦ Set the Wiper-lock **according to the markings** on the Wiper-base.
- ❗ If the Wiper-lock moves on its own, slightly tighten the screw.

PASSO 9 Installare il Wiper-adjuster (Supporto Raschietto)



- ✦ Insert the M3x8rT screw through the channel in the Wiper-base.
- ✦ Align the hole in the Wiper-adjuster with the screw.
- ✦ Secure the Wiper-adjuster in the slots using the universal wrench and tighten the M3x8rT screw with a T10 screwdriver.
- ❗ Do not fully tighten so the Wiper-adjuster can be turned.
- ✦ Note the irregular shape of the Wiper-adjuster. Use the universal wrench to position it so that its **flattened side faces downward**.

PASSO 10 Inserting the wiper blocks




- Insert the silicone priming block into the front slot (left in the photo). Ensure the part is oriented correctly.
- Insert the silicone wiper into the rear slot (right in the photo).
- Check the correct position of the silicone wiper. The wiper is sloped; make sure that the sloped side points inside the Wiper-base.
- ❗ *Pro tip:* Lightly wipe the wiper blocks with IPA (Isopropyl alcohol) before inserting and securing them in the wiper base. This will make the insertion a lot easier.
- Secure the silicone wiper and priming block with two M3x12rT screws.
 - Guide the T10 key or screwdriver through the dedicated openings in the Wiper-base for better access.
- ⚠ **Double-check that the wiper is inserted correctly, with the sloped side pointing inside the Wiper-base.**

PASSO 11 Montaggio del gruppo del raschietto



- Inserisci il gruppo del raschietto nel foro presente sulla copertura laterale destra.
- Gira il fermo per fissare il gruppo del raschietto alla copertura.
- Per ora metti da parte la copertura laterale con il gruppo del raschietto montato; lo installeremo sulla stampante tra poco.

PASSO 12 Dock fan cable: parts preparation

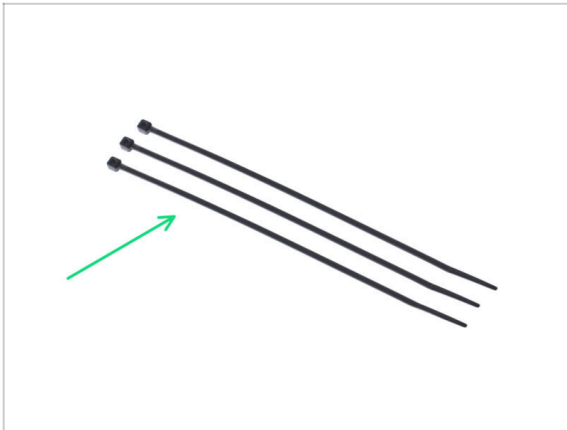

● For the following steps, prepare:


● Fascetta (3x)

PASSO 13 Attaching the dock fan cable



- The dock fan cable connector is the remaining part of the head cable.
 - Insert the Dock fan cable connector through the lower oval opening on the left side of the rear panel.
 - Push the cable inside.
 - Inside the printer, gently pull the dock fan cable as shown in the photo.
- ⓘ Alcune delle nostre stampanti non sono dotate del gommino sull'apertura inferiore. Ciò non influisce sul processo.

PASSO 14 Leading the dock fan cable I.

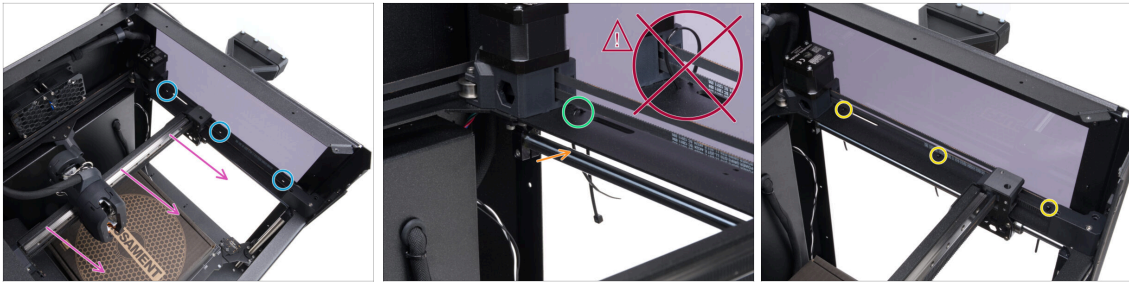


- Nota le tre coppie di fori sul lato destro della stampante.
- Move the INDX Toolhead to the front, between the front and the middle holes on the right side.
- Insert one zip tie into the rear hole as shown in the photo.
⚠ Make sure that the zip tie is NOT looped around the belts!
- Ensure that the zip tie is led as shown in the photo and that it is not looped around the smooth rod.
- ⓘ Check again that the cable is led correctly behind the rod holder and above the smooth rod.

PASSO 15 Passaggio del cavo della ventola Dock




- Connect all three zip ties as shown in the photo. Do not tighten them yet.
- Lead the dock fan cable through all three connected zip ties.
- Inserisci l'estremità del cavo della ventola del dock all'interno della stampante. Non avvolgerlo attorno al profilo anteriore destro.

PASSO 16 Fissaggio delle fascette

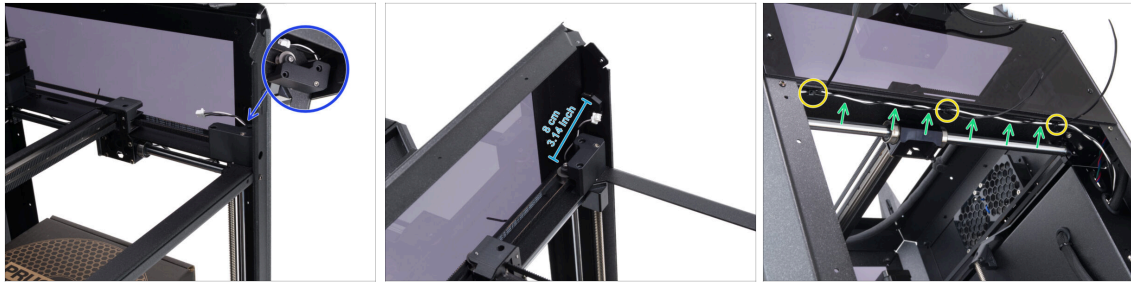



- Lead the dock fan cable through the opening between the core XY and the printer's frame.
- Before tightening the zipties, ensure that the dock fan cable is in position and protruding 8 cm/3.14 inches.
- Ensure that the cable is not slack between the zip ties.
- Stringi le fascette.

PASSO 17 Securing the zip ties II.

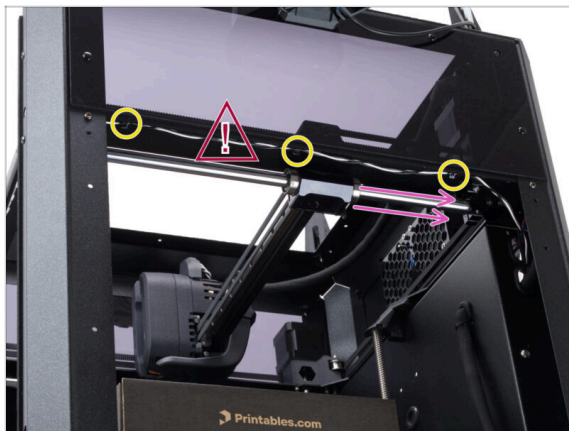

- Move the INDX Tollhead all the way to the back of the printer.
- Taglia la parte in eccesso della fascetta.
- ⚠ **Mentre sposti la testina di stampa, assicurati che il cavo **non ostacoli il movimento degli assi X e Y.****
- 📌 Se stai installando l'aggiornamento GEN 2 insieme alla conversione Prusa INDX, **torna adesso all'articolo Prusa INDX GEN 2.**

PASSO 18 Electronics covers: parts preparation

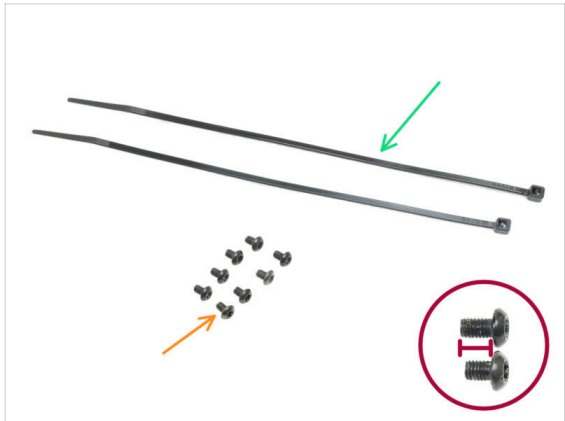
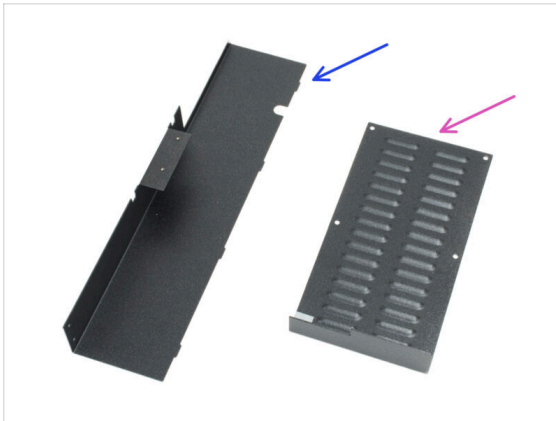


● For the following steps, prepare:

- Sheet metal back cover (1x)
- Copertura xBuddy (1x)
- Fascetta (2x)
- M3x4rT screw (8x) *you removed earlier*


⚠ Be careful **not to mix up the M3x4rT and M3x5rT screws**, which you will need later for the door assembly.

PASSO 19 Fissare i cavi

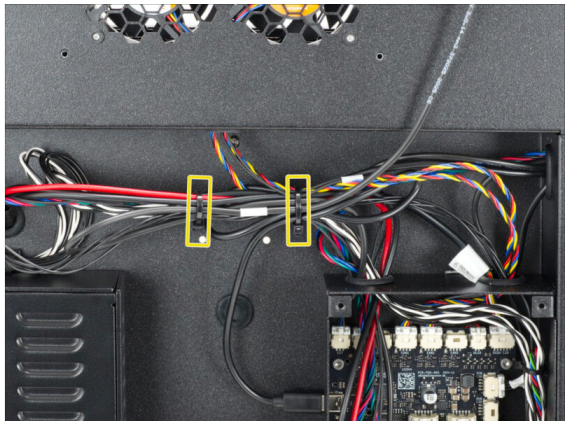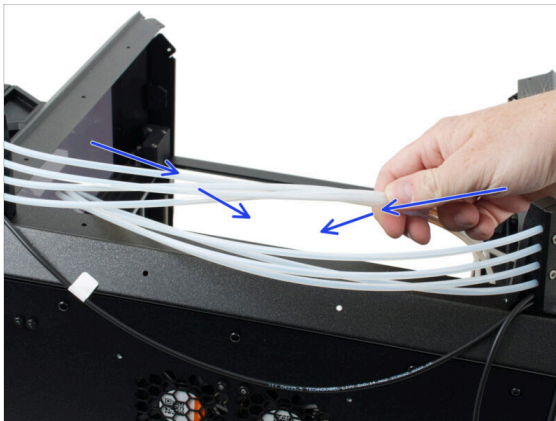

- Insert all loose ends of the PTFE tubes inside the printer.
- Bundle the cables together and secure them with two zip ties. **Do not overtighten the zip ties.**

PASSO 20 Controllo del cablaggio

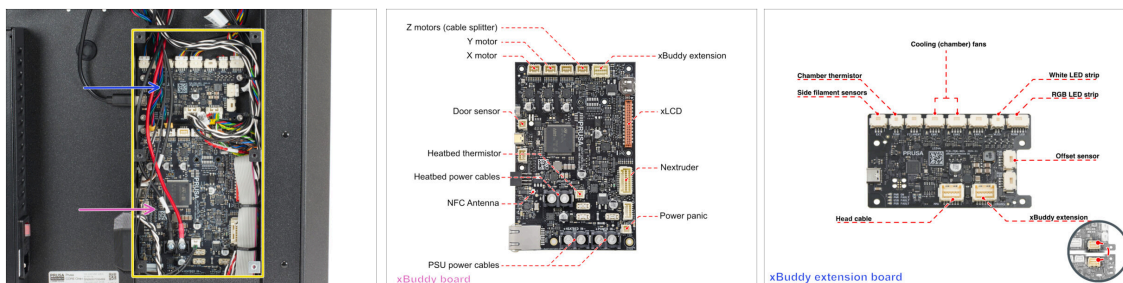

- ✦ Before closing the electronics cover, check that everything is correctly connected.
- ⬛ Use the pictures as a reference to verify your electronics connections.
- ⬛ **The electronics compartment is divided into two boards:**
 - ✦ Scheda xBuddy
 - ✦ Scheda di estensione xBuddy

PASSO 21 Covering the xBuddy box




- ✦ Carefully cover the xBuddy box by first sliding the bent part of the cover into the box.
- ⚠ **Avoid pinching the cables** and make sure to insert the cover parallel to the xBuddyboard.
- ✦ Fissa la copertura della scatola xBuddy con le sei viti M3x4rT che hai rimosso in precedenza.

PASSO 22 Installing the rear cover



- Align the rear sheet metal cover so that the cables can run through the "tray".
- Place the rear sheet metal cover into the recess. Push it toward the printer, then move it upward to engage it.
 - There are four tabs that should engage into the printer's chassis.
- Insert the filament sensor cable to the cutout.
- If you have a USB-C cable for the Buddy3D camera installed, route it through the lower cutout.
- From the inside of the printer, secure the rear cover in place using two M3x4rT screws you removed earlier.

PASSO 23 Montaggio del pannello laterale: preparazione dei componenti

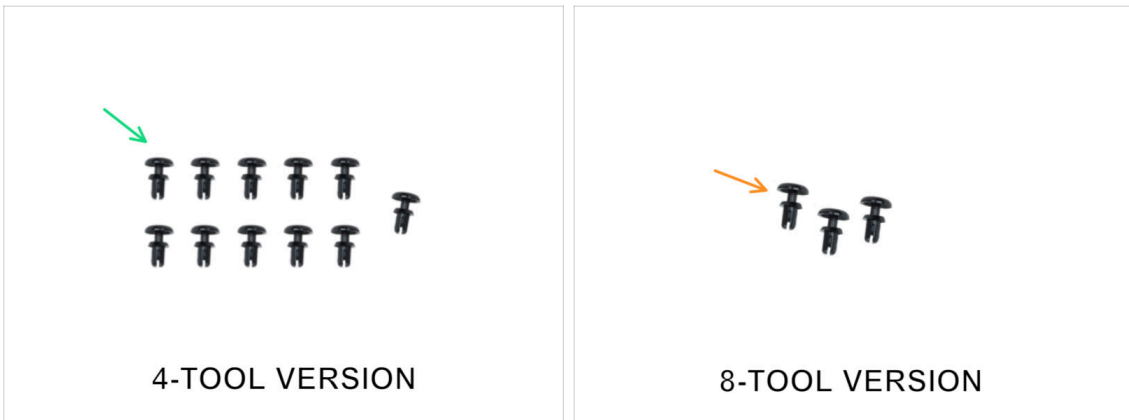

- For the following steps, prepare:
- **Versione 4-Strumenti:**
 - Rivetto in Nylon (11x) si trova nella busta Fasteners 1/2
- **Versione 8-Strumenti:**
 - Rivetto in Nylon (3x) che si trova nella busta Fasteners 1/2

PASSO 24 Mounting the right side panel




Versione 4-Strumenti:

- Mount the side cover onto the printer.
- Make sure that the INDX Toolhead is in the back of the printer, so the wiper assembly does not hit it.
- Secure the right side cover with **11 nylon rivets** as shown.

Versione 8-Strumenti:

- Mount the side cover onto the printer.
- Make sure that the INDX Toolhead is in the back of the printer, so the wiper assembly does not hit it.
- Secure the right side cover with **3 nylon rivets** as shown.

PASSO 25 Bottom puck holders: parts preparation

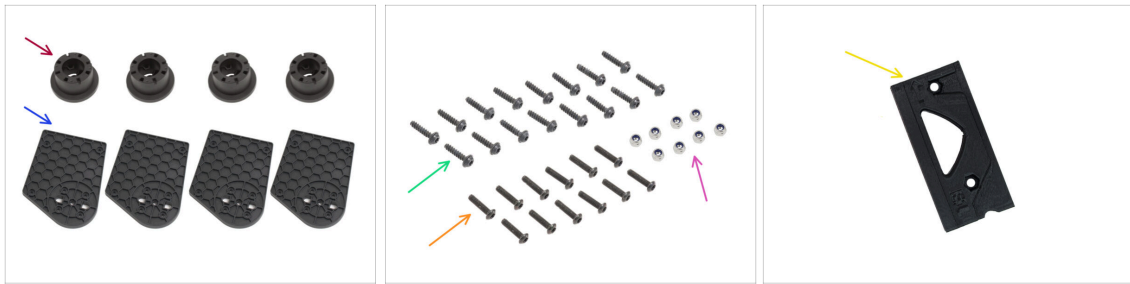

i Di seguito sono elencati i componenti necessari per la versione della stampante a 8 testine. **Per la versione a 4 testine, occorrerà la metà dei componenti.**

For the following steps, prepare:

- Universal puck (4x) *each found in the Telescopic Spoolholder Set bag*
- Puck holder bottom (4x) *found in the Puck Holders bag*
- 3x12sT screw (16x) *found in the Telescopic Spoolholder Set bags by a set of four*
- M3x12rT screw (12x) *found in the Fasteners 2/2 bag*
- M3nN nut (8x) *found in the Fasteners 1/2 bag*
- Spoolholder-assembly-tool (1x) *found in the Position Tools INDX bag*

PASSO 26 Assembling the bottom puck holders



- Note the two protrusions on the puck universal. These have to be inserted into the openings in the puck holder top.
- Align the Puck holder top with the holes in the Puck-universal part and press the parts together.
- Join the parts using four 3x12sT screws.
- Install another Puck holder bottom onto the next Puck-universal part, but in a **mirrored orientation**.
- **Se hai la versione con 8 strumenti di Prusa CORE One/+ INDX, monta la seconda coppia di parti inferiori del supporto dei dischi seguendo la stessa procedura.**

PASSO 27 Removing the screws - left



- On the left side of the printer, remove the two marked nylon rivets from each lower corner.
- Remove the **upper** M3x4rT screw from the front corner of the side panel.
- Rimuovi la vite M3x4rT **superiore** dall'angolo posteriore del pannello laterale.

PASSO 28 Mounting the bottom puck holders - left



- i** Il design dei dischi universali nelle foto potrebbe differire da quello dei dischi che hai ricevuto. Ciò non influisce sul processo di montaggio.
- Place one Puck holder bottom in the rear corner on the left side. Ensure that the orientation is correct.
 - Secure it with the M3x12rT screw.
 - Place one Puck holder bottom in the front corner on the left side. Ensure that the orientation is correct.
 - Secure it with the M3x12rT screw.


PASSO 29 Fissare il porta disco anteriore, parte inferiore - sinistra I.



- i** We use an orange Spoolholder-assembly-tool in this guide for clarity. Your Spoolholder-assembly-tool is black.
- Insert one M3nN nut into the Spoolholder-assembly-tool as shown in the photo.

 - **Assicurati che il dado sia inserito fino in fondo**, altrimenti potresti danneggiare il Spoolholder-assembly-tool!
 - i** **The side of the nut without the rubber must point outward from the Spoolholder-assembly-tool.**
 - Double-check that the nut is inserted in the same hole closer to the top edge, with the **arrow pointing UP** next to it.
- Insert the Spoolholder-assembly-tool **in the front left corner of the printer**, with the M3nN nut facing the side cover.
- ⚠** **Presta attenzione all'orientamento dello strumento di montaggio Spoolholder-assembly-tool nella foto.**
- "Hook" the ridge in the assembly tool onto the side of the metal profile.
- i** The M3nN nut is now in the right position and height for the puck holder bottom to be attached to the printer with the M3x12rT screw.

PASSO 30 Fissare il porta disco anteriore, parte inferiore - sinistra II.

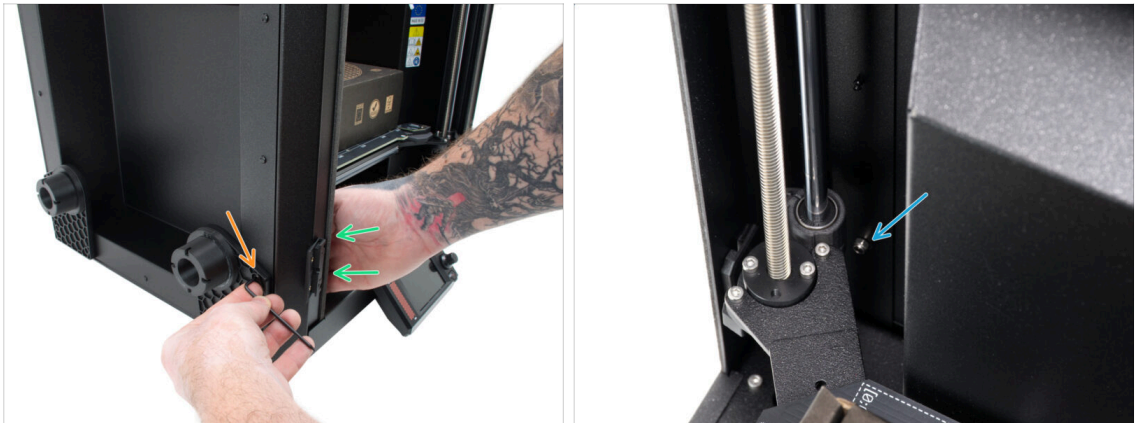

- Hold the Spoolholder-assembly-tool in position with your hand on the inside of the printer.
- Use the Torx key to tighten the M3x12rT screw.
- The front left puck holder is now attached to the printer.

PASSO 31 Fissare il porta disco posteriore, parte inferiore - sinistra I.




- Insert one M3nN nut into the Spoolholder-assembly-tool as shown in the photo.
- **Assicurati che il dado sia inserito fino in fondo**, altrimenti potresti danneggiare il Spoolholder-assembly-tool!
- ① **The side of the nut without the rubber must point outward from the Spoolholder-assembly-tool.**
- Double-check that the nut is inserted in the same hole closer to the top edge, with the **arrow pointing RIGHT next to it.**
- Insert the Spoolholder-assembly-tool **into the printer**, with the M3nN nut facing the side cover.
- ⚠ **Note the orientation of the Spoolholder-assembly-tool in the photo, where it is inserted into the printer.**
- "Hook" the ridge in the assembly tool onto the side of the metal profile.
- ① The M3nN nut is now in the right position and height for the puck holder bottom to be attached to the printer with the M3x12rT screw.

PASSO 32 Securing the rear puck holder bottom - left II.



- Hold the Spoolholder-assembly-tool in position with your hand on the inside of the printer.
- Use the Torx key to tighten the M3x12rT screw.
- The rear left puck holder is now attached to the printer.
- **Se hai la versione a 8 strumenti** , metti da parte i supporti rimanenti per i dischi; li monteremo più tardi.

PASSO 33 Top puck holders: parts preparation

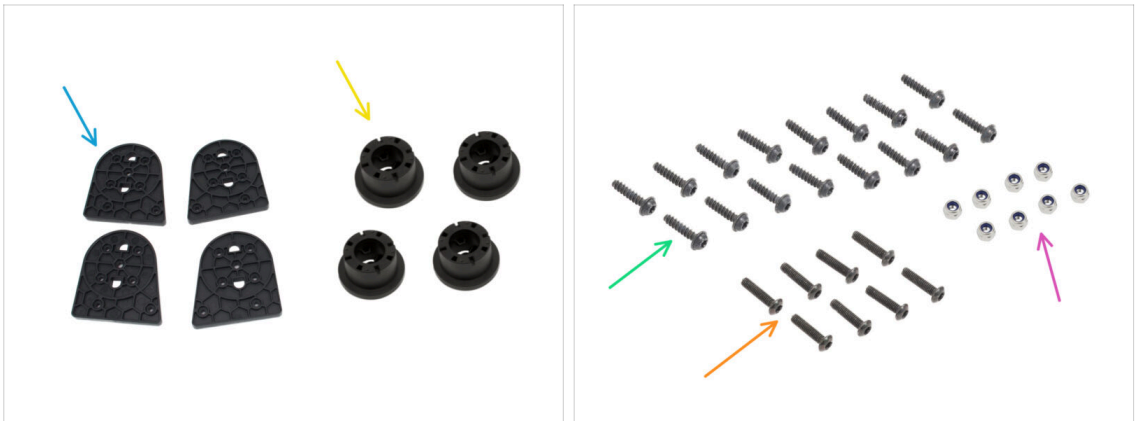

❗ Di seguito sono elencati i componenti necessari per la versione della stampante a 8 testine. **Per la versione a 4 testine, occorrerà la metà dei componenti elencati.**

● **For the following steps, prepare:**

- Supporto disco superiore (4x) *si trova nella confezione Pucks Holders*
- Puck-universal (4x) *found in the Pucks bag*
- 3x12sT screw (16x) *found in the Telescopic Spoolholder Set bags by a set of four*
- M3x12rT screw (8x) *found in the Fasteners 2/2 bag*
- M3nN nut (8x) *found in the Fasteners 1/2 bag*

PASSO 34 Assembling the puck holder top




- ◆ Note the two notches on the Puck universal. These have to be inserted into the openings in the Puck holder top.
- ◆ Align the Puck holder top with the holes in the Puck-universal part and press the parts together.
- ◆ Join the parts using four 3x12sT screws.
- ◆ Install another Puck holder top onto the next Puck-universal part, but **in a mirrored orientation**.
- ◆ **Se hai la versione con 8 strumenti**, monta la **seconda coppia** di supporti dei dischi superiori seguendo lo stesso procedimento.

PASSO 35 Rimozione dei rivetti in nylon superiori - sinistra




- ◆ On the left side of the printer, remove the two marked nylon rivets from each top corner.

PASSO 36 Mounting the front puck holder top - left

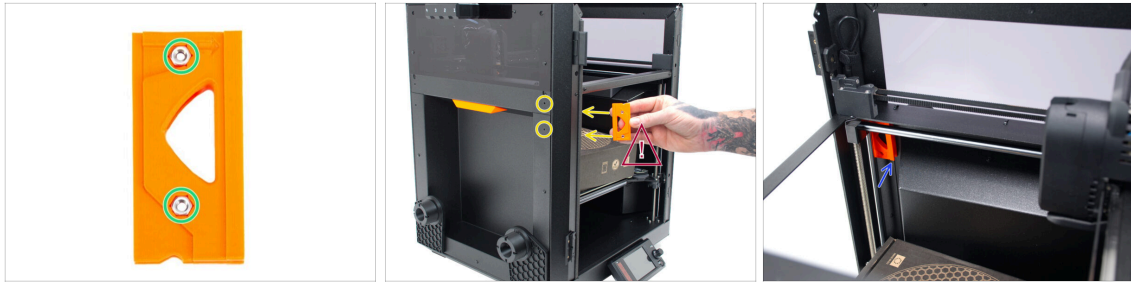


- Insert two M3nN nuts into the Spoolholder-assembly-tool as shown in the photo.
- ⬛ **Assicurati che il dado sia inserito fino in fondo**, altrimenti potresti danneggiare il Spoolholder-assembly-tool!
- ⓘ **The side of the nut without the rubber must point outward from the Spoolholder-assembly-tool.**
- ⬛ Double-check that the nut is inserted in the same hole closer to the top edge, with the **arrow pointing RIGHT next to it.**
- Insert the Spoolholder-assembly-tool **into the printer**, with the M3nN nuts facing the side cover.
- ⚠ **Note the orientation of the Spoolholder-assembly-tool in the photo, where it is inserted into the printer.**
- "Hook" the ridge in the assembly tool onto the side of the metal profile and gently push the tool upwards.
- ⓘ The M3nN nuts are now in the right position and height for the puck holder top to be attached to the printer with two M3x12rT screws.

PASSO 37 Securing the front puck holder top - left

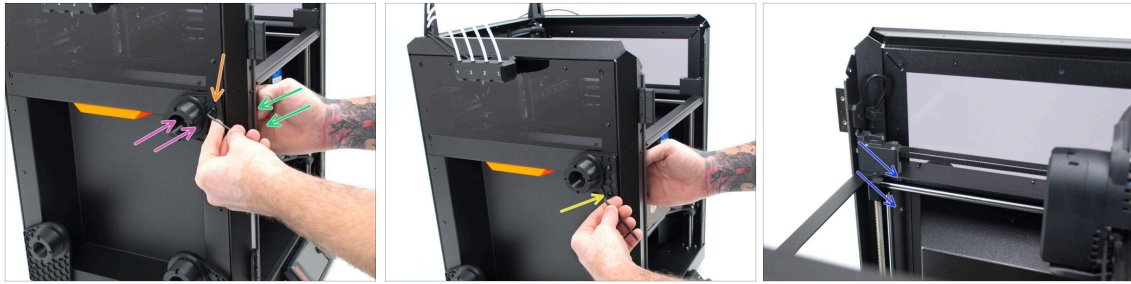

- Hold the Spoolholder-assembly-tool in position with your hand on the inside of the printer.
- Place the front puck holder top on the printer. Note the correct position in the photo.
- ① Insert the M3x12rT screw into the front puck holder top before attaching it to make it easier to connect the screw with the nut. Using only one hand is a bit fiddly, but manageable.
- Use the Torx key to tighten the top M3x12rT screw.
- Use the Torx key to tighten the lower M3x12rT screw.
- The front left puck holder is now attached to the printer.

PASSO 38 Mounting the rear puck holder top - left

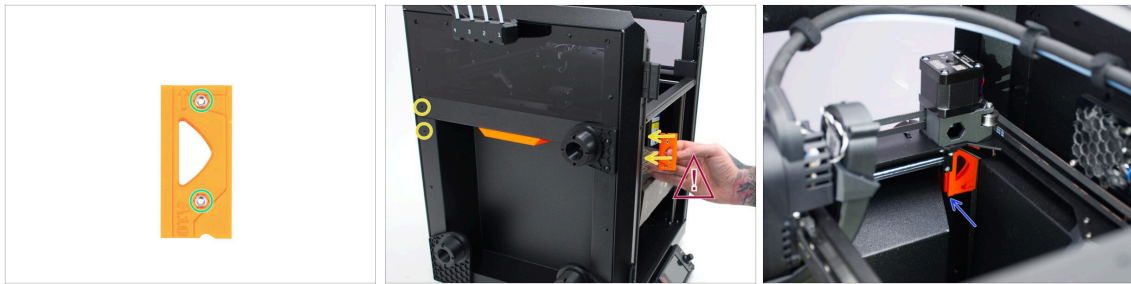

- Insert two M3nN nuts into the Spoolholder-assembly-tool as shown in the photo.
- ⬛ **Assicurati che il dado sia inserito fino in fondo**, altrimenti potresti danneggiare il Spoolholder-assembly-tool!
- ⓘ **The side of the nut without the rubber must point outward from the Spoolholder-assembly-tool.**
- ⬛ Double-check that the nut is inserted in the same hole closer to the top edge, with the **arrow pointing UP** next to it.
- Insert the Spoolholder-assembly-tool **into the printer**, with the M3nN nuts facing the side cover.
- ⚠ **Note the orientation of the Spoolholder-assembly-tool in the photo, where it is inserted into the printer.**
- "Hook" the ridge in the assembly tool onto the side of the metal profile and gently push the tool upwards.
- ⓘ The M3nN nuts are now in the right position and height for the puck holder top to be attached to the printer with two M3x12rT screws.

PASSO 39 Securing the rear puck holder top - left



- Hold the Spoolholder-assembly-tool in position with your hand on the inside of the printer.
- Place the rear puck holder top on the printer. Note the correct position in the photo.
- ⓘ Insert the M3x12rT screw into the front puck holder top before attaching it to make it easier to connect the screw to the nut. Using only one hand is a bit fiddly, but manageable.
- Use the Torx key to tighten the top M3x12rT screw.
- Use the Torx key to tighten the lower M3x12rT screw.
- The rear left puck holder is now attached to the printer.
- ⓘ Se hai la versione **a 4 strumenti della Prusa CORE One/+ INDX**, passa direttamente a questo passaggio: **Inclinare la stampante**

PASSO 40 Removing the screws - right



- Sul lato destro della stampante, rimuovi la vite M3x4rT **superiore** dall'angolo anteriore del pannello laterale.
- Rimuovi la vite M3x4rT **superiore** dall'angolo posteriore del pannello laterale.

PASSO 41 Mounting the bottom puck holders - right



- Posiziona un supporto per il disco inferiore nell'angolo anteriore destro. Assicurati che l'orientamento sia corretto.
- Secure it with the M3x12rT screw.
- Place one Puck holder bottom in the back corner on the right side. Ensure that the orientation is correct.
- Secure it with the M3x12rT screw.

PASSO 42 Securing the front Puck-holder bottom - right I.



- Insert one M3nN nut into the Spoolholder-assembly-tool as shown in the photo.
- **Assicurati che il dado sia inserito fino in fondo**, altrimenti potresti danneggiare il Spoolholder-assembly-tool!
- **The side of the nut without the rubber must point outward from the Spoolholder-assembly-tool.**
- Double-check that the nut is inserted in the same hole closer to the top edge, with the **arrow pointing RIGHT next to it.**
- Insert the Spoolholder-assembly-tool inside the front corner of the printer, with the M3nN nut facing the side cover.
- ⚠ **Presta attenzione all'orientamento dello strumento di montaggio Spoolholder-assembly-tool nella foto.**
- "Hook" the ridge in the assembly tool onto the side of the metal profile.
- The M3nN nut is now in the right position and height for the puck holder bottom to be attached to the printer with the M3x12rT screw.

PASSO 43 Securing the front Puck-holder bottom - right II.



- Hold the Spoolholder-assembly-tool in position with your hand on the inside of the printer.
- Use the Torx key to tighten the M3x12rT screw.
- The front right puck holder is now attached to the printer.

PASSO 44 Securing the rear Puck-holder bottom - right I.




- 🟢 Insert one M3nN nut into the Spoolholder-assembly-tool as shown in the photo.
- ⬛ **Assicurati che il dado sia inserito fino in fondo**, altrimenti potresti danneggiare il Spoolholder-assembly-tool!
- 📘 **The side of the nut without the rubber must point outward from the Spoolholder-assembly-tool.**
- ⬛ Double-check that the nut is inserted in the same hole closer to the top edge, with the **arrow pointing UP** next to it.
- 🟡 Insert the Spoolholder-assembly-tool into the back of the printer, with the M3nN nut facing the side cover.
- ⚠️ **Note the orientation of the Spoolholder-assembly-tool in the photo, where it is inserted into the printer.**
- 🟡 "Hook" the ridge in the assembly tool onto the side of the metal profile.
- 📘 The M3nN nut is now in the right position and height for the puck holder bottom to be attached to the printer with the M3x12rT screw.

PASSO 45 Securing the rear Puck-holder bottom - right II.



- 🟢 Hold the Spoolholder-assembly-tool in position with your hand on the inside of the printer.
- 🟡 Use the Torx key to tighten the M3x12rT screw.
- 🟡 The rear right puck holder is now attached to the printer.

PASSO 46 Come inclinare la stampante

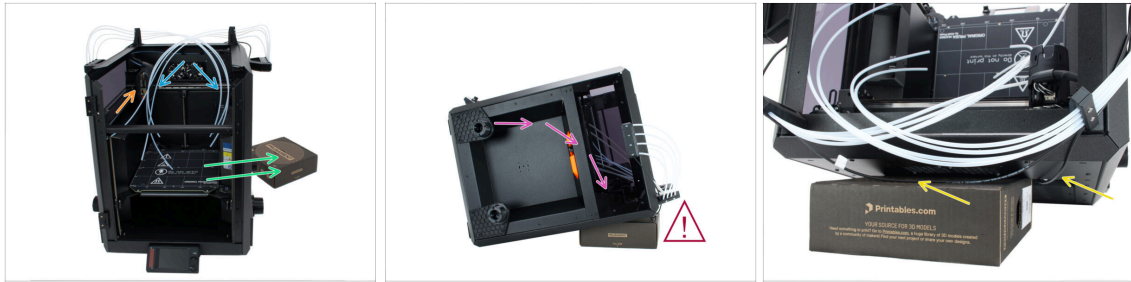

- ❗ Nella foto c'è la versione a 8 strumenti della Prusa CORE One/+ INDX, con i supporti per i dischi in basso a destra e i sensori di filamento a destra inclusi.
- Remove the Prusament box from the heatbed and place it behind the printer.
 - Move the toolhead to the back of the printer.
 - Place all the PTFE tubes inside the printer.
 - Place the box behind the printer and slowly and carefully lay the printer down so it can lean on the box.
- ⚠ **Ensure that the printer is stable and that it can not slide or fall when tilted. We recommend asking someone to hold the printer while it rests on the box to ensure your safety.**
- Ensure that the filament sensor cables are not pinched.

PASSO 47 Finishing the rear puck holder bottom - left I.



- 🟢 Insert one M3nN nut into the Spoolholder-assembly-tool as shown in the photo.
- ⬛ **Assicurati che il dado sia inserito fino in fondo**, altrimenti potresti danneggiare il Spoolholder-assembly-tool!
- 📌 **The side of the nut without the rubber must point outward from the Spoolholder-assembly-tool.**
- ⬛ Double-check that the nut is inserted in the same hole closer to the top edge, with the **arrow pointing RIGHT** next to it.
- 🟢 Use the highlighted ridge in the Spoolholder-assembly-tool to position the tool correctly against the printer profile.
- 🟡 Insert the Spoolholder-assembly-tool with the M3nN nut inside the bottom of the printer, with **the nut facing the side cover**.
- 🟢 Check that the Spoolholder-assembly-tool is placed correctly. The bottom profile of the printer has to align with the ridge in the tool.
- 📌 The M3nN nut is now in the right position and height for the puck holder bottom to be attached to the printer with the M3x12rT screw.

PASSO 48 Finishing the rear puck holder bottom - left II.



- 🟢 Hold the Spoolholder-assembly-tool in position with your hand on the inside of the printer.
- 🟡 Use the Torx key to tighten the M3x12rT screw.
- 🟢 The rear left puck holder is now completely attached to the printer.

PASSO 49 Finishing the front puck holder bottom - left I.




- Insert one M3nN nut into the Spoolholder-assembly-tool as shown in the photo.
- Assicurati che il dado sia inserito fino in fondo, altrimenti potresti danneggiare il Spoolholder-assembly-tool!
- i** The side of the nut without the rubber must point outward from the Spoolholder-assembly-tool.
- Double-check that the nut is inserted in the same hole closer to the top edge, with the arrow pointing UP next to it.
- Insert the Spoolholder-assembly-tool under the front of the printer, with the M3nN nut facing the side cover.
- "Hook" the ridge in the assembly tool onto the side of the metal profile as you did with the rear puck holder. Gently push the tool upwards.

PASSO 50 Finishing the front puck holder bottom - left II.



- Hold the Spoolholder-assembly-tool in position with your hand on the inside of the bottom of the printer.
- Use the Torx key to tighten the M3x12rT screw.
- The front left puck holder is now completely attached to the printer.
- i** Se hai la versione a 4 strumenti di Prusa CORE One/+ INDX, passa direttamente a questo passaggio: **Ventola del Dock: preparazione dei componenti**

PASSO 51 Finishing the rear puck holder bottom - right I.

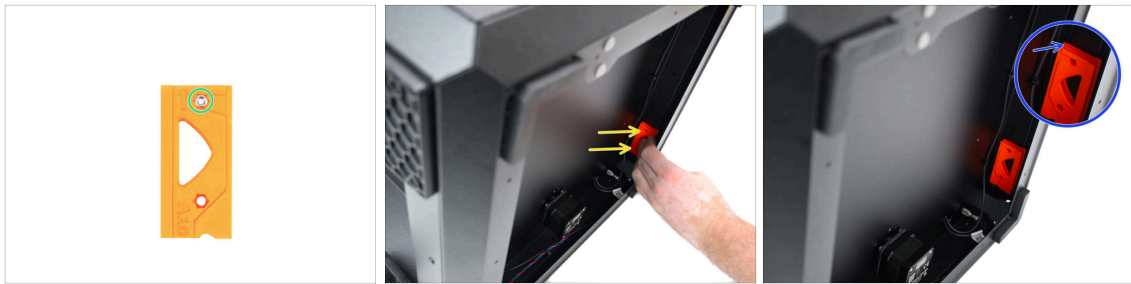


- 🟢 Insert one M3nN nut into the Spoolholder-assembly-tool as shown in the photo.
- ⬛ **Assicurati che il dado sia inserito fino in fondo**, altrimenti potresti danneggiare il Spoolholder-assembly-tool!
- 📄 **The side of the nut without the rubber must point outward from the Spoolholder-assembly-tool.**
- ⬛ Double-check that the nut is inserted in the same hole closer to the top edge, with the **arrow pointing UP** next to it.
- 🟡 Insert the Spoolholder-assembly-tool under the front of the printer, with the M3nN nut facing the side cover.
- 🟡 "Hook" the ridge in the assembly tool onto the side of the metal profile and gently push the tool upwards.
- 📄 The M3nN nuts are now in the right position and height for the puck holder top to be attached to the printer with two M3x12rT screws.

PASSO 52 Finishing the rear puck holder bottom - right II.



- 🟢 Hold the Spoolholder-assembly-tool in position with your hand on the inside of the bottom of the printer.
- 🟡 Use the Torx key to tighten the M3x12rT screw.
- 🟡 The rear right puck holder is now completely attached to the printer.

PASSO 53 Finishing the front puck holder bottom - right I.

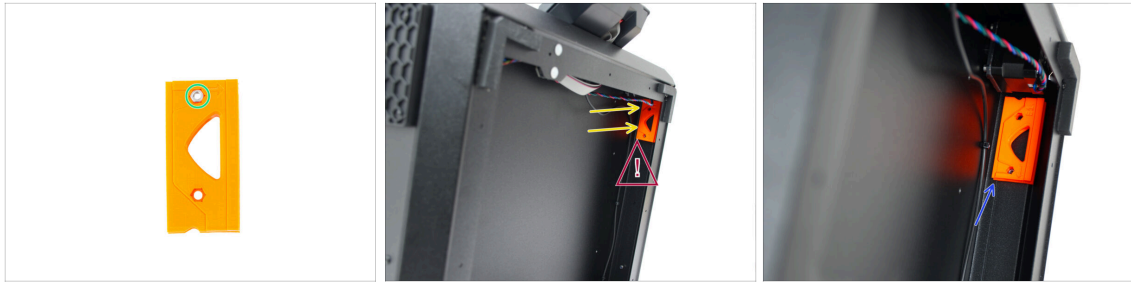


- Insert one M3nN nut into the Spoolholder-assembly-tool as shown in the photo.
 - **Assicurati che il dado sia inserito fino in fondo**, altrimenti potresti danneggiare il Spoolholder-assembly-tool!
 - i **The side of the nut without the rubber must point outward from the Spoolholder-assembly-tool.**
 - Double-check that the nut is inserted in the same hole closer to the top edge, with the **arrow pointing RIGHT next to it**.
- Insert the Spoolholder-assembly-tool under the front of the printer, with the M3nN nut facing the side cover.
- ⚠ **Note the orientation of the Spoolholder-assembly-tool in the photo, where it is inserted into the printer.**
- "Hook" the ridge in the assembly tool onto the side of the metal profile and gently push the tool upwards.
- i The M3nN nuts are now in the right position and height for the puck holder top to be attached to the printer with two M3x12rT screws.

PASSO 54 Finishing the front puck holder bottom - right II.



- Hold the Spoolholder-assembly-tool in position with your hand on the inside of the bottom of the printer.
- Use the Torx key to tighten the M3x12rT screw.
- The front right puck holder is now completely attached to the printer.
- Carefully tilt the printer back on its feet.

PASSO 55 Mounting the front puck holder top - right

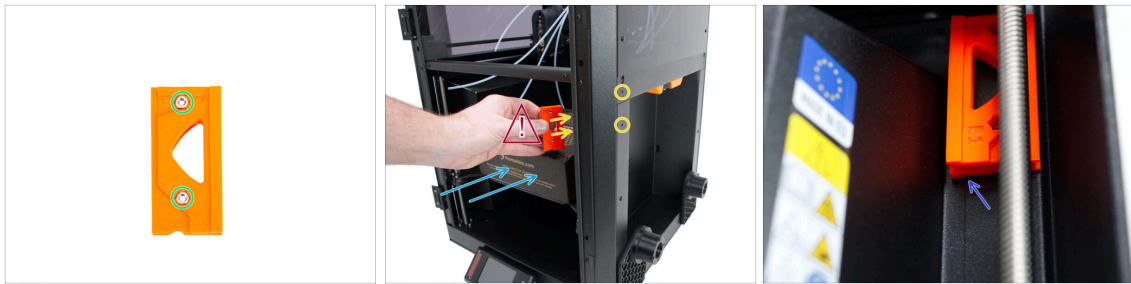

- Insert two M3nN nuts into the Spoolholder-assembly-tool as shown in the photo.
- Place the filament box back onto the heatbed.
- ⓘ **The side of the nuts without the rubber must point outward from the Spoolholder-assembly-tool.**
- ⓘ **The side of the nut without the rubber must point outward from the Spoolholder-assembly-tool.**
- ⚠ **Double-check that the nuts are inserted on the correct side of the tool. Note the hole closer to the top edge, with the arrow pointing RIGHT next to it.**
- Insert the Spoolholder-assembly-tool into the printer, with the M3nN nuts facing the side cover.
- "Hook" the ridge in the assembly tool onto the side of the metal profile and gently push the tool upwards.
- ⓘ The M3nN nuts are now in the right position and height for the puck holder top to be attached to the printer with two M3x12rT screws.

PASSO 56 Securing the front puck holder top - right



- Hold the Spoolholder-assembly-tool in position with your hand on the inside of the printer.
- Posiziona la parte superiore del supporto anteriore per i dischi (assemblato in precedenza) sulla stampante. Guarda la foto per capire qual è la posizione corretta.
- ❗ Insert the M3x12rT screw into the front puck holder top before attaching it to make it easier to connect the screw with the nut. Using only one hand is a bit fiddly, but manageable.
- Use the Torx key to tighten the top M3x12rT screw.
- Use the Torx key to tighten the lower M3x12rT screw.
- The front right puck holder is now attached to the printer.

PASSO 57 Mounting the rear puck holder top - right



- Insert two M3nN nuts into the Spoolholder-assembly-tool as shown in the photo.
- ❗ **The side of the nut without the rubber must point outward from the Spoolholder-assembly-tool.**
- Double-check that the nuts are inserted on the correct side of the tool. Note the hole closer to the top edge, with the **arrow pointing UP** next to it.
- Insert the Spoolholder-assembly-tool **into the printer**, with the M3nN nut facing the side cover.
- ⚠ **Note the orientation of the Spoolholder-assembly-tool in the photo, where it is inserted into the printer.**
- "Hook" the ridge in the assembly tool onto the side of the metal profile and gently push the tool upwards.
- ❗ The M3nN nuts are now in the right position and height for the puck holder top to be attached to the printer with two M3x12rT screws.

PASSO 58 Securing the rear puck holder top - right




- Hold the Spoolholder-assembly-tool in position with your hand on the inside of the printer.
- Place the rear puck holder top (assembled earlier) on the printer. Note the correct position in the photos.
-  Insert the M3x12rT screw into the front puck holder top before attaching it. This will make it easier to connect the screw with the nut. Using only one hand is a bit fiddly, but manageable.
- Use the Torx key to tighten the top M3x12rT screw.
- Use the Torx key to tighten the lower M3x12rT screw.
- The rear left puck holder is now attached to the printer.

PASSO 59 Dock fan: parts preparation




- **For the following steps, prepare:**
- Dock-fan-holder (1x) *si trova nella busta Toolhead*
- Print fan blower (1x) *found in the Electronics box*
- Scheda Dock fan splitter (1x) *si trova nella scatola Electronics*
- M3x25 screw (1x) *found in the Fasteners 1/2 bag*
- M3nS nut (1x) *found in the Fasteners 2/2 bag*
- Vite M3x8rT (1x) *si trova nella busta Fasteners 2/2*
- M3x35 screw (2x) *found in the Tool Dock Fan bag*

PASSO 60 Assembling the dock fan

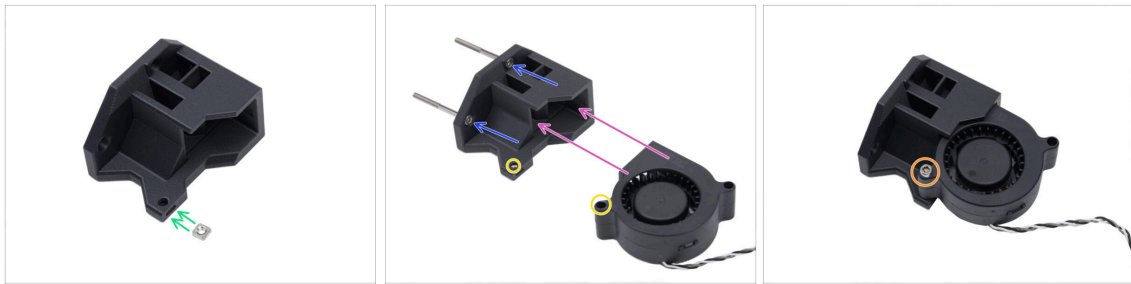

- 🟢 Insert the M3nS nut into the Dock-fan-holder.
- 🟡 Insert the two M3x35 screws into the Dock-fan-holder. Do this **before attaching the dock fan**.
- 🟣 Inserisci la ventola di stampa. Assicurati che l'orientamento della ventola sia quello mostrato nella foto.
- 🟡 The highlighted holes have to align once the fan is inserted.
- 🟠 Fissa la ventola al supporto Dock-fan-holder con la vite M3x25.

PASSO 61 Attaching the Dock fan splitter board

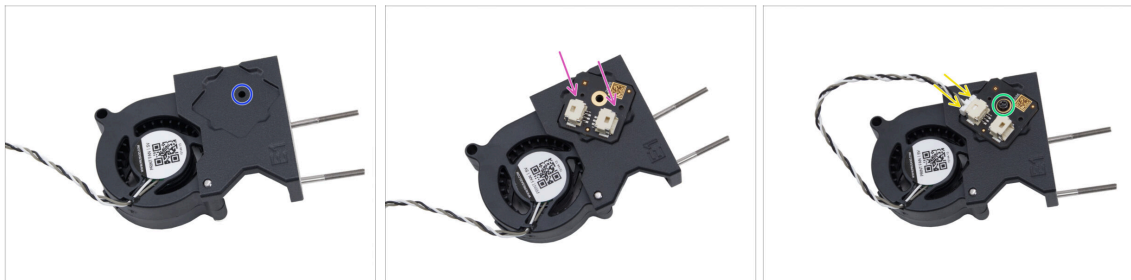

- ⬛ Flip the dock fan assembly so that the sticker on the dock fan is visible.
- 🟡 Note the highlighted area.
- 🟣 Inserisci la scheda Dock fan splitter nella scanalatura del supporto Dock-fan-holder. Assicurati che il foro sulla scheda sia allineato con quello del supporto.
- 📄 Before you touch the electronics, touch any conductive (metal) surface to neutralize the static charge from your hands.
- ⬛ Always touch the sides of the board only while handling it. Avoid touching the components on the surface.
- 🟢 Fissa la scheda splitter della ventola del dock con la vite M3x8rT.
- 🟡 Plug the dock fan cable into the slot that is closer to the fan. Ensure that the safety latch clicks in place.

PASSO 62 Attaching the dock fan




- Remove the two highlighted M3x30 screws from the Belt-tensioner.
- Do not remove the third screw.
- Plug the dock fan cable connector into the remaining slot on the FunFan board. Make sure that the safety latch clicks in place.
- ⓘ Be careful not to scratch or damage the printer with the two screws protruding from the dock fan assembly.

PASSO 63 Securing the dock fan





- With the dock fan cable plugged in, carefully turn the dock fan assembly.
- Gently lower the dock fan assembly to insert both M3x35 screws into the Belt-tensioner as shown.
- With the dock fan in place, use the 2.5mm Allen key to tighten the two M3x35 screws.

PASSO 64 È l'ora delle Haribo!

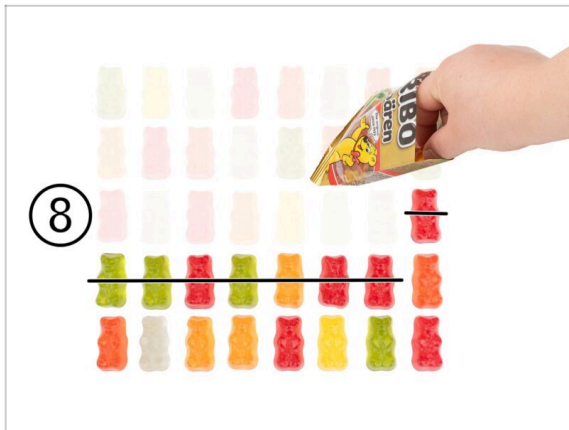

- ◆ That was a big one. Reward yourself properly and refill your energy.
- ◆ Eat 8 gummy bears.

PASSO 65 Tooldock: preparazione dei componenti

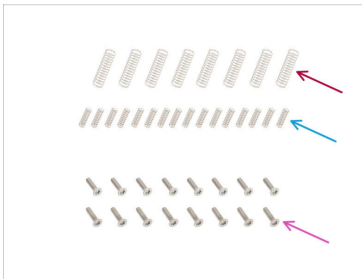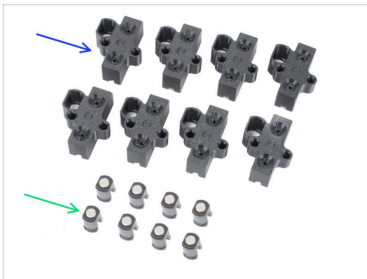

i Di seguito sono elencati i componenti necessari per la versione della stampante a 8 testine. Per la versione a 4 testine, occorrerà la metà dei componenti.

◆ **For the following steps, prepare:**


- ◆ INDX-Tool-holder (8x) *found in the Tools bag*
- ◆ Thimble (8x) *found in Tools bag*
- ◆ Spring 0.5 x 8.5 x 30 x 15 (8x) *found in the Fasteners Tools INDX bag*
- ◆ Spring 0.63 x 5 x 15 x 11 (16x) *found in the Fasteners Tools INDX bag*
- ◆ M3x12cT countersunk screw (16x) *found in the Fasteners 2/2 bag*
- ◆ INDX C1 Front profile (1x) *found in the main box*

PASSO 66 Assembling the tool holder



- Fully thread the M3x12cT screw into both holes of the Tool-holder, then remove the screw.
- ① This creates a thread in the part, making the Tool-holder easier to install on the front profile later.
- Position the Tool-holder with the countersunk holes facing up.
- Insert each Thimble into the oval hole in part Tool-holder.
- Insert a **large spring** (0.5 x 8.5 x 30 x 15) into each Thimble.
- Insert **two small springs** (0.63 x 5 x 15 x 11) into the side holes of part Tool-holder.
- Repeat the same procedure for all remaining Tool-holder parts.

PASSO 67 Installing the tool holders

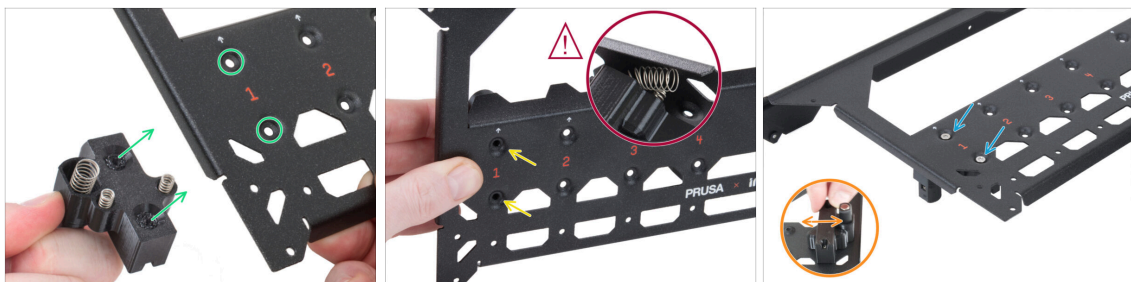

- **In the correct orientation**, place the Tool-holder against **position 1** on the underside of the front profile.
- Align the holes in both parts.
- ⚠ **CAUTION:** When placing the Tool-holder, make sure **no spring is pinched** against the front profile.
- Secure the Tool-holder using two M3x12cT screws.
- ① The screw forms its own thread in the plastic. Slight resistance is expected.
- Grasp the Tool-holder and gently wiggle it. It **must not be rigid** - a slight, barely perceptible looseness is required.
- ✚ **Repeat the procedure for the remaining Tool-holder assemblies** on the front profile, ideally in order 1-4, then 8-5 for easier handling.

PASSO 68 Nozzle seal holder: parts preparation




i Di seguito sono elencati i componenti necessari per la versione della stampante a 8 testine. Per la versione a 4 testine, occorrerà la metà dei componenti.

For the following steps, prepare:

- Nozzle-seal-holder (4x) *found in the Tools bag*
- Nozzle parking plate (8x) *found in the Fasteners Tools INDX*
- Nozzle seal (8x) *found in the Fasteners Tools INDX*
- M3x8rT screw (16x) *found in the Fasteners 2/2 bag*

PASSO 69 Assembling the nozzle seal

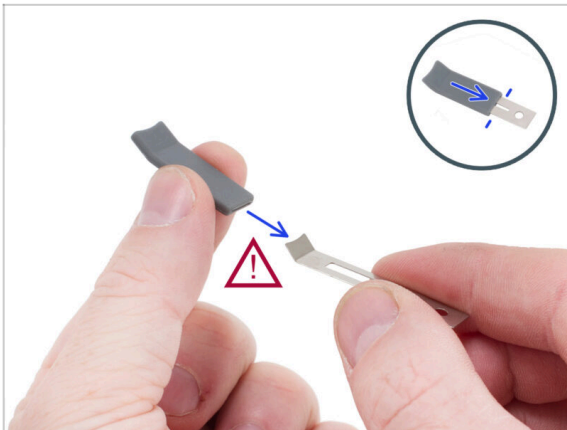

- Slide a nozzle seal (silicone sleeve) onto each nozzle parking plate.

⚠ CAUTION: Handle with care!
The edges of the nozzle parking plate are **sharp** and may cause injury.

PASSO 70 Assemblaggio del supporto Nozzle-seal-holder



⚠ Note the **correct placement of the nozzle seal before attaching it to the Nozzle-seal-holder.**


- Se posizionata correttamente, i fori si allineano mentre la guarnizione dell'ugello sul lato opposto **non sporge** oltre il supporto Nozzle-seal-holder.
- Posiziona il gruppo guarnizione dell'ugello sul supporto Nozzle-seal-holder in modo che la parte piegata della guarnizione sia rivolta verso l'alto.
- Attach the nozzle seal assembly to the Nozzle-seal-holder using an M3x8rT screw.
- ① Turn all the Nozzle-seal-holders upside down; this is how we will install them in the next step. **The bent part of the nozzle seal is now facing downward.**
- Install two nozzle seals on each Nozzle-seal-holder using the same method.

PASSO 71 Installing the nozzle parking plates



- ① Con la versione a 4 strumenti, inizia a montare i supporti degli ugelli dallo stesso lato che vedi nella foto. Controlla l'altro lato del tooldock per assicurarti di partire dal numero 1.
- Align the nozzle holder assembly with the holes at positions 1-2 on the front profile.
- Ensure the nozzle seals are **correctly oriented** by matching the bent ends to the illustration.
- Dall'altro lato, fissa il gruppo del supporto della guarnizione dell'ugello con due viti M3x8rT e stringi bene.
- ① The screw forms its own thread in the plastic. Slight resistance is expected.
- ⚠ **Ensure that none of the nozzle parking plates are bent or damaged during the assembly.**
- Continue installing the remaining nozzle holder assemblies using the same method.

PASSO 72 Ventilation lever: parts preparation

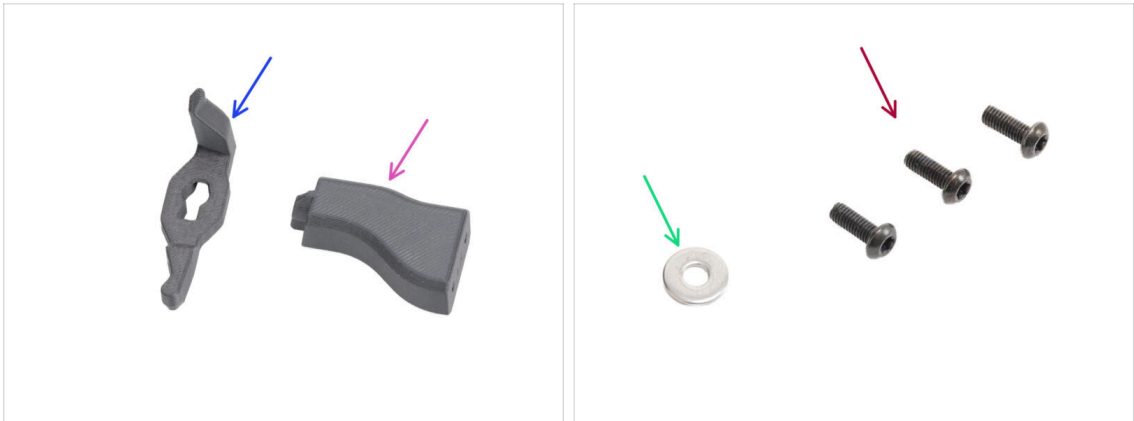

● For the following steps, prepare:

- INDX-C1-Vent-lever (1x)
- INDX-C1-Vent-lever-holder (1x)
- M3w washer (1x) *found in the Fasteners 2/2 bag*
- M3x8rT screw (3x) *found in the Fasteners 2/2 bag*

PASSO 73 Assembling the ventilation lever



- Place the Vent-idler onto the Vent-lever-holder **in the same orientation**.
- Secure it with an M3x8rT screw.
 - **Place an M3 washer under the screw.**
- From the inner side of the front profile, align the part with the two holes.
 - Note the “TOP” marking on the Vent-lever-holder. It **must face upward** toward the bent section of the front profile.
- From the opposite side (front) secure it with two M3x8rT screws.


PASSO 74 Top cover: parts preparation I.



● For the following steps, prepare:


- INDX-C1-grill-flexi (2x) *found in the Top Cover Parts bag*
- INDX-C1-cover-latch (2x) *found in the Top Cover Parts bag*
- INDX-C1-cover-knob (2x) *found in the Top Cover Parts bag*
- M3x12cT screw (4x) *found in the Fasteners 2/2 bag*
- M3x8rT screw (2x) *found in the Fasteners 2/2 bag*
- Vite M3x10 (2x) *rimossa in precedenza*

PASSO 75 Top cover: parts preparation II.

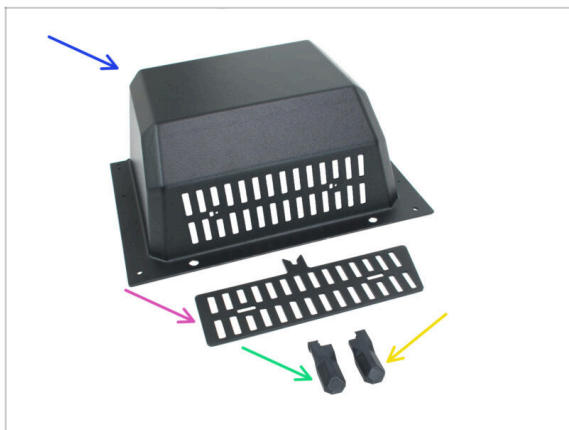


- Top cover (1x) *found in the main box*
- Grille (1x) *found in the main box*
- INDX-C1-hinge-cover-left (1x) *found in the Top Cover Parts bag*
- INDX-C1-hinge-cover-right (1x) *found in the Top Cover Parts bag*

PASSO 76 Attaching the hinge covers

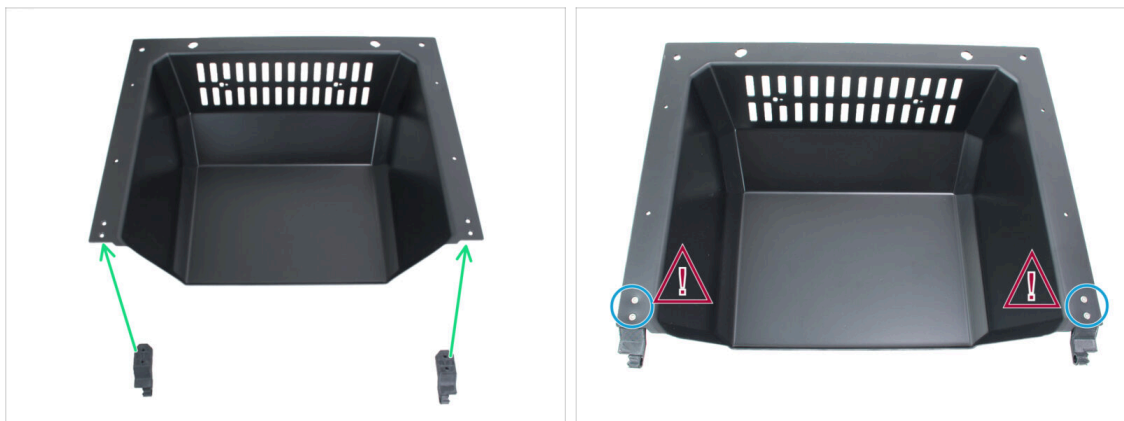

- 🟢 Turn the top cover upside down and attach the Hinge-cover from the bottom.
- 🔵 Secure each Hinge-top with two M3x12cT screws.
- ⚠️ Make sure that you do not overtighten the screws.

PASSO 77 Montaggio della griglia

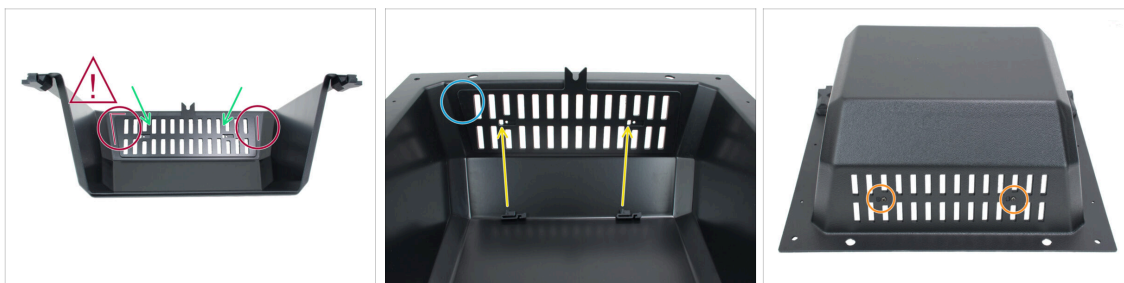

- 🟢 Place the grill onto the top cover.
- ⚠️ **Note the correct position of the grill.** The left side is prolonged! Ensure that it looks exactly as shown in the photo.
- 🔵 Before inserting the Grill-flexi parts, ensure that the grill is mounted correctly, with the prolonged side on the left.
- 🟡 Insert the Grill-flexi and hold them in position.
- 🟠 Fissa in posizione la Grill-flexi con due viti M3x8rT.

PASSO 78 Attaching the left cover lock



-  Insert the INDX-C1-cover-latch into the top cover from the bottom. Note the orientation of the cover latch.
-  Attach the INDX-C1-cover-knob. Ensure that the knobs on the cover latch align with the holes in the cover knob. Press both parts together.
-  Fissa il fermo della copertura con la vite M3x10.



Do not overtighten the screw. The lock must be able to turn.

PASSO 79 Attaching the right cover lock



-  Insert the INDX-C1-cover-latch into the top cover from the bottom. Note the orientation of the cover latch.
-  Insert the INDX-C1-cover-latch into the top cover from the bottom. Note the orientation of the cover latch.
-  Fissa il fermo della copertura con la vite M3x10.



Do not overtighten the screw. The lock must be able to turn.

PASSO 80 Top cover back: parts preparation



For the following steps, prepare:

- Top cover back (1x) *found in the main box*
- Hinge-base (2x) *found in the Top Cover Parts bag*
- 3x12sT screw (2x) *found in the Fasteners 2/2 bag*
- M3x25 screw (2x) *found in the Fasteners 1/2 bag*
- Nylon rivet (2x) *found in the Fasteners 1/2 bag*
- Spring 15x5 (2x) *found in the Fasteners 1/2 bag*

PASSO 81 Attaching the top cover back



- Place the top cover back on the printer.
- Secure the top cover back in place with two nylon rivets.

PASSO 82 Attaching the hinge base - left




- Place the Hinge-base near the front left hole in the top cover back.
- Note that each Hinge-base part indicates which side it goes to. Ensure that the part is marked with an L (left).
- Insert the 3x12sT screw from inside the printer and hold it in position.
- Align the hole in the Hinge-base with the 3x12sT screw and connect the Hinge-base to the printer.
- Tighten the 3x12sT screw while holding the Hinge-base in place.

PASSO 83 Attaching the hinge base - right



- i** Nella foto è raffigurata la versione a 8 testine. Se hai la versione a 4 testine, il supporto PTFE destro non viene montato.
- Place the Hinge-base near the front left hole in the top cover back.
 - Note that each Hinge-base part indicates which side it goes to. Ensure that the part is marked with an L (left).
 - Insert the 3x12sT screw from inside the printer and hold it in position.
 - Align the hole in the Hinge-base with the 3x12sT screw and connect the Hinge-base to the printer.
 - Tighten the 3x12sT screw while holding the Hinge-base in place.

PASSO 84 Attaching the top cover I.

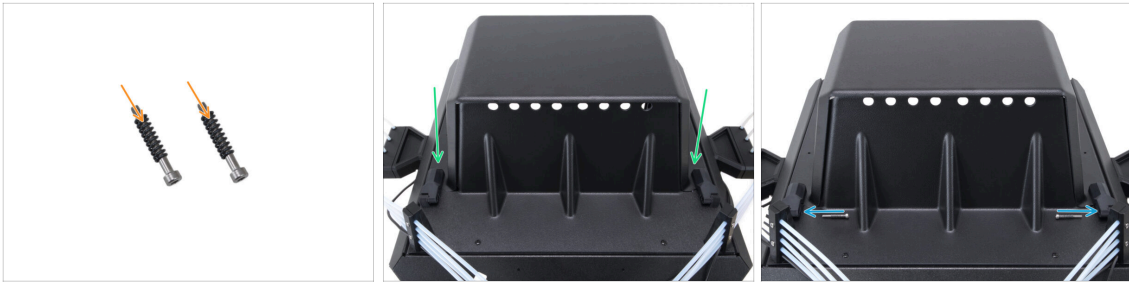

- 🟠 Fissa una molla 15x5 su ciascuna delle viti M3x25.
- 🟢 Place the top cover on the printer. Make sure that both hinges are positioned correctly.
- 🔵 Insert one M3x25 screw with the spring into each hinge from the inner side.

PASSO 85 Attaching the top cover II.



- 🟡 Use an Allen key to tighten the M3x25 screw on the left hinge. Do not tighten it completely.
- 🟣 Use an Allen key to tighten the M3x25 screw on the right hinge. Do not tighten it completely.
- 🔵 Slowly open the top cover all the way.
- 🟠 Make sure that the spring is able to retract and expand when opening the lid. This will hold the top cover open.
- 📄 If the top cover does not stay open, check the tightness of the two M3x25 screws in the hinges and make sure the spring is in place.

PASSO 86 INDX Nozzle tool: parts preparation



● For the following steps, prepare:

- M3x4 screw (2x) that were removed earlier
- Nylon rivets (2x) found in the Fasteners 1/2 bag
- M3x4rT screw (2x) that were removed earlier
- INDX Nozzle tool (8x) found in the INDX Nozzle tool box

⚠ **Attenzione: evita di toccare o danneggiare l'area di rilevamento rettangolare dello strumento INDX Nozzle.** Impronte digitali, grasso o eventuali altri danni possono compromettere le letture della temperatura e causare problemi di stampa.

PASSO 87 Come fissare il dock per gli strumenti



- Remove the two M3x4rT screws that hold the LED panel in place. Set the two screws aside; we will need them in the next step.
- ⚠ **Support the LED panel with your hand when removing the screws, so it does not fall. Do not touch the LEDs and resistors on the LED strip!**
- Gently lean the LED panel on the left side of the printer.
- Make sure that the LED cable is not damaged or pulled too hard during these steps.
- Mount the assembled tooldock.
- The **left side** of the tooldock has to be placed **under** the top profile.
- The **right side** of the tooldock has to be placed **above** the top profile.

PASSO 88 Fissare il tooldock



- Secure the tooldock to the top profiles with one M3x4 screw on each side.
- Fissa il tooldock alla parte anteriore della stampante con due viti M3x4rT (nei fori superiori).
- Usa le due viti M3x4rT che hai rimosso nel passaggio precedente per fissare la parte inferiore del tooldock.

PASSO 89 Attaching the LED panel



- Mount the LED panel onto the inner side of the tooldock. Do not touch the LEDs and resistors on the LED strip!
- ① The LED cable should reach the new position of the LED panel. If the cable is too short, **gently and slowly** pull on it to make it the correct length.
- Use two nylon rivets to secure the LED panel in place.
- Close the top cover.

PASSO 90 Optional: Installing the Buddy3D Camera




- i This step is only required if you have a Buddy3D Camera.
- Now is the right time to mount the camera in the front-left corner of the printer.
- Use the dedicated installation guide: Buddy3D Camera for CORE One Installation
- i The guide shows installation on the CORE One, but the procedure is the same. The camera attaches magnetically to the upper profiles of the printer.

PASSO 91 Connecting the INDX Nozzle tools (positions 1-4)



- Insert the PTFE tubes through the openings on the back of the lid, **keeping the correct order**.
 - Insert the PTFE tube from position 1 into the first opening from the right.
 - Repeat the same process for the remaining positions. **Always make sure each PTFE tube is routed through the matching opening in the lid.**
- Open the top lid.
- Dall'interno, **inserisci completamente il tubo in PTFE dalla prima apertura** nello strumento INDX Nozzle in **posizione 1**.
 - i Prova a tirare delicatamente il tubo fuori dal colletto per verificare che sia ben bloccato.
- Repeat the same procedure for all tools in positions 1-4.

PASSO 92 Docking the tools (positions 1-4)

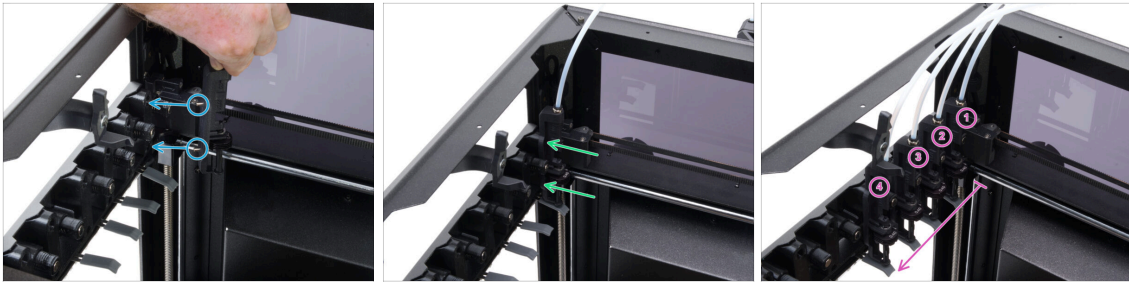


- Posiziona lo strumento INDX Nozzle **sul primo tubo in PTFE** nel **tooldock 1** e allinea i perni magnetici dello strumento con le aperture del dock.
- Fai scattare lo strumento INDX Nozzle nel dock in **posizione 1**.
⚠ **Make sure both pins snap in fully and the tool sits perfectly flush.**
- Repeat the same procedure for the remaining tools up to position 4.
- 📌 Controlla bene che le **piastre di posizionamento dell'ugello** siano nella **posizione corretta** per sigillare lo strumento INDX Nozzle.
- 📄 **i** Se hai la versione **a 4 testine**, passa direttamente a questo punto: **Controllo dei tubi**

PASSO 93 Connecting the INDX Nozzle tools (positions 5-8)



- Close the top lid. Insert the PTFE tubes through the openings on the back of the lid, **keeping the correct order**.
 - Insert the PTFE tube from **position 8** into the **first opening from the left**.
 - Repeat the same process for the remaining positions. **Always make sure each PTFE tube is routed through the matching opening** in the lid.
- Open the top lid.
- Inserisci il **tubo in PTFE dall'apertura più a destra** nello strumento INDX Nozzle in **posizione 8**.
i Try to gently pull the tube out to verify it is locked in the collet.
- Repeat the same procedure for all tools in positions 8-5.

PASSO 94 Docking the tools (positions 5-8)

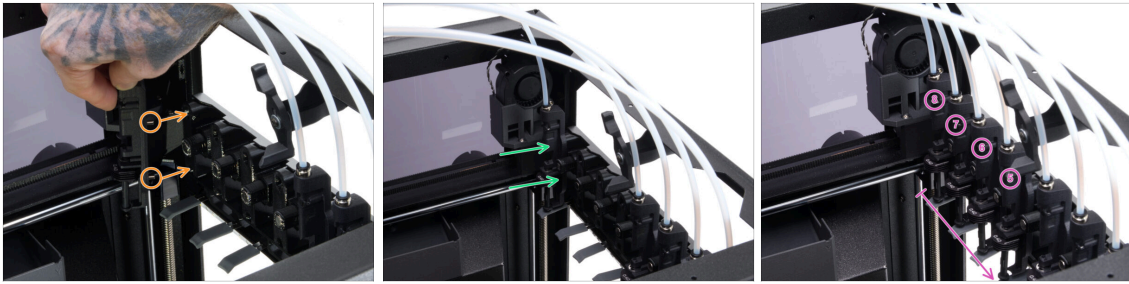


- ✦ Posiziona lo strumento INDX Nozzle **sull'ultimo tubo in PTFE** nel **tooldock 8** e allinea i perni magnetici dello strumento con le aperture del dock.
- ✦ Fai scattare l'ugello INDX nel dock 8.
 - ⚠ **Make sure both pins snap in fully and the tool sits perfectly flush.**
- ✦ Repeat the same procedure for the remaining tools up to position 5.
- ⓘ Controlla bene che le **piastre di posizionamento dell'ugello** siano nella **posizione corretta** per sigillare lo strumento INDX Nozzle.

PASSO 95 Controllo dei tubi




- ⓘ Pictured is the 8-toolhead version.
- ⚠ **Check that the PTFE tubes are not swapped and that each tube is correctly routed to the corresponding tool position.**
- ✦ You can now close the lid and secure it by rotating the locks by 90°.
 - ⓘ **This is optional at this stage**, as the lid will need to be opened again later during calibration.
- ✦ Remove the empty cardboard box from the printer, as it will no longer be needed.

PASSO 96 Offset sensor cover: parts preparation

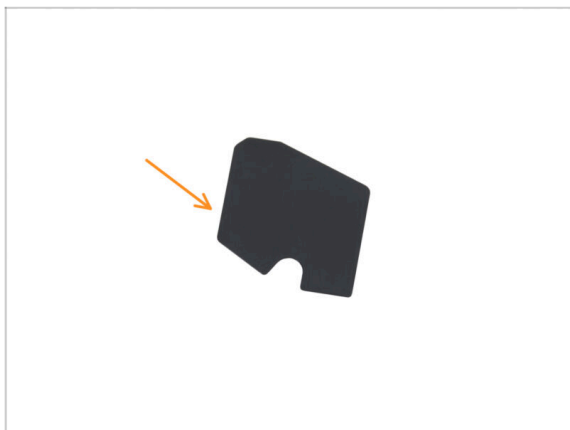

- **For the following steps, prepare:**
- Offset sensor sticker (1x) *found in the Tool Dock Fan bag*
- ⓘ The color of the offset sensor sticker might differ, but it does not affect the functionality.

PASSO 97 Covering the offset sensor

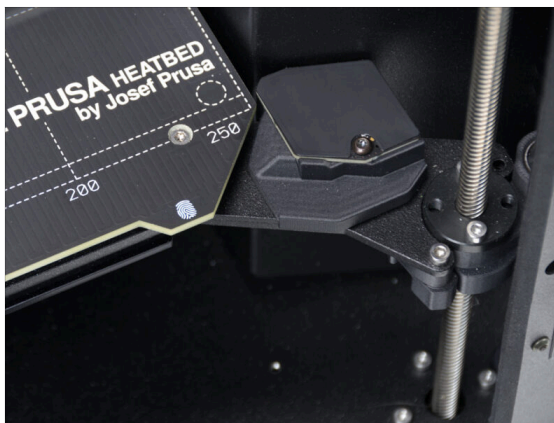

- Peel the protective layer off the offset sensor sticker and gently place the sticker onto the offset sensor.
- Ensure that the sticker covers the whole sensor.


PASSO 98 Door panel: parts preparation



● **For the following steps, prepare:**

- Door panel assembly (1x) *you removed earlier*
- M3x5rT screw (4x) *you removed earlier*
- Top door seal (1x) *found in the Top Door Seal bag*

PASSO 99 Mounting the door panel

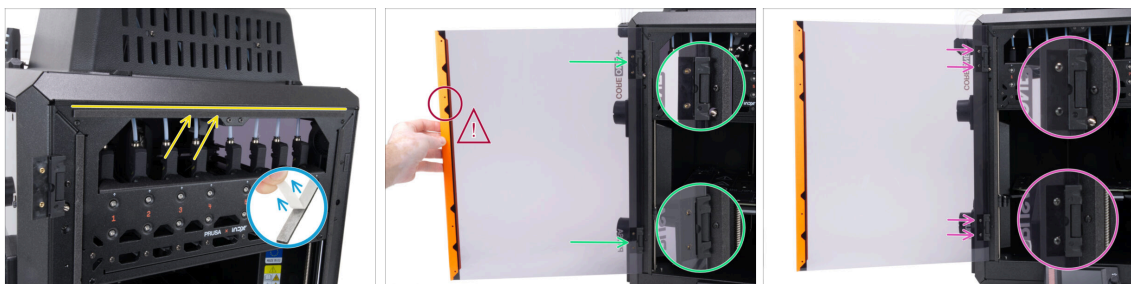

- Peel away the bottom backing layer of the gasket to expose the adhesive surface.

- Align the gasket on the front profile with the adhesive side facing the surface, then press it down to adhere.



If you had any issues with the shaft falling out of the hinge, assemble the hinge now, before mounting the door panel.


- Insert the door panel fully into the hinges.

⚠ **Ensure the door panel is oriented correctly, with the handle facing outward. Use the V-shaped cutouts on the inner side of the door handle as a guide.**

- Insert two M3x5rT screws into each Door-hinge to secure the door panel.

● **Secure the screws gently** to avoid over-tightening or damaging the door panel.

PASSO 100 Applicare l'adesivo: preparazione dei componenti

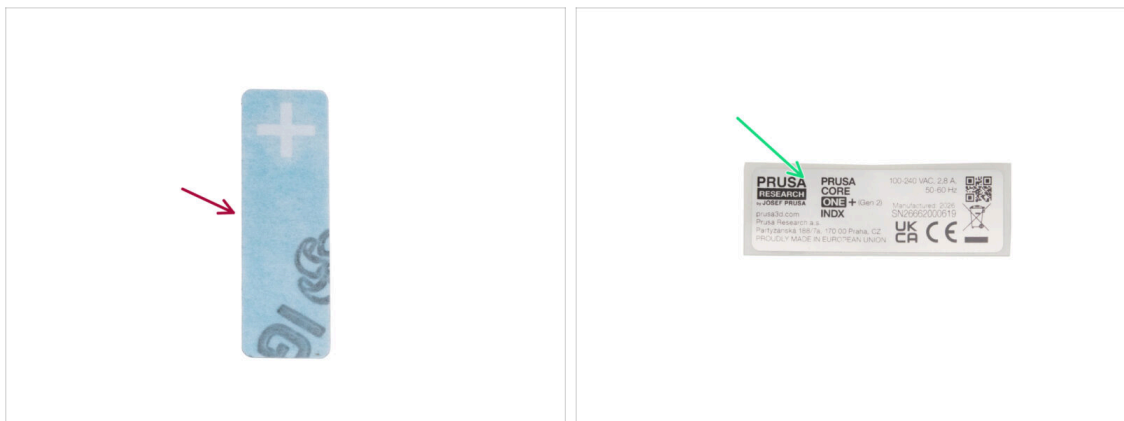

● For the following step, prepare:

● CORE One+ sticker (1x) found in the *INDX Update Stickers bag*

● Etichetta INDX SN (1x) trovata nella busta *INDX Update Stickers*

① Se stai installando l'aggiornamento GEN 2 per CORE One+ insieme alla conversione INDX, tieni presente che l'adesivo "+" è arancione, non bianco.

PASSO 101 Come applicare l'adesivo di aggiornamento




● Remove the sticker from the blue base.

● Sul pannello dello sportello, allinea l'adesivo con il **ONE** e premi delicatamente ma con decisione sull'adesivo.


● Carefully peel off the transparent layer and make sure that + is not peeling off.

PASSO 102 Come attaccare l'adesivo SN

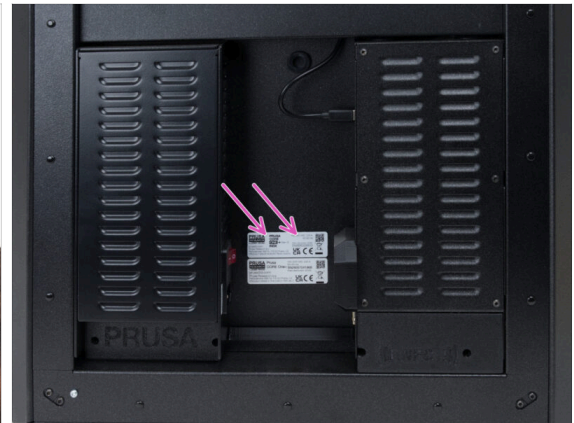

- Stacca l'adesivo Prusa INDX SN dalla base.
- Attaccalo sul retro della stampante, sopra l'adesivo CORE One/+ SN già presente.

PASSO 103 È l'ora delle Haribo!

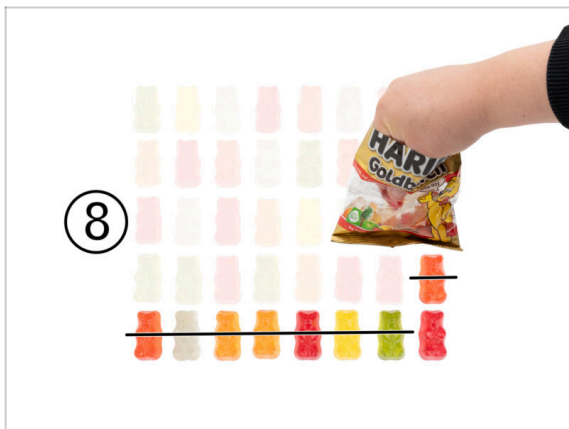

- You're almost there. Take a break and get ready for the final chapter.
- Eat eight gummy bears.
- ① Now you have only one gummy bear left. Maybe more, depending on the factory filling. But we have one more reward coming, so keep the rest aside!

PASSO 104 Questo è tutto



- ◆ **Congratulazioni!** Hai aggiornato correttamente la tua stampante alla versione Prusa INDX!
- ① Next, you only need to run the self-test and basic calibration.
- ◆ **Proceed to the next chapter.**

6. Controllo finale



PASSO 1 Montaggio del porta bobina: preparazione dei componenti



i Di seguito sono elencati i componenti necessari per la versione della stampante a 8 testine. Per la versione a 4 testine, occorrerà la metà dei componenti.

■ Per il prossimo passo, prepara:

- ◆ Porta bobina telescopico (8x) *contenuto nella busta Telescopic Spoolholder Set*
- ◆ O-ring (8x) *che trovi nella busta Telescopic Spoolholder Set*

PASSO 2 Bloccaggio dei porta bobina




- ◆ Metti l'O-ring sul porta bobina telescopico.
- ◆ Assicurati che l'O-ring sia posizionato correttamente.
- ◆ Inserisci il porta bobina telescopico nel Puck-universal.
- ◆ Blocca il porta bobina telescopico ruotandolo **in senso orario**.



Ripeti la stessa procedura per i restanti porta bobina.

PASSO 3 Porta bobina telescopico

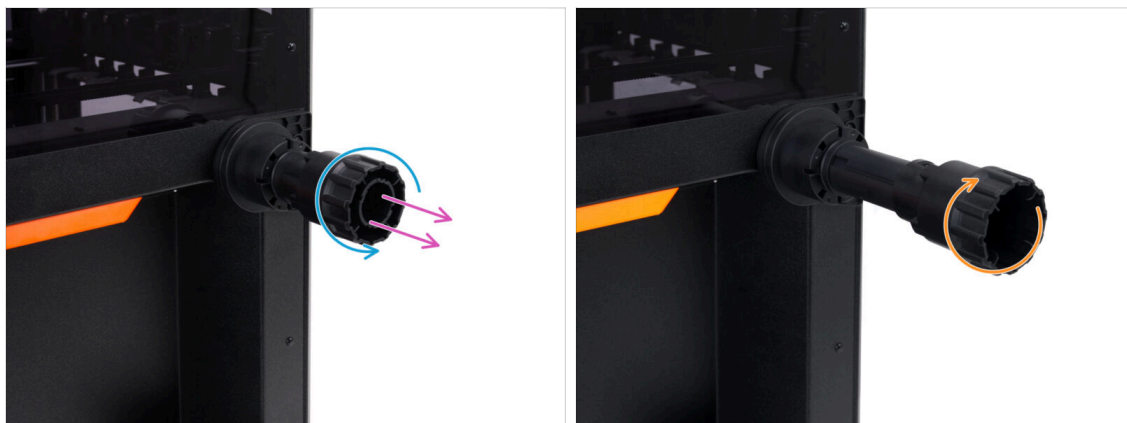

- Per estendere il porta bobina telescopico, ruotalo delicatamente in senso antiorario finché non senti il clic del meccanismo di bloccaggio.
- Non usare una forza eccessiva per sbloccare il porta bobina, altrimenti rischi di staccarlo dal supporto!
- Tira il porta bobina per estenderlo.
- Blocca il porta bobina esteso ruotandolo in senso orario finché il fermo non scatta in posizione.

PASSO 4 Fissare la piastra di stampa




⚠ **Assicurati che non ci sia nulla sul piano riscaldato.** Il piano riscaldato deve essere pulito in quanto lo sporco può danneggiare la superficie del piano riscaldato e della piastra di stampa.

🔸 **Inserisci la piastra allineando prima il foro posteriore con i perni di bloccaggio sul retro del piano riscaldato.** Tieni la piastra per i due angoli anteriori e stendila lentamente sul piano riscaldato - **attenzione alle dita!**

- 🔸 Mantieni pulita la piastra di stampa per ottenere le prestazioni ottimali.
- 🔸 La causa numero 1 del distacco delle stampe dalla piastra di stampa è dovuto ad una piastra di stampa unta. Se hai già toccato la sua superficie, usa dell'IPA (alcool isopropilico) per sgrassarla.

PASSO 5 Aggiornamento Firmware

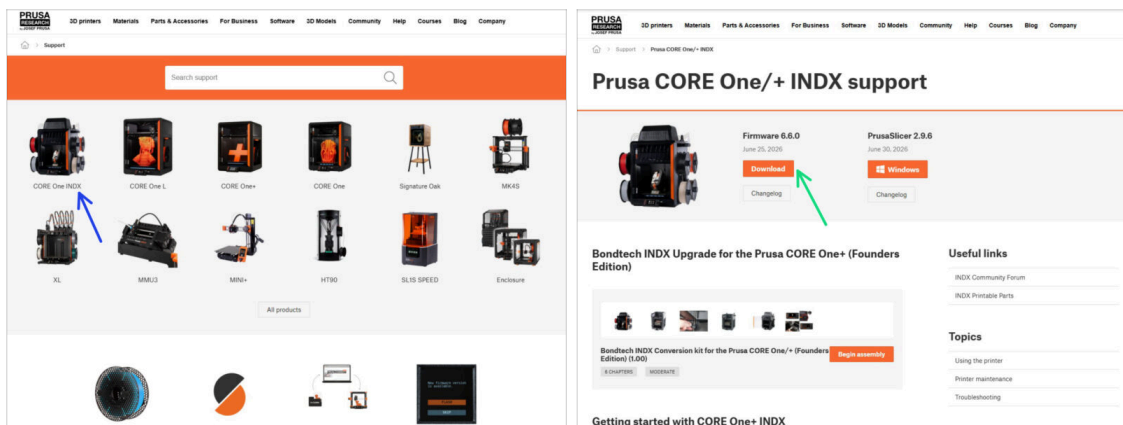


- 🔸 Visita la pagina help.prusa3d.com.
- 🔸 Vai alla pagina Prusa CORE One/+ INDX.
- 🔸 Scarica l'ultima versione del firmware.
- 🔸 Salva il file del firmware (.bbf) sulla chiavetta USB in dotazione.

PASSO 6 Accendere la stampante



- ✿ Inserisci nella stampante la chiavetta USB inclusa nel kit.
- ✿ Inserisci il cavo di alimentazione e collega la stampante a una presa di corrente.
- ✿ Accendi la stampante utilizzando l'interruttore sul retro.
- ❗ A questo punto la stampante rileverà se sulla chiavetta USB è disponibile un nuovo file del firmware.
- ✿ Se appare la schermata "Nuovo firmware disponibile", seleziona **FLASH** premendo la manopola per aggiornare al firmware più recente.

PASSO 7 Impostazione della stampante: Introduzione

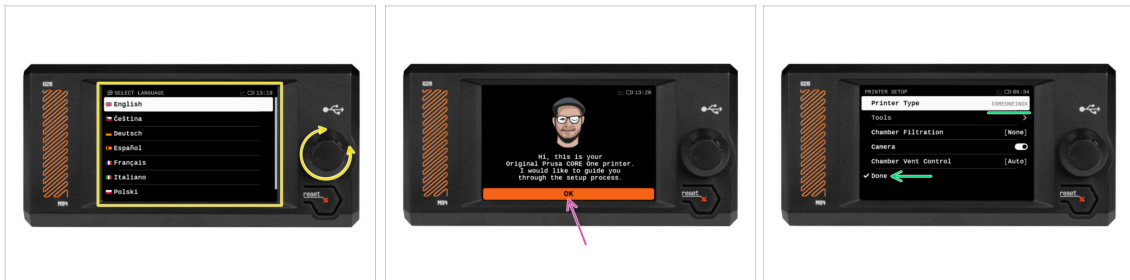


- ✿ La stampante visualizza sullo schermo una richiesta di selezione della lingua. Usa la manopola di controllo o il touchscreen per impostare la tua scelta.
- ✿ Dopo aver selezionato la lingua, la stampante visualizzerà la schermata di benvenuto. Premi **OK** per continuare il processo di configurazione.
- ✿ Nella schermata successiva ti verrà chiesto di selezionare il modello della tua stampante COREONEINDX. Premi **Fatto** per continuare.

PASSO 8 Configurazione della stampante: Configurazione della rete



- La schermata di configurazione della rete ti chiederà di connetterti a una rete Wi-Fi utilizzando l'app mobile ufficiale di Prusa.
 - ❗ Per saperne di più prusa.io/app.
- Se selezioni **No**, la stampante mostrerà modi alternativi per connettersi al Wi-Fi. Questo passaggio è facoltativo e può essere eseguito in un secondo momento.
 - ❗ Puoi saltare questa schermata e impostare la connessione di rete in un secondo momento.

PASSO 9 Configurazione guidata: Introduzione

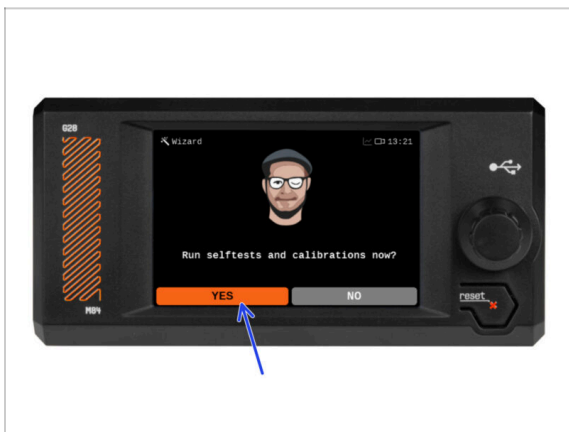

- ❗ La stampante ti chiederà di eseguire autotest e calibrazioni per tutti i componenti più importanti. L'intero processo richiede pochi minuti, mentre alcune parti richiedono l'interazione diretta dell'utente.
- Premi **Si** per iniziare l'autotest e segui le istruzioni sullo schermo.
- ⚠ **Durante l'autotest, tieni lo sportello chiuso finché non ti viene richiesto. L'apertura dello sportello interromperà il processo.**
- **Durante l'autotest, all'interno sono presenti parti CALDE e in movimento.**
- ❗ Alcuni dei test automatici che non richiedono un intervento diretto da parte dell'utente non sono menzionati in questa guida.

PASSO 10 Wizard: Calibrazione del sensore dello sportello




i Questo passaggio può essere **saltato**. Il sensore dello sportello viene calibrato solo durante il montaggio e ha una sezione dedicata alla calibrazione alla fine della sua guida.

🟡 Clicca sul pulsante **Salta** per passare alla calibrazione successiva.

⬛ Segui le istruzioni visualizzate sullo schermo. La stampante eseguirà ora il test automatico degli assi X e Y e la calibrazione dell'allineamento dell'asse Z.

PASSO 11 Wizard: Tensionamento della cinghia

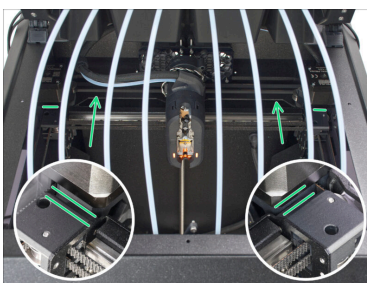

⬛ La stampante ti chiederà ora di regolare con precisione le cinghie. Segui le istruzioni che appaiono sullo schermo.

🟢 Apri il coperchio superiore e sposta manualmente la testina dello strumento INDX il **più indietro possibile**, verificando che **non ci siano spazi tra i fermi a sinistra e a destra**.

⚠ ATTENZIONE: una procedura errata può causare danni alle parti in plastica o il grippaggio delle viti. Prima di regolare la tensione della cinghia, leggi l'articolo dedicato:

⬛ Regolazione **della tensione della cinghia (CORE One)**

⬛ Le cinghie si regolano utilizzando il meccanismo di tensionamento presente su ciascun lato per ogni singola cinghia:

🟡 La **vite di sinistra** serve a regolare la **cinghia superiore**.

🟡 La **vite di destra** serve a regolare la **cinghia inferiore**.


⬛ Una volta regolate alla perfezione le cinghie, premi **Continua** e segui le istruzioni sullo schermo.

PASSO 12 Wizard: Calibrazione del dock I.



- Una volta completata la calibrazione automatica dell'homing, verranno calibrati i dock. Clicca su **Continua** e segui le istruzioni sullo schermo.
- La stampante ti chiederà di inserire il numero di dock presenti sulla tua stampante.
 - Significa quante posizioni per gli strumenti sono installate sul profilo anteriore (porta-ugelli). Di solito sono 4 o 8.
- Nella schermata successiva, assicurati che tutte le posizioni dei dock siano **impostate su** e non su .
- Una volta che tutti i dock sono pronti per la calibrazione, scorri verso il basso e clicca su **Continua**.

PASSO 13 Wizard: Calibrazione del dock II.

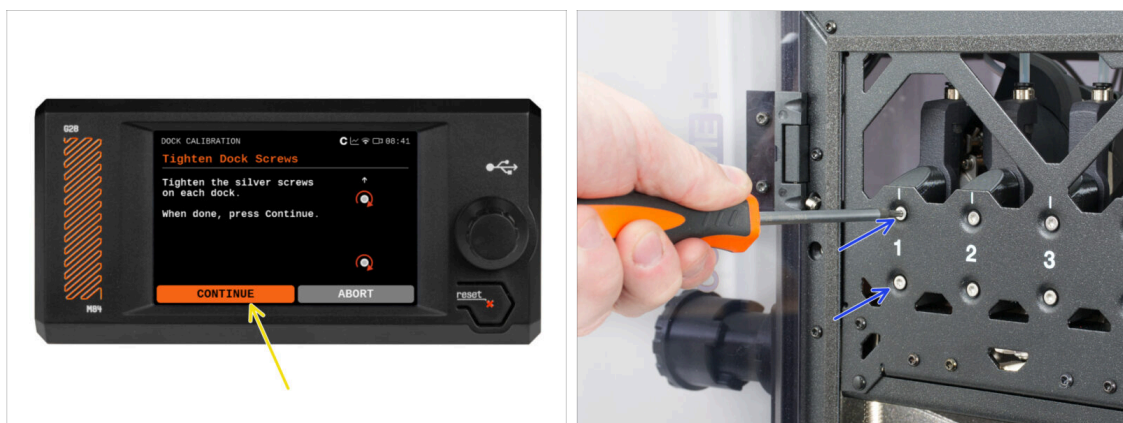

- Lo schermo ti chiederà ora di stringere le viti argentate che fissano ciascun dock al profilo anteriore.
 - Usa una chiave/cacciavite T10 per stringere le viti argentate **in tutte le posizioni**.
 - **Non serrarli troppo**, perché in seguito andranno allentati di nuovo.
 - Fai clic su **Continua**.
- ❗ Assicurati di **seguire la guida sullo schermo nel passaggio successivo**. La stampante ti avviserà quando potrai toccarla in tutta sicurezza e calibrare i dock.

PASSO 14 Wizard: Calibrazione del dock III.



Tieni aperto il coperchio superiore.

- ✿ Ora ti verrà chiesto di spostare manualmente la testina sul dock.
- 🔵 Dall'alto, facendo attenzione, fai scorrere a mano la testina dell'INDX Tool sul dock **posizione 1**.
 - 🟠 Controlla l'allineamento dall'alto per assicurarti **che la testina si inserisca perfettamente nell'hotend**.
 - ⬛ Una volta inserito correttamente, sentirai un clic che indica che è nella posizione corretta.
- 🟡 Clicca su **Continua** e ripeti la stessa procedura per gli altri dock, **seguendo le istruzioni sullo schermo**.
- 🟢 Dopo aver allineato tutti i dock, allenta di un giro completo le viti argentate che fissano tutte le posizioni dei dock.

PASSO 15 Configurazione guidata - Test della cella di carico



- ◆ La fase successiva della procedura guidata ti chiederà di toccare l'ugello per testare e calibrare la cella di carico. Durante questa procedura, **le parti della stampante non vengono riscaldate** in modo da poterle toccare. Premi su **Continua**.
- ❗ La calibrazione della cella di carico richiede che lo sportello sia aperto, in quanto è necessario interagire direttamente all'interno della stampante.
- ⬛ Non toccare ancora l'ugello, ma attendi che venga visualizzato il messaggio **Tocca l'ugello ORA**.
- ◆ Tocca l'ugello dal basso. Se la cella di carico non rileva il tocco, ti verrà richiesto di ripetere il passaggio. In caso contrario, quando il test della cella di carico ha avuto successo, verrà visualizzato il messaggio **Test Cella di carico OK**.
- ◆ Per consentire alla stampante di continuare la configurazione guidata, **chiudi lo sportello**.
- 🔧 Al termine di questo test, la stampante eseguirà il test automatico dell'asse Z.

PASSO 16 Wizard: Test della ventola



- ⬛ Durante questa procedura, la stampante effettuerà un test su tutte le ventole. Attenzione: potrebbe essere piuttosto rumorosa per qualche minuto!

PASSO 17 Wizard: Calibrazione degli offset degli strumenti




- Seleziona **Continua**, e la stampante procederà a testare gli offset per ciascuna testina.

PASSO 18 Wizard: Calibrazione del pulitore degli ugelli



- Nei passaggi seguenti, è possibile calibrare l'ugello con il contenitore del raschietto.
- Una volta premuto **Continua**, la testina si avvicinerà automaticamente al blocco di priming sul Pulitore ugello.
- Nel tooldock, **alla posizione 8, è presente un'apertura** attraverso la quale è possibile osservare direttamente l'allineamento degli ugelli sul blocco di priming in silicone.
 - i** Se guardi attentamente attraverso l'apertura, vedrai i ritagli a forma di V nella base del raschietto e nel blocco di priming in silicone.
- Sposta manualmente la testina sopra il contenitore sul lato destro della stampante. Posizionala al centro del blocco di priming, come mostrato sullo schermo.
- Attraverso l'apertura, osserva e allinea la testina con l'incavo a forma di V presente nel blocco di priming anteriore, come mostrato sullo schermo.

PASSO 19 Wizard: Calibrazione del Pulitore ugello sull'asse Z/X

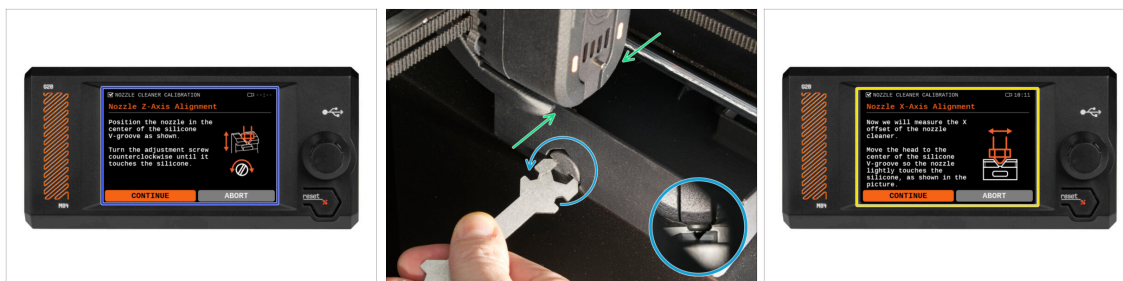


- La stampante ti chiederà ora di allineare il pulitore dell'ugello.
- Regola manualmente la posizione della testina in modo che l'ugello si trovi nell'**incavo a forma di V del blocco di priming**. Controlla l'allineamento attraverso l'apertura frontale del tooldock.
- La stampante **bloccherà i motori** e ti avviserà di **allontanare le mani dalla stampante** prima di procedere con la calibrazione.
- Usa la chiave universale per **regolare con precisione** il dispositivo di regolazione del raschietto **finché l'ugello non riempie completamente l'incavo a forma di V**, toccando sia i lati inclinati che il fondo. Controlla l'allineamento attraverso l'apertura.
- ⓘ Il dispositivo di regolazione del raschietto (Wiper-adjuster) permette di regolare la posizione del contenitore verso l'alto o verso il basso.
- Una volta impostata correttamente la posizione (vedi i dettagli di riferimento), seleziona **Continua** e segui le istruzioni sullo schermo.

PASSO 20 Wizard: Calibrazione del Pulitore ugello sull'asse Y



- Ora, lo schermo della stampante ti chiede di allineare l'ugello sull'asse Y.
- Sposta manualmente la testina dello Strumento INDX nell'incavo a forma di V sul lato sinistro del contenitore del Pulitore ugello e **allinea con precisione**. L'ugello non deve toccare le pareti.
- Il foro corretto è contrassegnato con una "Y"
- Guarda attraverso lo sportello aperto.
- La stampante **bloccherà i motori** e ti avviserà di **allontanare le mani dalla stampante** prima di procedere con la calibrazione.
- Una volta che l'allineamento è perfetto, premi **Continua** e segui le istruzioni sullo schermo.

PASSO 21 Wizard: Calibrazione dei sensori di filamento

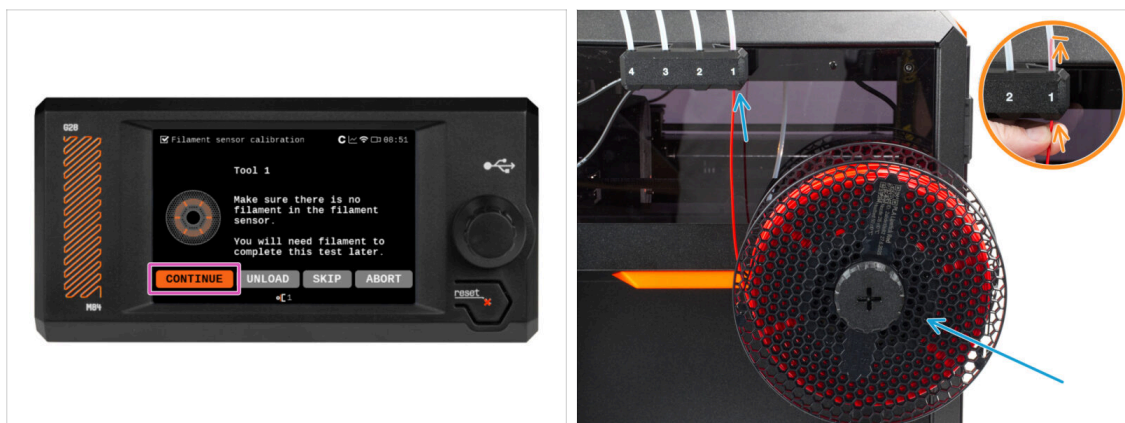

- ✿ Ogni volta che calibri il sensore del filamento dello strumento, ti servirà un pezzetto di filamento. Prepara il filamento e seleziona **Continua**.
- ❗ Prima che inizi il processo di calibrazione, all'interno dell'estrusore non dovrebbe esserci **nessun filamento**.
- 🔵 Posiziona la bobina di filamento sul porta bobina e, **quando richiesto**, fai passare il filamento nel sensore di filamento alla **posizione 1**.
- 🟠 Inserisci il filamento **solo attraverso il sensore del filamento**; non è necessario farlo passare per tutta la lunghezza del tubo in PTFE.
- ⬛ Una volta terminata la calibrazione, premi **Continua** per calibrare la posizione successiva.
- 📌 Una volta calibrate tutte le posizioni, passa alle calibrazioni automatiche del Phase Stepping e dell'Input Shaper.

PASSO 22 Configurazione guidata completata




- ⬛ Congratulazioni! La configurazione guidata è terminata. Ora proviamo a fare qualche stampa.

PASSO 23 È l'ora delle Haribo!



- Tutto il tuo duro lavoro ha dato i suoi frutti, ed è ora di goderti la ricompensa finale. Mangia tutti gli orsetti gommosi adesso.

PASSO 24 Nozioni base Prusa

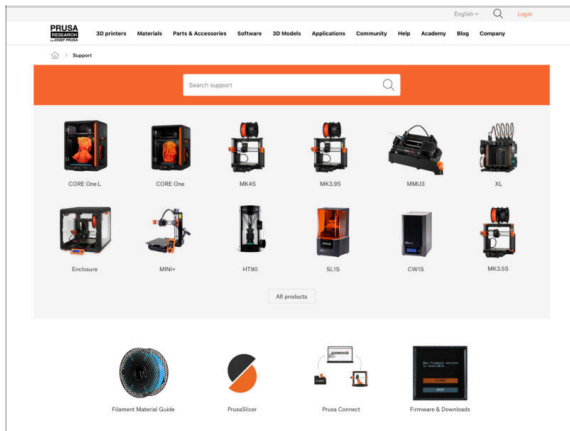

- Vai alla pagina del prodotto **CORE One/+ INDX** all'indirizzo prusa.io/coreone-indx e vai alla sezione **Guida introduttiva** per ulteriori informazioni e risorse.
- **Puoi trovare ulteriori informazioni anche su help.prusa3d.com:**
 - 📌 Trova download di software, manuali dei prodotti e guide dettagliate per il montaggio.
 - 📌 Dai un'occhiata ai suggerimenti e alle soluzioni per risolvere i problemi più comuni.
 - 📌 Tutorial e articoli per aiutarti a sfruttare al meglio la tua stampante.
- ① Aggiungiamo nuovi argomenti ogni giorno!

PASSO 25 Dacci il tuo feedback




- Sappiamo che non vedi l'ora di iniziare a stampare, ma ti saremmo davvero grati se potessi dedicare 3-4 minuti per **condividere con noi le tue opinioni** su questo manuale: quanto è stato chiaro, quanto è stato facile da seguire e qualsiasi idea per migliorarlo.

i Questo feedback è un po' diverso dai soliti commenti che puoi lasciare sui singoli passi.

- Condividi il tuo feedback qui.**
- Grazie per averci aiutato a rendere i nostri manuali ancora migliori!

PASSO 26 Unisciti a Printables!

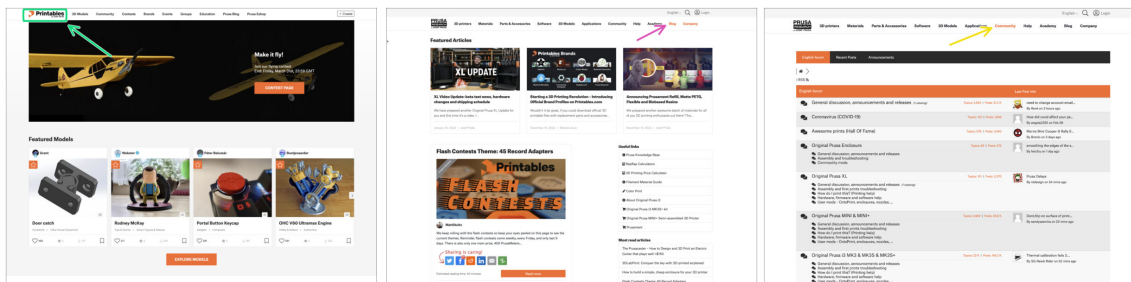

- Non dimenticare di unirti alla community Prusa più numerosa! Scarica gli ultimi modelli in STL o i G-code fatti su misura per la tua stampante. Registrati su [Printables.com](https://www.prusa3d.com/printables)
- Cerchi ispirazione per nuovi progetti? Controlla il nostro blog per gli aggiornamenti settimanali.
- Se hai bisogno di aiuto nel montaggio, dai un'occhiata al nostro forum con una splendida community :-)
- i** Tutti i servizi Prusa condividono lo stesso account utente.

This image shows a full page of blank, lined paper. It features approximately 20 evenly spaced horizontal grey lines across the entire width of the page, providing a guide for writing. The background is a clean, solid white color. There are no margins, text, or other markings present on the sheet.

[illegible]

This image shows a full page of blank, lined paper. It features approximately 20 evenly spaced horizontal grey lines across the entire width of the page, providing a guide for handwriting or typing. The background is a clean, off-white color.