Table of Contents

1. Introduction	7
Step 1 - General information	8
Step 2 - How to navigate through the manual	8
Step 3 - Tools in the package	
Step 4 - Labels guide	
Step 5 - Cheatsheet	
Step 6 - Front, left, right and rear side	
Step 7 - Transportation foam pads	
Step 8 - Manipulating with the printer	
Step 9 - Silicone sock	
Step 10 - CAUTION: Lubricant Handling	
Step 11 - View high resolution images	
Step 12 - We are here for you!	
Step 13 - Reward yourself	
2. Base & Side frame assembly	
Step 1 - Tools necessary for the next steps	
Step 2 - Base frame parts preparation	
Step 3 - Extrusion alignment	
Step 4 - Right rear extrusion assembly	
Step 5 - Securing the right rear extrusion	
Step 6 - Left rear extrusion assembly	
Step 7 - Z-Axis assembly clarification	
Step 8 - Z-Axis fixed assembly	
Step 9 - Securing the Z-Axis fixed	
Step 10 - Z-Axis rotary assembly	
Step 11 - Securing the Z-Axis rotary	
Step 12 - Torque indicator: parts preparation	
Step 13 - Assembling the Torque indicator	. 22
Step 14 - Final tightening with torque indicator	
Step 15 - Haribo time!	
Step 16 - xLCD: parts preparation	
Step 17 - xLCD cable covers: parts preparation	
Step 18 - Extrusion covers: parts preparation	
Step 19 - Mounting the xLCD	
Step 20 - Aligning the xLCD	
Step 21 - Installing the xLCD PE cable	
Step 22 - xLCD PE cable management	
Step 23 - xLCD cable routing	
Step 24 - Routing the cables	
Step 25 - Routing the cables	
Step 26 - Routing the cables	
Step 27 - Horizontal cable inserting	
Step 28 - Corner frame cover	
Step 29 - Inserting Z-motor-cable-bottom-cover	
Step 30 - Preparing the cables for rear cover	
Step 31 - Inserting the second motor cable	
Step 32 - Attaching the frame-rear-cover	
Step 33 - Haribo time!	
Step 34 - Well done!	. 33
3. CoreXY & Back assembly	. 34

	Step 1 - Tools necessary for this chapter	35
	Step 2 - Torque indicator disassembly	35
	Step 3 - Installing the CoreXY assembly: parts preparation	36
	Step 4 - How to insert the M3nEs nuts	36
	Step 5 - CoreXY assembly	37
	Step 6 - Installing the CoreXY assembly	
	Step 7 - Installing the CoreXY assembly	
	Step 8 - Securing the CoreXY	
	Step 9 - Manipulating with the printer	
	Step 10 - Torque indicator: parts preparation	
	Step 11 - Assembling the Torque indicator	
	Step 12 - Securing the CoreXY	
	Step 13 - Haribo time!	
	Step 14 - Securing the left linear rail	
	Step 15 - Securing the right linear rail	
	Step 16 - Earthing-connectors: parts preparation	
	Step 17 - Inserting the M3nEs nuts into extrusions	
	Step 18 - Grounding the Frame	
	Step 19 - Grounding the sides	
	Step 20 - Grounding the sides	
	Step 20 - Grounding the real side	44
	Step 22 - Attaching the cover-clips	
	Step 23 - Attaching the cover-clips	
	Step 25 - Removing the electronics casing	
	Step 26 - Attaching the XL rear panel	
	Step 27 - Attaching the XL rear panel	
	Step 28 - Installing the XL rear panel	
	Step 29 - Installing the XL rear panel	
	Step 30 - Haribo time!	
	Step 31 - Rear left: cable management	
	Step 32 - Rear left: PE cable	
	Step 33 - Rear left: connecting the cables	
	Step 34 - Rear left: securing the cables	
	Step 35 - Rear right: cable management	
	Step 36 - Rear right: connecting the cables	
	Step 37 - Installing the frame grounding	
	Step 38 - Rear right: securing the cables	
	Step 39 - Overview of electronics wiring	
	Step 40 - Rear electronics covers preparation	
	Step 41 - Rear electronics cover	
	Step 42 - Covering the electronics	
	Step 43 - Installing the extrusion covers: parts preparation	
	Step 44 - Installing front extrusion covers	
	Step 45 - Instaling rear extrusion covers	
	Step 46 - Haribo time!	
	Step 47 - Good job!	57
4. ŀ	Heatbed & Side panels assembly	58
	Step 1 - Tools necessary for this chapter	
	Step 2 - Side panels preparation	
	Step 3 - Left side panel assembly (part 1)	
	Step 4 - Left side panel assembly (part 2)	
	Step 5 - Right side panel assembly	
	Step 6 - Haribo time!	

	Step 7 - Heatbed assembly versions	62
	Step 8 - Heatbed assembly preparation	
	Step 9 - Heatbed terminals preparation	
	Step 10 - Connecting the Heatbed cables	
	Step 11 - Assembling the Heatbed	
	Step 12 - Preparing the heatbed cable screws	
	Step 13 - Fixing the heatbed cables in place	
	Step 14 - Removing linear rail stoppers	
	Step 15 - Installing the Heatbed	
	Step 16 - Attaching the Heatbed	
	Step 17 - Preparing the Z-Axis bearing housing	
	Step 18 - Installing the Z-Axis bearing housing	
	Step 19 - Preparing the Heatbed screws	
	Step 20 - Fixing the Z-axis side parts in place	68
	Step 21 - Haribo time!	. 69
	Step 22 - Good job!	. 69
5.	Tool-changer assembly	. 70
	Step 1 - Tools necessary for this chapter	
	Step 2 - Preparing the X-carriage	
	Step 3 - Installing the ToolChanger: parts preparation	
	Step 4 - Preparing the ToolChanger	
	Step 5 - Installing the ToolChanger	
	Step 6 - Covering the X-carriage	
_	Step 7 - Almost done	
6.	Extruder & accessories assembly	
	Step 1 - Filament sensor: parts preparation	. 76
	Step 2 - Inserting the M3nEs nut	
	Step 3 - Attaching the filament sensors	
	Step 4 - Nextruder cable: parts preparation	
	Step 5 - Nozzle seal versions	
	Step 6 - Nozzle seal not pre-installed: nextruder dock preparation	
	Step 7 - Guiding the nextruder cable	
	Step 8 - Attaching the first and second nextruder dock	
	Step 9 - Dock inspection	
	Step 10 - Dock inspection: video	
	Step 11 - Third dock: removing the screw	
	Step 12 - Nozzle seal not pre-installed: parts preparation	
	Step 13 - Nozzle seal not pre-installed: assembly	
	Step 14 - Nozzle seal not pre-installed: installation	
	Step 15 - Wi-Fi antenna holder versions	
	Step 16 - Side version: Connecting the nextruder cables part one	
	Step 17 - Side version: Connecting the Nextruder cables part two	
	Step 18 - Side version: Covering the XL buddy box	
	Step 19 - Side version: Guiding the PTFE tubes part one	. 86
	Step 20 - Side version: Guiding the PTFE tubes, part two	. 87
	Step 21 - Side version: Installing the Wi-Fi antenna: parts preparation	. 87
	Step 22 - Side version: Installing the Wi-Fi antenna	. 88
	Step 23 - Back version: Wi-Fi antenna holder: parts preparation	
	Step 24 - Back version: Installing the Wi-Fi antenna: antenna preparing	
	Step 25 - Back version: Installing the Wi-Fi antenna: antenna preparing	
	Step 26 - Back version: Connecting the nextruder cables	
	Step 27 - Back version: Installing the Wi-Fi antenna holder	
	Step 28 - Back version: Connecting the Nextruder cables	
	Step 29 - Back version: XI huddy hox covering	
	STED X3 - DBCK VERSION: AL DUGGV DOX COVERING	. 91


	0. 00 B I I O III I DTEE I I I	
	Step 30 - Back version: Guiding the PTFE tubes part one	
	Step 31 - Back version: Guiding the PTFE tubes part two	
	Step 32 - Back version: Installing the Wi-Fi antenna: parts preparation	
	Step 33 - Back version: Installing the Wi-Fi antenna	
	Step 34 - Haribo time!	
	Step 35 - Spool holder assembly versions	
	Step 36 - Printed spool holder: parts preparation	
	Step 37 - Printed spool holder: left side	
	Step 38 - Printed spool holder: Assembly	
	Step 39 - Printed spool holder: Mounting the assembly	
	Step 40 - Printed spool holder: right side assembly	
	Step 41 - Injection molded spool holder: parts preparation	
	Step 42 - Injection molded spool holder: adjusting the nut	
	Step 43 - Injection molded spool holder: Assembly	
	Step 44 - Injection molded spool holder: Preparation	
	Step 45 - Injection molded spool holder: left side assembly	
	Step 46 - Injection molded spool holder: right side assembly	
	Step 47 - Nextruder assembly: parts preparation	
	Step 48 - Docking the Nextruder	101
	Step 49 - Nextruder cable bundle assembly	101
	Step 50 - Nextruder cable bundle assembly versions	102
	Step 51 - Version A: Nextruder cable bundle assembly	102
	Step 52 - Version B: Nextruder cable bundle assembly	103
	Step 53 - Haribo time!	103
	Step 54 - Almost done!	104
7. F	irst run	
	Step 1 - Before you start with Multi-Tool	
	Step 2 - Preparing the printer	
	Step 3 - Firmware update	
	Step 4 - Prusa Nextruder sock (Optional)	
	Step 5 - Nozzle seal height calibration	
	Step 6 - Nozzle seal height calibration	
	Step 7 - Wizard	
	Step 8 - Wizard: Dock Position Calibration	
	Step 9 - Wizard: Loosen pin	
	Step 10 - Wizard: Loosen screws	
	Step 10 - Wizard: Loosen screws	
	Step 12 - Wizard: Tighten the upper screw	
	Step 13 - Wizard: Tighten the lower screw	
	Step 14 - Wizard: Install pins	
	Step 15 - Wizard: Mstarr pmsStep 15 - Wizard: Dock successfully calibrated	
	Step 16 - Wizard: Dock successfully calibrated	
	Step 10 - Wizard: Test Loadceil	110
	Step 17 - Wizard: Calibrate Filament Sensors	114
	Step 19 - Calibration pin: parts preparing	
	Step 21 - Wizard: Tool Offset Calibration	
	Step 22 - Wizard: Sheet install	
	Step 23 - Wizard: Calibration pin installation	
	Step 24 - Wizard: Offset calibration done	
	Step 25 - Calibration pin	
	Step 26 - The Wizard is done!	118
	Step 27 - Semi-Assembled version only - Checking the Heatbed installation	110
	Step 28 - It's done!	
		117

Step 29 - Regular printer maintenance	
Step 30 - Quick guide for your first prints	120
Step 31 - Printable 3D models	121
Step 32 - Prusa knowledge base	121
Step 33 - Join Printables!	121
Manual changelog Five-Head (Semi-Assembled)	
Step 1 - Version history	123
Step 2 - Changes to the manual (1)	123
Step 3 - Changes to the manual (2)	
Step 4 - Changes to the manual (4)	
Step 5 - Changes to the manual (5)	
Step 6 - Changes to the manual (6)	
Step 7 - Changes to the manual (7)	126
Step 8 - Changes to the manual (8)	

1. Introduction



STFP 1 General information

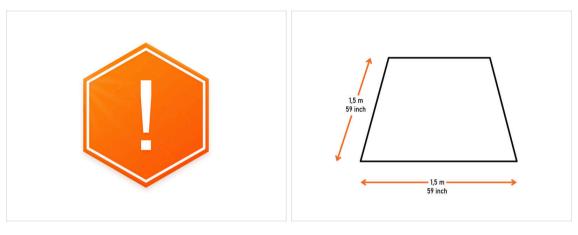

NOTE: The package is heavy! Always ask another person for help with handling.

- We recommend having a bright light above your workbench. Some parts of the printer are dark, and inadequate light could make the assembly more difficult.
- For the assembly, prepare a clean workbench with a space of at least 1,5 m x 1,5 m (59 in x 59 in).

STEP 2 How to navigate through the manual



- Use the graphical navigation buttons in the bottom right corner or the arrow keys on your keyboard:
 - Next button / Right arrow key Moves to the next image, or to the next step if it's the last image in the step.
 - Left arrow button / Left arrow key Moves to the previous image, or to the previous step if it's the first image in the step.
 - Play backward button / Up arrow key Moves to the previous step.
 - Play forward (Next) button / Down arrow key Moves to the next step.
- Click on **Contents** to expand the full list of steps in this guide. This allows you to jump to any step regardless of the sequence.
- Click on Comments to open the discussion for a specific step and leave your feedback.

STEP 3 Tools in the package



- The package includes:
- (i) Some of the tools are intended primarily for regular printer maintenance. You won't need them for this manual. We provide a list of the necessary tools at the beginning of each assembly chapter.
- Torx T10 screwdriver
- 2.5mm Allen key
- 3.0mm Allen key
- Philips PH2 screwdriver
- The printer's package contains a lubricant, which is intended for Regular printer maintenance. No need to apply it during the assembly.

STEP 4 Labels guide



- All the boxes and bags that include parts for the build are labeled.
- The amount of parts is written on the label. This number is included in the total number of each type of part.

STEP 5 Cheatsheet



- Your package contains a letter, on the back of which is a Cheatsheet with drawings of all the necessary fasteners.
- The frame covers are 1:1 scale, so you can compare the size by placing the frame cover on the paper to make sure you are using the correct type.
- (i) You can download it from our site prusa.io/cheatsheet-xl. Print it at 100 %, do not rescale it, otherwise it will not work.

STEP 6 Front, left, right and rear side



IMPORTANT: Due to the XL printer's large size, it is nearly impossible to capture the entire body in each photo. Throughout this manual, specific terms will be used to describe the side of the printer you will be working on:

- Front side with two M3nE nuts inside extrusion and a place for future xLCD screen assembly.
- Left side can be recognized by the safety sticker near its edge.
- Right side opposite to the left side, there is no safety sticker on this side.
- Rear side will be used for the future PSU assembly. There is a trapezoidal printed part on each edge.

STEP 7 Transportation foam pads








Never slide the bearing out of the rail, you may lose the bearing balls!

- Each motor axis has transportation protective foam pads.
- Take the foam pad off from both motors.
- Take off the bottom green linear stopper from the rail.
- Keep the upper green linear stoppers in the rail.
- (i) The green linear stopper will be used only during the assembly process. Once the printer is assembled, it should be removed (you will be instructed to do so later).

STEP 8 Manipulating with the printer



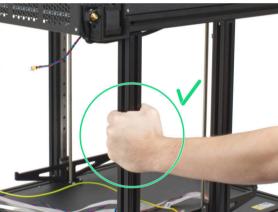


- Never lift or move the printer by using the upper metal flanges. You can damage the LED lights hidden inside.
- During the assembly, move the printer by using the extrusions on the base.


STFP 9 Silicone sock



- A silicone sock is supplied with each Nextruder package.
- Installing the Prusa nextruder sock is recommended, but optional. We will provide details on how to install it later on in the guide.
- Also, it keeps your hotend clean from filament debris and protects it in case the print detaches from the print surface.
- The main function of a silicone sock is to keep the temperature in the heater block stable, which improves the printer's performance.

STEP 10 CAUTION: Lubricant Handling

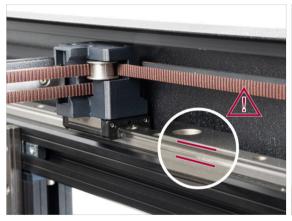

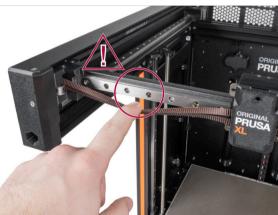


- CAUTION: Avoid direct skin contact with the lubricant used for the linear rails in this printer. If a contact occurs, wash your hands immediately. Especially before eating, drinking, or touching your face.
- Lubricant accumulates in the printer's bearings, mainly in the linear rail channels.


STEP 11 View high resolution images



- (i) When you browse the guide on help.prusa3d.com, you can view the original images in high resolution for clarity.
- Hover your cursor over the image and click the Magnifier button ("View original") in the top left corner.

STEP 12 We are here for you!

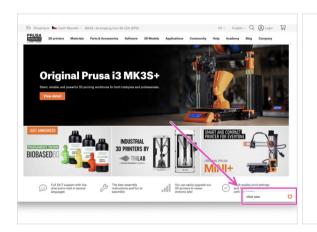

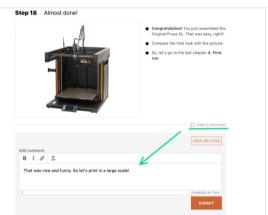

- Lost in the instructions? Missing screw or cracked printed part? Let us know!
- You can contact us using following channels:
 - Comments under each step.
 - Our 24/7 live chat at shop.prusa3d.com
 - Writing an email to info@prusa3d.com

STEP 13 Reward yourself




- Motivation and rewards are important. Look behind the printer in the box to find a bag of Haribo Bears.
- Don't eat all the bears before you start or at once! Not following instructions will have serious consequences. We are currently assembling the Prusa Haribo tactical squad for this matter.
- After years of scientific research, we came up with a solution Throughout the guide, we will tell you a specific number of bears to consume. → Throughout the guide, we will tell you a specific number of bears to consume.
- Hide the Haribo for now! From our experience, an unattended bag with sweets might suddenly disappear. This phenomenon is confirmed by multiple cases all around the world.

2. Base & Side frame assembly



STEP 1 Tools necessary for the next steps

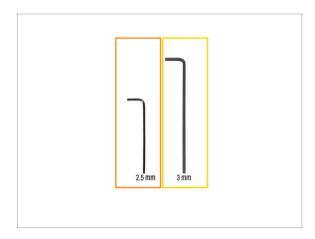

- For this guide, please prepare:
- 2.5mm Allen key
- 3mm Allen key

STEP 2 Base frame parts preparation







- For this chapter, please prepare:
 - XL base (1x)
 - M4x12 screw (8x)
 - XL rear extrusion (2x)
 - Left Z-Axis fixed (1x)
 - Right Z-Axis rotary (1x)

It is important to assemble the Z-axis parts in correct order. This guide will remind you, but keep it in mind.

STEP 3 Extrusion alignment



- There is a hole in the base extrusion that the rear extrusion pin has to fit into.
- Check that the pin fits into the hole in the extrusion
- (i) Repeat this alignment check always, when you will be assembling extrusions together throughout this manual. Improper alignment will cause visible gaps between extrusions.

STEP 4 Right rear extrusion assembly



- Turn the right side (no sticker) of the base towards you. Use the extrusion plastic cap as a guide.
- Make sure one profile insert is slid all the way to the back.
- Be careful while connecting extrusions together, avoid scratching them. The orientation of the silver pin doesn't matter.
- Before you connect the extrusions together, see the protrusion in the "standalone" extrusion. This part must be aligned with the "groove" in the base extrusion. See the bubble in the third picture.
- Take one rear extrusion prepared earlier and slide its pin into the profile insert. Mind the correct orientation of the extrusion (protrusion vs groove).
- There might be a slight gap between parts, we will address this in the next step.

STEP 5 Securing the right rear extrusion




- Insert two M4x12 screws, from opposite sides of the extrusion.
- Proceed carefully with the 3mm Allen key, avoid scratching the frame.
- (i) Tighten the screws until you reach the surface of the metal plate, then stop! We will do the final tightening later on using the torque indicator.
- Use the longer side of the 3mm Allen key and tighten the M4x12 screws on both sides.

STEP 6 Left rear extrusion assembly



- Let's assemble the second rear extrusion. Turn the left side (with the safety sticker) of the base towards you and focus on the rear side. Use the extrusion plastic cap as a guide.
- Make sure one profile insert is slid all the way to the back.
- Insert the second rear extrusion into the profile insert in the back of a base.
- Insert two M4x12 screws from opposite sides of the extrusion.
- (i) Tighten the screws until you reach the surface of the metal plate, then stop! We will do the final tightening later on using the torque indicator.

STEP 7 Z-Axis assembly clarification

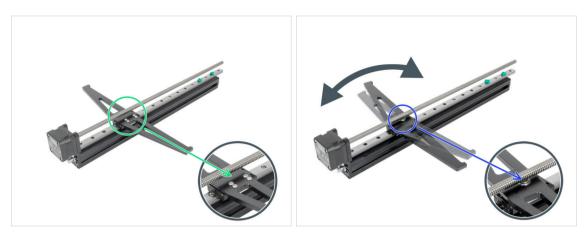

- (i) You have received two Z-axis assemblies, pay close attention to each assembly:
- Z-Axis fixed: This assembly doesn't revolve. Instead, it's held in place with SIX SCREWS. You will notice these screws holding it in place. This Z-axis assembly will be installed first on the left side of the printer.
- Z-Axis rotary: This assembly revolves around the center and has a single BEARING IN THE MIDDLE, which is visible and allows the axis to revolve smoothly. This Z-axis assembly will be installed second on the right side of the printer.
- **ATTENTION**: Pay close attention to the proper location of the Z-Axis assembly.

STEP 8 Z-Axis fixed assembly



- Stay on the left side of the base. Use the safety sticker as a guide.
- Now, let's install the **Z-Axis fixed (with six screws)** in the cutout on the left side.
- Align the second profile insert with the opening.
- ATTENTION: Pay close attention to the proper location of the Z-Axis. The Z-Axis fixed must be used on the left side (the heatbed carrier should not rotate and should have multiple screws).
- Guide the Z-Axis fixed motor cable through the opening in the base.

STEP 9 Securing the Z-Axis fixed



Be careful, don't pinch any cables!

- Carefully insert the Z-Axis fixed into the base frame. The motor must perfectly fit into the opening and the pin on the extrusion must fit into the profile insert.
- Insert two M4x12 screws, from opposite sides of the extrusion.
- Be careful with the 3mm Allen key, you may scratch the frame.
- (i) Tighten the screws until you reach the surface of the metal plate, then stop! We will do the final tightening later on using the torque indicator.
- Use the longer side of the 3mm Allen key and tighten the M4x12 screws on both sides.


STEP 10 Z-Axis rotary assembly



riangle Be careful, don't pinch any cables!

- Turn the base, so that the right side (no safety sticker) is facing towards you.
- Now, let's install the **Z-Axis rotary** into the opening on the right side.
- Align the second profile insert with the opening.
- ATTENTION: Pay close attention to the proper location of the Z-Axis. The Z-Axis rotary must be used on the right side (the heatbed carrier should rotate and should have only one screw).
- Guide the Z-Axis rotary motor cable through the opening in the base.

STEP 11 Securing the Z-Axis rotary

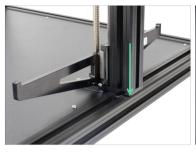





Be careful, don't pinch any cables!

- Carefully insert the Z-Axis rotary into the base frame. The motor must perfectly fit into the opening and the pin on the extrusion must fit into the profile insert.
- ① Double-check, that the Z-Axis rotary is on the right side of the base frame.
- Insert two M4x12 screws, one from opposite sides of the extrusion.
- Be careful with the 3mm Allen key, you may scratch the frame.
- (i) Tighten the screws until you reach the surface of the metal plate, then stop! We will do the final tightening later on using the torque indicator.
- Use the longer side of the 3mm Allen key and tighten the M4x12 screws on both sides.

STEP 12 Torque indicator: parts preparation



- For the following steps, please prepare:
 - Torque-indicator (1x)
 - Allen-key-handle (1x)
 - Allen key 3mm use the one already prepared

STEP 13 Assembling the Torque indicator




- Insert the 3mm Allen key into the torque indicator all the way.
- Put on the Allen key handle from the other side.
- The assembled torque indicator looks like this.


STEP 14 Final tightening with torque indicator



- Attention: Make sure that the Allen key is inserted ALL THE WAY into the screw. Do not overtighten the screws over the torque indicator scale!
- Tighten the screw till you reach the "OK" line and the 3mm Allen key is slightly bent.
- Proceed the same way on all eight M4x12 screws inserted in the extrusions.
- (i) Do not throw the torque indicator away, you will need it in the next chapter.

STEP 15 Haribo time!

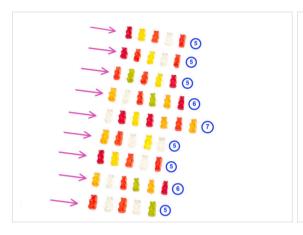

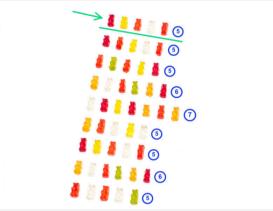

- Carefully and quietly open the bag with the Haribo sweets. A high level of noise might attract nearby predators!
- Split the gummy bears into nine rows as indicated in the photo. Use a tray, plate, or any clean surface that can be set aside during the assembly. Leave the rest in the bag for now.
- Proceed to eat the first row of five gummy bears and set he rest aside until you receive further instructions.
- (i) Did you know that Gummy bears were first created by a German candy maker named Hans Riegel in the 1920s?


STEP 16 xLCD: parts preparation






- (i) Starting from September 2024, you may receive a new injection molded xLCD.
- For the following steps, please prepare:
- xLCD assembly (1x)
- M3x10 screw (2x)
- Older versions:
- Printed xLCD assembly (1x)
- M3x16 screw (2x)

STEP 17 xLCD cable covers: parts preparation

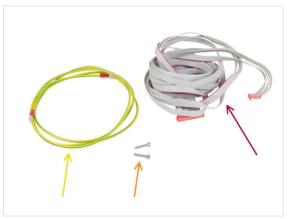

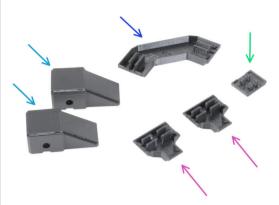

- i For the following steps, please prepare:
- xLCD PE cable (1x)
- xLCD cable (1x)
- M3x10 screw (2x)
- Frame-rear-cover (2x)
- Frame-corner-cable-cover (1x)
- Z-motor-cable-bottom-cover(2x)
- xLCD-cable-bottom-holder (1x)
- (i) The list continues in the next step...

STEP 18 Extrusion covers: parts preparation



- Stack all the plastic extrusion covers on an empty clean area. Sort them by length, as in the picture.
 For the following steps, prepare:
 - Extrusion cover 172 mm (1x)
 - Extrusion cover 182 mm (1x)
 - Extrusion cover 243 mm (2x)
- (i) Tip: To measure the extrusion covers, use the included paper cheatsheet.

STEP 19 Mounting the xLCD



- Locate the M3nEs nuts in the front base extrusion and place the xLCD assembly in front of it.
- Insert the M3x10 (older: M3x16) screw into the right xLCD support.

Do not tighten the screws fully, a few turns are enough for now.

- Use the 2.5mm Allen key to tighten the M3x16 screw into the M3nEs nut in the frame.
- Insert the second M3x10 (older: M3x16) screw from the left side and tighten it, but not overtighten. We will adjust the correct position of the xLCD assembly later on.

STEP 20 Aligning the xLCD



- Aligning the xLCD to the center is recommended or you can go slightly to the right side. Moving the xLCD to the left is not recommended as the cables won't be long enough.
- Align the xLCD approximately to the center of the base.
- Tighten the left M3x10 (older: M3x16) screw with the 2.5mm Allen key.
- Tighten the right M3x10 (older: M3x16) screw with the 2.5mm Allen key.

STEP 21 Installing the xLCD PE cable







- Turn the printer to the left side so that the bottom of the base is facing you.
 - (i) It is recommended to place a cardboard pad under the side of the base to protect the workbench and the frame from scratch.
- Version A: Take a closer look at the rear side of the xLCD assembly and locate the lower PE Faston on the xLCD board. Slide the PE cable connector all the way onto the PE Faston.
- Version B: Take a closer look at the rear side of the xLCD assembly and locate the upper PE Faston on the xLCD board. Slide the PE cable connector all the way onto the PE Faston.
- (i) Injection molded xLCD is Version B.

STEP 22 xLCD PE cable management






- Push the PE cable into the frame.
- Guide the PE cable through the extrusion. The PE cable shouldn't be stretched, this
 is important for the next steps.

STEP 23 xLCD cable routing




- The xLCD cable connector has a locking latch that has to face the red triangle near the xLCD connector.
- Connect the xLCD cable to the xLCD slot on the board.
- Make sure, that cable is not twisted.
- Make sure the xLCD cable is connected in the same orientation as seen in the picture. Otherwise, your display won't work!

STEP 24 Routing the cables

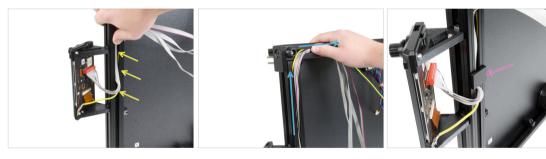

- Make sure, that the xLCD cable is not twisted.
- Insert the xLCD cable into the frame, copy the line of the PE cable, and cover the PE cable.
- Guide all xLCD cables as close to corner as possible.
- (i) Once in the corner flip the cables along the upper edge. See the picture.
- Insert the xLCD-cable-bottom-holder into the frame.

STEP 25 Routing the cables

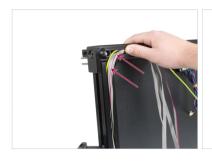






- Insert the xLCD cable far into the frame to create a gap for the frame-corner-cover.
- ⚠ Be careful, don't pinch any cables!
- Gently insert the xLCD-cable-bottom-cover into the vertical frame.
- The xLCD-cable-bottom-cover has to be in line with the horizontal frame. **Don't** insert the plastic cover into the horizontal frame.
- Insert the Extrusion cover 172mm to the frame and push it up to the xLCD-cable-bottom-cover.
- Fully insert the Extrusion cover 172 mm into the frame.

STEP 26 Routing the cables

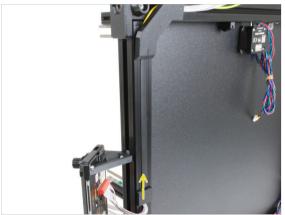



A Beware of cable pinching!

- Push up the xLCD-cable-bottom-holder to the LCD-cable-bottom-cover.
- Take the xLCD and PE cables and gently push them up.
- (i) Make sure the cable loop is not too large.

STEP 27 Horizontal cable inserting







Be careful, don't pinch any cables!

- Press the xLCD-cable-bottom-cover into the extrusion.
- Guide the xLCD and the PE cables through the extrusion.
- Remove the rubber band from the cable.
- Insert the Z motor cable into the extrusion.
- Guide the cables together through the extrusion, as in the picture.

STEP 28 Corner frame cover







Be careful, don't pinch any cables!

- Insert the 182mm extrusion cover into the extrusion.
- Push the extrusion cover to the left side.
- Fully insert the 182mm extrusion cover right next to the corner-frame-cover.

STEP 29 Inserting Z-motor-cable-bottom-cover





Be careful, don't pinch any cables!

- Push the Z-motor-cable-bottom-cover into the frame.
- Insert the Extrusion cover 243mm. Push and slide it to the left.
- The extrusion cover has to be aligned with the end of the extrusion.

STEP 30 Preparing the cables for rear cover



• Gently bend the cables over the corner and insert them into the extrusion. Start with the Z motor cable and then proceed with xLCD and PE cables. Gently bend the xLCD cable over the corner and insert it in the extrusion.


⚠ Be careful, don't pinch any cables!

- Attach the frame-rear-cover on the printer. Make sure it perfectly fits on the extrusions.
- Secure it with the M3x10 screw.

STEP 31 Inserting the second motor cable







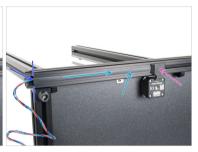

- Turn the printer so that you have the second motor on the top side.
 - (i) It is recommended to place a cardboard pad under the side of the base to protect the workbench and the frame from scratch.
- Remove the rubber band from the cable.
- Insert the motor cable in the extrusion. Make sure it goes perpendicular from the motor to the extrusion first.
- Insert the Extrusion cover 243mm. Push and slide it to the right.
- Push the Z-motor-cable-bottom-cover into the frame.
- Mind the correct direction. Guide the motor cable to the back of the printer (not towards the xLCD screen).

STEP 32 Attaching the frame-rear-cover

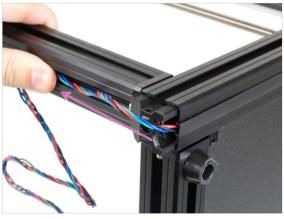


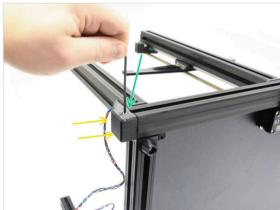

Be careful, don't pinch any cables!

- Gently bend the cable over the corner and guide it through the extrusion.
- Attach the frame-rear-cover to the frame. Make sure it fits perfectly on the extrusions.
- Secure it with the M3x10 screw.
- Keep the printer on the side, with the rear side facing towards you. We will continue working on this part of the printer in the next chapter.

STEP 33 Haribo time!

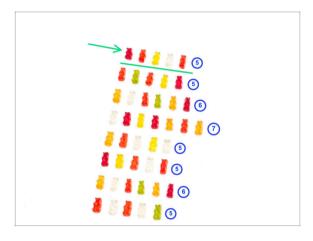


- Eat the second row: five gummy bears.
- i Did you know that the original gummy bears were inspired by the dancing bears of Europe, and Riegel named them "Gummibärchen," which means "little rubber bears" in German?

STEP 34 Well done!



- (i) The photo is for informational purposes only, keep the printer on its side for the next chapter.
- Great job! You successfully finished the base of your XL!
- Go to the next chapter 3. Core XY & Back assembly.

3. CoreXY & Back assembly

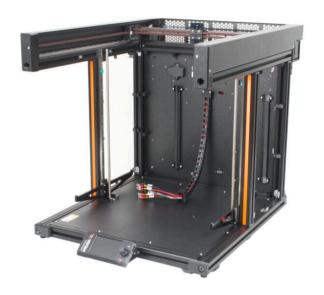

STEP 1 Tools necessary for this chapter



- For the following steps, please prepare:
- T10 screwdriver
- 2.5mm Allen key
- 3mm Allen key

STEP 2 Torque indicator disassembly



- (i) For the following steps, we need a 3mm Allen key without the torque indicator.
- Take the assembled torque indicator.
- Pull out the plastic handle.
- Pull out the 3mm Allen key from the torque indicator.
- (i) Keep the 3D printed indicator for later use.

STEP 3 Installing the CoreXY assembly: parts preparation








- For the following steps, please prepare:
- CoreXY assembly (1x)
- M4x12 screw (8x)
- M3x10 screw (2x)
- M3nEs nut (6x)

STEP 4 How to insert the M3nEs nuts

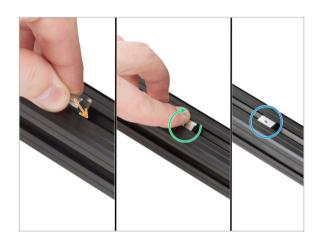

- Insert the nut all the way into the extrusion from the top. See the orientation of the spring (the metal sheet on the nut).
- With your finger, turn the nut and align it with the extrusion. The springs on the nut should be facing down.
- The M3nEs nut is installed.
- i The information above will be useful during the assembly process and in the next step →

STEP 5 CoreXY assembly



- Measure approximately 23 cm (9") from the right extrusion.
- Insert three M3nEs nuts into the left extrusion.
- Insert three M3nEs nuts into the right extrusion.

STEP 6 Installing the CoreXY assembly



- Double-check that the Z-axis fixed and rotary assemblies are in the correct positions. In the picture, the Z-axis is fixed at the bottom, which is correct. Check your printer!
- Are you left or right-handed? The printer should be already laying on its left side from the previous chapter. If you are a left-hander rotate it carefully on the opposite right side (see the picture). We are going to attach the upper CoreXY part and tighten the screws to interconnect both parts together. The instructions are the same, choose the side which suits you better for tightening the screws.
 - (i) It is recommended to place a cardboard pad under the side of the base to protect the work bench and the frame from scratch.
- There's a hole in the extrusion that the pin has to fit into.
- Move the rear profile insert inside each extrusion of the CoreXY to the rear side of the assembly.
- Slide the remaining inserts approximately to the middle. Precise position will be addressed later.
- Rotate the CoreXY on its longer side and put it near the top of the four base extrusions.
- The rear profile inserts must be facing against the rear extrusions. Do not push the CoreXY all the way in until you are prompted.

STEP 7 Installing the CoreXY assembly



- Be careful while attaching the extrusions and CoreXY, avoid scratching them.
- First, slide the CoreXY assembly on both rear extrusions.
- Align the remaining profile inserts with both Z-axis extrusions.
- Slide the CoreXY on both Z-axis extrusions.

STEP 8 Securing the CoreXY



- Insert the M4x12 screws into both holes. Same way as you did with the base.
- Proceed carefully with the 3mm Allen key, avoid scratching the frame.
- i There might be a slight gap between parts, we will address this in the next step.
- Tighten the screws until you reach the metal plate, then stop! We will do the final tightening later on using the torque indicator.
- Repeat this procedure on the three remaining extrusions.

STEP 9 Manipulating with the printer







- Never manipulate the printer by using the upper metal flanges. You can damage the LED lights hidden inside.
- Manipulate the base using the extrusions.
- Rotate the base back on its feet (the Core XY is facing up).

STEP 10 Torque indicator: parts preparation



- For the following steps, please prepare:
 - Torque-indicator (1x)
 - Allen-key-handle (1x)
 - Allen key 3mm use the one already prepared

STEP 11 Assembling the Torque indicator



- Insert the 3mm Allen key into the torque indicator.
- Put on the Allen key handle from the other side.
- The assembled torque indicator looks like this.


STEP 12 Securing the CoreXY






- Prepare the 3mm Allen key with the torque indicator.
- Insert the shorter side of the 3mm Allen key into the screw securing the CoreXY assembly.
- Tighten the screw till you reach the "OK" line and the 3mm Allen key is slightly bent.
- Repeat this procedure on all M4x12 screws inserted into the Z-axis extrusions.

STEP 13 Haribo time!

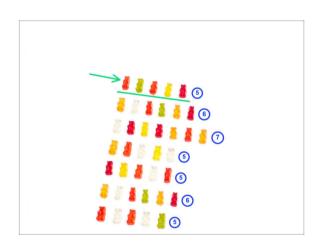

- Eat the third row: five gummy bears.
- i Did you know that Gummy bears were initially sold as a novelty item and gained popularity in Germany before spreading to other countries?

STEP 14 Securing the left linear rail

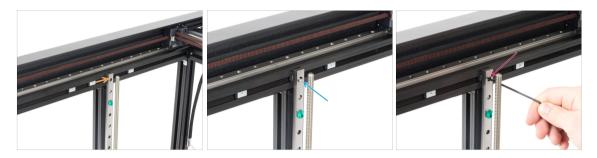


- On the left side of the CoreXY, there are three M3nEs nuts in the extrusion. Slide the middle M3nEs nut behind the linear rail. Align its hole with the hole in the linear rail.
- **Double check you have used the middle nut.**
- Insert the M3x10 screw into the upper hole.
- Tighten the M3x10 screw with a 2.5mm Allen key.

STEP 15 Securing the right linear rail



- On the right side of the CoreXY there are three M3nEs nuts in the extrusion. Slide the middle nut behind the linear rail. Align its hole with the hole in the linear rail.
- ① Double check you have used the middle nut.
- Insert the M3x10 screw into the upper hole.
- Tighten the M3x10 screw with a 2.5mm Allen key.

STEP 16 Earthing-connectors: parts preparation

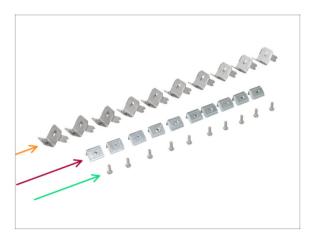

- For the following steps, please prepare:
- Earthing-connector (10x)
- M3nEs nut (10x)
- M3x8rT screw (10x)

STEP 17 Inserting the M3nEs nuts into extrusions



- (i) Turn the printer so that the left side is facing towards you. Use the safety sticker as a guide.
- Focus on the left half of the extrusion base, where we will install the M3nEs nut:
 - Insert the nut all the way **into the extrusion from the top**. See the orientation of the spring (the metal sheet on the nut).
 - With your finger, turn the nut and align it with the extrusion. The springs on the nut should be facing down.
- (i) The exact position of the nut will be adjusted later on. For now, slide it approximately to the center of the extrusion.

STEP 18 Grounding the Frame




- Make sure the M3nEs nut is facing up like in the picture.
- Place the Earthing-connector onto the M3nEs nut. The vertical part must be facing out from the printer.
- Insert the M3x8rT screw and secure both parts together with a T10 screwdriver.
 - **Do not tighten the screw completely**, we might need to adjust the position of the Earthing-connector in the extrusion later on. 4-5 turns are enough.

STEP 19 Grounding the sides



- (i) Repeat the same procedure to install the Earthing-connectors to the top and side extrusions.
- Start by inserting the M3nEs nuts in both vertical extrusions on the left side. Roughly 2 cm from the bottom extrusion.
- Continue by inserting the M3nEs nut in the extrusions on the top side. Slide it approximately to the center of the extrusion.
- Now place the Earthing connector onto the M3nEs nut. The vertical part must be facing out from the printer.
- Proceed the same way with the extrusions on the right side of the frame.
- i The exact position of each nut will be adjusted later on.
- riangle Make sure all the connectors are facing out from the printer as in the picture.
- i Do not tighten the screw firmly, we might need to adjust the position of the Earthing-connector in the extrusion later on. 4-5 turns are enough.

STEP 20 Grounding the rear side

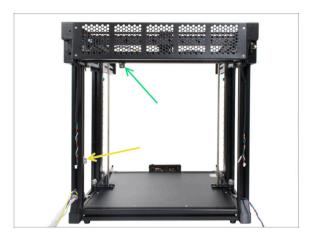

- (i) Rotate the rear side of the printer towards you. Repeat the proces of inserting the M3nEs nuts, Earthing-connectors and M3x8rT screws described in the previous steps.
- Insert the M3nEs nut in the vertical extrusion on the left side. Roughly 6 cm from the bottom extrusion.
- Continue by inserting the M3nEs nut in the extrusion on the top side. Move it to roughly the initial one-third from left.
- (i) Do not tighten the screw firmly, we might need to adjust the position of the Earthing-connector in the extrusion later on. 4-5 turns are enough.

STEP 21 Cover-clips: parts preparation



- For the following steps, please prepare:
 - Cover-clip (20x)

STEP 22 Attaching the cover-clips







- (i) This step explains how to insert and lock the cover-clip. The exact position of each clip will be described in the upcoming steps.
- i Use any extrusion closest to you.
- Hold the clip so that its longer side is aligned vertically. Then insert the cover-clip into the extrusion.
- Once the clip is in the extrusion, rotate it 90 degrees. Both directions are fine, the clip is symmetrical
- Now, the cover-clip is secured.
- (i) Note that due to tolerances, the clip might not hold in place. This is OK, its main purpose is withstand being pulled/pushed and it will be secure in place using a screw.

STEP 23 Attaching the cover-clips







- Insert the cover-clips in places, use the pictures as reference:
 - 6x on the left side
 - 6x on the right side
 - 8x on the rear side
- (i) The final position of each cover-clip will be adjusted later on.

STEP 24 XL rear panel: parts preparation



- For the following steps, please prepare:
- XL rear panel (1x)
- Extrusion cover 354 mm (2x)
- M3x8rT screw (10x)

STEP 25 Removing the electronics casing



- in order to be able to plug in cables, we need to open the box with electronics. **Don't** throw away the covers or the fasteners!
- Loosen slightly all four screws on the XL Buddy box cover. No need to remove them completely. Slide the cover upwards and remove it.
- Release and remove four M3x5rT screws on the upper cable cover.
- Take the entire cover off.
- (i) Place both covers somewhere safe, we will put them back soon.

STEP 26 Attaching the XL rear panel



- Hold the XL rear panel with your hand during assembly! It is not secured with any screws.
- For easier assembly place the bottom edge of the XL rear panel approximately 2 cm (0.8 inches) behind the bottom rear extrusion of the printer base.
- Rotate (close) the XL rear panel to the rear side of the printer. Make sure there is
 no cable in the way.
 - Be careful, don't pinch any cables!
- Carefully slide the XL rear panel up until it stops on the top stops.
- Continue by pressing the lower rear panel against the bottom extrusion
- Continue to the next step.

STEP 27 Attaching the XL rear panel




- Hold the XL rear panel with your hand during assembly! Until it is secured with screws.
- From the inside of the printer, align the Earthing-connectors with the holes of the rear panel.
- If needed release the screw slightly and adjust the Earthing-connector, then tighten it.
- From the outside (rear side), insert the M3x8rT screw and secure the rear panel using a T10 screwdriver.

STEP 28 Installing the XL rear panel



- Hold the XL rear panel with your hand during assembly! Until it is secured with screws.
- Insert the M3x8rT screw into the hole and align the Earthing-connector.
- Fully tighten the screw with the T10 screwdriver.
- Tighten the screw in the M3nEs nut to secure its position.


STEP 29 Installing the XL rear panel

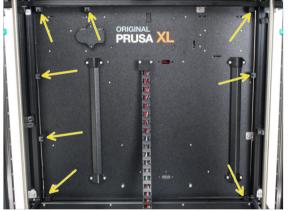



- Inside the printer: Line up all cover-clips with the holes in the rear panel.
- Outside the printer (rear side): Secure the cover-clips with eight M3x8rT screws using a T10 screwdriver.
- (i) In the unlikely case that you strip out one of the cover-clips, proceed to flip it around and use the other side.

STEP 30 Haribo time!

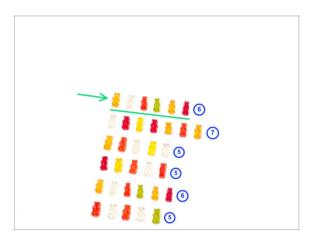

- Eat the fourth row: six gummy bears.
- (i) Did you know that gummy bears were one of the first gelatin-based candies to be made in the shape of animals?

STEP 31 Rear left: cable management





- (i) In the following steps, we will focus on routing and connecting all the cables on the rear side.
- Turn the printer's rear side towards you.
- On the left edge, start from the bottom. Grab the PE, motor with xLCD cables and gently push them into the extrusion.
- Secure the cables with the Extrusion cover 354 mm.

STEP 32 Rear left: PE cable







- Notice the two levers on each side of the electronics box. Slide out the top lever on either side to gently lift the splitter board out of its slot.
- Do not remove the splitter board from the box!
- Take the PE cable.
- Locate the PE Faston on the main electronics board (Sandwich board). Slide (connect) the PE cable all the way to the PE connection on the board.
- Return the splitter board back to its original position by **pushing it in**.

STEP 33 Rear left: connecting the cables








- Connect all cables from the left side in the following order:
 - XY motor cable (yellow label XY)
 - Z motor cable (yellow label Z)
 - LED light cable

The xLCD cable connector has a locking latch that has to face the red triangle near the xLCD connector.

xLCD cable

STEP 34 Rear left: securing the cables

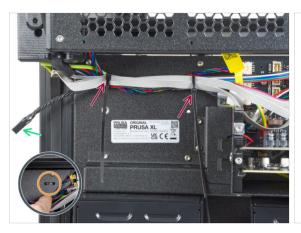



ATTENTION: Do not overtighten the zip ties! Otherwise, you risk damaging the cables.


- Under the cables, there are two perforations in the metal sheet.
- Push two zip ties through the perforations in the metal sheet to secure all the cables guiding from the electronics box. Tighten them gently.
- Cut the excess of the zip ties.
- The black twisted wire is for the filament sensor. The filament sensor itself will be installed later.

STEP 35 Rear right: cable management



- On the right edge, start from the bottom. Grab the motor cable and gently push it into the extrusion.
- Secure the cable with the Extrusion cover 354 mm.

STEP 36 Rear right: connecting the cables

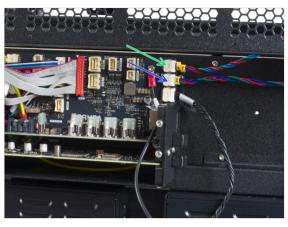



- Connect all cables from the right side in the following order:
 - XY motor cable
 - Z motor cable
 - LED lights cable

STEP 37 Installing the frame grounding








- Take a look from the top and on the rear right edge remove the grounding cover from the grounding plug on the CoreXY assembly.
- Connect the PE cable to the CoreXY grounding plug.


STEP 38 Rear right: securing the cables

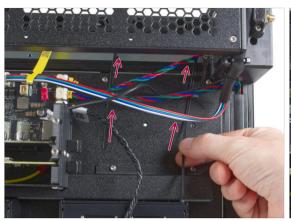



- ATTENTION: Do not overtighten the zip ties! Otherwise, you risk damaging the cables.
- Push two zip ties through the perforations in the metal sheet to secure all the cables guiding from the electronics box. **Tighten them gently.**
- Cut the excess of the zip ties.
- The black twisted wire is for the filament sensor. The filament sensor itself will be installed later.


STEP 39 Overview of electronics wiring

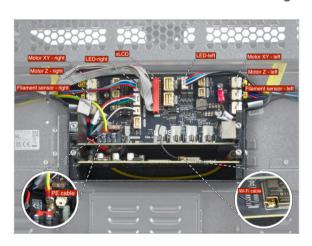

- Before proceeding to the next step, check the cable connection according to the picture.
- The newest Wi-Fi antenna connector will be installed later in the 6. chapter.


STEP 40 Rear electronics covers preparation





- For the following steps, please prepare:
- Rear-cable-management-upper (1x)
- XL-buddy-box-cover (1x)
- M3x5rT screw (4x)

STEP 41 Rear electronics cover

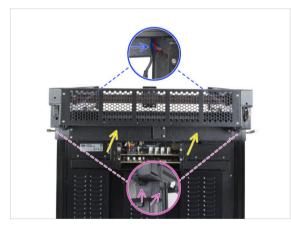



⚠ Be careful, don't pinch any cables.


- Gently attach the Rear-cable-management-upper on a rear side.
 - Make sure that no cable is pinched in the plastic covers.
 - Make sure that the metal cover does not pinch the motor cable.
- Secure the cover with four M3x5rT screws using a T10 screwdriver.

STEP 42 Covering the electronics



- i In this step, temporarily cover the electronics. This is to protect the electronics during the installation of the tool heads in the following chapter. The electronics cover does not need to be tightened.
- Attach the XL buddy box cover to the screws on the electronics box. And slide it down to lock it on the screws

STEP 43 Installing the extrusion covers: parts preparation

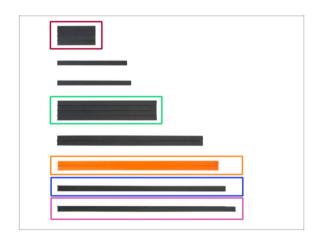


- For the following steps, please prepare:
 - Extrusion cover 95 mm (4x)
 - Extrusion cover 243 mm (2x)
 - Extrusion cover 390 mm (2x)
 - Extrusion cover 405 mm (1x)
 - Extrusion cover 430 mm (1x)

STEP 44 Installing front extrusion covers



- Turn the printer's front-right side towards you.
- Take the extrusion cover (243 mm).
- First, insert both ends of the cover into the extrusion.
- Now push the extrusion cover towards the center of the extrusion.
- (i) Repeat the process of inserting extrusion covers into the extrusions.
- Insert the extrusion cover (430 mm) into the extrusion.
- Insert the extrusion covers (243 mm) into the extrusions on the left and right sides.
- Insert the orange extrusion covers into the extrusions on the left and right sides.


STEP 45 Instaling rear extrusion covers

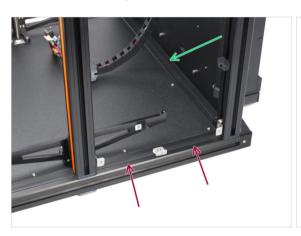



- While inserting the extrusion cover, first insert both ends of the cover, then push it towards the center of the frame.
- Insert the extrusion covers (95 mm) into the extrusion on the left and right sides.
- Insert the extrusion cover (405 mm) into the extrusion.

STEP 46 Haribo time!

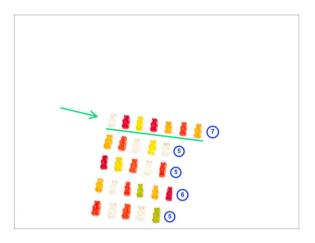

- Eat the fifth row: seven gummy bears.
- **(i)** Did you know that today, gummy bears are available in a wide range of flavors, including sour, tropical, and exotic fruit varieties?

STEP 47 Good job!



- Well done! You just finished the CoreXY & Back assembly.
- Now, go to the next chapter 4.
 Heatbed & Side panels assembly.

4. Heatbed & Side panels assembly




STEP 1 Tools necessary for this chapter



- For this chapter, please prepare:
 - T10 screwdriver
 - 2.5mm Allen key
 - Phillips PH2 screwdriver

STEP 2 Side panels preparation



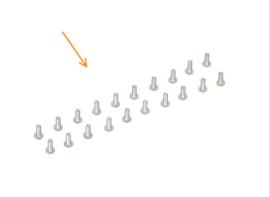

- For the following steps, please prepare:
 - Side panel (2x)
 - M3x8rT screw (20x)
- (i) The side panels are symmetrical, it doesn't matter which one you use first.

STEP 3 Left side panel assembly (part 1)



- Turn the left side of the printer towards you.
- Add the side panel onto the printer's frame.
- Align all cover-clips with the openings on the side panel.

STEP 4 Left side panel assembly (part 2)




- Insert M3x8rT screws into all the openings. Before you start tightening them fully, ensure all edges of the panel are properly aligned. Then, tighten up all the screws using the T10 screwdriver.
- (i) You can use 1.5mm Allen key inside the openings to adjust the cover-clips alignment slightly.
- Tighten the metal cover clips to the frame from the inside, using the T10 screwdriver.

STEP 5 Right side panel assembly




- (i) Use the same exact technique to attach the side panel on the other side of the printer.
- Turn the right side of the printer towards you.
- Add the side panel onto the printer.
- Insert M3x8rT screws into all the openings. Before you start tightening them fully, ensure all edges of the panel are properly aligned. Then, tighten up all the screws using the T10 screwdriver.
- Tighten the metal cover clips to the frame from the inside, using the T10 screwdriver.

STEP 6 Haribo time!

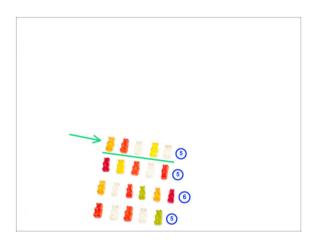

- Eat the sixth row: five gummy bears.
- i Did you know that in 1981, the Haribo company, which was founded by Hans Riegel, introduced gummy bears to the United States?

STEP 7 Heatbed assembly versions

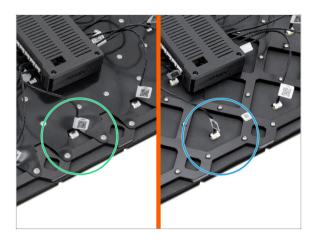

- (i) Starting from April 2025, you may receive a new heatbed. The difference is the black rubber band on a back side of the heatbed.
 - New heatbed with a rubber band.

Older version:

 A heatbed without a rubber band. The assembly is the same as the new one.

STEP 8 Heatbed assembly preparation








- ATTENTION: Make sure your workspace is clean before you start working with the heatbed. Use a soft pad underneath (cloth / cardboard) to avoid scratching the heatbed components.
- Turn the heatbed upside down.
- Release the four marked screws holding the bed-controller-case.
- Take the cover off.
- Don't throw the parts away. You will need them later on!

STEP 9 Heatbed terminals preparation

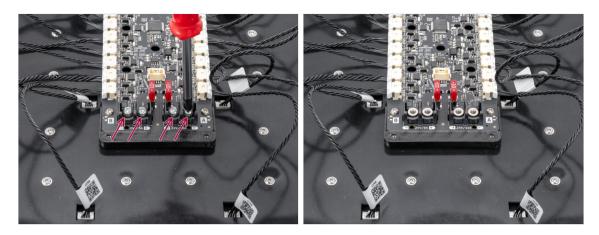

Remove the four power terminal screws using the Phillips screwdriver. Keep them aside as we will need them in the next step.

STEP 10 Connecting the Heatbed cables




- Insert the heatbed into the center of the printer as in the picture with the **terminals facing down**. Keep it in an upright position. Make sure the heatbed cables are accessible below it.
- Prepare the power connectors into the indicated layout. Keep the printed part on.
 - Red (+ / positive) wires are closer to the center.
 - Black (- / negative) wires are closer to the sides.
- Connect the data cable to the center connector.
- Attach the power connectors into the terminals and fix them in place using the previously removed screws and the Phillips screwdriver.
- Double check you have connected the power cables correctly!

STEP 11 Assembling the Heatbed




- Re-attach the bed-controller-case.
- Fix it in place by tightening the four screws using a T10 screwdriver.

STEP 12 Preparing the heatbed cable screws

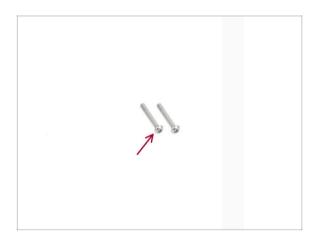

- For the next step, please prepare:
- M3x20rT screws (2x)

STEP 13 Fixing the heatbed cables in place

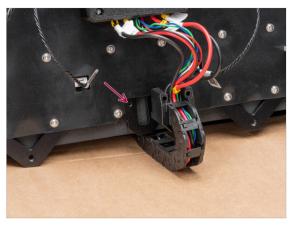



- Locate the openings for the cable chain on the lower side of the heatbed frame.
- Attach and secure the cable chain mount to the openings using two M3x20rT screws using the T10 Torx screwdriver. Bend the cables slightly if needed.

STEP 14 Removing linear rail stoppers



• Take off the linear rail stoppers on both inner sides of the printer.

You might have more than two rail stoppers in both bearings. Pull all of them out from the rail.

STEP 15 Installing the Heatbed







- Take the Heatbed and attach it to the top of the threaded rods. Both of the trapezoid nuts on the sides must engage onto a threaded rod.
- \triangle Pay attention to the connected cables while you are attaching the Heatbed!
- Using your hand, rotate the threaded rods slightly until both of the rods engage into the nut on the side of the Heatbed.

STEP 16 Attaching the Heatbed







- The Heatbed should now hold onto the threaded rods.
- By rotating the threaded rods on both sides, move the Heatbed approximately 5cm below the top of the threaded rods.
- Make sure the Heatbed is always as leveled as possible while you are moving it by rotating the threaded rods with your hand.

STEP 17 Preparing the Z-Axis bearing housing







- For the following steps, please prepare:
 - Z-Axis bearing housing (2x)
 - Bearing (2x)
 - M3x10 screw (4x)
- Slide both bearings into the Z-Axis bearing housings.

STEP 18 Installing the Z-Axis bearing housing









- Move the HB M3nEs nuts towards the linear rail on both sides of the printer.
- Install the Z-Axis bearing housing onto the M3nEs nuts.
- Fix it in place by two M3x10 screws using the 2.5mm Allen key.
- (i) Repeat the same process for the other side too.

STEP 19 Preparing the Heatbed screws

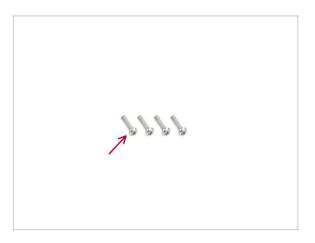


- For the following steps, please prepare:
 - M3x12rT screw (4x)

STEP 20 Fixing the Z-axis side parts in place

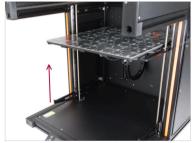




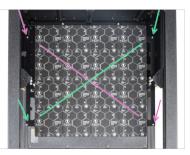

- Take the left Z-axis part and slide it up to the heatbed frame.
- Fix it to the heatbed frame with two M3x12rT screws using the T10 screwdriver. Don't tighten it all the way yet!
- Now, fix the **right** Z-axis part to the heatbed frame using the same technique.
- Now, tighten all four screws in a cross pattern:
 - First, tighten the front right and rear left screws.
 - Then, tighten the front left and rear right screws.

STEP 21 Haribo time!

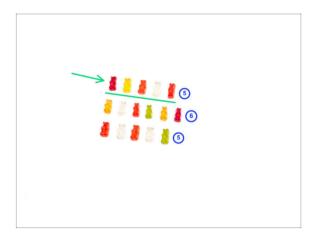

- Eat the seventh row: five gummy bears.
- (i) Did you know that gummy bears have become a popular ingredient in various desserts, including cakes, ice creams, and even cocktails?

STEP 22 Good job!




- Well done! You have just finished the Heatbed & Side panel assembly.
- Proceed to the next chapter: 5.Tool-changer assembly

5. Tool-changer assembly



STEP 1 Tools necessary for this chapter

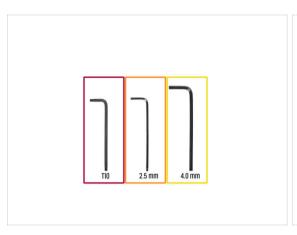



- For this chapter, please prepare:
- T10 Torx key
- 2.5 mm Allen key
- 4.0 mm Allen key
- A cardboard box is to be used as heatbed protection during the setup. *Hint: you can use the Nextruder box shipped with your printer.*


STEP 2 Preparing the X-carriage



- Reminder: To handle the printer, always grab the handles on both sides of the printer. Do not lift the printer by the aluminum extrusions or the metal sheet profiles on top.
- in the following steps, we will work with tools and install the Nextruder above the heatbed, it is recommended to protect it against any possible damage. An empty Prusament box can serve this purpouse.
- For better access when mounting the Nextruder, manually move the heatbed down.
- Place the empty cardboard box approximately in the front center part of the heatbed. Move the XY axis forward.
- Move the X-axis assembly all the way to the front side of the printer.
- Move the X-carriage approximately to the center of the X-axis.

STEP 3 Installing the ToolChanger: parts preparation




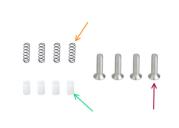



- For the following steps, please prepare:
- Tool Changer Upper Lock (1x)
- Tool Changer Lower Lock (1x)
- Spring 3x9 (4x)
- TC push pin (4x)
- M3x12cT screw (4x)
- X-carriage-cover (1x)

STEP 4 Preparing the ToolChanger

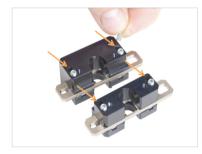





- Insert each TC push pin into the holes in both metal parts.
- Insert each spring 3x9 into the same holes as a TC push pins.
- The tool changer is prepared. The springs must be sticking out.
 - Make sure that the springs and pins do not fall out when handling the parts.


STEP 5 Installing the ToolChanger



Be careful that the springs and pins do not fall out when handling the parts.

- Line up the screws in the TC block lower assembly lock with the blind holes in the X-carriage. **Ensure the part is in the correct orientation**. Use the U-shaped groove in the part.
- Take a look at the X-carriage from the rear side.
- Attach the TC block lower assembly lock to the X-carriage and secure it with two M3x12cT screws from the front side. Ensure the correct orientation of the part.
- Attach the TC block upper assembly to the X-carriage from the top and secure it with two M3x12cT screws from the front side.

STEP 6 Covering the X-carriage

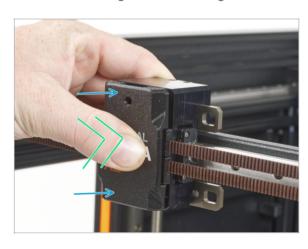

- Attach the x-carriage-cover on the X-carriage with the hole up.
- Push the center of the cover using your thumb. The cover will then snap into the latches on the Xcarriage. You will feel a light "click" when it is successfully snapping.

STEP 7 Almost done



- That wasn't so hard. Anyway, good job!
- Now go to the next chapter 6.Extruder & accessories assembly

6. Extruder & accessories assembly



STEP 1 Filament sensor: parts preparation





- For the following steps, please prepare:
- Filament sensor assembly [1, 2, 3] left (1x)
- Filament sensor assembly [4, 5, :)] right (1x)
- M3x12rT screw (2x)
- M3nEs nut (2x)

STEP 2 Inserting the M3nEs nut





- Turn the printer around so that its left side is facing you.
- Insert the M3nEs nut into the vertical extrusion on the rear of the left side.

STEP 3 Attaching the filament sensors







- Connect the filament sensor cable to the Filament sensor assembly [1, 2, 3].
- Move the filament sensor assembly to the top of the extrusion and align the M3nEs nut so that it aligns with the opening on the filament sensor assembly.
- Attach the filament sensor to the M3nEs nut using the M3x12rT screw and T10 screwdriver.
- Repeat the same procedure for the Filament sensor assembly [4, 5, :)] on the other side.
- (i) You should now have both Side Filament sensors attached.

STEP 4 Nextruder cable: parts preparation



- (i) From April 2025, you may receive a new cable bundle. The difference is described before the cable bundle is connected to the Nextruder.
- For the Nextruder cable bundle assembly please prepare:
 - Cable bundle (5x)

STEP 5 Nozzle seal versions



- (i) The latest assemblies come with the nozzle seal pre-installed on the extruder dock.
- Examine one of the extruder docks closely and compare it to the picture to see if the nozzle seal is already in place with the square nut.
- The nozzle seals that are already pre-installed on the extruder docks might differ in color. This does not affect the assembly process.
 - Grey nozzle seal.
 - Red nozzle seal.
- i If you have the pre-installed nozzle seal, continue to this step: Guiding the nextruder cable
- If your nextruder does not have the pre-installed nozzle seal, continue to the next step →

STEP 6 Nozzle seal not pre-installed: nextruder dock preparation



Repeat this step for all tool heads:

- Insert the M3nS nut into the nextruder dock.
- Make sure the nut is pushed into the dock all the way. If not, use the Allen key to push the nut into the nextruder dock.
- (i) If the nut fell out during transport, look for it in the nextruder box. There is also a spare one in the nozzle seal assembly package if needed.
- Do not install the nozzle seal yet! This will be done later. We need to attach the extruder dock to the printer first.

 Continue to the next step →

STEP 7 Guiding the nextruder cable



- Carefully rotate the printer 180° so that the PSU (Power Supply Unit) side is facing you.
- Locate the long metal profile with five M3 holes inside the rear aluminum extrusion.
- We will use all M3 holes in the metal profile.
- Locate a screw in the long metal profile which is fixing the part during transport.
 Keep the screw in the metal profile for now.

Maintain the position of the long metal profile for the next step. It must not move! If the metal profile moves, then push it all the way to the left and fix it in position with the screw.

STEP 8 Attaching the first and second nextruder dock









- If your nextruder dock does not have the pre-installed nozzle seal, DO NOT install it yet! Attach the dock as instructed in this step, and we will install the nozzle seals after the dock inspection.
- Place the xl-dock-cable-router on the bottom metal sheet below the aluminum extrusion on the right side of the printer.
- Locate the protruding screw from the XL-dock-cable-router. Attach the screw to the first M3 hole in the long metal profile (tch-mounting-insert). Check through the hole in the rear if the cable holder is lined up with the hole.
- Push the 2.5 mm Allen key all the way through the hole in the rear metal sheet until you reach the **middle** screw in the xl-dock-cable-router and tighten the screw.
- The dock is a press fit, the screw must be tightened firmly.
- (i) Repeat this step for the second tool head.

STEP 9 Dock inspection

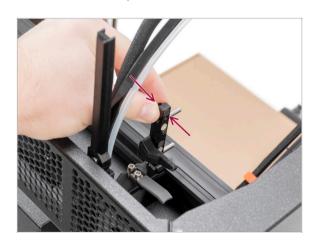

- i This step is the same for all versions of the dock assembly.
- Check that the dock is properly tightened. The dock must not move.
- (i) The dock is a press fit, the screw must be tightened firmly.
- Please watch the video in the next step for a better understanding.

STEP 10 Dock inspection: video

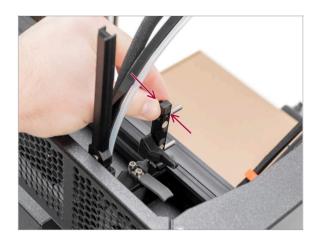

- i This step is the same for all versions of the dock assembly.
- The following instructions need to be done correctly and carefully.
 Achieve better understanding and successful assembly by watching the video alongside the guide.

STEP 11 Third dock: removing the screw







- (i) At this point, you should have already installed two docks. This step is the same for all versions of the dock assembly.
- Locate the M3 screw in the metal insert.
- Using a 2.5mm Allen key, remove the screw from the metal insert.
- Attach the third, fourth, and fifth docks the same way as the first two docks.
- (i) The dock is a press-fit, so the screw needs to be tightened firmly.
- The attached docks have to look like the picture
- (i) If your nextruder docks HAVE THE PRE-INSTALLED NOZZLE SEALS, skip to this step: Wi-Fi antenna holder versions
- (i) If your nextruder docks DO NOT HAVE THE PRE-INSTALLED NOZZLE SEALS, continue to the next step →


STEP 12 Nozzle seal not pre-installed: parts preparation





- The following instructions are intended only for printers without pre-installed nozzle seals. If your printer came with the nozzle seals installed on the Nextuder docks, go to this step: Wi-Fi antenna holder versions.
- For the following steps, please prepare:
 - Nozzle seal (5x)
 - M3x30 screw (5x)
 - Spring 15x5 (5x)

STEP 13 Nozzle seal not pre-installed: assembly

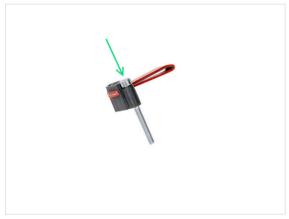



- Insert the M3x30 screw into each nozzle seal.
- Slide the spring on each nozzle seal.
- i Do this for all five nozzle seals.

STEP 14 Nozzle seal not pre-installed: installation




- (i) The current nozzle seal position is temporary, the exact height will be set in the next chapter once all the Nextruder parts are mounted.
- Locate the hole for a nozzle seal onthe dock.
- Insert the nozzle seal (with the spring) into the dock.
- Using a 2.5 mm Allen key, tighten the screw so that the head of the screw is 1 mm above the dock.
- Good! The first dock is ready.
- Repeat this procedure for all remaining docks.

STEP 15 Wi-Fi antenna holder versions




- Let's connect the Wi-Fi antenna now. There are two versions of this component. Identify which version of the Wi-Fi antenna your printer has.
- Side version: The antenna connector is prepared by the manufacturer, and the Wifi antenna holder is on the side.
 - i If you have the side version, continue to the next step in the guide → Side version: Connecting the nextruder cables part one.
- Back version: The antenna connector has to be assembled, and the Wi-fi antenna will be mounted in the middle of the rear side of the printer.
 - i If you have the back version, skip to this step: Back version: Wi-Fi antenna holder: parts preparation

STEP 16 Side version: Connecting the nextruder cables part one

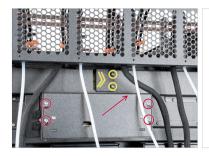



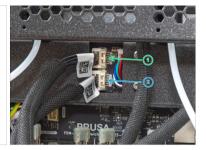

- Locate the xl-rear-cable-management-plug (cover) on the rear of the printer.
- Slightly loosen two screws on the cover. No need to remove them completely. Slide the cover to the right and remove it from the printer.
- Loosen four screws securing the Buddy board cover. Remove the cover.
 - Connect the first dock (from the right side) cable to the upper slot labeled DWARF 1.
 - Connect the second dock (from the right side) cable to the lower slot labeled DWARF 2.

STEP 17 Side version: Connecting the Nextruder cables part two







- Attach the connectors' cover back to the screws. Slide it to the left and tighten the screws. Make sure that the cables are not pinched or damaged
- Do not take the XL-Splitter board out of the printer, the photo is only an illustration of the connector locations.
- Connect the **third**, **fourth** and **fifth** (from the right) Nextruder to the XL-Splitter:
 - Third Nextruder.
 - Fourth Nextruder.
 - Fifth Nextruder.
- (i) XL-splitter with connected Nextruders should look like this.

STEP 18 Side version: Covering the XL buddy box







Be carefull, do not pinch any cables!

- Put the XL buddy box cover back on the printer.
- Check Nextruder cables, they have to be inside the cutout in the cover.
- Tighten the four screws with a T10 key.

STEP 19 Side version: Guiding the PTFE tubes part one







- Locate the side filament sensor.
- Insert the PTFE tube from the first dock (from the right side) all the way into the top hole in the filament sensor.
- Insert the PTFE tube from the second dock (from the right side) all the way into the middle hole in the filament sensor.
- Insert the PTFE tube from the third dock (from the right side) all the way into the bottom hole in the filament sensor.

STEP 20 Side version: Guiding the PTFE tubes, part two







- Locate the left filament sensor.
- Insert the fourth dock (from the right side) PTFE tube all the way into the top hole in the filament sensor.
- Insert the fifth dock (from the right side) PTFE tube all the way into the middle hole in the filament sensor.

STEP 21 Side version: Installing the Wi-Fi antenna: parts preparation



- For the following steps, please prepare:
- Wi-Fi antenna (1x)
 - i The Original Prusa XL is shipped with two versions of the Wi-Fi antenna, each with a different shape. The functionality is the same.

STEP 22 Side version: Installing the Wi-Fi antenna







- Locate the Wi-Fi antenna connector on the right rear corner of the printer.
- The antenna can be rotated around and bent in two directions.
- We recommend pointing the antenna straight upwards.
- (i) Once the Wi-Fi antenna is installed, skip to this step: Haribo time!

STEP 23 Back version: Wi-Fi antenna holder: parts preparation



- For the following steps, please prepare:
- Wi-Fi-antenna-holder version E3/E4 (1x)
- Antenna cable (1x)

STEP 24 Back version: Installing the Wi-Fi antenna: antenna preparing



- Remove the nut with the washers from the antenna connector.
- The antenna connector is prepared.
- The latest version of the connector has a thicker washer. We don't need it anymore. You can throw it away.
- Insert the antenna connector into the same-shaped hole in the Wi-Fi-antenna-holder.

STEP 25 Back version: Installing the Wi-Fi antenna: antenna preparing




- Push the antenna connector through the Wi-Fi-antenna-holder.
- Insert the thinner washer back onto the connector.
- Using the universal wrench, tighten the nut on an antenna connector.
- Good job! The Wi-Fi antenna is prepared.

STEP 26 Back version: Connecting the nextruder cables



- Locate the xl-rear-cable-management-plug (cover) on the rear of the printer.
- Loosen two screws on the cover slightly. No need to remove them completely. Push
 the cover to the right and remove it from the printer.
- Loosen four screws securing the electronics cover. Remove the cover.
- Connect the first dock (from the right side) cable to the upper slot labeled DWARF
 1.
- Connect the second dock (from the right side) cable to the lower slot labeled DWARF 2.
- Attach the connectors cover to the screws. Slide it to the left and tighten the screws. Make sure that the cables are not pinched or damaged

STEP 27 Back version: Installing the Wi-Fi antenna holder

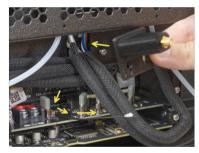





- Push the antenna cable through the opening in the cable cover (metal sheet) and guide it behind the cover to the electronics box.
- Attach the antenna-holder on the screws, slide the cover to the left, and tighten the screws.
- Gently, but firmly, connect the antenna cable with the antenna connector on the XL buddy board.
- (i) Support the board from below with your finger while attaching the antenna cable to prevent damaging the board.

STEP 28 Back version: Connecting the Nextruder cables



- (i) Do not take the XL-splitter board out of the printer. The photo has just the splitter board to show you where to connect the nextruder cables.
- When connecting the cables into the Buddy board, support the board with your fingers from below to prevent bending the board.
- Connect the third, fourth and fifth (from the right) Nextruder to the splitter:
 - Third Nextruder.
 - Fourth Nextruder.
 - Fifth Nextruder.
- XL-splitter with connected Nextruders has to look like this.

STEP 29 Back version: XL buddy box covering



- Be carefull, do not pinch any cables!
- Put the XL-buddy-box-cover back on the printer.
- Check Nextruders cables, they have to be inside the cutout in the cover.
- With a T10 key tighten the four screws.

STEP 30 Back version: Guiding the PTFE tubes part one







- Locate the right filament sensor.
- Insert the first dock (from the right side) PTFE tube all the way into the upper hole in the part.
- Insert the second dock (from the right side) PTFE tube all the way into the middle hole in the filament sensor.
- Insert the third dock (from the right side) PTFE tube all the way into the bottom hole in the filament sensor.

STEP 31 Back version: Guiding the PTFE tubes part two







- Locate the left filament sensor.
- Insert the PTFE tube from the **fourth** dock (from the right side) all the way into the upper hole in the part.
- Insert the PTFE tube from the fifth dock (from the right side) all the way into the middle hole in the part.

STEP 32 Back version: Installing the Wi-Fi antenna: parts preparation



- For the following steps, please prepare:
- Wi-Fi antenna (1x)
 - i The Original Prusa XL is shipped with two versions of the Wi-Fi antenna, each with a different shape. The functionality is the same.


STEP 33 Back version: Installing the Wi-Fi antenna





- Locate the Wi-Fi antenna connector in the middle of the printer.
- Screw the Wi-Fi antenna on the antenna connector. The antenna can be rotated around and bent in two directions.
- We recommend pointing the antenna straight upwards.
- Well done, the Wi-Fi antenna is installed, let's move on to the spool holders.

STFP 34 Haribo time!

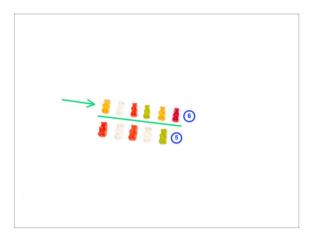

- Eat the eighth row: six gummy bears.
- Did you know that the Guinness World Record for the largest gummy bear weighed a whopping 5,000 pounds (2,268 kilograms) and was made in 2011?

STEP 35 Spool holder assembly versions





- (i) Original Prusa XL comes with two versions of the spool holder. Each version has slightly different parts and procedures.
- Refer to the pictures to compare which parts you have, and then choose the instructions that match:
 - Printed spool holder: Set of three printed parts. If you have this version, continue to the Printed spool holder: parts preparation.
 - Injection molded spool holder: Set of two injection molded parts. If you have this version, continue to Injection molded spool holder: parts preparation.

STEP 36 Printed spool holder: parts preparation





- For the following steps, please prepare:
 - Spool-holder-slider (5x)
 - Spool-holder-base (5x)
 - Spool-holder-mount (5x)
 - M5x85 screw (5x)
 - M5nEs nut (5x)

STEP 37 Printed spool holder: left side







- Carefully turn the printer so that the side with the Wi-Fi antenna faces you.
- Insert the M5nEs nut into the front support extrusion (with the orange plastic cover). Insert the side with the spring (metal plate) first, then push the nut inside.
- The M5nEs nut is free to move, you can adjust the position as you want. But remember, the nut must be slightly pushed in to smoothly move. Anyway, we recommend approximately the same position as you can see in the picture.
- Insert **second** and **third** M5nEs nut in the extrusion approximately to the same position as shown.

STEP 38 Printed spool holder: Assembly







Repeat this step for all five spool holders:

- Insert the spool-holder-base into the spool-holder-slider and push it through a little through the part.
- Attach the spool-holder to the spool-holder-mount.
- Insert the M5x85 screw into the spool-holder-assembly.

STEP 39 Printed spool holder: Mounting the assembly





- Attach the spool holder assembly to the M5nEs nut in the extrusion. Note that there
 is a protrusion on the spool-holder-mount, which must fit into the groove in the
 extrusion.
- Tighten the spool holder assembly with a 4 mm Allen key.
- Attach and tighten the second and the third spool holder to the M5nEs nut using a 4 mm Allen key.

Do not use the spool holder as a handle when moving the printer!

(i) Keep in mind that if you mount the Spool holder too high or too low, it may not fit the filament spool on it. There has to be enough space around it.

STEP 40 Printed spool holder: right side assembly





- Carefully turn the printer so that the side without the Wi-Fi antenna faces you.
- Insert the fourth and fifth M5nEs nut in the extrusion approximately to the same position as shown.
- Attach and tighten the fourth and the fifth spool holder to the M5nEs nut using a 4 mm Allen key.

① Do not use the spool holder as a handle when moving the printer!

- (i) Keep in mind that if you mount the Spool holder too high or too low, it may not fit the filament spool on it properly. There has to be enough space around.
- Now, go to Nextruder assembly: parts preparation.

STEP 41 Injection molded spool holder: parts preparation



- For the following steps, please prepare:
- Spool-holder-slider 5x)
- Spool-holder-base (5x)
- M4x12 screw (5x)
- M4nEs nut (5x)

STEP 42 Injection molded spool holder: adjusting the nut





- Carefully turn the printer so that the side with the Filament sensor (with 3 PTFE tubes) is facing you.
- Insert the first M4nEs nut into the front support extrusion (with the orange plastic cover). Insert the side with the spring (metal plate) first, then push the nut inside.
- Insert the second and the third M4nEs nut into the extrusions as described in the picture.
- The M4nEs nuts are free to move; you can adjust the position as you want. The nuts must be slightly pushed in to smoothly move. Refer to the image to see the ideal position.

STEP 43 Injection molded spool holder: Assembly





- Locate pins two pins on the spool-holder-base and line them with the rails in the spool-holder-slider.
- Insert the spool-holder-base into the spool-holder-slider and push it through a little through the part.

STEP 44 Injection molded spool holder: Preparation



- Insert the M4x12 screw on the longer side of the 3mm Allen key.
- Insert the 3mm Allen key with the M4x12 screw through the assembled spool holder to the prepared hole in the spool-holder-base.
- The M4x12 screw has to protrude through the spool-holder-base.

STEP 45 Injection molded spool holder: left side assembly





- Attach the first spool holder assembly to the M4nEs nut in the extrusion. Note that there is a protrusion on the spool-holder-base, which must fit into the groove in the extrusion.
- Tighten the spool holder assembly.
- Assemble the second and the third spool holder and attach them to the M4nEs nuts with M4x12 screws.

riangle Do not use the spool holder as a handle to lift or move the printer!

STEP 46 Injection molded spool holder: right side assembly





- Turn the printer, so the Filament sensor (with two PTFE tubes) is facing you.
- Insert the fourth and fifth M4nEs nut in the extrusion approximately to the same position as shown.
- Attach and tighten the fourth and the fifth spool holder to the M4nEs nut using a 3 mm Allen key.

Do not use the spool holder as a handle to lift or move the printer!

- (i) Keep in mind that if you mount the Spool holder too high or too low, it may not fit the filament spool on it. There has to be enough space around it.
- Well done! With the spoolholders mounted, we can move on to assemble the nextruders →

STEP 47 Nextruder assembly: parts preparation



- (i) Starting in April 2025, you may receive a new Nextruder. The difference is described before the cable bundle is connected to the Nextruder.
- For the next steps, please prepare:
 - Nextruder (5x)

STEP 48 Docking the Nextruder







- Take the Nextruder and place it carefully next to the dock.
- Place the two metal inserts through the white holes in the dock. The magnets will help you dock the Nextruder.
- Well done, the first Nextruder is ready!
- Dock the **second, third, fourth, and fifth** Nextruder in the same way as the first.

STEP 49 Nextruder cable bundle assembly








Repeat this step for all tool heads:

Take the first dock Nextruder cable bundle.

⚠ Check that the cable bundle is not twisted!

- Hook up the keyhole openings in the flexible plate of the cable bundle onto the screw heads and push it up to correct the position.
- Using a T10 Torx screwdriver tighten the marked two screws.

STEP 50 Nextruder cable bundle assembly versions

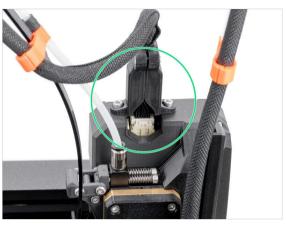



- (i) Starting from April 2025, you may receive a new cable bundle.
 - Version A: The cable bundle connector is secured with two screws. Continue to the next step.

Older version:

 Version B: The cable bundle connector is secured without any screws. Continue to Version B: Nextruder cable bundle assembly

STEP 51 Version A: Nextruder cable bundle assembly








- Repeat this step for all tool heads:
 - Insert the semi-transparent PTFE tube into the fitting on the Nextruder. Push it all the way in.
 - Remove two M3x10 screws.
 - Attach the cable connector to the top of the Nextruder. Secure the connector with two M3x10 screws.
- Assemble and connect all Nextruders.
- Good job, now proceed to Almost done!

STEP 52 Version B: Nextruder cable bundle assembly



- Repeat this step for all tool heads:
 - Insert the semi-transparent PTFE tube into the fitting on the Nextruder. Push it all the way in.
 - Attach the cable connector into the top of the Nextruder.
- (i) Starting from September 2024, you may receive a new black Fitting M5-4. The assembly and functionality remain identical to the blue one.
- Assemble and connect all Nextruders.
- Good job, let's celebrate with some gummy goodness in the next step →

STEP 53 Haribo time!

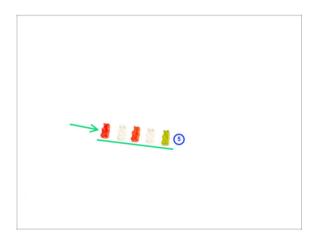

- Eat the last row: five gummy bears.
- (i) Did you know that gummy bears are loved by people of all ages, from children to adults, and are often enjoyed as a nostalgic treat?
- Disclaimer: You have a lot of gummy bears left. Do not eat all the leftover gummy bears all at once by yourself now! As much as it sounds like it could be fun, trust us... You do not want to bear the consequences.
- Share the rest of the gummy bears with the people who helped you build the 3D printer, or have a few more during the calibration. You can also have a few anytime your printer is heating up, or you are eagerly waiting for your project to finish printing.

STEP 54 Almost done!



- Congratulation! Your Original Prusa XL is ready to be fired up!
- Compare the final look with the picture.
- Now, let's go to the last chapter: First run →

7. First run



STEP 1 Before you start with Multi-Tool




- i This chapter shows a brief description of the wizard. Please note that the screenshots are illustrative and might differ from those in the firmware.
- (i) Make sure you are running Firmware 5.1.2 or newer
- i Some parts of the wizard must be done multiple times, this depends on the number of tool-heads. For example:
 - Dock Calibration
 - Loadcell calibration
 - Filament sensor calibration

STEP 2 Preparing the printer



- Make sure that the printer is placed in a stable place where no ambient vibrations are transmitted (for example, where other printers are printing).
- From the rear side of the printer, plug in the PSU cable.
- Turn the power switch ON (symbol "I").

STEP 3 Firmware update

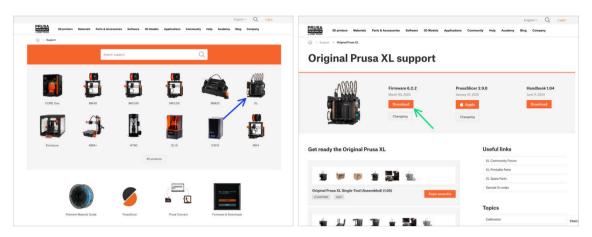

- (i) All shipped printer packages include a USB drive with the latest firmware. However, it is recommended to check and possibly upgrade the firmware version.
- Visit the help.prusa3d.com page.
- Navigate to the Prusa XL page.
- Save the firmware file (.bbf) onto the bundled USB drive.
- (i) Pro tip: To access Prusa XL homepage you can use the URL: prusa.io/XL

STEP 4 Prusa Nextruder sock (Optional)



- A silicone sock is supplied with each Nextruder package.
- If you want to install the sock, do it before the calibration.
- i How to install the sock check the article.

STEP 5 Nozzle seal height calibration



- (i) Starting from May 2024, you may receive a gray nozzle seal. The assembly and functionality remain identical to the red one.
- The following image was made with the Nextruder and dock removed from the printer for better visibility of how it should be set. Please do not remove the docks from the printer and set the seal height with the dock still connected to the printer.
- In the next step, we'll calibrate the height of the nozzle seal.
- Using the 2.5 mm Allen key, tighten or untighten the M3x30 screw to calibrate the height of the nozzle seal.
- Proceed to the next step.

STEP 6 Nozzle seal height calibration




- If the nozzle seal is too low or too high, we need to reposition its height.
- Using a 2.5 mm Allen key:
 - Turn the M3x30 screw clockwise to set the Nozzle seal lower.
- The correct position of the Nozzle seal is when the Nozzle seal is not bent and it is touching the nozzle.

STEP 7 Wizard



- After the printer starts up, the screen prompts for the printer test and setup wizard.
- (i) The wizard will test all important components of the printer. The whole process takes a few minutes. Some parts of the wizard require direct user interaction. Follow the instruction on the screen.
- NOTE: While testing the axes, make sure that there is nothing in the printer that is obstructing the movement of the axes.
- MARNING: Do not touch the printer during the wizard unless prompted! Some parts of the printer may be HOT and moving at high speed.

STEP 8 Wizard: Dock Position Calibration

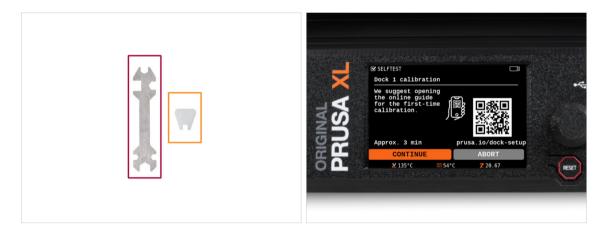

- You will need:
 - Universal wrench (1x)
 - Mini wrench (1x)
- Dock calibration will guide you through how to properly calibrate the position of individual tool heads on the printer.
- It is necessary to follow every step in the dock calibration properly! **Do not rush, read every step twice, then proceed with the instruction.**

STEP 9 Wizard: Loosen pin





- Follow the wizard instructions on the screen.
- Using a Mini wrench, unscrew and remove both dock pins on Dock 1.

STEP 10 Wizard: Loosen screws






- Follow the wizard instructions on the screen.
- Using a Uni wrench, loosen two screws. A few turns are enough.

STEP 11 Wizard: Lock the tool





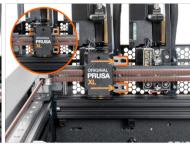

- Follow the wizard instructions on the screen.
- Manually move the Tool changing mechanism to the first tool.
- Manually lock the metal bars as described in the picture.
- riangle The tool has to be locked in the tool changer.

STEP 12 Wizard: Tighten the upper screw





- Follow the wizard instructions on the screen.
- Using a Uni wrench, tighten the upper screw on a side of the dock.
- After confirming by the *continue* button on the LCD, the XY axis will leave the dock with the tool. **Clear the space**.

STEP 13 Wizard: Tighten the lower screw





- Follow the wizard instructions on the screen.
- Using a Uni wrench, tighten the lower screw on a side of the dock.

STEP 14 Wizard: Install pins





- Follow the wizard instructions on the screen.
- Insert the two metal pins and tighten them with a Mini wrench.
- After clicking on the *continue* button on the LCD, the printer will put back the tool into the dock1 and do a few calibration moves.
- After the Dock1 calibration, proceed to the Dock2 calibration and repeat the steps.

STEP 15 Wizard: Dock successfully calibrated



- Good job! The Dock1 is calibrated.
- According to the number of print heads, the dock calibration process is repeated.

STEP 16 Wizard: Test Loadcell







- The next step of the wizard will prompt you to touch the nozzle to test and calibrate the Loadcell. During this procedure, the parts of the printer are not heated, you can touch the parts of the printer. Click on Continue.
- Do not touch the nozzle yet, wait until prompted with the message: Tap the nozzle NOW.
- Slightly tap the nozzle. No need to use extra force. In case the Loadcell does not detect enough touch, you will be prompted to repeat the step. Otherwise, you will see Loadcell test passed OK when it succeeds.

STEP 17 Wizard: Calibrate Filament Sensors



- During the calibration of the filament sensors, you will be prompted to use at least 130 cm of filament. Hint: Use the Prusament shipped with your printer and hang it directly on the spool holder.
- When you have prepared the filament, click on YES.
- Wait for the printer to prompt you to insert the filament into the side filament sensor.

STEP 18 Wizard: Calibrate Filament Sensors



- Now, insert the filament into the side filament sensor and push it until it reaches the filament sensor in the extruder (you will feel a slight resistance).
- You can check the side filament sensor (left) and extruder filament sensor (right) status on the bottom bar on the screen.
- Both filament sensors are successfully calibrated and tested. Click on CONTINUE.
- (i) According to the number of print heads, the filament sensor calibration is repeated.

STEP 19 Calibration pin: parts preparing



- For the next step, please prepare:
 - Calibration pin (1x)
 - Calibration-pin-key (1x)

STEP 20 Calibration pin: parts assembly





- Insert the calibration pin into the plastic part.
- Push the pin into the plastic part, so it will make a small gap on top.
- Well done, the pin is prepared.

STEP 21 Wizard: Tool Offset Calibration






- During offset calibration, you will need to screw the calibration pin into the center of the heatbed.
- Click on *Continue* to start the Tool Offsets Calibration.
- Calibration pin (1x)

STEP 22 Wizard: Sheet install




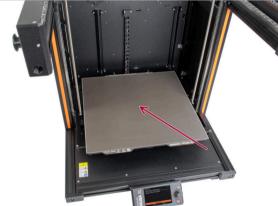

- Follow the wizard instructions on the screen.
- Put the print sheet onto the heatbed.
- i Now, the printer starts short calibration.

STEP 23 Wizard: Calibration pin installation



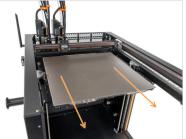



- Follow the wizard instructions on the screen.
- Take off the print sheet from the heatbed.
- Install the calibration pin into the middle of the heatbed. Turn the pin clockwise.
- (i) Now, the printer will calibrate all five tool heads.

STEP 24 Wizard: Offset calibration done








- Follow the wizard instructions on the screen.
- Untighten the calibration pin from the heatbed and take it off. Rotate counterclockwise.
- Place the print sheet onto the heatbed.
- (i) The printer will finish the calibration.
- Good job! The Offset calibration is done.

STEP 25 Calibration pin



 Insert the calibration pin into the side filament sensor.

STEP 26 The Wizard is done!

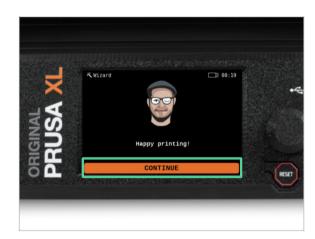

• That's all of the Wizard. But still, follow the instructions in this manual to the end.

STEP 27 Semi-Assembled version only - Checking the Heatbed installation







- i In this step, we will make sure the Heatbed is installed correctly
- Using the T10 screwdriver, slightly loosen all screws on the sides of the bed-frame.
 A few turns are enough.
- Visit the menu Control > Move Axis and adjust the Move Z value to the lowest position.
- Leave the heatbed for a few seconds until it settles in the lowest position.
- While in the lowest position, tighten all screws using the T10 screwdriver.

STEP 28 It's done!



 Well done! Your Original Prusa XL is ready to print big.

STEP 29 Regular printer maintenance




- (i) To keep your printer working properly over time, it is highly recommended to do regular maintenance.
- For regular printer maintenance, follow the Regular printer maintenance (XL) article for information and instructions.
- On multi-tool printers, it is necessary to focus on lubricating the coupler pins of the ToolHeads.
 - i Lubricating the coupler pins can be made along with the rest of the maintenance, or it can also be done if you notice that your prints have banding or ringing issues.
 - To lubricate the coupler pins use our dedicated online guide How to lubricate the coupler pins on Original Prusa XL.
 - (i) You will need to print an applicator to lubricate the pins. Please refer to the dedicated guide for more information.

STEP 30 Quick guide for your first prints




- Now, please read the 3D Printing Handbook, which is tailor-made for your printer and follow the instructions to set up the printer properly. The latest version is always available at this link.
- Read the chapters Disclaimer and Safety instructions.

STEP 31 Printable 3D models

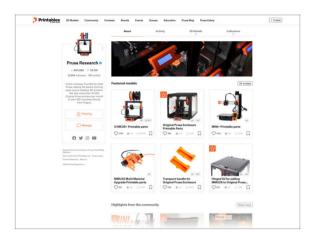

- Congratulations! You should be ready to print by now ;-)
- You can start by printing some of our test objects bundled on the included USB stick - you can check them out Printables.

STEP 32 Prusa knowledge base

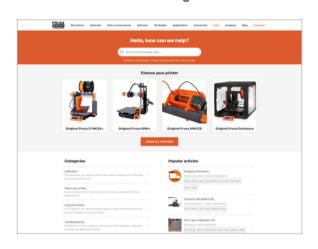

- If you encounter any problems at all, don't forget you can always check out our knowledge base at help.prusa3d.com
- We're adding new topics every day!

STEP 33 Join Printables!




- Don't forget to join the biggest Prusa community! Download the latest models in STL or G-code tailored for your printer. Register at Printables.com
- Looking for inspiration on new projects? Check our blog for weekly updates.
- If you need help with the build, check out our forum with a great community :-)
- (i) All services share one account.

Manual changelog Five-Head (Semi-Assembled)




STEP 1 Version history

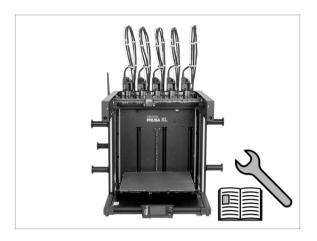


- Versions of the Original Prusa XL semi-assembled (single tool) manual:
- 06/2023 Initial version 1.00
- 07/2023 Updated to version 1.02
- 08/2023 Updated to version 1.03
- 11/2023 Updated to version 1.04
- 05/2024 Updated to version 1.05
- 09/2024 Updated to version 1.06
- 04/2025 Updated to version 1.07
- 04/2025 Updated to version 1.08

STEP 2 Changes to the manual (1)

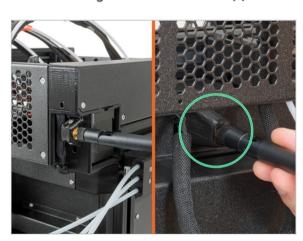

- 08/2023 Antenna adapter
 - Added instructions for the new antenna adapter.
- i Manual version 1.01

STEP 3 Changes to the manual (2)

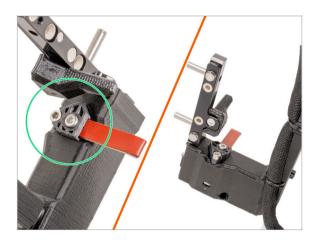


- 08/2023 Nextruder dock
 - Added instructions for the new dock.
- i Manual version 1.02

STEP 4 Changes to the manual (4)



- 11/2023 Spoolholder
 - Added instructions for the new injection molded Spoolholder.
- Manual version 1.04

STEP 5 Changes to the manual (5)

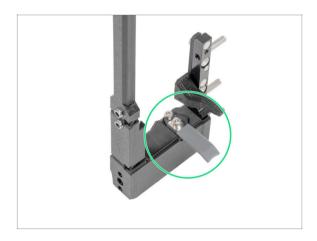


- 05/2024
 - Added information about the new gray nozzle seal.
- Manual version 1.05

STEP 6 Changes to the manual (6)




- 09/2024 xLCD
 - Added instructions for the new injection molded xLCD.
- Manual version 1.06

STEP 7 Changes to the manual (7)

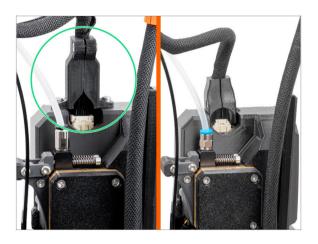

- 04/2025 Main cable connector cover
 - Added instructions for the new main cable connector cover.
- Manual version 1.07

STEP 8 Changes to the manual (8)

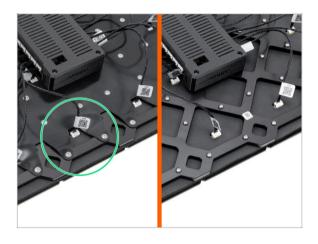

- 04/2025 New heatbed
 - Added instructions for the new heatbed with a rubber band.
- Manual version 1.08

Notes:	

Notes:	

Notes:	